



**767-010**  
**PA46-500TP Meridian**  
**2000-2003**  
**4697001-156**



**Piper**<sup>™</sup>

***MERIDIAN***  
**Information Manual**

# MERIDIAN

## PA-46-500TP

SN 4697001 AND UP

# INFORMATION MANUAL



PART NUMBER 767-010

PA46-500T

SN 4697001-156 (4900LB MTOW)

**WARNING**

**This Information Manual may be used for general information purposes only.**

**This Information Manual is not kept current. It must not be used as a substitute for the official FAA approved Pilot's Operating Handbook required for operation of the airplane.**

**Published by**  
**TECHNICAL PUBLICATIONS**  
**Issued: SEPTEMBER 27, 2000**  
**© 2000 THE NEW PIPER AIRCRAFT, INC.**  
**All Rights Reserved**

**REPORT: VB-1689**

 
**ISSUED: SEPTEMBER 27, 2000**

**WARNING**

**This Information Manual may be used for general information purposes only.**

**This Information Manual is not kept current. It must not be used as a substitute for the official FAA approved Pilot's Operating Handbook required for operation of the airplane.**






## APPLICABILITY

Application of this handbook is limited to the specific Piper PA-46-500TP model airplane designated by serial number and registration number on the face of the title page of this handbook.

This handbook cannot be used for operational purposes unless kept in a current status.

## WARNING

 INSPECTION, MAINTENANCE AND PARTS REQUIREMENTS FOR ALL NON-PIPER APPROVED STC INSTALLATIONS ARE NOT INCLUDED IN THIS HANDBOOK. WHEN A NON-PIPER APPROVED STC INSTALLATION IS INCORPORATED ON THE AIRPLANE, THOSE PORTIONS OF THE AIRPLANE AFFECTED BY THE INSTALLATION MUST BE INSPECTED IN ACCORDANCE WITH THE INSPECTION PROGRAM PUBLISHED BY THE OWNER OF THE STC. SINCE NON-PIPER APPROVED STC INSTALLATIONS MAY CHANGE SYSTEMS INTERFACE, OPERATING CHARACTERISTICS AND COMPONENT LOADS OR STRESSES ON ADJACENT STRUCTURES, PIPER PROVIDED INSPECTION CRITERIA MAY NOT BE VALID FOR AIRPLANES WITH NON-PIPER APPROVED STC INSTALLATIONS.



## REVISIONS

The information compiled in the Pilot's Operating Handbook, with the exception of the equipment list, will be kept current by revisions distributed to the airplane owners. The equipment list was current at the time the airplane was licensed by the manufacturer and thereafter must be maintained by the owner.

Revision material will consist of information necessary to update the text of the present handbook and/or to add information to cover added airplane equipment.

### I. Revisions

Revisions will be distributed whenever necessary as complete page replacements or additions and shall be inserted into the handbook in accordance with the instructions given below:

1. Revision pages will replace only pages with the same page number.
2. Insert all additional pages in proper numerical order within each section.
3. Insert page numbers followed by a small letter in direct sequence with the same common numbered page.

### II. Identification of Revised Material

Each handbook page is dated at the bottom of the page showing the date of original issue and the date of the latest revision. Revised text and illustrations are indicated by a black vertical line located along the outside margin of each revised page opposite the revised, added, or deleted information. A vertical line next to the page number indicates that an entire page has been changed or added.

Vertical black lines indicate current revisions only. Correction of typographical or grammatical errors or the physical relocation of information on a page will not be indicated by a symbol.

## ORIGINAL PAGES ISSUED

 
The original pages issued for this handbook prior to revision are given below:

Title, ii through viii, 1-1 through 1-14, 2-1 through 2-34, 3-1 through 3-44, 4-1 through 4-52, 5-1 through 5-84, 6-1 through 6-28, 7-1 through 7-52, 8-1 through 8-28, 9-1 through 9-54, and 10-1 through 10-2.




## PILOT'S OPERATING HANDBOOK LOG OF REVISIONS

Current Revisions to the PA-46-500TP Meridian Pilot's Operating Handbook.  
REPORT: VB-1689 issued SEPTEMBER 27, 2000.

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 1 (PR001024)	v 2-1 2-21 2-25 2-27 2-28 2-30 2-32	Added Rev. 1 to L of R. Revised para. 2.3. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41.	 Christina L. Marsh  <u>Oct. 24, 2000</u> Date
Rev. 2 (PR001219)	v 3-2 3-3 3-32 7-30	Added Rev. 2 to L of R. Revised para. 3.1. Revised para. 3.1. Revised para. 3.37. Revised para. 7.17.	 Christina L. Marsh  <u>Dec. 19, 2000</u> Date
Rev. 3 (PR010126)	v vi vi-a vi-b 1-9 2-i 2-ii 2-3 2-6 2-10 2-11 2-13 2-17	Added Rev. 3 to L of R. Added Rev. 3 to L of R. Added page & Rev. 3 to L of R. Added page & Rev. 3 to L of R. Revised para. 1.21. Revised T of C. Revised T of C. Revised para. 2.7. Revised para. 2.7. Added para. 2.26. Revised para. 2.29. Revised para. 2.29. Revised para. 2.31.	


**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

 Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 3 (PR010126) continued	2-19	Revised para. 2.39f.	
	2-21	Revised para. 2.41.	
	2-25	Revised para. 2.41.	
	3-3	Revised para. 3.1.	
	3-4	Revised para. 3.1.	
	3-6	Revised para. 3.3.	
	3-8	Revised para. 3.7.	
	3-10	Revised para. 3.7.	
	3-11	Revised para. 3.7.	
	3-12	Revised para. 3.9c.	
	3-14	Revised para. 3.11.	
	3-19	Revised para. 3.17 & 3.19.	
	3-20	Revised para. 3.21.	
	3-22	Revised para. 3.27.	
	3-27	Revised para. 3.35.	
	4-3	Revised para. 4.5a.	
	4-6	Revised para. 4.5a.	
	4-7	Revised para. 4.5a.	
	4-9	Revised para. 4.5b.	
	4-10	Revised para. 4.5c.	
	4-11	Revised para. 4.5c.	
	4-12	Revised para. 4.5c.	
	4-16	Revised para. 4.5i.	
	4-17	Revised para. 4.5i.	
	4-18	Revised para. 4.5k.	
	4-19	Revised para. 4.5m.	
	4-21	Revised para. 4.5n.	
	4-24	Revised para. 4.5r.	
	4-25	Revised para. 4.5s.	
4-26	Revised para. 4.9a.		
4-28	Revised para. 4.9b.		
4-29	Revised para. 4.9d.		





## PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 3 (PR010126) continued	4-31	Revised para. 4.11.	
	4-34	Revised para. 4.13b.	
	4-39	Revised para. 4.25.	
	4-40	Revised para. 4.27b.	
	4-42	Revised para. 4.31.	
	4-43	Revised para. 4.33.	
	4-46	Revised para. 4.43.	
	5-10	Revised List of Figures.	
	5-11	Revised List of Figures.	
	5-12	Revised List of Figures.	
	5-31	Revised Figure 5-33.	
	5-46	Revised Figure 5-63.	
	5-47	Revised Figure 5-65.	
	5-48	Revised Figure 5-67.	
	5-49	Revised Figure 5-69.	
	5-50	Revised Figure 5-71.	
	5-51	Revised Figure 5-73.	
	5-52	Revised Figure 5-75.	
	5-53	Revised Figure 5-77.	
	5-54	Revised Figure 5-79.	
	5-55	Revised Figure 5-81.	
	5-56	Revised Figure 5-83.	
	5-57	Revised Figure 5-85.	
	5-58	Revised Figure 5-87.	
	5-59	Revised Figure 5-89.	
	5-60	Revised Figure 5-91.	
	5-61	Revised Figure 5-93.	
	5-62	Revised Figure 5-95.	
	5-63	Revised Figure 5-97.	
	5-64	Revised Figure 5-99.	
	5-65	Revised Figure 5-101.	
	5-66	Revised Figure 5-103.	


  
## PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 3 (PR010126) continued	5-67 6-1 6-2 6-3 6-5 6-9 6-10 6-25 7-2 7-31 7-44 8-8	Revised Figure 5-105. Revised para. 6.1. Revised para. 6.1 & 6.3. Revised para. 6.3. Revised para. 6.3. Revised para. 6.7. Revised para. 6.7. Revised Figure 6-27. Revised header. Revised Figure 7-16. Revised para. 7.25. Revised Figure 8-1.	 Christina L. Marsh  <u>Jan. 26, 2001</u> Date
Rev. 4 (PR010226)	vi-b 1-9 3-17 3-25 5-61 5-68 9-i 9-55 thru 9-60 9-61 thru 9-64 9-65 thru 9-72	Added Rev. 4 to L of R. Revised para. 1.21. Revised para. 3.15. Revised para. 3.35. Revised Figure 5-93. Added Figure 5-107. Revised T of C. Added pages and Supplement 9.  Added pages and Supplement 10.  Added pages and Supplement 11.	 Christina L. Marsh  <u>Feb. 26, 2001</u> Date




### PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

 Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 5 (PR010410)	Title vi-c vi-d 1-1 1-2 1-4 1-5 1-6 2-1 2-2 2-3 2-4 2-5 2-6 2-9 2-21 2-23 2-29 2-30 3-14 3-19 4-2 4-3 4-6 4-7 4-8 4-13 4-17 4-19 4-21 4-26 4-27 4-28	Revised title page. Added page and Rev. 5. Added page and Rev. 5. Revised para. 1.1. Revised Figure 1-1. Revised para. 1.5. Revised para. 1.7, 1.9 & 1.11. Revised para. 1.15, 1.17 & 1.19. Revised para. 2.3. Revised para. 2.5. Revised para. 2.7. Revised para. 2.7. Revised para. 2.7. Revised para. 2.7. Revised para. 2.19 & 2.21. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised para. 3.11. Revised para. 3.17 & 3.19. Revised para. 4.3. Revised para. 4.5a. Revised para. 4.5a. Revised para. 4.5a. Revised para. 4.5a. Revised para. 4.5e. Revised para. 4.5i. Revised para. 4.5m. Revised para. 4.5n. Revised para. 4.9a. Revised para. 4.9a. Revised para. 4.9c.	




## PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 5 (PR010410) (continued)	4-29	Revised para. 4.9d.	
	4-30	Revised para. 4.9e.	
	4-40	Revised para. 4.25b.	
	4-42	Revised para. 4.31.	
	4-43	Revised para. 4.33.	
	5-i	Revised T of C.	
	5-2	Revised para. 5.3.	
	5-4	Revised para. 5.5.	
	5-5	Revised para. 5.5.	
	5-6	Revised para. 5.5.	
	5-7	Revised para. 5.5.	
	5-9	Revised List of Figures.	
	thru		
	5-16		
	5-17	Revised Section 5.	
	thru		
	5-164		
	6-i	Revised T of C.	
	6-13	Revised Section 6.	
	thru		
	6-60		
	7-i	Revised T of C.	
	7-2	Revised para. 7.3.	
7-4	Revised para. 7.5.		
7-22	Added Section 7.9, Standby Instruments.		
7-23	Added Section 7.9, Standby Instruments. Hydraulic System changed to Section 7.10.		
7-24	Hydraulic System changed to Section 7.10.		
7-31	Revised Figure 7-16.		
		 Peter E. Peck April 10, 2001 Date	



### PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

 Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 6 (PR010727)	vi-e	Added page & Rev. 6 to L of R.	
	vi-f	Added page.	
	2-1	Revised para. 2.3.	
	2-3	Revised para. 2.7.	
	2-8	Revised para. 2.13.	
	2-10	Revised para. 2.28.	
	2-21	Revised para. 2.41.	
	2-22	Revised para. 2.41.	
	2-23	Revised para. 2.41.	
	2-29	Revised para. 2.41.	
	2-30	Revised para. 2.41.	
	2-31	Revised para. 2.41.	
	2-32	Revised para. 2.41.	
	2-33	Revised para. 2.41.	
	2-34	Revised para. 2.41.	
	3-4	Revised para. 3.1.	
	3-29	Revised para. 3.36b.	
	3-39	Revised para. 3.43e.	
	4-3	Revised para. 4.5a.	
	4-7	Revised para. 4.5a.	
	4-9	Revised para. 4.5b.	
	4-13	Revised para. 4.5e.	
	4-14	Revised para. 4.5g.	
	4-16	Revised para. 4.5i.	
	4-17	Revised para. 4.5i.	
	4-21	Revised para. 4.5n.	
	4-28	Revised para. 4.9b.	
	4-29	Revised para. 4.9d.	
	4-31	Revised para. 4.11.	
	4-33	Revised para. 4.13a.	
	4-34	Revised para. 4.13b.	
	4-35	Revised para. 4.17.	
	4-36	Revised para. 4.17.	


**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 6 (PR010727) continued	4-37	Revised para. 4.21.	 Peter E. Peck  <u>July 27, 2001</u> Date
	4-38	Revised para. 4.23.	
	4-39	Revised para. 4.25.	
	4-40	Revised para. 4.25b.	
	4-43	Revised para. 4.33.	
	4-46	Revised para. 4.41.	
	4-48	Revised para. 4.49	
	4-51	Revised para. 4.53.	
	7-5	Revised para. 7.5.	
	7-6	Revised para. 7.7.	
	7-7	Revised para. 7.7.	
	7-10	Revised Figures 7-2, 7-3, 7-5.	
	7-18	Revised para. 7.8b.	
	7-25	Revised para. 7.11.	
	7-28	Revised para. 7.13.	
	7-29	Revised para. 7.15.	
	7-30	Revised para. 7.17.	
9-67	Revised Section 4.		
10-1	Revised para. 10.1.		
Rev. 7 (PR010824)	vi-f	Added Rev. 7 to L of R.	
	vi-g	Added page and Rev. 7.	
	vi-h	Added page.	
	1-1	Revised para. 1.1.	
	2-ii	Revised T of C.	
	2-1	Revised para. 2.3.	
	2-14	Revised para. 2.29.	
	2-17	Revised para. 2.39.	
	2-18	Revised para. 2.39.	
	2-19	Revised para. 2.39.	
	2-20	Revised para. 2.41.	
	2-21	Revised para. 2.41.	
2-32	Revised para. 2.41.		



## PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 7 (PR010824) continued	3-42 3-43 3-44 4-14 4-15 4-19 4-37 4-38 4-42 7-i 7-51 9-i 9-73 thru 9-100	Revised para. 3.53. Revised para. 3.53. Revised para. 3.53. Revised para. 4.5g. Revised para. 4.5h. Revised para. 4.5m. Revised para. 4.21. Revised para. 4.23. Revised para. 4.31. Revised T of C. Added para. 7.31. Revised T of C. Added pages and Supplement 12.	 Peter E. Peck  <u>Aug. 24, 2001</u> Date
Rev. 8 (PR011001)	vi-g vi-h vi-i vi-j 4-3 4-4 4-10 4-11 4-15 4-27 4-33 4-34 5-3 5-5 5-6 5-7	Added Rev. 8 to L of R. Added Rev. 8 to L of R. Added page and Rev. 8 to L of R. Added page. Revised para. 4.5a. Revised para. 4.5a. Revised para. 4.5c. Revised para. 4.5c. Revised para. 4.5h. Revised para. 4.9a. Revised para. 4.13a. Revised para. 4.13b. Revised para. 5.5. Revised para. 5.5. Revised para. 5.5. Revised para. 5.5.	


**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 8 (PR011001) continued	5-8	Revised para. 5.5.	
	5-12	Revised List of Figures.	
	5-15	Revised List of Figures.	
	5-16	Revised List of Figures.	
	5-51	Revised Figure 5-55.	
	5-52	Added Figure 5-57.	
	5-53	Added Figure 5-59.	
	5-54	Revised Figure 5-61.	
	5-55	Added Figure 5-63.	
	5-56	Revised Figure 5-65.	
	5-81	Added Figure 5-113.	
	5-82	Revised Figure 5-115.	
	5-83	Added Figure 5-117.	
	5-84	Revised Figure 5-119.	
	5-88	Removed Figure 5-127.	
	5-89	Revised Figure 5-129.	
	5-90	Removed Figure 5-131.	
	5-91	Removed Figure 5-133.	
	5-92	Removed Figure 5-135.	
	5-93	Revised Figure 5-137.	
	5-94	Removed Figure 5-139.	
	5-95	Removed Figure 5-141.	
	5-119	Revised Figure 5-189.	
	5-120	Added Figure 5-191.	
	5-121	Added Figure 5-193.	
	5-122	Revised Figure 5-195.	
	5-123	Added Figure 5-197.	
	5-124	Revised Figure 5-199.	
	5-149	Added Figure 5-247.	
	5-150	Revised Figure 5-249.	
5-151	Added Figure 5-251.		
5-152	Revised Figure 5-253.		
5-157	Revised Figure 5-263.		

 
 


**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**



Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 8 (PR011001) continued	5-158 5-159 5-161 5-162 5-163 7-27 7-32 7-36 7-41 7-42	Removed Figure 5-265. Removed Figure 5-267. Revised Figure 5-271. Removed Figure 5-273. Removed Figure 5-275. Revised para. 7.11. Revised para. 7.19. Revised Figure 7-18. Revised Figure 7-22. Revised Figure 7-22.	 Albert J. Mill  <u>Oct. 1, 2001</u> Date
Rev. 9 (PR011130)	vi-i 5-3 7-18  7-22  7-27	Added Rev. 9 to L of R. Revised para. 5.5. Revised para. 7.8b & Figure 7-12. Revised para. 7.9 & deleted Figure 7-14A. Revised para. 7.11.	 Albert J. Mill  <u>Nov. 30, 2001</u> Date
Rev. 10 (PR011218)	vi-i vi-j 2-30 2-30A 2-30B 5-3 5-7 5-8 8-9 8-20 9-i 9-66	Added Rev. 10 to L of R. Added Rev. 10 to L of R. Revised para. 2.41. Added page and para. 2.41. Added page. Revised para. 5.5. Revised para. 5.5. Revised para. 5.5. Revised para. 8.17. Revised para. 8.25. Revised T of C. Revised Section 2.	



## PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 10 (PR011218) (continued)	9-101 thru 9-110	Added pages and Supplement 13.	 Peter E. Peck  <u>Dec. 18, 2001</u> Date
Rev. 11 (PR020211)	vi-j 4-14 4-37 5-78 5-79 5-80 5-146 5-147 5-148 7-18 7-38 9-i 9-111 thru 9-112	Added Rev. 11 to L of R. Revised para. 4.5g. Revised para. 4.21. Revised Figure 5-107. Revised Figure 5-109. Revised Figure 5-111. Revised Figure 5-241. Revised Figure 5-243. Revised Figure 5-245. Revised para. 7.8h. Revised Figure 7-20. Revised T of C. Added pages and Supplement 14.	 Albert J. Mill  <u>Feb. 11, 2002</u> Date
Rev. 12 (PR020517)	vi-j 4-i, 4-ii 4-11 4-12 thru 4-20 4-32 thru 4-34 9-86 9-96	Added Rev. 12 to L of R. Revised T of C. Revised para. 4.5c. Relocated information.  Revised para. 4.13.  Revised Section 4. Revised Section 7.	 Albert J. Mill  <u>May 17, 2002</u> Date


**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

  
Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 13 (PR021007)	iii	Added Warning and moved info. to page iv.	
	iv	Moved info. from page iii.	
	vi-k	Added page and Rev. 13 to L of R.	
	vi-l	Added page.	
	1-2	Revised Figure 1-1.	
	1-6	Revised para. 1.19.	
	2-8	Revised Table 2-2.	
	3-40	Revised para. 3.43h.	
	4-3	Revised para. 4.5a.	
	4-4	Revised para. 4.5a.	
	4-27	Revised para. 4.9a.	
	5-64	Revised Figure 5-79.	
	5-132	Revised Figure 5-213.	
	8-1	Moved info. to page 8-1B and revised para. 8.1.	
	8-1A	Added page and revised para. 8.1.	
8-1B	Added page and moved info. from pages 8-1 and 8-2.		
8-2	Moved info. to page 8-1B and revised para. 8.3.		
Rev. 14 (PR021025)	vi-k	Added Rev. 14 to L of R.	
	9-i	Revised T of C.	
	9-113 thru	Added pages and Supplement 15.	
	9-114		
			 Albert J. Mill <u>Oct. 7, 2002</u> Date
			 Albert J. Mill <u>Oct. 25, 2002</u> Date


**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

 Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 15 (PR021212)	vi-1 3-ii  3-iii 3-30	Added Rev. 15 to L of R. Moved info. to page 3-iii and revised T of C. Moved info. from page 3-ii. Added para. 3.36e.	 Albert J. Mill  <u>Dec. 12, 2002</u> Date
Rev. 16 (PR030411)	iii vi-1 vi-m  vi-n 2-26 2-29 2-30 2-30A 3-i 3-ii 3-iii 3-15 3-16  3-17  3-18 5-4 5-9 5-20 5-21 5-22 5-23	Revised Warning. Added Rev. 16 to L of R. Added page and Rev. 16 to L of R. Added page. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised para. 2.41. Revised T of C. Revised T of C. Revised T of C. Moved info. from page 3-16. Moved info. from page 3-17. Also, para. 3.15 Engine Fire changed to 3.14 Engine Fire. Added new para. 3.15 Electrical Fire. Smoke or Fumes. Revised para. 3.16. Revised para. 5.5. Revised List of Figures. Revised Figure 5-2. Revised Figure 5-3. Revised Figure 5-4. Revised Figure 5-5.	

**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date
Rev. 16 (PR030411) (continued)	5-24 5-25 7-30 7-41 7-42 7-47 8-1	Revised Figure 5-6. Revised Figure 5-7. Revised para. 7.17. Revised Figure 7-22. Revised para. 7.27. Revised para. 8.1.	 Albert J. Mill  <u>April 11, 2003</u> Date
Rev. 17 (PR030811)	vi-m 3-6 3-19 4-10 4-11 4-32 4-33 7-32 7-36	Added Rev. 17 to L of R. Revised para. 3.3. Revised para. 3.17. Revised para. 4.5c. Revised para. 4.5c. Revised para. 4.13a. Revised para. 4.13b. Revised para. 7.19. Revised Figure 7-18.	 Albert J. Mill  <u>August 11, 2003</u> Date
Rev. 18 (PR040329)	vi-m 2-i 2-ii 2-9 2-10 2-25	Added Rev. 18 to L of R. Revised T of C. Revised T of C. Moved info. from page 2-10. Moved info. to page 2-9, revised para. 2.28, added para. 2.28a. Revised para. 2.41.	 Albert J. Mill  <u>March 29, 2004</u> Date

 
**PILOT'S OPERATING HANDBOOK LOG OF REVISIONS (cont)**

Revision Number and Code	Revised Pages	Description of Revisions	FAA Approved Signature and Date

## TABLE OF CONTENTS

<b>SECTION 1</b>	<b>GENERAL</b>
<b>SECTION 2</b>	<b>LIMITATIONS</b>
<b>SECTION 3</b>	<b>EMERGENCY PROCEDURES</b>
<b>SECTION 4</b>	<b>NORMAL PROCEDURES</b>
<b>SECTION 5</b>	<b>PERFORMANCE</b>
<b>SECTION 6</b>	<b>WEIGHT AND BALANCE</b>
<b>SECTION 7</b>	<b>DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS</b>
<b>SECTION 8</b>	<b>AIRPLANE HANDLING, SERVICING AND MAINTENANCE</b>
<b>SECTION 9</b>	<b>SUPPLEMENTS</b>
<b>SECTION 10</b>	<b>OPERATING TIPS</b>



**THIS PAGE INTENTIONALLY LEFT BLANK**


**TABLE OF CONTENTS**

**SECTION 1**

**GENERAL**

Paragraph No.		Page No.
1.1	Introduction .....	1-1
1.2	Notations .....	1-3
1.3	Engine.....	1-4
1.5	Propeller .....	1-4
1.7	Fuel.....	1-5
1.9	Oil .....	1-5
1.11	Maximum Weights .....	1-5
1.13	Reserved .....	1-6
1.15	Cabin and Entry Dimensions.....	1-6
1.17	Baggage Space Aft Cabin .....	1-6
1.19	Specific Loading.....	1-6
1.21	Symbols, Abbreviations and Terminology .....	1-7

 **THIS PAGE INTENTIONALLY LEFT BLANK**



## SECTION 1 GENERAL

### 1.1 INTRODUCTION

This Pilot's Operating Handbook is designed for maximum utilization as an operating guide for the pilot. It includes the material required to be furnished to the pilot by the Federal Aviation Regulations and additional information provided by the manufacturer and constitutes the FAA Approved Airplane Flight Manual.


This handbook is not designed as a substitute for adequate and competent flight instruction, knowledge of current Airworthiness Directives, applicable Federal Aviation Regulations or Advisory Circulars. It is not intended to be a guide for basic flight instruction or a training manual and should not be used for operational purposes unless kept in a current status. The pilot should study the entire handbook to familiarize himself with the limitations, performance, procedures and operational handling characteristics of the airplane before flight.

Assurance that the airplane is in an airworthy condition is the responsibility of the owner. The pilot in command is responsible for determining that the airplane is safe for flight. The pilot is also responsible for remaining within the operating limitations as outlined by instrument markings, placards, and this handbook.

The handbook has been divided into numbered (arabic) sections each provided with a finger-tip tab divider for quick reference. Provisions for expansion of the handbook have been made by the deliberate omission of certain paragraph numbers, figure numbers, item numbers and pages noted as being intentionally left blank.

#### NOTE

In countries other than the United States of America, FAA operating rules may not apply. Operators must ensure that the aircraft is operated in accordance with national operating rules.

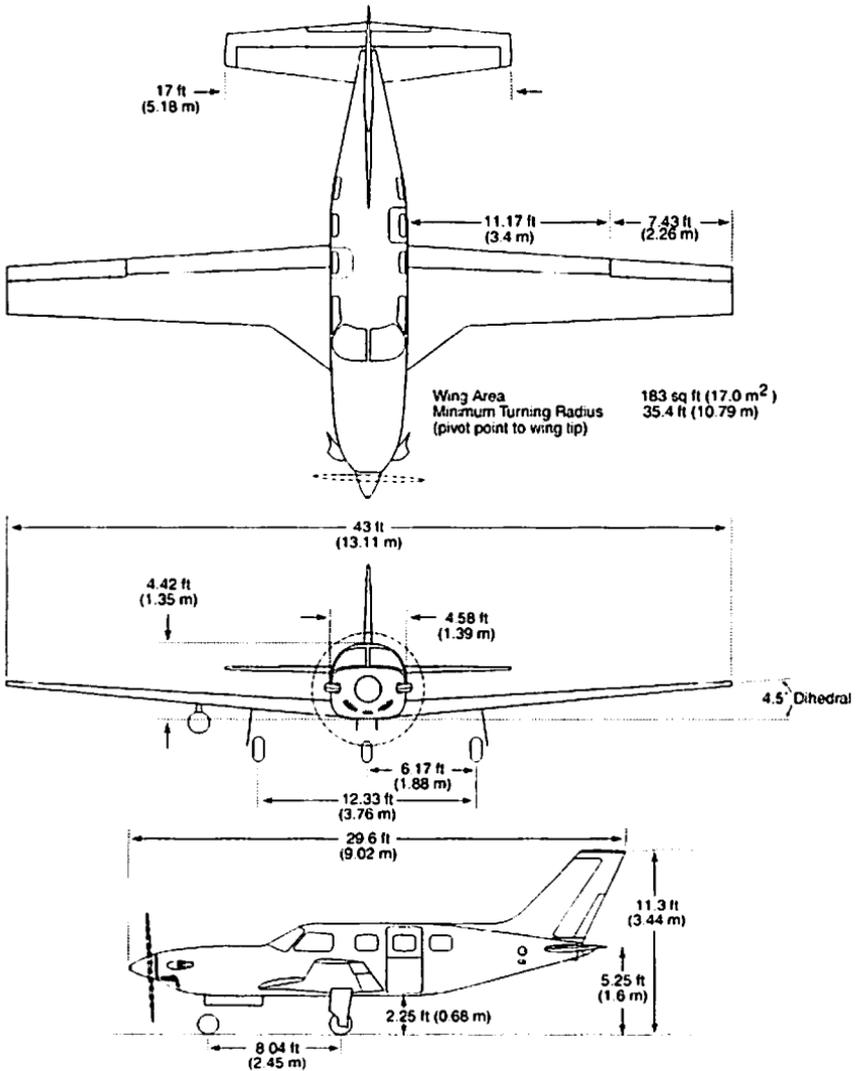

**THREE VIEW**

Figure 1-1



## 1.2 NOTATIONS

### WARNING

Operating procedures or techniques which may result in personal injury or loss of life if not carefully followed.

 
### CAUTION

Operating procedures or techniques which may result in damage to equipment if not carefully followed.

### NOTE

Supplemental information or highlights considered of sufficient significance to require emphasizing.

**THIS SPACE INTENTIONALLY LEFT BLANK**



### 1.3 ENGINE

Number of Engines	1
Engine Manufacturer	Pratt & Whitney Canada
Engine Model Number	PT6A-42A

#### Engine Type

This airplane incorporates a free shaft turboprop engine with 3 axial and 1 centrifugal compressor stages, an annular combustion chamber, and a 3 stage turbine where one stage drives the compressor and a dual stage powers the propeller.

#### Horsepower Rating and Engine Speed

Takeoff Power	500 shp
Maximum Continuous	500 shp
Compressor Turbine Speed (Ng)	38,100 rpm (101.7%)
Propeller Speed (Np)	2,000 rpm

### 1.5 PROPELLER

Number of Propellers	1
Propeller Manufacturer	Hartzell
Blade Model	E8501B-3.5
Number of Blades	4
Hub Model	HC-E4N-3Q
Propeller Diameter	Maximum 82.5 in. (209.5 cm) Minimum 81.5 in. (207 cm)

#### Propeller Type

The propeller assembly consists of a hub unit and four metal blades, and is a hydraulically actuated, constant speed, full feathering and reversible type.



**1.7 FUEL**

**JET FUEL ONLY**

Fuel Capacity	1160 lb/173 U.S. gal. (526.1 kg/654.8 liter)
Unusable Fuel	20 lb/3 U.S. gal. (9.0 kg/11.3 liter)

**Fuel**

Fuel, Aviation	Jet A, Jet A-1
----------------	----------------

**Anti-Icing Additive**

 
Refer to latest revision of  
Pratt & Whitney Service Bulletin 3044  
for anti-icing additive conforming  
to MIL-I-27686

**1.9 OIL**

Oil Capacity	12 qt (11.35 liter)
Oil Specification	Refer to Section 8 for Oil Specifications

**1.11 MAXIMUM WEIGHTS**

Maximum Ramp Weight	4892 lb (2219.2 kg)
Maximum Takeoff Weight	4850 lb (2199.9 kg)
Maximum Landing Weight	4850 lb (2199.9 kg)
Maximum Weights in Baggage Compartment	100 lb (45.3 kg)



**1.13 RESERVED**

**1.15 CABIN AND ENTRY DIMENSIONS**

Cabin Width (max.)	49.5 in. (125.7 cm)
Cabin Length (Instrument panel to rear bulkhead)	148 in. (375.9 cm)
Cabin Height (max.)	47 in. (119.4 cm)
Entry Width	24 in. (60.9 cm)
Entry Height	46 in. (116.8 cm)

**1.17 BAGGAGE SPACE AFT CABIN**

Compartment Volume	20 cu. ft. (0.56 m <sup>3</sup> )
Entry Dimensions	24 x 46 in. (60.9 x 116.8 cm)

**1.19 SPECIFIC LOADING**

Wing Loading at 4850 lb (2199.9 kg)	26.5 lb/ft <sup>2</sup> (129.4 kg/m <sup>2</sup> )
Power Loading @ MCP	9.7 lb/SHP (4.4 kg/SHP)

## 1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY

The following definitions are of symbols, abbreviations and terminology used throughout the handbook and those which may be of added operational significance to the pilot.

### (a) General Airspeed Terminology and Symbols

<b>CAS</b>	Calibrated Airspeed means the indicated speed of an aircraft, corrected for position and instrument error. Calibrated airspeed is equal to true airspeed in standard atmosphere at sea level.
<b>KCAS</b>	Calibrated Airspeed expressed in "Knots".
<b>GS</b>	Ground Speed is the speed of an airplane relative to the ground.
<b>IAS</b>	Indicated Airspeed is the speed of an aircraft as shown on the airspeed indicator when corrected for instrument error. IAS values published in this handbook assume zero instrument error.
<b>KIAS</b>	Indicated Airspeed expressed in "Knots".
<b>M</b>	Mach Number is the ratio of true airspeed to the speed of sound.
<b>M<sub>MO</sub></b>	Maximum Operating Limit Speed is the speed limit that may not be deliberately exceeded in normal flight operations. M is expressed in Mach number.
<b>TAS</b>	True Airspeed is the airspeed of an airplane relative to undisturbed air which is the CAS corrected for altitude, temperature and compressibility.
<b>V<sub>FE</sub></b>	Maximum Flap Extended Speed is the highest speed permissible with wing flaps in a prescribed extended position.



**1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)**

$V_{LE}$	Maximum Landing Gear Extended Speed is the maximum speed at which an aircraft can be safely flown with the landing gear extended.
$V_{LO}$	Maximum Landing Gear Operating Speed is the maximum speed at which the landing gear can be safely extended or retracted.
$V_{MO}$	Maximum Operating Speed is the the speed limit that may not be exceeded at any time. $V$ is expressed in knots.
$V_O$	Maximum Operating Maneuvering Speed is the maximum speed at which application of full available aerodynamic control will not overstress the airplane.

 
NOTE:

$V_O$  is defined in accordance with FAR 23 Amendment 45

$V_R$	Rotation Speed used for takeoff.
$V_S$	Stalling Speed or the minimum steady flight speed at which the airplane is controllable.
$V_{SO}$	Stalling Speed or the minimum steady flight speed at which the airplane is controllable in the landing configuration at maximum gross weight.
$V_{SI}$	Stalling Speed or the minimum steady flight speed obtained in a specific configuration.
$V_X$	Best Angle-of-Climb Speed is the airspeed which delivers the greatest gain of altitude in the shortest possible horizontal distance.
$V_Y$	Best Rate-of-Climb Speed is the airspeed which delivers the greatest gain in altitude in the shortest possible time.

**1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)****(b) Meteorological Terminology**

<b>ISA</b>	International Standard Atmosphere in which: (1) The air is a dry perfect gas; (2) The temperature at sea level is 15° Celsius (59° Fahrenheit); (3) The pressure at sea level is 29.92 in. Hg (1013.2 mb).
<b>IOAT</b>	Indicated Outside Air Temperature is the temperature obtained from an indicator and not corrected for instrument error and compressibility effects.
<b>OAT</b>	Outside Air Temperature is the free air static temperature obtained either from inflight temperature indications or ground meteorological sources, adjusted for instrument error and compressibility effects.
<b>Indicated Pressure Altitude</b>	The number actually read from an altimeter when the barometric subscale has been set to 29.92 in. Hg (1013.2 mb).
<b>Pressure Altitude (P.A.)</b>	Altitude measured from standard sea-level pressure of 29.92 in. Hg (1013.2 mb) by a pressure or barometric altimeter. It is the indicated pressure altitude corrected for position and instrument error. In this handbook, altimeter instrument errors are assumed to be zero.
<b>Station Pressure</b>	Actual atmospheric pressure at field elevation.
<b>Wind</b>	The wind velocities recorded as variables on the charts of this handbook are to be understood as the headwind or tailwind components of the reported winds.




## 1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)

### (c) Power Terminology

<b>Cruise Climb Power</b>	The power recommended to operate the airplane in a cruise climb (a continuous, gradual climb) profile.
<b>Flight Idle Power</b>	The power required to run an engine, in flight, at the lowest speed that will ensure satisfactory engine and systems operation and airplane handling characteristics.
<b>Maximum Continuous Power</b>	The maximum power approved for continuous use.
<b>Maximum Climb Power</b>	The maximum power approved for climb.
<b>Maximum Cruise Power</b>	The maximum power approved for cruise.
<b>Reverse Thrust</b>	The thrust of the propeller directed opposite the usual direction, thereby producing a braking action.
<b>Takeoff Power</b>	The maximum power permissible for takeoff (limited to 5 minutes).
<b>Zero Thrust</b>	The absence of appreciable thrust.

**1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)****(d) Engine Controls and Instruments**
 
<b>Beta Range</b>	On turbine powered aircraft using fully reversing propellers, this is the range of propeller blade angle movement not controlled by a governor and the propeller control lever. In this range, the blade pitch angle is scheduled by power lever movement and the constant propeller speed mechanism is blocked out.
<b>Constant Speed Range</b>	The engine operating range where the propeller is out of Beta range and operating at a constant rpm.
<b>Gas Generator RPM (<math>N_g</math>)</b>	Indicates the percent of gas generator rpm based on a figure of 101.7% at 38,100 rpm.
<b>ITT Gauge</b>	A temperature measuring system that senses gas temperature in the turbine section of the engine.
<b>Manual Override (MOR)</b>	The device that controls engine power in case of a pneumatic failure in the engine control systems. It can also control engine power in case of a power control linkage failure.
<b>Propeller Feather</b>	This is a propeller pitch condition which produces minimum drag in a flight condition.
<b>Propeller Governor</b>	The device that keeps propeller rpm constant by increasing or decreasing propeller pitch through a pitch change mechanism in the propeller hub.
<b>Propeller RPM (<math>N_p</math>)</b>	Indicates propeller speed in rpm.
<b>Py Pressure</b>	$P_3$ pressure (between the engine compressor and the combustor) This pressure is used as a reference for torque limiting and to provide smooth engine acceleration.



## 1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)

### (d) Engine Controls and Instruments (Continued)

<b>Tachometer</b>	An instrument that indicates rotational speed. Gas generator tachometers measure speed as a percentage of the nominal maximum speed of the turbines (Ng), while propeller tachometers measure actual propeller rpm. (Np)
<b>Torquemeter</b>	An indicating system that displays the output torque available on the propeller shaft. Torque is shown in foot-pounds.
<b>Torque Limiter</b>	A device which monitors torque pressure and adjusts the Py air pressure to the Fuel Control Unit to prevent an overtorque condition.

### (e) Airplane Performance and Flight Planning Terminology

<b>Accelerate - Stop Distance</b>	The distance required to accelerate an airplane to a specified speed and, experiencing failure of the engine at the instant that speed is attained, to bring the airplane to a stop.
<b>Climb Gradient</b>	The demonstrated ratio of the change in height during a portion of a climb, to the horizontal distance traversed in the same time interval.
<b>Demonstrated Crosswind velocity</b>	The demonstrated crosswind velocity is the velocity of the crosswind component for which adequate control of the airplane during takeoff and landing was actually demonstrated during certification tests.
<b>MEA</b>	Minimum Enroute IFR Altitude.
<b>Route Segment</b>	A part of a route. Each end of that part is identified by: (1) a geographical location; or (2) a point at which a definite radio fix can be established.

**1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)****(f) Weight and Balance Terminology**

<b>A.O.D.</b>	Aft of Datum.
<b>Arm</b>	The horizontal distance from the reference datum to the center of gravity (C.G.) of an item.
<b>Center of Gravity (C.G.)</b>	The point at which an airplane would balance if suspended. The C.G.'s distance from the reference datum is found by dividing the total moment by the total weight of the airplane.
<b>C.G. Arm</b>	The arm obtained by adding the airplane's individual moments and dividing the sum by the total weight.
<b>C.G. Limits</b>	The extreme center of gravity locations within which the airplane must be operated at a given weight.
<b>Datum</b>	An imaginary vertical plane from which all horizontal distances are measured for balance purposes.
<b>Basic Empty Weight</b>	Standard empty weight plus optional equipment.
<b>Maximum Landing Weight</b>	Maximum weight approved for touchdown when landing.
<b>Maximum Ramp Weight</b>	Maximum weight approved for ground maneuver. (It includes the weight of fuel for start, taxi and run up.)



**1.21 SYMBOLS, ABBREVIATIONS AND TERMINOLOGY (Cont)**

**(f) Weight and Balance Terminology (Continued)**

<b>Maximum Takeoff Weight</b>	Maximum Weight approved for the start of the takeoff run.
<b>Maximum Zero Fuel Weight</b>	Maximum weight exclusive of usable fuel.
<b>Moment</b>	The product of the weight of an item multiplied by its arm. (Moment divided by a constant is used to simplify balance calculations by reducing the number of digits.)
<b>Payload</b>	Weight of occupants, cargo and baggage.
<b>Standard Empty Weight</b>	Weight of a standard airplane including unusable fuel, full operating fluids and full oil.
<b>Station</b>	A location along the airplane fuselage usually given in terms of distance from the reference datum.
<b>Unusable Fuel</b>	The quantity of fuel at which the first evidence of malfunctioning occurs under the most adverse fuel feed condition occurring under each intended operation and flight maneuver involving that tank.
<b>Usable Fuel</b>	Fuel available for flight planning.
<b>Useful Load</b>	Difference between takeoff weight, or ramp weight if applicable, and basic empty weight.

## TABLE OF CONTENTS

SECTION 2  
LIMITATIONS

Paragraph No.		Page No.
2.1	General .....	2-1
2.3	Airspeed Limitations .....	2-1
2.5	Airspeed Indicator Markings.....	2-2
2.7	Power Plant Limitations .....	2-3
	Engine.....	2-3
	Fuel .....	2-5
	Anti-Icing Additive.....	2-5
	Oil.....	2-6
	Propeller .....	2-6
2.9	Starter Limits.....	2-7
2.11	Generator/Alternator Limits.....	2-7
2.13	Power Control Lever Operation .....	2-8
2.15	Chip Detector .....	2-8
2.17	Power Plant Instrument Markings.....	2-8
2.19	Weight Limits .....	2-9
2.21	Center of Gravity Limits .....	2-9
2.23	Maneuver Limits .....	2-9
2.25	Flight Load Factors .....	2-10
2.26	Runway Surface .....	2-10
2.27	Flight Crew Limits .....	2-10
2.28	Outside Air Temperature (OAT) Limits .....	2-10



**TABLE OF CONTENTS (CONT'D)**

**SECTION 2  
LIMITATIONS**

<b>Paragraph No.</b>		<b>Page No.</b>
2.28a	Minimum Fuel Temperature Limits .....	2-10
2.29	Kinds of Operation Equipment List .....	2-11
2.31	Operating Altitude Limitations .....	2-17
2.32	Oxygen .....	2-17
2.33	Cabin Pressurization Limits .....	2-17
2.35	Maximum Seating Configuration .....	2-17
2.37	Smoking .....	2-17
2.39	Icing.....	2-17
2.41	Placards .....	2-20

**SECTION 2  
LIMITATIONS**

 
**2.1 GENERAL**

This section provides the FAA Approved operating limitations, instrument markings, color coding and basic placards necessary for operation of the PA-46-500TP Meridian and its systems.

Limitations associated with those optional systems and equipment which require handbook supplements can be found in Section 9 (Supplements).

**2.3 AIRSPEED LIMITATIONS**

<b>SPEED</b>	<b>KIAS</b>	<b>KCAS</b>
Maximum Operating Speed ( $V_{MO}$ ) Do not exceed this speed in any operation.	188	187
Maximum Operating Maneuvering Speed - ( $V_O$ ) Do not make full or abrupt control movements above this speed.	127	126
Maximum Flaps Extended Speed ( $V_{FE}$ ) - Do not exceed this speed at the given flap setting.		
10°	168	167
20°	135	132
36°	118	115
Maximum Landing Gear Extended Speed ( $V_{LE}$ ) Do not exceed this speed with the landing gear extended.	168	167



**2.3 AIRSPEED LIMITATIONS (continued)**

<b>SPEED</b>	<b>KIAS</b>	<b>KCAS</b>
Maximum Landing Gear Operating Speed ( $V_{LO}$ ) - Do not operate the landing gear above this speed.		
Extension	168	167
Retraction	129	128

**2.5 AIRSPEED INDICATOR MARKINGS**

(Meggitt EFIS Display)

<b>MARKING</b>	<b>KIAS</b>	<b>SIGNIFICANCE</b>
Red Line	188 KTS	Maximum Operating Limit ( $V_{MO}$ ).
White Line	118 KTS	Maximum Operating Speed with full flaps extended ( $V_{FE}$ ).
Amber Line	79 to 69 KTS	Upper limit is the stalling speed with landing gear and flaps retracted ( $V_{S1}$ ) at maximum weight.
Red Line	69 KTS	Stalling speed with landing gear and flaps extended ( $V_{SO}$ ) at maximum weight.

(Standby Airspeed Indicator)

Red Radial	188 KTS	Maximum Operating Limit ( $V_{MO}$ )
White Arc	69 to 118 KTS	Maximum Operating Speed with full flaps extended ( $V_{FE}$ ).
Green Arc	79 to 188 KTS	Normal Operating Speed

**2.7 POWER PLANT LIMITATIONS****WARNING**

Positioning the power lever aft of the flight idle stop in flight is prohibited. Such positioning may cause loss of airplane control or may result in an engine overspeed condition and consequent loss of engine power.

**Engine**

Number of Engines	1
Engine Manufacturer	Pratt & Whitney Canada
Engine Model No.	PT6A-42A

The limits presented in the Table 2-1 shall be observed. The limitations presented do not necessarily occur simultaneously. Refer to the Pratt & Whitney Engine Maintenance Manual for specific action should any of the limits be exceeded.

OPERATING CONDITION (2)	SHp	TORQUE ft-lb (1)	MAX ITT °C	Ng %	Np RPM (11)	OIL PRESS PSI (7)	OIL TEMP °C
Take Off (3)	500	1313	800	101.7	2000	100 - 135	0 - 99
Max Continuous	500	1313	770	101.7	2000	100 - 135	0 - 99
Min. Idle			750 (8)	63 - 64		60 min.	-40 - 99
Starting			1000 (4)			0-200 (13)	-40 min(6)
Transient			850 (12) 880 (4)	104.1 (5)	2205 (9)	40 - 200	99 - 104 (10)
Max Reverse		310 - 360	770		1900	100 - 135	0 - 99

See Notes next page.



**2.7 POWER PLANT LIMITATIONS (Continued)**

**NOTES:**

- (1) Torque limit applies within range of 1600 to 2000 rpm prop shaft, below 1600 rpm torque is limited to 1100 ft. lb.
- (2) Engine inlet condition limit for engine operation: (a) temperature 46°C (115°F); (b) altitude: sea level to 30,000 ft. (temperature lapse rate of 2.0°C (3.7°F) per 1,000 ft. assumed).
- (3) This value is time limited to 5 minutes.
- (4) This value is time-limited to 5 seconds.
- (5) This value is time-limited to 10 seconds.
- (6) Limited by oil temperature.
- (7) Normal oil pressure with gas generator speed above 72% speed. With engine torque below 1313 ft. lb., minimum oil pressure is 85 psig at normal oil temperature (60 to 70°C). Under emergency conditions to complete a flight, a lower oil pressure limit of 60 psig is permissible at reduced power level, not exceeding 1100 ft. lb.
- (8) Applies over range 21000 to 23000 rpm.
- (9) May be employed in an emergency condition, at all ratings, to complete a flight.
- (10) Time limited to 10 minutes at any condition.
- (11) In flight in the absence of a minimum 40 psig oil pressure, continuous steady state propeller rotation must be prevented by propeller feathering. On the ground, with the engine shutdown, continuous propeller rotation must be prevented.
- (12) This value is time limited to 20 seconds.
- (13) During extremely cold starts (less than 0°F / -17.7°C), oil pressure may reach 200 psig.

**2.7 POWER PLANT LIMITATIONS (Continued)****Fuel Limitations**

Approved Aviation Fuels ..... JET A, JET A-1

**Anti-Icing Additive**

Anti-icing additive per MIL-I-27686 is required for use in the above fuels in the amount by volume of .15% maximum. See Section 8 for blending and handling procedures.

Total Capacity.....1160 lb/173 U.S. gal. (526.1 kg/654.8 liter)

Unusable Fuel.....20 lb/3 U.S. gal.(9.07 kg/11.3 liter)

The unusable fuel for this airplane has been determined as 10 lb/1.5 U.S. gal. (4.5 kg/5.6 liter) in each wing in critical flight attitudes.

Usable Fuel.....1140 lb/170 U.S. gal. (517.1 kg/643.5 liter)

The usable fuel in this airplane has been determined as 570 lb/85 U.S. gal. (258.5 kg/321.7 liter) in each wing.

Total usable fuel may be reduced by 13 lb/2 U.S.gal. (5.89 kg/7.5 liter) if the engine driven fuel boost pump fails.

Fuel quantity indication is not accurate in uncoordinated flight.

**Fuel Imbalance**

The maximum allowable fuel imbalance in this airplane is 125 lb (56.6 kg).

**NOTE**

To insure balanced fuel condition, minimize or avoid uncoordinated flight.

2.7 POWER PLANT LIMITATIONS (Continued)

**Oil Limitations**

**Oil Grade or Specification**

Refer to the latest revision of Pratt & Whitney Canada, Service Bulletin 3001 for approved oils. (Refer to Section 8 for Oil Specifications.)

**CAUTION**

Do not mix brands or types of oils.

Total Oil System Capacity ..... 12 U.S. qt (11.35 liter)  
Oil Tank Capacity ..... 9.2 U.S. qt (8.7 liter)

**Propeller Limitations**

Propeller Manufacturer ..... Hartzell  
Propeller Model Number ..... HC-E4N-3Q  
Number of Propellers ..... 1  
Number of Propeller Blades ..... 4

**Propeller Diameter**

Maximum ..... 82.5 in. (209.5 cm)  
Minimum ..... 81.5 in. (207 cm)

**Propeller Operating Limits**

Maximum Normal Operation ..... 2000 RPM  
Maximum Reverse ..... 1900 RPM  
Minimum Operation During Ground Operation ..... 1200 RPM

**NOTE**

Propeller operation below 1200 RPM is prohibited.

**Blade Angles at Propeller Station 30  
at Hydraulic Low Pitch Stop.**

Low Pitch Stop Min./Max. .... 18.9°/19.1°  
Feather Min./Max. .... 84°/85°  
Reverse Min./Max. .... -9.5°/-10.5°

**2.7 POWER PLANT LIMITATIONS (Continued)**

**2.9 STARTER LIMITATIONS**

Use of the starter is limited to 30 seconds ON, one minute OFF, 30 seconds ON, one minute OFF, 30 seconds ON, 30 minutes OFF before a fourth start may be attempted.

**2.11 GENERATOR/ALTERNATOR LIMITATIONS**

Generator/Alternator	Max. Continuous Load (amps)
Starter/Generator	170
Alternator Ground Operation	120
Alternator In Flight	130

**THIS SPACE INTENTIONALLY LEFT BLANK**



**2.13 POWER CONTROL LEVER OPERATION**

Power Lever Position operation aft of the flight idle detent is not permitted:

1. When the engine is shut down.
2. During flight.

**WARNING**

Positioning the power lever aft of the flight idle stop in flight is prohibited. Such positioning may cause loss of airplane control or may result in an engine overspeed condition and consequent loss of engine power.

**2.15 CHIP DETECTOR**

Takeoff is not approved with CHIP DETECTOR annunciator illuminated.

**2.17 POWERPLANT INSTRUMENT MARKINGS**

Table 2-2

Instrument	Red Line	Yellow Arc	White Arc	Yellow Arc	Red Line
Propeller Speed ( $N_p$ )	2000		0 - 2000		
Engine Speed ( $N_g$ )	101.7		0 - 101.7		
Fuel Flow - PPH			0 - 600		
Fuel Flow - KPH			0 - 272		
Oil Pressure - PSI	200	60 - 100 85 - 100 135 - 200	100 - 135	60 - 100 85 - 100	60 (1) 85
Oil Temp. °C	99		0 - 99	-40 - 0	-40
ITT - °C	800	770 - 800	0 - 770		
Torque Ft - Lb	1313		0 - 1313		

(1) When torque is below 1100 ft. lb.

**2.19 WEIGHT LIMITS**

Maximum Ramp Weight	4892 lb (2219.2 kg)
Maximum Takeoff Weight	4850 lb (2199.9 kg)
Maximum Landing Weight	4850 lb (2199.9 kg)
Maximum Weight in Baggage Compartment	100 lb (45.3 kg)

**NOTE**

It is the responsibility of the airplane owner and the pilot to ensure that the airplane is properly loaded. See Section 6 (Weight and Balance) for proper loading instructions.

**2.21 CENTER OF GRAVITY LIMITS**

Weight	Forward Limit Distance Aft of Datum	Rearward Limit Distance Aft of Datum
4892 lb (2219.2 kg)	140.22 in. (356.16 cm)	147.10 in. (373.63 cm)
4850 lb (2199.9 kg)	140.06 in. (355.75 cm)	147.10 in. (373.63 cm)
4100 lb (1859.7 kg)	137.23 in. (348.50 cm)	147.10 in. (373.63 cm)
3508 lb (1591.1 kg)	135.00 in. (342.90 cm)	143.67 in. (364.90 cm)
3000 lb (1360.7 kg)	135.00 in. (342.90 cm)	140.75 in. (357.49 cm)

**NOTES**

Straight line variation between points indicated.

The datum is located 100.0 in. (254 cm) ahead of the forward pressure bulkhead.

**2.23 MANEUVER LIMITS**

This is a Normal Category airplane. No acrobatic maneuvers including spins approved.



## 2.25 FLIGHT LOAD FACTOR LIMITS

Positive Load Factor (Maximum)

Flaps Up 3.8 g

Flaps Down 2.0 g

Negative Load Factor (Maximum) -1.52 g

### NOTE

No inverted maneuvers approved.

## 2.26 RUNWAY SURFACE

Takeoff and landing operations must be conducted from paved, hard surfaces.

## 2.27 FLIGHT CREW LIMITS

The minimum required flight crew is one pilot in the left seat.

## 2.28 OUTSIDE AIR TEMPERATURE (OAT - Free Air Static Temperature) LIMITS

	Starting	In-flight
Minimum	-34°C	-41°C *
Maximum	+46°C	+46°C

\* For aircraft serial numbers 4697001 thru 4697158 with Piper Kit 767-380 installed, or serial numbers 4697159 thru 4697173 with Piper Kit 767-381 installed, -54°C is approved.

## 2.28a MINIMUM FUEL TEMPERATURE LIMITS

Fuel Type	Starting	In-flight
Jet A	-34°C	-34°C
Jet A-1	-34°C	-41°C

### CAUTION

For those aircraft NOT EQUIPPED with or have an INOPERATIVE Fuel Temperature Indicator assume the fuel temperature is the same as the OAT (free air static temperature). In this case the minimum OAT limit would be the minimum fuel temperature limit.

### NOTE

When a mixture of Jet A and Jet A-1 is present in the fuel tanks, the Jet A minimum fuel temperature limit of -34°C must be observed.

**2.29 KINDS OF OPERATION EQUIPMENT LIST**

This airplane may be operated in day or night VFR and day or night IFR when the appropriate equipment is installed and operable.

The following equipment list identifies the systems and equipment upon which type certification for each kind of operation was predicated and must be installed and operable for the particular kind of operation indicated.

**NOTE**

The following system and equipment list does not include specific flight instruments and communication/navigation equipment required by the FAR Part 91 operating requirements.

<b>System</b>	<b>Number Required</b>	<b>Types of Operation and Remarks (DAY, NIGHT, VFR, IFR and ICING Conditions)</b>
<b>1. Flight Instrumentation</b>		
Airspeed Indicator	1	DAY, NIGHT, VFR, IFR, ICING
Altimeter	1	DAY, NIGHT, VFR, IFR, ICING
Magnetic Compass	1	DAY, NIGHT, VFR, IFR, ICING
Outside Air Temperature (OAT) Indicator	1	DAY, NIGHT, VFR, IFR, ICING
Attitude Indicator	1	IFR, ICING
Heading Indicator	1	IFR, ICING
Turn Coordinator	1	IFR, ICING
Vertical Speed Indicator	1	IFR, ICING
Clock	1	IFR, ICING

 


2.29 KINDS OF OPERATION EQUIPMENT LIST (Continued)

System	Number Required	Types of Operation and Remarks (DAY, NIGHT, VFR, IFR and ICING Conditions)
2. <b>Engine Instrumentation</b>		
Torquemeter	1	DAY, NIGHT, VFR, IFR, ICING
Propeller Tachometer (N <sub>p</sub> )	1	DAY, NIGHT, VFR, IFR, ICING
Interstage Turbine Temperature (ITT)	1	DAY, NIGHT, VFR, IFR, ICING
Gas Generator Tachometer (N <sub>g</sub> )	1	DAY, NIGHT, VFR, IFR, ICING
Oil Pressure	1	DAY, NIGHT, VFR, IFR, ICING
Oil Temperature	1	DAY, NIGHT, VFR, IFR, ICING
3. <b>Miscellaneous Instrumentation</b>		
Fuel Quantity Indicating System	2	DAY, NIGHT, VFR, IFR, ICING
DC Voltmeter	1	DAY, NIGHT, VFR, IFR, ICING
DC Ammeter	1	DAY, NIGHT, VFR, IFR, ICING
4. <b>Equipment/ Furnishings</b>		
Safety Restraint Each Occupant	AR	DAY, NIGHT, VFR, IFR, ICING

**2.29 KINDS OF OPERATION EQUIPMENT LIST (Continued)**

System	Number Required	Types of Operation and Remarks (DAY, NIGHT, VFR, IFR and ICING Conditions)
<b>5. Engine</b>		
Starter Generator	1	DAY, NIGHT, VFR, IFR, ICING
Alternator	1	DAY, NIGHT, VFR, IFR, ICING
Fuel Press Annunciator	1	DAY, NIGHT, VFR, IFR, ICING
Boost Pump Annunciator	2	DAY, NIGHT, VFR, IFR, ICING
Firewall Fuel Shutoff Valve	1	DAY, NIGHT, VFR, IFR, ICING
<b>6. Flight Controls</b>		
Flap Position Indicator	1	DAY, NIGHT, VFR, IFR, ICING
Elevator Trim Position Indicator	1	DAY, NIGHT, VFR, IFR, ICING
Rudder Trim Position Indicator	1	DAY, NIGHT, VFR, IFR, ICING
<b>7. Ice Protection</b>		
Pneumatic Deice System (Wing and Empennage Protection)	1	ICING
Wing Ice Detection Light	1	ICING
Electrothermal Propeller Deice Boots	1 per Blade	ICING
Heated Windshield	1	DAY, NIGHT, VFR, IFR, ICING



**2.29 KINDS OF OPERATION EQUIPMENT LIST (Continued)**

<b>System</b>	<b>Number Required</b>	<b>Types of Operation and Remarks (DAY, NIGHT, VFR, IFR and ICING Conditions)</b>
<b>7. Ice Protection (Continued)</b>		
Heated Stall Warning Vane	1	ICING
Heated Pitot Head	1	DAY, NIGHT, VFR, IFR, ICING
Alternate Static Source	1	ICING
WSHLD HEAT Annunciator	1	ICING
Vacuum Ejector	1	DAY, NIGHT, VFR, IFR, ICING
SURFACE DEICE Annunciator	1	ICING
SURFACE DEICE FAIL Annunciator	1	ICING
<b>8. Landing Gear</b>		
Hydraulic Pump	1	DAY, NIGHT, VFR, IFR, ICING
HYD PUMP Annunciator	1	DAY, NIGHT, VFR, IFR, ICING
Landing Gear Down Position Indicating Lights	3	DAY, NIGHT, VFR, IFR, ICING
Landing Gear Warning Horn	1	DAY, NIGHT, VFR, IFR, ICING
GEAR WARN Annunciator	1	DAY, NIGHT, VFR, IFR, ICING

**2.29 KINDS OF OPERATION EQUIPMENT LIST (Continued)**

System	Number Required	Types of Operation and Remarks (DAY, NIGHT, VFR, IFR and ICING Conditions)
9. <b>Pneumatic/ Vacuum</b>		
Vacuum Annunciator	1	IFR, ICING
10. <b>Lights - External</b>		
Landing Light	1	NIGHT
Position Lights		
a. Left Wing - Red and White	1 ea.	NIGHT
b. Right Wing - Green and White	1 ea.	NIGHT
Anti-Collision (Stroke) Lights	2	NIGHT
Taxi/Rec Lights	2	NIGHT
11. <b>Lights - Cockpit</b>		
Instrument Panel Switch Lights	AR	NIGHT
Instrument Lights	AR	NIGHT
Map Lights	2	NIGHT

**2.29 KINDS OF OPERATION EQUIPMENT LIST (Continued)**

<b>System</b>	<b>Number Required</b>	<b>Types of Operation and Remarks (DAY, NIGHT, VFR, IFR and ICING Conditions)</b>
<b>12. Pressurization</b>		
Cabin Altimeter	1	DAY, NIGHT, VFR, IFR, ICING
Cabin Differential Pressure Indicator	1	DAY, NIGHT, VFR, IFR, ICING
Cabin Vertical Speed Indicator	1	DAY, NIGHT, VFR, IFR, ICING
Pressure Control Valve	1	DAY, NIGHT, VFR, IFR, ICING
Pressure Relief Safety Valve	1	DAY, NIGHT, VFR, IFR, ICING
Pressurization Controller	1	DAY, NIGHT, VFR, IFR, ICING
CABIN ALT 10K Annunciator (Amber)	1	DAY, NIGHT, VFR, IFR, ICING
CAB ALT Annunciator (Red)	1	DAY, NIGHT, VFR, IFR, ICING
<b>13. Miscellaneous System</b>		
Stall Warning System	1	DAY, NIGHT, VFR, IFR, ICING
STALL WARN FAIL Annunciator	1	DAY, NIGHT, VFR, IFR, ICING
Annunciator Test System	1	DAY, NIGHT, VFR, IFR, ICING

**2.31 OPERATING ALTITUDE LIMITATIONS**

Flight above 30,000 feet pressure altitude is not approved. Flight up to and including 30,000 feet is approved if equipped with avionics in accordance with FAR 91.

**2.32 OXYGEN**

A minimum of 800 psi is required for pressurized flight above 25,000 feet.

**2.33 CABIN PRESSURIZATION LIMITS**

- (a) Maximum cabin differential pressure of 5.5 psi.
- (b) Pressurized landing not approved.

**2.35 MAXIMUM SEATING CONFIGURATION**

The maximum seating capacity is 6 (six) persons.

**2.37 SMOKING**

Smoking is not permitted in the aircraft.

**2.39 ICING (Reference Section 9, Supplement 12, for Meridian Aircraft Flight Into Known Icing (FIKI))**

**THIS PAGE INTENTIONALLY LEFT BLANK**



## 2.41 PLACARDS

On the pilot's left hand side panel:

THIS AIRCRAFT MUST BE OPERATED AS A NORMAL CATEGORY AIRPLANE IN COMPLIANCE WITH THE OPERATING LIMITATIONS STATED IN THE FORM OF PLACARDS, MARKINGS AND MANUALS. NO ACROBATIC MANEUVERS (INCLUDING SPINS) APPROVED. THIS AIRCRAFT APPROVED FOR V.F.R., I.F.R., DAY AND NIGHT ICING FLIGHT WHEN EQUIPPED IN ACCORDANCE WITH THE AIRPLANE FLIGHT MANUAL.

WARNING

TURN OFF STROBE LIGHTS WHEN IN CLOSE PROXIMITY TO GROUND OR DURING FLIGHT THROUGH CLOUD, FOG OR HAZE.

PRESSURIZED LANDING NOT APPROVED.

## 2.41 PLACARDS (Continued)

On the instrument panel in full view of the pilot:

V<sub>0</sub> 127 KIAS  
(SEE AFM)

V<sub>L0</sub> 168 KIAS DN  
V<sub>L0</sub> 129 KIAS UP  
V<sub>LE</sub> 168 KIAS MAX

 
or

V<sub>0</sub> 127 KIAS  
(SEE AFM)

V<sub>L0</sub> 168 KIAS DN, 129 KIAS UP  
V<sub>LE</sub> 168 KIAS MAX

Above the emergency gear extension handle:

EMERGENCY GEAR EXTENSION  
PULL TO RELEASE. SEE A.F.M.  
BEFORE RE-ENGAGEMENT



2.41 **PLACARDS (Continued)**

Near the magnetic compass:

**STANDBY COMPASS**  
**FOR CORRECT READING CHECK:**  
**WINDSHIELD HT SWITCH OFF**  
**PROP DE-ICE SWITCH OFF**  
**COOLING SYSTEM OFF**  
**COCKPIT AND CABIN HEATING OFF**

Near the wing fuel caps:



**JET - A - FUEL**  
**ANTI-ICE ADDITIVE REQUIRED. SEE PILOT'S**  
**OPERATING HANDBOOK FOR OTHER APPROVED**  
**FUELS. QUANTITY AND TYPE OF ADDITIVE.**

**DURING FUELING AND DEFUELING OPERATIONS.**  
**ATTACH GROUNDING CABLE TO GROUND**  
**ATTACH PIN LOCATED ON MAIN STRUT.**

On the inside radar pod stowage door:

**MAX WEIGHT 5 LBS (2.2 KG)**  
**or**  
**MAX WEIGHT 5 LBS**

**2.41 PLACARDS (Continued)**

On inside of aft fuselage stowage door:

MAX WEIGHT THIS  
COMPARTMENT 4 LBS (1.8 KG)

or

MAX WEIGHT THIS  
COMPARTMENT 4 LBS

On the fuel shutoff cover:

FUEL SHUTOFF  
LIFT COVER - PULL OFF

Above the copilot's engine display unit:

TOTAL USABLE FUEL CAPACITY 1140 LBS (517.1 KG)

or

TOTAL USABLE FUEL CAPACITY 1140 LBS


On the aft closeout panel:

STANDARD CARGO NET INSTALLED

MAX BAGGAGE THIS COMPARTMENT  
100 LBS / 45.3 KG

---

GOLF CARGO NET INSTALLED

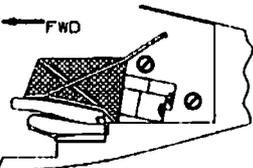

⊘ NO BAGGAGE PERMISSIBLE  
IN THESE AREAS WHEN THE  
GOLF NET IS IN USE

MAX GOLF CLUB LOAD  
105 LBS / 47.6 KG

MAX ADDITIONAL BAGGAGE  
BEHIND LEFT SEAT  
50 LBS / 22.6 KG


or

STANDARD CARGO NET INSTALLED

MAX BAGGAGE THIS COMPARTMENT  
100 LBS

---


GOLF CARGO NET INSTALLED

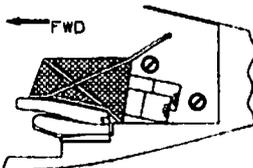

⊘ NO BAGGAGE PERMISSIBLE  
IN THESE AREAS WHEN THE  
GOLF NET IS IN USE

MAX GOLF CLUB LOAD  
105 LBS

 MAX ADDITIONAL BAGGAGE  
BEHIND LEFT SEAT  
50 LBS



2.41 PLACARDS (Continued)

Above the stall warning test button:

STALL  
TEST

Above and below the electric trim on/off switch:

ELEV. TRIM

PUSH ON/OFF

On the lower left instrument panel:

 ALTERNATE STATIC SOURCE  
(LOCATED BELOW PANEL)  
UP - ALTERNATE  
DOWN - PRIMARY

Near the mic select switch:

MIC  
SELECT

MASK

BOOM

On the parking brake handle:

PARK  
BRAKE  
PULL

Above the standby attitude indicator:

S  
T  
B  
Y  
OFF  
TEST

ON  
OFF

G  
Y  
R  
O

**2.41 PLACARDS (Continued)**

Near the exceedance mute switch:

EXCEEDANCE  
MUTE

Near the cabin altitude exceedance mute switch:

CABIN  
ALTITUDE  
MUTE

Below the copilot's EADI transfer switch and below the pilot's EADI transfer switch:

EADI DISPLAY  
DOWN

Near the fuel temperature indicator, if installed:

FUEL TEMPERATURE LIMIT  
JET A -34°C TO 50°C  
JET A-1 -41°C TO 50°C

Directly under the stormscope indicator, if optional stormscope is installed:

STORMSCOPE NOT TO BE USED FOR  
THUNDERSTORM AREA PENETRATION

Around the landing gear handle:

LANDING  
GEAR  
  
UP  
  
  
DN

2.41 PLACARDS (Continued)

Near the flap handle:

FLAPS

Near the elevator trim wheel:

D

T/O




RNG

U

ELEV  
TRIM

On the power control console:

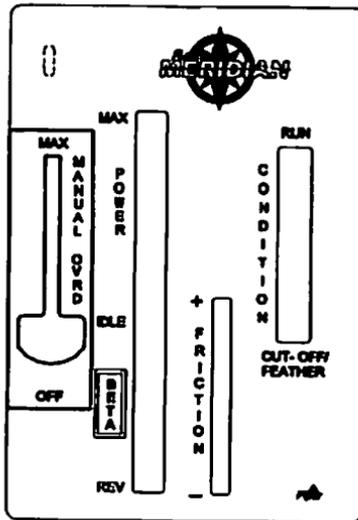


**2.41 PLACARDS (Continued)**

On the copilot's side panel:

EMERGENCY OXYGEN  
IN DRAWER UNDER SEAT  
(AISLE ACCESS)  
PULL MASK OUT OF DRAWER FULLY  
AT FULL EXTENSION GIVE CORD A TUG  
MAXIMUM DURATION ————— 15 MINS  
SEE POH  
NO SMOKING WHILE IN USE

On the main cabin door handle:

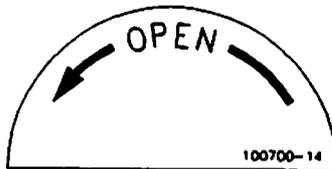

On the upper edge of the cabin lower door:

 
OPEN  CLOSE      INSURE PIN  
WINDOWS GREEN

Over the emergency exit handle:

EMERGENCY EXIT  
REMOVE GLASS  
PULL DOOR IN - LIFT UP

On the pilot's side panel and below the right center window:

NO SMOKING




2.41 PLACARDS (Continued)

On the inboard section of the left flap:

NO  
STEP

On the nose gear strut:

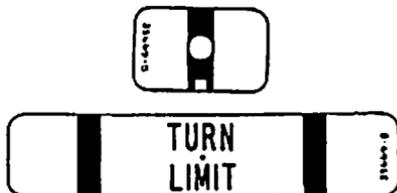

On the brake fluid reservoir:

BRAKE FLUID  
RESERVOIR  
SERVICE USING  
MIL-H-5606

Near the external power receptacle:

STARTING PROCEDURE  
FOR EXTERNAL POWER

MASTER SWITCH AND  
RADIOS MUST BE OFF

SEE AIRPLANE FLIGHT MANUAL  
FOR  
DETAILED INSTRUCTIONS

EXTERNAL POWER  
28 VOLTS D.C.  
TURN MASTER SWITCH  
AND ALL EQUIP. OFF  
BEFORE INSERTING  
OR REMOVING PLUG

**2.41 PLACARDS (Continued)**

Inside the main wheel well cavity:

 
**STRUT AND TIRE  
SERVICE INSTRUCTIONS**

PLACE AIRCRAFT ON JACKS AND EXTEND STRUT COMPLETELY. RELEASE AIR AND REMOVE AIR VALVE. SLOWLY COMPRESS THE STRUT. SLOWLY FILL COMPRESSED STRUT WITH MIL-H-5606 HYDRAULIC FLUID THROUGH THE FILLER OPENING UNTIL IT REACHES THE TOP OF THE FILLER PLUG HOLE. MANUALLY COMPRESS AND EXTEND STRUT SEVERAL TIMES TO REMOVE TRAPPED AIR. ADD FLUID EACH TIME IF REQUIRED. REPLACE VALVE AND, WITH MAIN GEAR STILL CLEAR OF GROUND, INFLATE STRUT TO 250 PSI AIR PRESSURE. INFLATE MAIN TIRE TO 55 PSI AIR PRESSURE. REMOVE JACKS FROM AIRCRAFT (NORMAL MAIN GEAR STRUT EXTENSION IS 3.14 INCHES (7.98 CM) WITH AIRCRAFT ON A LEVEL SURFACE AND AT EMPTY WEIGHT).

or

**STRUT AND TIRE  
SERVICE INSTRUCTIONS**

PLACE AIRCRAFT ON JACKS AND EXTEND STRUT COMPLETELY. RELEASE AIR AND REMOVE AIR VALVE. SLOWLY COMPRESS THE STRUT. SLOWLY FILL COMPRESSED STRUT WITH MIL-H-5606 HYDRAULIC FLUID THROUGH THE FILLER OPENING UNTIL IT REACHES THE TOP OF THE FILLER PLUG HOLE. MANUALLY COMPRESS AND EXTEND STRUT SEVERAL TIMES TO REMOVE TRAPPED AIR. ADD FLUID EACH TIME IF REQUIRED. REPLACE VALVE AND, WITH MAIN GEAR STILL CLEAR OF GROUND, INFLATE STRUT TO 250 PSI AIR PRESSURE. INFLATE MAIN TIRE TO 55 PSI AIR PRESSURE. REMOVE JACKS FROM AIRCRAFT (NORMAL MAIN GEAR STRUT EXTENSION IS 3.14 INCHES WITH AIRCRAFT ON A LEVEL SURFACE AND AT EMPTY WEIGHT).



## 2.41 PLACARDS (Continued)

On the nose wheel strut (required only for aircraft serial numbers 4697001 thru 4697125 that have not complied with Piper Service Bulletin 1106):

### STRUT AND TIRE SERVICE INSTRUCTIONS

PLACE AIRCRAFT ON JACKS AND EXTEND STRUT COMPLETELY. RELEASE AIR AND REMOVE AIR VALVE. SLOWLY COMPRESS THE STRUT. SLOWLY FILL COMPRESSED STRUT WITH MIL-H-5606 HYDRAULIC FLUID THROUGH THE FILLER OPENING UNTIL IT REACHES THE TOP OF THE FILLER PLUG HOLE. MANUALLY COMPRESS AND EXTEND STRUT SEVERAL TIMES TO REMOVE TRAPPED AIR. ADD FLUID EACH TIME IF REQUIRED. REPLACE VALVE AND, WITH NOSE GEAR STILL CLEAR OF GROUND, INFLATE STRUT TO A PRESSURE OF 160 PSI. INFLATE NOSE GEAR TIRE TO 50 PSI AIR PRESSURE. REMOVE JACKS FROM AIRCRAFT (NORMAL STRUT EXTENSION IS 2.70 INCHES (6.86 CM) WITH AIRCRAFT ON A LEVEL SURFACE AND AT EMPTY WEIGHT WITH FULL FUEL & OIL).

OR

### STRUT AND TIRE SERVICE INSTRUCTIONS

PLACE AIRCRAFT ON JACKS AND EXTEND STRUT COMPLETELY. RELEASE AIR AND REMOVE AIR VALVE. SLOWLY COMPRESS THE STRUT. SLOWLY FILL COMPRESSED STRUT WITH MIL-H-5606 HYDRAULIC FLUID THROUGH THE FILLER OPENING UNTIL IT REACHES THE TOP OF THE FILLER PLUG HOLE. MANUALLY COMPRESS AND EXTEND STRUT SEVERAL TIMES TO REMOVE TRAPPED AIR. ADD FLUID EACH TIME IF REQUIRED. REPLACE VALVE AND, WITH NOSE GEAR STILL CLEAR OF GROUND, INFLATE STRUT TO A PRESSURE OF 160 PSI. INFLATE NOSE GEAR TIRE TO 50 PSI AIR PRESSURE. REMOVE JACKS FROM AIRCRAFT (NORMAL STRUT EXTENSION IS 2.70 INCHES WITH AIRCRAFT ON A LEVEL SURFACE AND AT EMPTY WEIGHT WITH FULL FUEL & OIL).

**2.41 PLACARDS (Continued)**

On the nose wheel strut (required only for aircraft serial numbers 4697001 thru 4697125 that have complied with Piper Service Bulletin 1106, and aircraft serial numbers 4697126 and up):

**STRUT AND TIRE  
SERVICE INSTRUCTIONS**

PLACE AIRCRAFT ON JACKS AND EXTEND STRUT COMPLETELY. RELEASE AIR AND REMOVE AIR VALVE. SLOWLY COMPRESS THE STRUT. SLOWLY FILL COMPRESSED STRUT WITH MIL-H-5606 HYDRAULIC FLUID THROUGH THE FILLER OPENING UNTIL IT REACHES THE TOP OF THE FILLER PLUG HOLE. MANUALLY COMPRESS AND EXTEND STRUT SEVERAL TIMES TO REMOVE TRAPPED AIR. ADD FLUID EACH TIME IF REQUIRED. REPLACE VALVE AND, WITH NOSE GEAR STILL CLEAR OF GROUND, INFLATE STRUT TO A PRESSURE OF 160 PSI. INFLATE NOSE GEAR TIRE TO 70 PSI AIR PRESSURE. REMOVE JACKS FROM AIRCRAFT (NORMAL STRUT EXTENSION IS 2.70 INCHES (6.86 CM) WITH AIRCRAFT ON A LEVEL SURFACE AND AT EMPTY WEIGHT WITH FULL FUEL & OIL).

or

**STRUT AND TIRE  
SERVICE INSTRUCTIONS**

PLACE AIRCRAFT ON JACKS AND EXTEND STRUT COMPLETELY. RELEASE AIR AND REMOVE AIR VALVE. SLOWLY COMPRESS THE STRUT. SLOWLY FILL COMPRESSED STRUT WITH MIL-H-5606 HYDRAULIC FLUID THROUGH THE FILLER OPENING UNTIL IT REACHES THE TOP OF THE FILLER PLUG HOLE. MANUALLY COMPRESS AND EXTEND STRUT SEVERAL TIMES TO REMOVE TRAPPED AIR. ADD FLUID EACH TIME IF REQUIRED. REPLACE VALVE AND, WITH NOSE GEAR STILL CLEAR OF GROUND, INFLATE STRUT TO A PRESSURE OF 160 PSI. INFLATE NOSE GEAR TIRE TO 70 PSI AIR PRESSURE. REMOVE JACKS FROM AIRCRAFT (NORMAL STRUT EXTENSION IS 2.70 INCHES WITH AIRCRAFT ON A LEVEL SURFACE AND AT EMPTY WEIGHT WITH FULL FUEL & OIL).

**THIS PAGE INTENTIONALLY LEFT BLANK**

2.41 PLACARDS (Continued)

On the lower edge of the upper cabin door:

<p><b>ENGINE OIL SPECIFICATION</b></p> <p>ENGINE LAST SERVICED WITH:</p> <p>DATE OF LAST SERVICE:</p>	<p>DO NOT MIX DIFFERENT BRANDS OF OIL. OIL TANK CAPACITY: 9.2 QTS / 8.7 L. DO NOT OVERFILL.</p> <p>FILL WITH APPROVED OIL TO MAXIMUM MARK ON DIP STICK.</p> <p>SEE LATEST REVISION OF PRATT &amp; WHITNEY CANADA ENGINE SERVICE BULLETIN SB 3001 FOR LIST OF APPROVED LUBRICATING OILS.</p>
--	---

100700-057

OR

<p><b>ENGINE OIL SPECIFICATION</b></p> <p>ENGINE LAST SERVICED WITH:</p> <p>DATE OF LAST SERVICE:</p>	<p>DO NOT MIX DIFFERENT BRANDS OF OIL. OIL TANK CAPACITY: 9.2 QTS DO NOT OVERFILL.</p> <p>FILL WITH APPROVED OIL TO MAXIMUM MARK ON DIP STICK.</p> <p>SEE LATEST REVISION OF PRATT &amp; WHITNEY CANADA ENGINE SERVICE BULLETIN SB 3001 FOR LIST OF APPROVED LUBRICATING OILS.</p>
--	--

On the backside of the oil filler door:

**ENGINE OIL  
SPECIFICATION**

DO NOT MIX DIFFERENT BRANDS OF OIL.  
OIL TANK CAPACITY:  
9.2 QTS / 8.7 L.  
DO NOT OVERFILL.

FILL WITH APPROVED OIL TO MAXIMUM MARK ON DIP STICK.

SEE LATEST REVISION OF PRATT & WHITNEY CANADA ENGINE SERVICE BULLETIN SB 3001 FOR LIST OF APPROVED LUBRICATING OILS.

100700-058

OR

 
**ENGINE OIL  
SPECIFICATION**

DO NOT MIX DIFFERENT BRANDS OF OIL.

OIL TANK CAPACITY:  
9.2 QTS  
DO NOT OVERFILL

FILL WITH APPROVED OIL TO MAXIMUM MARK ON DIP STICK.

SEE LATEST REVISION OF PRATT & WHITNEY CANADA ENGINE SERVICE BULLETIN SB 3001 FOR LIST OF APPROVED LUBRICATING OILS.




2.41 PLACARDS (Continued)

On the instrument panel, pilot's side and copilot's side, if required:

HEADING ERRORS MAY EXCEED TWO DEGREES WITH AIR CONDITIONING SYSTEM OPERATING. SEE CORRECTION BELOW WHEN FLYING WITH AIR CONDITIONING ON.	
<u>FOR</u>	<u>STEER</u>
<b>360</b>	_____
<b>030</b>	_____
<b>060</b>	_____
<b>090</b>	_____
<b>120</b>	_____
<b>150</b>	_____
<b>180</b>	_____
<b>210</b>	_____
<b>240</b>	_____
<b>270</b>	_____
<b>300</b>	_____
<b>330</b>	_____
104593-002	

## 2.41 PLACARDS (Continued)

On the pyramid cabinet behind the copilot's seat:

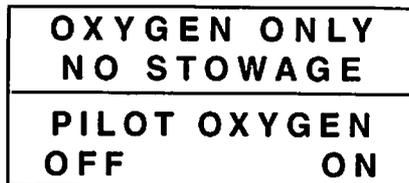

**2.41 PLACARDS (Continued)**

On the instrument panel in full view of the pilot:

CORRECTION CARD ALTERNATE STATIC SOURCE	
PRIMARY	ALTERNATE
<u>ALTITUDE</u>	
1,000	_____
2,000	_____
3,000	_____
4,000	_____
5,000	_____
6,000	_____
7,000	_____
8,000	_____
9,000	_____
10,000	_____
11,000	_____
12,000	_____
13,000	_____
<u>AIRSPEED</u>	
	CLIMB
	CRUISE
	APPROACH

**TABLE OF CONTENTS  
SECTION 3  
EMERGENCY PROCEDURES**

Paragraph No.		Page No.
3.1	General .....	3-1
	Annunciator Descriptions.....	3-3
3.3	Airspeeds for Emergency Operation .....	3-6
3.5	Rejected Takeoff .....	3-7
3.7	Engine Failure .....	3-7
	Engine Failure Before Rotation.....	3-7
	Engine Failure Immediately After Takeoff.....	3-8
	Engine Failure in Flight.....	3-8
	Air Start Envelope .....	3-9
	Air Start - Starter Assist.....	3-10
3.9a	High Oil Temperature.....	3-11
3.9b	Oil Pressure .....	3-11
3.9c	Chip Detector Light.....	3-12
3.9d	Start Engage .....	3-12
3.9e	Fire Detect Fail.....	3-12
3.9f	Feather.....	3-13
3.9g	Beta.....	3-13
3.11	Fuel Control Unit Failure/Power Lever Control Loss (Manual Override Operation).....	3-13
3.13	Propeller Overspeed .....	3-15
3.14	Engine Fire .....	3-16
	On Ground.....	3-16
	In Flight .....	3-16
3.15	Electrical Fire, Smoke or Fumes .....	3-17
3.16	Smoke Evacuation.....	3-18
	Cockpit/Cabin Fire .....	3-18
3.17	Emergency Descent - Maximum Rate.....	3-19

## TABLE OF CONTENTS (CONT'D)

## SECTION 3

## EMERGENCY PROCEDURES

Paragraph No.		Page No.
3.19	Emergency Descent - Maximum Range.....	3-19
3.21	Power Off Landing .....	3-20
3.23	Gear Up Landing .....	3-21
3.25	Landing Without Flaps .....	3-21
3.27	Landing With Primary Longitudinal Control Failed .....	3-22
3.29	Hydraulic System Malfunction .....	3-22
3.31	Emergency Landing Gear Extension.....	3-23
3.33	Flap System Malfunction .....	3-24
3.35	Electrical System Malfunctions .....	3-25
3.36	Avionics System Failures .....	3-28
3.36a	Failure of Pilot's Electronic Attitude Direction Indicator (EADI).....	3-28
3.36b	Yellow Heading Information on Pilot's and Copilot's Electronic Attitude Direction Indicator (EADI).....	3-29
3.36c	Failure of Pilot's Electronic Horizontal Situation Indicator (EHSI).....	3-29
3.36d	Failure of Attitude and Heading Reference Systems (AHRS).....	3-30
3.36e	Failure of Flight and Navigation Displays .....	3-30
3.37	Fuel System .....	3-31
3.39	Pressurization/Environmental System Malfunctions .....	3-33
	Fire/Smoke or Fumes in Cabin.....	3-33
	Cabin Altitude Above 10,000 Feet .....	3-34
	Cabin Altitude Above 12,000 Feet .....	3-34
	Emergency Pressurization .....	3-34
	Bleed Overtemperature.....	3-35
	Overpressurization.....	3-35
	Rapid or Explosive Decompression .....	3-36
3.40	Emergency Exit .....	3-37



TABLE OF CONTENTS (CONT'D)

SECTION 3

EMERGENCY PROCEDURES

Paragraph No.		Page No.
3.41	Vacuum System Failure.....	3-37
3.43	Anti-ice/De-ice System Malfunctions.....	3-38
3.43a	Left Pitot Heat Failure.....	3-38
3.43b	Right Pitot Heat Failure.....	3-38
3.43c	Pitot Heat Off.....	3-38
3.43d	Prop Heat Failure.....	3-38
3.43e	Windshield Overtemp.....	3-39
3.43f	Surface De-ice Failure.....	3-39
3.43g	Stall Warning Fail.....	3-39
3.43h	Annunciator Panel Light Failure.....	3-40
3.45	Door Ajar.....	3-40
3.47	Standby Attitude Indicator Battery Heater Fail.....	3-41
3.49	Oxygen.....	3-41
3.51	Spin Recovery.....	3-41
3.53	Icing.....	3-42



**THIS PAGE INTENTIONALLY LEFT BLANK**

## SECTION 3

### EMERGENCY PROCEDURES

#### 3.1 GENERAL

This section provides the recommended procedures for handling various emergency or critical situations. All emergency procedures required by the FAA as well as those necessary for operation of the airplane, as determined by the operating and design features of the airplane, are presented.

Emergency procedures associated with optional systems and equipment which require handbook supplements are presented in Section 9, Supplements.

This section is divided into two basic parts. The first part contains the emergency procedures checklists. These checklists provide an immediate action sequence to be followed during emergency or critical situations. The numbers located in parentheses after each checklist heading indicate where the corresponding paragraph in the amplified procedures can be found.

The second part of the section provides amplified emergency procedures checklist items. These amplified emergency procedures contain additional information to provide the pilot with a more complete description of the procedures so they may be more easily understood. The numbers located in parentheses after each paragraph heading indicates the corresponding checklist paragraph.

Pilots must familiarize themselves with the procedures in this section and must be prepared to take the appropriate action should an emergency situation arise. The procedures are offered as a course of action for handling the particular situation or condition described. They are not a substitute for sound judgement and common sense.

#### **KNOW YOUR AIRCRAFT AND BE THOROUGHLY FAMILIAR WITH IMPORTANT EMERGENCY PROCEDURES**

Most basic emergency procedures are a normal part of pilot training. The information presented in this section is not intended to replace this training. This information is intended to provide a source of reference for the procedures which are applicable to this airplane. The pilot should review standard emergency procedures periodically to remain proficient in them.

### 3.1 GENERAL (Continued)

#### Warning Systems

The Meridian is equipped with a comprehensive annunciator panel located in the upper center instrument panel. (See figure 3-1).

**Red Warning Annunciators** are those annunciators which may require immediate corrective action.

**Amber Caution Annunciators** are those annunciators which advise of the possible need for future corrective action.

**Green Advisory Annunciators** are those annunciators which indicate a system is selected and is functioning.

Warning and caution annunciators will remain illuminated as long as the initiating condition exists, while advisory annunciations remain illuminated as long as a particular system is selected.

	L FUEL PUMP	ENGINE FIRE	GENERATOR INOP	ALTERNATOR INOP
	R FUEL PUMP	OVERHEAT	TEMP OVER	LOW BUS VOLTS
OIL PRESSURE	FUEL PRESSURE	OVERHEAT	L PITOT HEAT	WHEEL BRAKE
	LOW FUEL	OVERHEAT	R PITOT HEAT	CABIN ALTITUDE

#### Left Side

SURFACE DE ICE	SURFACE DE-ICE FAIL	WINDSHIELD OVERTEMP	GEAR WARN	DOOR UNLATCH
PROP HEAT ON	EMERGENCY BLEED	WINDSHIELD OVERTEMP	DOOR UNLATCH	CABY ALTITUDE TEST
PROP HEAT FAIL	BLEED OVERTEMP	WINDSHIELD OVERTEMP	DOOR UNLATCH	DOOR UNLATCH
WINDSHIELD OVER TEMP	FLAP FAIL	FLAP FAIL	DOOR AJAR	

#### Right Side

#### Annunciator Panel

Figure 3-1

### 3.1 GENERAL (Continued)

#### Annunciator Descriptions

**STARTER CONTACTOR** - Indicates the starter contactor is closed and power is being applied to the starter/generator.

**IGNITION** - Illuminates when the ignition switch is selected to Manual and power is applied to the engine ignition unit, and when Auto mode is selected and engine torque is between 275 to 375 ft.-lbs.

**OIL PRESSURE** - Indicates engine oil pressure is below 60 psig.

**FUEL FILTER** - Indicates the fuel filter contamination level is approaching the bypass mode and requires maintenance.

**L FUEL PUMP** - Indicates the left fuel pump is operating and delivering 4.5 psig minimum.

**R FUEL PUMP** - Indicates the right fuel pump is operating and delivering 4.5 psig minimum.

**FUEL PRESSURE** - Indicates fuel pressure is below 10 psig.

**LOW FUEL** - Indicates the total remaining fuel quantity is below 100 pounds.

**ENGINE FIRE** - Indicates an overtemperature condition in the engine compartment, possibly due to fire.

**FIRE DETECT FAIL** - Indicates failure of the engine fire detect system.

**FUEL IMBALANCE** - Steady illumination indicates a fuel quantity imbalance has reached 25 pounds. A flashing illumination indicates an imbalance greater than 40 pounds.

**OIL PARTICLES** - Indicates the existence of ferrous metal particles in the engine oil system.

**GENERATOR INOP** - Illuminates when the generator fails or is selected OFF.

**PITOT HEAT FAIL** - Indicates the pitot heat has not been selected ON.

**L PITOT HEAT** - Indicates the left pitot heat has failed.

**R PITOT HEAT** - Indicates the right pitot heat has failed.

**ALTERNATOR INOP** - Illuminates when the alternator fails or is selected OFF.

**LOW BUS VOLTS** - Indicates the main bus voltage is less than 25 Vdc.

**3.1 GENERAL (Continued)**

**Annunciator Descriptions (continued)**

**CABIN ALT 10K** - Indicates the cabin altitude is 10,000 feet or above.

**CABIN ALTITUDE** - Indicates the cabin altitude is 12,000 feet or above.

**DE-ICE SYSTEM FAIL** - Illuminates when the de-ice boots inflate. (When the **SURF DEICE** switch is selected **ON**, the de-ice boot pressure reaches 10 psig and the pneumatic de-ice system cycles in sequence: tail, lower wing, upper wing.)

**PROP DE-ICE ON** - Cycling illumination indicates normal operation of the propeller de-ice system.

**PROP HEAT FAIL** - Illuminates if a fault develops in the prop heat system or current is under 18.0 amps.

**WINDSHIELD OVER TEMP** - Illuminates when the windshield temperature exceeds 170°F or the windshield temperature sensor has failed.

**SURFACE DE-ICE FAIL** - Illuminates when the surface de-ice system has failed.

**EMERGENCY BLEED** - Illuminates when the emergency bleed system is activated either automatically at a cabin altitude in excess of 12,000 feet, or by pilot activation.

**BLEED OVER TEMP** - Indicates temperature in the bleed air ducts is 350°F or above.

**OXYGEN** - Illuminates if one or more of the passenger oxygen generators are activated.

**BETA** - Illuminates when the power lever is selected below flight idle position and the prop blade angle is below the low pitch stop.

**VACUUM LOW** - Illuminates if vacuum is below approximately 2 in.Hg.

**STALL WARN FAIL** - Illuminates if the lift computer fails and/or the **STALL WARN** circuit breaker trips.

**3.1 GENERAL (Continued)****Annunciator Descriptions (continued)**

**FLAP FAIL** - Indicates a wing flap system failure due to an overcurrent condition in the flap motor/actuator circuit.

**GEAR WARN** - Illuminates when the gear is in transit; when all three gear are not fully down and locked, when the gear is not fully up with the gear doors closed, in flight when the power lever is retarded to idle and the landing gear are not down and locked, in flight when the flaps are extended beyond 10° and the landing gear are not down and locked.

**LANDING GEAR PUMP** - Illuminates when the landing gear hydraulic pump is operating.

**ANNUNCIATOR FAIL** - Indicates failure of the annunciator system or the annunciator press-to-test switch has been depressed when the day/night dimming switch is in the night position.

**DOOR AJAR** - Indicates the cabin door is not properly closed and latched.

**FEATHER LIGHT** - With engine operating, light illumination indicates a failure in the propeller feathering electrical system. An uncommanded propeller feathering could occur if additional electrical failures occur in the system. Illumination of the feather light is normal when the engine is not operating, the condition lever is in cutoff, and the propeller is feathered.

**ATTITUDE INDICATOR TEST MODE** - Illuminates if the standby attitude indicator system test mode is successfully completed.

**STANDBY ATTITUDE INDICATOR BATTERY HEATER** - Indicates failure of the standby attitude battery heater.

**Aural Warnings**

Aural warnings are provided to warn:

- When an engine limitation is exceeded (2 chimes per second).
- When in a Vmo/Mmo overspeed condition (fast pulse).
- When approaching a stall (steady tone).
- When the landing gear is not extended during an approach to landing (steady tone).
- When cabin altitude Caution/Warning is exceeded (steady tone).
- Autopilot disconnect (warble tone).

### 3.1 GENERAL (Continued)

#### Overriding Considerations

In all emergencies, the overriding consideration must be to:

- **Maintain Airplane Control.**
- Analyze the situation.
- Take proper action.

#### Terminology

Many emergencies require some urgency in landing the aircraft. The degree of urgency varies with the emergency; therefore the terms "land as soon as possible" and "land as soon as practical" are employed. These terms are defined as follows:

**Land as soon as possible** - A landing should be accomplished at the nearest suitable airfield considering the severity of the emergency, weather conditions, field facilities, and ambient lighting.

**Land as soon as practical** - Emergency conditions are less urgent, and although the mission is to be terminated, the emergency is such that an immediate landing at the nearest suitable airfield may not be necessary.

### 3.3 AIRSPEEDS FOR EMERGENCY OPERATIONS

#### STALL SPEEDS

4850 lbs (Gear UP, Flaps 0°).....79 KIAS

4850 lbs (Gear DOWN, Flaps 36°).....69 KIAS

OPERATING MANEUVERING SPEED.....127 KIAS

#### BEST GLIDE (Propeller Feathered)

4850 lbs (Gear UP, Flaps 0°).....105 KIAS



**3.5 REJECTED TAKEOFF**

- Power Lever.....IDLE
- Braking.....AS REQUIRED
- Reverse.....AS REQUIRED

**If insufficient runway remains for a safe stop:**

- Condition Lever.....CUTOFF / FEATHER
- Battery Switch.....OFF
- Firewall Shutoff Valve.....LIFT COVER - PULL OFF

**Maneuver as necessary to avoid obstacles.**

**After the aircraft has stopped - EVACUATE.**

**3.7 ENGINE FAILURE**

**Engine failure before rotation:**

- Power Lever.....IDLE
- Braking.....AS REQUIRED

**STOP STRAIGHT AHEAD.**

**If insufficient runway remains for a safe stop:**

- Condition Lever.....CUTOFF / FEATHER
- Battery Switch.....OFF
- Firewall Shutoff Valve.....LIFT COVER - PULL OFF

**Maneuver as necessary to avoid obstacles.**

**After the aircraft has stopped - EVACUATE.**



3.7 ENGINE FAILURE (Continued)

**Engine Failure Immediately After Takeoff**

- Airspeed .....100 KIAS
- Landing Gear.....DOWN
- Power Lever.....IDLE
- Condition Lever.....CUTOFF / FEATHER

When landing gear is down and time permits:

- Flaps.....DOWN 36°
- Airspeed.....85 KIAS
- Battery Switch.....OFF
- Firewall Shutoff Valve.....LIFT COVER - PULL OFF

**After the aircraft has stopped - EVACUATE.**

**Engine Failure in Flight**

- Oxygen .....AS REQUIRED
- Mic Select Switch .....MASK
- Airspeed .....105 KIAS
- Power Lever.....IDLE
- Condition Lever.....CUTOFF / FEATHER
- Propeller .....VERIFY FEATHERED

**CAUTION**

The battery switch must be ON to feather the propeller.

Remaining Fuel .....CHECK


Air Start .....Refer to Air Start procedure in this section

**If above the airstart envelope (Fig. 3-3), descend into the envelope and make an airstart per this section. Use oxygen as required. Perform a normal descent or emergency descent as appropriate.**

**If engine air start is not successful, proceed with the power off landing procedure per Section 3.21.**

3.7 ENGINE FAILURE (Continued)

Air Start Envelope

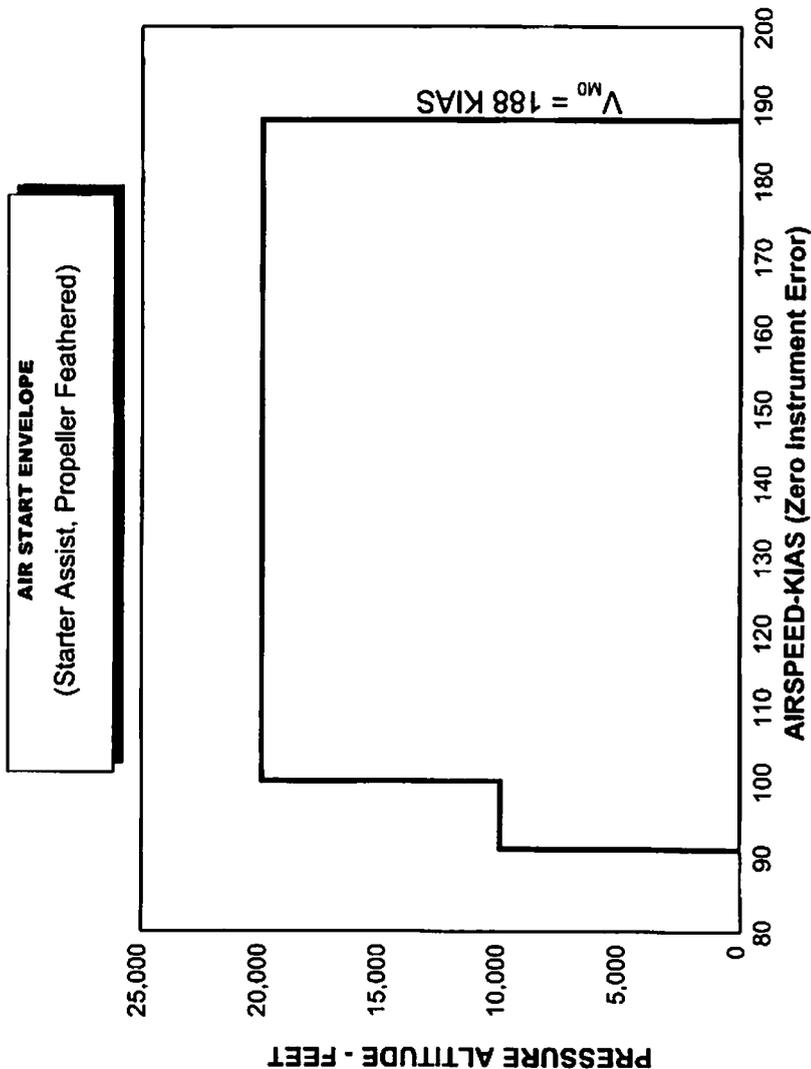

Air Start Envelope

Figure 3-3



**3.7 ENGINE FAILURE (Continued)**

**Air Start - Starter Assist**

**NOTE**

Items indented with • may be omitted if time is short.

Oxygen .....	AS REQUIRED
Mic Select Switch .....	MASK
Autopilot .....	DISENGAGE
Condition Lever .....	CUTOFF / FEATHER
Altitude & Airspeed .....	WITHIN THE AIR START ENVELOPE
Power Lever .....	IDLE
Generator .....	OFF
Alternator .....	OFF
• Electrical Load .....	REDUCE

**WARNING**

Turning off the avionics switch will result in a loss of power to the AHRS system. If power is removed for more than 2 minutes, initialization of the AHRS system will not be accomplished, resulting in loss of attitude/heading information.

• ECS Switch .....	OFF
• Bleed Air Lever .....	PULL OUT (closed)
Fuel Pump .....	MANUAL
Ignition .....	MANUAL

**CAUTION**

To obtain an AUTO air start, the MANUAL/STOP START switch must not be selected. If the switch is selected to MANUAL, a switch light illuminates; the starter switch must be held ON to keep the starter engaged during the start.

Start Mode Switch .....	AUTO
-------------------------	------

**CAUTION**

Activation of the Start switch will cause a transient DC voltage drop, which may cause the AHRS to lose its reference, forcing the system to realign when the voltage is restored. During this period the aircraft attitude should be level flight.

Starter Switch .....	ENGAGE (Verify Start Annunciator Illuminated)
Condition Lever ( $N_g$ min. 13%) .....	RUN
ITT and $N_g$ .....	MONITOR



**3.7 ENGINE FAILURE (Continued)**

**Air Start - Starter Assist (continued)**

After Engine Relight - Ng > 60%.

Generator .....	ON
Alternator .....	ON
Fuel Pump .....	AUTO
Ignition.....	AUTO
Bleed Air Lever.....	PUSH IN (open)
ECS Switch .....	NORMAL
Electrical Equipment.....	AS REQUIRED

**3.9 ENGINE SYSTEM**

**3.9a High Oil Temperature**

**Indication:** Aural warning with associated red oil temperature needle and red background box associated with digital readout.

Power Lever .....REDUCE POWER

*If temperature remains high, continue flight at reduced power and land as soon as possible.*

**3.9b Oil Pressure**

**Indication:** Aural warning with associated red oil pressure needle and red background box associated with digital readout. Red oil pressure annunciator.

**Low Oil Pressure, Below 85 PSI**

Power.....REDUCE TO A MAX. OF  
1100 FT - LB OF TORQUE

*Land as soon as practical.*

**Low Oil Pressure, Below 60 PSI**

Power.....REDUCE TO MINIMUM  
TORQUE REQUIRED TO  
COMPLETE FLIGHT

*Land as soon as possible.*

**If possible, always retain glide capability to the selected landing area in case of total engine failure.**

**3.9 ENGINE SYSTEM (Continued)**

**3.9c Chip Detector Light**

**Indication: Amber “CHIP DETECTOR” annunciator illuminated.**

**After Engine Start**

Return to parking area and shutdown engine.

**In Flight**

Oil Temperature .....MONITOR

Oil Pressure .....MONITOR

*Land as soon as practical.*

**Inspect Engine Before Next Flight**

**3.9d Start Engage**

**Indication: Amber “START ENGAGE” annunciator remains illuminated after engine start.**

**On the Ground:**

Manual/Stop Switch .....PUSH

Condition Lever .....CUTOFF/FEATHER

Battery Switch .....OFF

**In Flight:**

Manual/Stop Switch .....PUSH

Generator .....VERIFY ON

**If generator is not on, land as soon as possible.**

**3.9e Fire Detect Fail**

**Indication: Amber “FIRE DETECT FAIL” annunciator illuminated.**

Fire Detect Circuit Breaker .....CHECK IN

(Located on the pilot’s forward circuit breaker panel, row C, position 8.)

**Inspect and Repair Prior to Next Flight.**



**3.9 ENGINE SYSTEM (Continued)**

**3.9f Feather**

**Indication:** Amber "FEATHER" annunciator illuminated.

**On Ground After Engine Start:**

Shut down and investigate cause.

**In Flight:**

Land as soon as practical and investigate cause.

**3.9g Beta**

**Indication:** Amber "BETA" annunciator illuminated in flight.

Power Lever .....VERIFY FLIGHT IDLE  
POSITION OR FORWARD  
OF FLIGHT IDLE.

**3.11 FUEL CONTROL UNIT FAILURE / POWER LEVER CONTROL LOSS (Manual Override Operation)**

**Indication:** Power lever movement does not change Ng.

Power Lever .....FLIGHT IDLE

MOR Lever.....PULL UPWARDS AND MOVE  
FORWARD SLOWLY TO ACHIEVE  
REQUIRED ENGINE POWER

*Land as soon as possible.*

Perform landing without reverse.

After landing

(If power cannot satisfactorily  
be controlled with MOR Lever)

Condition Lever .....CUTOFF / FEATHER

**3.11 FUEL CONTROL UNIT FAILURE / POWER LEVER  
CONTROL LOSS (Manual Override Operation) (Continued)**

**CAUTION**

Exercise extra care when using the MOR to avoid exceeding engine limitations. Engine response may be more rapid than when using the power lever. Avoid rapid movement.

**If power control using MOR is excessive:**

Reduce airspeed to below 168 KIAS by increasing pitch attitude.

Landing Gear.....EXTEND BELOW 168 KIAS  
Flaps 10".....BELOW 168 KIAS

*Land as soon as possible.*

When landing is assured:

Condition Lever.....CUTOFF / FEATHER

**THIS SPACE INTENTIONALLY LEFT BLANK**



**3.13 PROPELLER OVERSPEED**

**Indication: If Np remains between 2000 and 2080 RPM:**

Power Lever .....REDUCE POWER

Airspeed.....REDUCE

**Continue flight at reduced speed, using minimum power necessary and land as soon as practical.**

**Indication: If Np exceeds 2080 RPM steady state:**

Power Lever .....REDUCE AS NECESSARY

Airspeed .....REDUCE TO LOWEST PRACTICAL

**Land as soon as possible.**

**If possible maintain altitude as necessary in order to retain glide capability to the selected airport in case of total engine failure.**

**Should heavy vibration or uncontrolled prop speed runaway occur, be prepared to shut down the engine.**

Condition Lever .....CUTOFF / FEATHER

**Conduct a Normal Descent, Section 4.5n, or Emergency Descent, Section 3.17, as appropriate and Power Off Landing, Section 3.21.**



### 3.14 ENGINE FIRE

**On Ground** (During engine start or taxi)

**Indication: Engine Fire Warning Annunciator.**

- Power Lever.....IDLE
- Condition Lever.....CUTOFF / FEATHER
- Brakes.....AS REQUIRED
- Firewall Shutoff Valve.....LIFT COVER - PULL OFF
- Bleed Air Lever.....PULL OUT (closed)
- ECS Switch.....OFF
- Fuel Pump Switch.....OFF
- Ignition Switch.....OFF
- Radio.....EMERGENCY CALL
- Battery Switch.....OFF
- Aircraft.....EVACUATE
- Fire.....EXTINGUISH

#### **In Flight**

**Indications: Engine Fire Warning Annunciator or Visual Verification**

Engine Power.....REDUCE TO MINIMUM ACCEPTABLE  
ACCORDING TO FLIGHT SITUATION

Oxygen.....AS REQUIRED (all aircraft occupants)

Mic Select Switch.....MASK

**Confirm that fire exists then:**

Condition Lever.....CUTOFF / FEATHER

Firewall Shutoff Valve.....LIFT COVER - PULL OFF

ECS Switch.....OFF

Bleed Air Lever.....PULL OUT (closed)

**Conduct a Normal Descent, Section 4.5n, or Emergency Descent,  
Section 3.17, as appropriate and Power Off Landing, Section 3.21.**

#### CAUTION

If pressurized, this procedure will result in an immediate loss of pressurization and cabin altitude will rise at an uncontrolled rate.

**3.15 ELECTRICAL FIRE, SMOKE OR FUMES****If source is known:**

Oxygen.....CREW (100%) AND PASSENGERS  
DON MASKS

Mic Select Switch .....MASK

Fire (if necessary).....EXTINGUISH

Faulty Circuits .....ISOLATE

Smoke Evacuation (if necessary) .....EXECUTE CHECKLIST  
(per para. 3.16)

Land .....NEAREST SUITABLE AIRPORT

**If source is unknown:**

Oxygen.....CREW (100%) AND PASSENGERS  
DON MASKS

Mic Select Switch .....MASK

Fire (if necessary).....EXTINGUISH

Smoke Evacuation (if necessary) .....EXECUTE CHECKLIST  
(per para. 3.16)

Generator .....OFF

Alternator .....OFF

Autopilot and Yaw Damper.....DISENGAGE

Battery .....OFF

Cabin Altitude Select .....SELECT 500 FEET ABOVE  
FIELD ELEVATION

Standby Instruments .....VERIFY ON and FLAG  
IS PULLED ON GYRO  
(Maintain attitude control using standby attitude gyro)

Emergency/Ground Clearance Switch.....ON

Emergency Descent.....ACCOMPLISH PER PARA. 3.17  
TO A SAFE ALTITUDE CONSISTENT  
WITH TERRAIN

Land .....NEAREST SUITABLE AIRPORT  
(Perform Emergency Landing Gear Extension procedure and 0° Flap Landing)

**If smoke or fire still persists:**

All Tie Bus Breakers .....PULL

Land .....NEAREST SUITABLE AIRPORT  
(Perform Emergency Landing Gear Extension procedure and 0° Flap Landing)

**CAUTION**

Do not attempt to extinguish electrical fires using water.  
Use fire extinguishers only when equipped and trained.

### 3.16 SMOKE EVACUATION

#### Cockpit / Cabin Fire

##### CAUTION

If pressurized, the following procedure will result in an immediate loss of pressurization and the cabin altitude will rise at an uncrashable rate.

Oxygen Mask .....ON (100%)  
Mic Select Switch .....MASK  
Passengers .....DON OXYGEN MASKS  
Cabin Pressure Dump/Normal Switch .....DUMP  
ECS Switch .....OFF  
Bleed Air Lever .....PULL OUT (closed)  
Emergency Pressure Circuit Breaker.....PULL  
(Located on the pilot's aft circuit breaker panel, row B, position 8.)  
Air Cond and Blower Fan .....OFF  
Vent Fan .....ON  
Emergency Descent.....Accomplish per Paragraph 3.17 to a  
Safe Altitude Consistent with Terrain

***Land as soon as possible.***

##### NOTE

If fumes/smoke dissipate, land as soon as possible to investigate problem. If fumes/smoke persist, refer to Fire in Flight procedure, Paragraph 3.14.



**3.17 EMERGENCY DESCENT - MAXIMUM RATE**

- Autopilot .....OFF
- Power Lever.....IDLE
- Landing Gear.....Below 168 KIAS, DOWN
- Windshield Defrost.....PULL OUT
- Windshield Heat.....DEFOG

**NOTE**

Windshield Heat ANTI ICE may be used for additional defrosting.

**Smooth air**

Airspeed after Landing Gear is Fully Extended.....168 KIAS

**Rough air**

Airspeed .....127 KIAS

**3.19 DESCENT -MAXIMUM RANGE AFTER ENGINE FAILURE**

**NOTE**

Refer to Section 5, Performance, Figure 5-123 or Figure 5-257 (metric) for glide distance.

- Oxygen Masks .....ON
- Mic Select Switch.....MASK
- Power Lever.....IDLE
- Condition Lever.....CUTOFF / FEATHER
- Propeller.....VERIFY FEATHERED
- Landing Gear / Flaps.....UP

**CAUTION**

Retracting gear and flaps will reduce glide distance. If gear or flaps are retracted, the glide distance will be severely reduced. Retracting the landing gear and flaps will reduce battery controller output.

- Airspeed .....105 KIAS
- Electrical Load.....REDUCE (Monitor Battery Voltage)

**CAUTION**

If the propeller does not feather, the glide distance will be reduced.

**NOTE**

It may be required to adjust the rate of descent of the aircraft in order to achieve a cabin altitude of 12,500 feet before the oxygen supply is exhausted.

**3.21 POWER OFF LANDING (ENGINE CUTOFF/FEATHER)**

**Best Gliding Airspeed is 105 KIAS**

Power Lever.....IDLE  
Condition Lever.....CUTOFF / FEATHER  
Propeller.....VERIFY FEATHERED  
Fuel Pump Switch.....OFF  
Ignition Switch.....OFF  
Firewall Shutoff Valve.....LIFT COVER - PULL OFF  
Electrical Load.....REDUCE  
ECS Switch.....OFF  
Cabin Pressure Dump/Normal Switch.....DUMP  
Seats and Seat Backs.....UPRIGHT & LOCKED IN POSITION  
Seat Belts and Harness .....FASTEN / TIGHT  
CHECK INERTIA REEL  
Passengers .....BRIEF

Locate suitable field.

Establish spiral pattern. If sufficient altitude is available, maintain 105 KIAS with flaps 10° in the pattern.

Assure 1000 feet above field at downwind position for landing approach.

**When committed to landing:**

Landing Gear.....DOWN: 3 GREEN  
Flaps.....AS REQUIRED

**If landing site is not suitable for gear down landing:**

Landing Gear.....MAINTAIN UP

**NOTE**

Landing gear extension requires 8 seconds minimum.

Flaps.....FULL DOWN  
Final Approach Speed.....85 KIAS

**After Touchdown:**

Battery Switch.....OFF  
After the aircraft has stopped.....EVACUATE



### 3.27 LANDING WITH PRIMARY LONGITUDINAL CONTROL FAILED

Passengers .....BRIEF  
Landing Gear .....DOWN, 3 GREEN  
Final Approach Speed .....TRIM TO MAINTAIN 110 KIAS

- Select the longest runway available and make a flat, no flap approach, minimizing the use of pitch trim.
- Set power (approximately 300 FT-LB torque) to maintain airspeed and 300 to 500 ft./min. rate of descent.
- Use elevator trim to adjust pitch.
- When positioned over the runway, flare the airplane with elevator trim and slowly reduce power.

### 3.29 HYDRAULIC SYSTEM MALFUNCTION

**Indication:** Amber HYDRAULIC PUMP annunciator light illuminates continuously or cycles ON and OFF rapidly.

The illumination of the HYDRAULIC PUMP annunciator while operating on the ground would require maintenance to investigate the cause prior to any flight operations.

#### **In Flight:**

Hydraulic Pump Power Circuit Breaker .....PULL  
(Located on the pilot's forward circuit breaker panel, row C, position 4.)

*Land as soon as practical and investigate the cause.*

Prior to landing, the HYDRAULIC PUMP POWER circuit breaker must be reset to extend the landing gear. If the pump continues to run after the gear is locked down, pull the HYDRAULIC PUMP POWER circuit breaker. If the gear fails to extend, refer to the **Emergency Landing Gear Extension** procedure 3.31.

**3.31 EMERGENCY LANDING GEAR EXTENSION**

**Indication:** One or more of the green gear extension light(s) not illuminated and or Red "GEAR WARN" annunciator illuminated.

**NOTE**

If emergency gear extension is required due to electrical power failure, the gear position indicator lights will not illuminate.

**Prior to emergency extension procedure:**

Battery Switch .....CHECK ON  
 Landing Gear Circuit Breakers (2) .....CHECK IN  
 (Located on the pilot's forward circuit breaker panel, row C, positions 1, 2.)  
 Day / Night Dimming Switch .....DAY MODE

**If landing gear does not check down and locked:**

Airspeed .....100 KIAS  
 Hydraulic Pump Power Circuit Breaker (25 amp) .....PULL  
 (Located on the pilot's forward circuit breaker panel, row C, position 4.)  
 Landing Gear Handle .....DOWN  
 Emergency Gear Extension Control .....PULL

**If 3 green lights are still not illuminated:**

Yaw the aircraft left and right to lock the main landing gear.

Reduce airspeed to minimum safe speed to improve nose gear locking.

**If 3 green lights are illuminated:**

Land.

If not successful, refer to Gear Up Landing (Section 3.23).

**3.33 FLAP SYSTEM MALFUNCTION**

**Indication: Red "FLAP FAIL" annunciator illuminated.**

Flap Warn Circuit Breaker .....PULL AND RESET.  
VERIFY NORMAL  
FLAP OPERATION

(Located on the pilot's forward circuit breaker panel, row D, position 6.)

**If Red "FLAP FAIL" annunciator remains illuminated:**

Flap Motor Circuit Breaker .....PULL

(Located on the pilot's forward circuit breaker panel, row D, position 5.)

Refer to Landing Without Flaps (Section 3.25).

**THIS SPACE INTENTIONALLY LEFT BLANK**



**3.35 ELECTRICAL SYSTEM MALFUNCTIONS**

**Generator Failure**

**Indication: Red "GENERATOR INOP" annunciator illuminated and zero amp indication.**

Electrical Load.....REDUCE UNTIL TOTAL LOAD IS  
BELOW 130 AMPS & LOW BUS VOLTS  
ANNUNCIATOR IS EXTINGUISHED

Air Conditioner .....OFF

Generator Switch.....OFF then ON

**If generator fails to reset:**

Generator Switch.....OFF

Generator Control Circuit Breaker

(Copilot's Instrument Panel).....CHECK & RESET

Generator Switch .....ON

**If circuit breaker opens again or annunciator stays illuminated with zero amps indicated:**

Generator Switch.....OFF

Generator Control Circuit Breaker .....DO NOT RESET

*Land as soon as practical.*

**Alternator Failure**

**Indication: Red "ALTERNATOR INOP" annunciator illuminated and zero amp indication.**

Alternator Switch.....OFF then ON

**If alternator fails to reset:**

Alternator Switch .....OFF

Alternator Field Circuit Breaker.....CHECK & RESET  
(Located on the pilot's forward circuit breaker panel, row C, position 7.)

Alternator Switch.....ON

**If circuit breaker opens again or annunciator stays illuminated with zero amps indicated:**

Alternator Switch .....OFF

Alternator Field Circuit Breaker.....DO NOT RESET

**If generator has assumed the load, limit load to under 200 amps and continue. Repair alternator as soon as possible.**



**3.35 ELECTRICAL SYSTEM MALFUNCTIONS (Continued)**

**Dual Failure - Both Generator and Alternator Fail**

**Indication:** Red "GENERATOR INOP" and Red "ALTERNATOR INOP" annunciators illuminated and zero amp indication on both ammeters.

**NOTE**

Any time total tie bus voltage is below 25 Vdc, the LOW BUS VOLTS annunciator will illuminate.

- Electrical Load .....REDUCE TO MINIMUM
- Air Conditioner .....OFF
- Generator and Alternator Switches .....OFF
- Generator Control Circuit Breaker .....CHECK AND RESET  
(Located on the copilot's instrument panel.)
- Alternator Field Circuit Breaker .....CHECK AND RESET  
(Located on the pilot's forward circuit breaker panel, row C, position 7.)
- Generator Switch (after OFF at least one second) .....ON
- Alternator Switch (after OFF at least one second) .....ON

**If only the generator resets:**

- Alternator Switch .....OFF

**NOTE**

The generator can supply sufficient amperage to run all the required electrical systems.

**If only the alternator resets:**

- Generator Switch .....OFF
- Electrical Load .....MAINTAIN LESS THAN  
130 AMPS
- Ammeter .....MONITOR



**3.35 ELECTRICAL SYSTEM MALFUNCTIONS (Continued)**

**Complete Electrical Failure**

**NOTE**

The emergency standby attitude gyro will activate automatically if the switch is in the ON position.

Standby Attitude Gyro Switch .....**VERIFY ON and FLAG IS PULLED ON GYRO**

Maintain attitude control using standby attitude gyro.

Battery Switch.....**OFF**

Emergency / Ground Clearance Switch.....**ON**

**NOTE**

Turning **ON** the Emergency/Ground Clearance Switch will activate the #1 Comm/Nav/GPS, Audio Panel, Landing Gear Down Lights, internal lighting for the standby instruments and illumination in the magnetic compass.

***Land as soon as possible.***

**NOTE**

With a complete electrical failure, emergency landing gear extension and landing without flaps will be required. Refer to Emergency Landing Gear Extension (Section 3.31) and Landing Without Flaps (Section 3.25).

### 3.36 AVIONICS SYSTEM FAILURES

#### 3.36a Failure of Pilot's Electronic Attitude Direction Indicator (EADI)

**Indication:** Attitude display goes blank.

Standby Attitude Gyro Switch .....VERIFY ON and FLAG  
IS PULLED ON GYRO

Maintain attitude control using standby gyro.

EADI Display Down Switch .....PUSH TO SELECT

#### CAUTION

Failure of the pilot's EADI will result in a loss of encoding altitude information to the altitude selector/indicator. The numeric altitude indicators will be replaced by three dashes which flash for five seconds and then go steady accompanied by three continuous chimes.

Selection of the EADI down switch will disengage the autopilot. Do not attempt to use the altitude selector/indicator on the autopilot until encoding data has been restored.

No. 1 GNS 530 Nav/Com/GPS .....SELECT VLOC

Mechanical Nav Indicator (OBS) .....UTILIZE FOR PRIMARY  
NAVIGATION

On aircraft equipped with the optional second transponder:

Transponder 2 Select Switch .....PUSH TO SELECT

#### NOTE

The mechanical nav indicator (OBS) receives nav information directly from the No. 1 (pilot's) GNS 530 nav/com/GPS. Only VLOC information is available.

***Land as soon as practical.***



3.36 AVIONICS SYSTEM FAILURES (Continued)

3.36b Yellow Heading Information on Pilot's and Copilot's Electronic Attitude Direction Indicator (EADI)

Indicates a heading difference of greater than 6 degrees.

Heading .....VERIFY CORRECT HEADING USING MAGNETIC COMPASS

NOTE

For accurate magnetic compass readings, select the WINDSHLD HT, PROP HEAT, AIR COND and BLOWER switches OFF.

AHRS System .....DETERMINE FAILED SYSTEM

• Pilot's System Failure

AHRS 2 Select Switch .....PUSH TO SELECT

• Copilot's System Failure

Verify pilot's heading every 15 minutes.

3.36c Failure of Pilot's Electronic Horizontal Situation Indicator (EHSI)

Indication: Nav display goes blank.

Autopilot .....DISENGAGE

EHSI Circuit Breaker .....RESET

(Located on the copilot's forward circuit breaker panel, row B, position 4.)

If display is not restored:

EADI .....UTILIZE FOR PRIMARY HEADING INFORMATION

No. 1 GNS 530 Nav/Com/GPS .....SELECT VLOC

Mechanical Nav Indicator (OBS) .....UTILIZE FOR PRIMARY NAVIGATION

NOTE

The mechanical nav indicator (OBS) receives nav information directly from the No. 1 (pilot's) GNS 530 nav/com/GPS. Only VLOC information is available.

### 3.36 AVIONICS SYSTEM FAILURES (Continued)

#### 3.36d Failure of Attitude and Heading Reference Systems (AHRS)

**Indication: Attitude failure and/or heading failure on EFIS.**

Standby Attitude Gyro Switch .....VERIFY ON and FLAG  
IS PULLED ON GYRO

Maintain attitude control using standby gyro.

#### CAUTION

Failure of the pilot's AHRS (AHRS 1) system will result in a loss of heading, attitude, information to the standby select switch. The numeric attitude indicators will be replaced by three dashes which indicate the gyro has lost its position and is unpowered by three continuous dashes. Selection of AHRS 2 will supply heading and attitude information for autopilot use.

AHRS 2 Select Switch .....PUSH TO SELECT  
*Land as soon as practical.*

If AHRS system does not re-establish, continue flight using standby instruments and *land as soon as possible.*

#### 3.36e Failure of Flight and Navigation Displays

**Indication: All displays blank out.**

Standby Attitude Gyro Switch .....VERIFY ON and FLAG  
IS PULLED ON GYRO

Maintain aircraft control with reference to the standby "Airspeed, Altimeter, and Attitude Gyro" indicators.

Avionics Dimming Circuit Breaker .....PULL  
(Located on the copilot's forward circuit breaker panel, row C, position 7.)

#### NOTE

A failure of the display dimmer control can result in all six Meggitt and two Garmin displays going blank. This is an indication of a partial failure of the dimmer control. A complete failure of this control would normally reinstate the displays to a full bright condition. However, if the displays should blank out, reinstatement of the displays to a full bright condition can be accomplished by bypassing the dimmer control (pulling the Avionics Dimming Circuit Breaker).



**3.37 FUEL SYSTEM**

**Indication: Red "FUEL PRESSURE" annunciator illuminated.**

Power .....	REDUCE
Fuel Pumps .....	MAN
Fuel Quantity and Balance .....	MONITOR

**If fuel pressure annunciator remains illuminated, land as soon as possible.**

**If fuel pressure annunciator extinguishes, land as soon as practical.**

**Indication: Red "LOW FUEL" annunciator illuminated.**

**Land as soon as practical. Remaining fuel quantity is approximately 100 pounds.**

**Indication: Amber "FUEL FILTER" annunciator illuminated.**

**Land as soon as practical. Contaminated fuel or clogged filter is possible.**

**Inspect filter after landing and repair prior to next flight.**

**3.37 FUEL SYSTEM (Continued)**

**Indication: Amber "FUEL IMBALANCE" annunciator illuminated.**

Fuel Pumps Switch.....VERIFY AUTO  
Fuel Pump.....VERIFY GREEN L/R FUEL PUMP  
(HIGH FUEL SIDE) ANNUNCIATOR  
IS ILLUMINATED  
Fuel Quantity .....MONITOR

**NOTE**

When Right and Left Fuel Quantity varies by 25 pounds or more, the amber FUEL IMBALANCE annunciator will illuminate and the fuel pump from the high fuel side will turn on. Fuel pump activation is indicated by illumination of the green L or R FUEL PUMP annunciator.

**NOTE**

When the FUEL PUMPS switch is in the MAN position, the green L and R FUEL PUMP annunciators are illuminated, indicating operation of the L and R fuel pumps.

**CAUTION**

Minimum fuel imbalance is 40 pounds.

**If fuel imbalance exceeds 40 pounds: Amber "FUEL IMBALANCE" annunciator flashing.**

Fuel Pump Switch .....MAN (Manual)  
If either Left or Right Fuel Pump Annunciator is **NOT** illuminated, turn the Fuel Pump Switch to OFF.

**Upon flashing "FUEL IMBALANCE" annunciation, regardless of fuel quantity indication, land as soon as possible.**



**3.39 PRESSURIZATION / ENVIRONMENTAL SYSTEM MALFUNCTIONS**

**Fire / Smoke or Fumes in Cabin**

**If source is known:**

Oxygen Mask .....ON

Mic Select Switch .....MASK

Extinguish fire using the hand held fire extinguisher located in the bottom drawer of the cabinet located behind the copilot's seat.

**If source is not known:**

Oxygen Mask .....ON

Mic Select Switch .....MASK

ECS Switch .....OFF

Bleed Air Lever.....PULL OUT (Closed)

Cabin Pressure Dump/Normal Switch .....DUMP

Cabin Fan Control (as required) .....LO or HI

**THIS SPACE INTENTIONALLY LEFT BLANK**

**3.39 PRESSURIZATION / ENVIRONMENTAL SYSTEM  
MALFUNCTIONS (Continued)**

**Cabin Altitude Above 10,000 feet**

**Indication: Amber "CABIN ALT 10K" annunciator illuminated and Horn.**

Cabin Altitude Warning Horn .....PUSH TO MUTE  
Cabin Altitude .....MONITOR

**Cabin Altitude Above 12,000 feet**

**Indication: Red "CABIN ALTITUDE" annunciator illuminated and Horn.**

Oxygen Mask .....ON  
Mic Select Switch .....MASK  
ECS Cabin Comfort .....VERIFY NORMAL  
OR HIGH SELECTED  
Bleed Air Lever .....VERIFY IN (open)  
Cabin Altitude Warning Horn .....PUSH TO MUTE

*Descend as soon as practical.*

**Emergency Pressurization**

**Indication: Red "EMERGENCY BLEED" annunciator illuminated.**

**Automatic Operation:**

Oxygen Mask .....ON  
Mic Select Switch .....MASK  
ECS .....NORM or HI  
Activation at 12,000 +/- 500 feet cabin altitude.

**NOTE**

Emergency pressurization will activate as the cabin altitude approaches 12,000 feet and will deactivate as the cabin altitude approaches 11,000 feet. This cycling can be eliminated by rotating the ECS switch to EMERGENCY PRESS.

**Manual Operation:**

ECS .....EMER  
Cabin Altitude .....MONITOR

*Descend as soon as practical.*

**3.39 PRESSURIZATION / ENVIRONMENTAL SYSTEM MALFUNCTIONS (Continued)**

**Bleed Overtemperature**

**Indication:** Red "BLEED OVER TEMP" annunciator illuminated.

Power .....REDUCE

Climate Control .....SELECT LOWER TEMP.

If annunciator remains illuminated:

Oxygen Mask .....ON

Mic Select Switch .....MASK

ECS Cabin Comfort .....OFF

Bleed Air Lever .....PULL OUT (closed)

*Descend and land as soon as practical.*

**Overpressurization**

**Indication:** Differential pressure above 5.5 psi or a structural failure appears imminent.

Cabin Controller.....SET TO HIGHER ALTITUDE

Cabin Rate Control.....INCREASE TO MAXIMUM

**Continued increase in differential pressure above 5.5 psi:**

Oxygen Mask .....ON

Mic Select Switch .....MASK

ECS Cabin Comfort .....OFF

Bleed Air Lever .....PULL OUT (closed)

**If overpressurization continues:**

Cabin Pressure Dump/Normal Switch .....DUMP

Emergency Descent .....ACCOMPLISH PER SECTION 3.17



**3.39 PRESSURIZATION / ENVIRONMENTAL SYSTEM  
MALFUNCTIONS (Continued)**

**Rapid or Explosive Decompression**

Oxygen Mask .....ON  
Mic Select Switch .....MASK

**If increase in cabin altitude is explosive:**

Emergency Descent .....ACCOMPLISH PER  
SECTION 3.17

**If increase in cabin altitude is rapid and cabin altitude has not  
exceeded 14,000 feet (time permitting):**

Cabin Controller.....SET TO LOWER ALTITUDE  
Cabin Rate Control.....INCREASE TO MAXIMUM  
ECS Cabin Comfort.....HIGH

**If cabin altitude exceeds 14,000 feet:**

Emergency Descent .....ACCOMPLISH PER  
SECTION 3.17



3.40 EMERGENCY EXIT

Exit .....LOCATE  
(second window from front on right side)

NOTE

The cabin must be depressurized before attempting to open the emergency exit.

Plexiglas Cover .....REMOVE  
Handle.....PULL  
Emergency Exit Window.....PULL IN

3.41 VACUUM SYSTEM FAILURE

Indication: Amber "VACUUM LOW" annunciator illuminated.

Vacuum gage.....CHECK - WITHIN NORMAL  
OPERATING RANGE

Monitor vacuum gage. Low vacuum may lead to improper operation of the wing and empennage deice boots and malfunction of the cabin pressurization. Monitor cabin altitude.

Before landing, verify cabin is depressurized. If not depressurized:

ECS Switch .....OFF  
Bleed Air Lever .....PULL OUT (closed)  
Pressurization.....VERIFY ZERO  
DIFFERENTIAL PRESSURE

CAUTION

Do not attempt to open emergency exit if cabin is not depressurized. See APPENDIX B SKEN.

### 3.43 ANTI-ICE / DE-ICE SYSTEM MALFUNCTIONS

#### 3.43a Left Pitot Heat Failure

**Indication:** Red "L PITOT HEAT" annunciator illuminated.

Pitot Heat Switch.....CHECK ON  
L Pitot Heat Circuit Breaker .....CHECK IN  
(Located on the pilot's aft circuit breaker panel, row A, position 2.)

**Failure of the L Pitot Heat could cause erroneous indications of pilot's airspeed and standby airspeed.**

#### 3.43b Right Pitot Heat Failure

**Indication:** Red "R PITOT HEAT" annunciator illuminated.

Pitot Heat Switch.....CHECK ON  
R Pitot Heat Circuit Breaker .....CHECK IN  
(Located on the pilot's aft circuit breaker panel, row A, position 3.)

**Failure of the R Pitot Heat could cause erroneous indications of copilot's airspeed.**

#### 3.43c Pitot Heat Off

**Indication:** Amber "PITOT HEAT OFF" annunciator illuminated.

Pitot Heat Switch .....SELECT ON

#### 3.43d Prop Heat Failure

**Indication:** Red "PROP HEAT FAIL" annunciator illuminated.

Prop Heat Circuit Breaker .....CHECK IN  
(Located on the pilot's aft circuit breaker panel, row A, position 4.)

If Prop Heat Circuit Breaker was closed (not out):

Prop Heat Switch.....CYCLE OFF THEN ON

**If Annunciator remains illuminated, Exit and Avoid icing conditions.**



**3.43 ANTI-ICE / DE-ICE SYSTEM MALFUNCTIONS**  
(Continued)

**3.43e Windshield Over Temp**

**Indication:** Red “WINDSHIELD OVER TEMP” annunciator illuminated.

Windshield Heat Switch.....OFF

**If Windshield Over Temp Annunciator extinguishes:**

Windshield Heat Switch.....DEFOG

**If Windshield Over Temp Annunciator remains illuminated:**

Windshield Heat Switch.....OFF

Windshield Heat Circuit Breakers (2) .....PULL

(Located on the pilot’s aft circuit breaker panel, row A, positions 7, 8.)

**NOTE**

During high ambient temperature conditions when switching windshield heat from ANTI ICE to DEFOG, the red WINDSHIELD OVER TEMP annunciator may illuminate and remain illuminated until the windshield surface temperature cools to the DEFOG heat temperature range.

**3.43f Surface De-ice Failure**

**Indication:** Red “SURFACE DE-ICE FAIL” annunciator illuminated.

Surface De-ice Circuit Breaker.....CHECK IN

(Located on the pilot’s aft circuit breaker panel, row A, position 6.)

**If Annunciator remains illuminated, Exit and Avoid icing conditions.**

**3.43g Stall Warning Fail**

**Indication:** Amber “STALL WARN FAIL” annunciator illuminated.

Stall Heat Circuit Breaker.....CHECK IN

(Located on the pilot’s aft circuit breaker panel, row A, position 5.)

**Avoid low airspeeds and monitor approach speeds closely.**

**3.43 ANTI-ICE / DE-ICE SYSTEM MALFUNCTIONS**  
(Continued)

**3.43h Annunciator Panel Light Failure**

**Indication: Amber “ANNUN INOP” annunciator illuminated.**

ANNUN Circuit Breaker .....CHECK IN  
(Located on the pilot’s forward circuit breaker panel, row B, position 5.)  
ANNUN INOP Light.....Extinguished

**If ANNUN circuit breaker not open:**

Annunciator.....TEST

If annunciator lights illuminate, annunciator panel is functioning properly.

**NOTE**

Annunciator panels equipped with the auto dimming feature will automatically switch to the full bright mode when failure of the photo cell occurs.

If ANNUN circuit breaker does not remain closed or lights fail to illuminate when tested, ANNUN INOP will remain illuminated and annunciator lights will be inoperative for the remainder of the flight.

System should be repaired prior to further flight.

**3.45 DOOR AJAR**

**Indication: Red “DOOR AJAR” annunciator illuminated.**

**On the Ground:**

Door Latching .....CHECK AND VERIFY  
4 GREEN INDICATORS

**In Flight:**

Ensure all occupants are seated with seat belts on.  
Remain clear of the door.  
Reduce cabin pressurization.  
Reduce airspeed.  
*Land as soon as practical.*



**3.47 STANDBY ATTITUDE INDICATOR BATTERY HEATER FAIL**

**Indication:** Amber "STBY ATT IND BATT HEAT FAIL" annunciator illuminated.

STBY ATT IND Test Switch.....HOLD IN TEST POSITION  
(Minimum 5 seconds to complete self test)

**If STBY ATT IND Annunciator illuminates:**

Stby gyro.....MONITOR

**If STBY ATT IND Annunciator does not illuminate:**

Instrument Meteorological Conditions (IMC).....EXIT AND AVOID

**3.49 OXYGEN**

**Indication:** Amber "OXYGEN" annunciator illuminated.

Indicates one or more of the passenger oxygen cannisters is in use or is expended.

**If illuminated in flight:**

Descend to altitude where supplemental oxygen is not required.

**3.51 SPIN RECOVERY**

Rudder .....FULL OPPOSITE TO  
DIRECTION OF ROTATION

Control Wheel.....FULL FORWARD WHILE  
NEUTRALIZING AILERONS

Throttle.....CLOSED

Rudder (when rotation stops).....NEUTRAL

Control Wheel .....AS REQUIRED TO SMOOTHLY  
REGAIN LEVEL FLIGHT ATTITUDE

**3.53 ICING (Reference Section 9, Supplement 12, for Meridian Aircraft Flight Into Known Icing (FIKI))**

**THIS SPACE INTENTIONALLY LEFT BLANK**



**THIS PAGE INTENTIONALLY LEFT BLANK**

**THIS PAGE INTENTIONALLY LEFT BLANK**

**TABLE OF CONTENTS**  
**SECTION 4**  
**NORMAL PROCEDURES**

Paragraph No.		Page No.
4.1	General.....	4-1
4.3	Airspeeds for Safe Operations.....	4-2
4.5	<b>NORMAL PROCEDURES CHECKLIST</b> .....	4-3
4.5a	Preflight Checklist (4.9).....	4-3
4.5b	Before Starting Engine Checklist (4.11).....	4-9
4.5c	Engine Start Checklist (4.13).....	4-10
	Engine Start - Using Airplane Battery (4.13a).....	4-10
	Engine Start (Manual Mode) - Using Airplane Battery (4.13b).....	4-11
	Engine Start - Using External Power (4.13c).....	4-12
4.5d	Engine Dry Motoring Run (4.15).....	4-13
4.5e	Before Taxiing (4.17).....	4-13
4.5f	Taxiing (4.19).....	4-14
4.5g	Engine Run Up (4.21).....	4-15
4.5h	Before Takeoff (4.23).....	4-16
4.5i	Takeoff (4.25).....	4-17
	Normal Takeoff - 0° Flaps (4.25a).....	4-17
	Short Field Takeoff - 20° Flaps (4.25b).....	4-18
4.5j	Maximum Continuous Power Climb (4.27a).....	4-18
4.5k	Cruise Climb (4.27b).....	4-19
4.5l	Cruise (4.29).....	4-19
4.5m	Flight in Icing Conditions (4.31).....	4-20
4.5n	Descent (4.33).....	4-21
4.5o	Before Landing (4.35).....	4-22

## TABLE OF CONTENTS (CONT'D)

## SECTION 4

## NORMAL PROCEDURES

Paragraph No.		Page No.
4.5p	Landing (4.37).....	4-23
4.5q	Balked Landing (Go-Around) (4.39).....	4-23
4.5r	After Landing (4.41) .....	4-24
4.5s	Shutdown (4.43) .....	4-25
4.7	AMPLIFIED NORMAL PROCEDURES .....	4-26
4.9	Preflight Check (4.5a).....	4-26
4.11	Before Starting Engine (4.5b) .....	4-31
4.13	Engine Start (4.5c).....	4-32
4.13a	Engine Start - Using Airplane Battery (4.5c).....	4-32
4.13b	Engine Start (Manual Mode) - Using Airplane Battery (4.5c)	4-33
4.13c	Engine Start - Using External Power (4.5c).....	4-34
4.15	Dry Motoring Run (4.5d) .....	4-35
4.17	Before Taxiing (4.5e).....	4-35
4.19	Taxiing (4.5f).....	4-36
4.21	Engine Run up (4.5g) .....	4-37
4.23	Before Takeoff (4.5h) .....	4-38
4.25	Takeoff (4.5i).....	4-39
4.25a	Normal Takeoff - 0° Flaps (4.5i).....	4-39
4.25b	Short Field Takeoff Performance - 20° Flaps (4.5i).....	4-40
4.27	Climb (4.5j) .....	4-40
4.27a	Maximum Continuous Power Climb (4.5j).....	4-40
4.27b	Cruise Climb (4.5k) .....	4-40
4.29	Cruise (4.5l).....	4-41

TABLE OF CONTENTS (CONT'D)

SECTION 4

NORMAL PROCEDURES

Paragraph No.		Page No.
4.31	Flight in Icing Conditions (4.5m).....	4-42
4.33	Descent (4.5n).....	4-43
4.35	Before Landing (4.5o).....	4-44
4.35a	Approach Check (4.5o).....	4-44
4.35b	Landing Check (4.5o).....	4-44
4.37	Landing (4.5p).....	4-45
4.37a	Normal Technique (4.5p).....	4-45
4.37b	Short Field Technique (4.5p).....	4-45
4.39	Balked Landing - Go Around (4.5q).....	4-45
4.41	After Landing (4.5r).....	4-46
4.43	Shutdown (4.5s).....	4-46
4.45	Stalls.....	4-47
4.47	Turbulent Air Operation.....	4-47
4.49	Cabin Pressurization.....	4-47
4.51	Cabin Comfort Control Panel Operation.....	4-49
4.51a	Cabin Comfort Control Panel Controls and Switches.....	4-49
4.51b	Auto Temp Operation.....	4-49
4.51c	Manual Temp Operation.....	4-50
4.51d	Maximum Cabin Cooling.....	4-50
4.53	Noise Level.....	4-51
4.55	Reserved.....	4-51
4.57	High Altitude Operation.....	4-52

**THIS PAGE INTENTIONALLY LEFT BLANK**

## SECTION 4

### NORMAL PROCEDURES

#### 4.1 GENERAL

This section provides the normal operating procedures for the PA-46-500TP, Meridian airplane. All of the normal operating procedures required by the FAA are presented as well as those procedures which have been determined as necessary for the operation of the airplane, as determined by the operating and designed features of the airplane, are presented.

Normal operating procedures associated with optional systems and equipment which require handbook supplements are presented in Section 9, Supplements.

These procedures are provided to supply information on procedures which are not the same for all airplanes and as a source of reference and review. Pilots should familiarize themselves with these procedures to become proficient in the normal operation of the airplane.

This section is divided into two parts. The first part provides the Normal Procedures Checklists. These checklists supply an action - reaction sequence for normal operating procedures. Numbers in parentheses after each checklist section indicate the paragraph where the corresponding amplified procedure can be found.

The second part of this section contains the amplified normal procedures which provide additional detailed information and explanations of the procedures and how to perform them. The short form checklists should be used on the ground and in flight. Numbers in parentheses after each paragraph title indicate where the corresponding checklist can be found.

**4.1 GENERAL (Continued)****CAUTION**

Delays in arrival from start of flight, such as those caused by physiological problems associated with prolonged flight in high altitude, may be hastened and the effects of hypoxia may be minimized by proper ventilation.

Passenger discomfort may be intensified by an occasional intake of fluids. Prolonged high altitude flights require careful hydration and monitoring of the cabin temperature with the use of supplemental oxygen for the crew and passengers.

**4.3 AIRSPEEDS FOR SAFE OPERATIONS**

The following airspeeds are those which are significant to the safe operation of the airplane. These figures are for standard airplanes flown at maximum weight under standard sea level conditions.

Performance for a specific airplane may vary from published figures depending upon the equipment installed, the condition of the engine, airplane and equipment, atmospheric conditions and piloting technique.

Best Rate of Climb Speed ( $V_y$ ).....	125 KIAS
Best Angle of Climb Speed ( $V_x$ ).....	95 KIAS
Maximum Operating Maneuvering Speed ( $V_0$ ) .....	127 KIAS
Landing Final Approach Speed (Full Flaps).....	85 KIAS
Maximum Demonstrated Crosswind Velocity.....	17 KTS
Maximum Flaps Extended Speed	
10°.....	168 KIAS
20°.....	135 KIAS
Full Flaps (36°) .....	118 KIAS

**4.5 NORMAL PROCEDURES CHECKLIST****4.5a Preflight Checklist (4.9)****COCKPIT (4.9a)**

Landing Gear Handle.....DOWN  
 Control Wheel.....RELEASE RESTRAINTS  
 Alternate Static System.....CHECK NORMAL POSITION  
 Pitot and Static.....DRAIN  
 Parking Brake.....SET  
 All Switches.....OFF  
 Primary Flight Controls.....PROPER OPERATION  
 Emergency Ground Clearance.....PUSH ON (Verify operation of  
 the No. 1 Nav/Com, Audio Panel,  
 and illumination of the Landing  
 Gear Down Indicators, Standby  
 Instruments and Magnetic Compass)  
 Emergency Ground Clearance.....OFF  
 Battery Switch.....ON  
 Copilot Engine Display Unit (EDU).....VERIFY EXCEEDANCES/  
 NOTE OAT

**NOTE**

 
Refer to Section 2, Limitations, Paragraph 2.7, Power  
 Plant Limitations, Table 2-1, for disposition of engine  
 exceedances.

Fuel Gauges.....CHECK QUANTITY & IMBALANCE  
 Annunciator Panel Lights.....TEST

**NOTE**

Verify proper operation with full bright selected on  
 annunciator panels with the auto dimming feature.

Landing Gear Warning Horn Mute Switch (if installed).....PRESS/  
 Verify horn silences  
 and switch illuminates  
 Landing Gear Indicator Lights.....THREE GREEN  
 Fire Detection Test.....PUSH/ANNUNCIATOR ILLUMINATED  
 Stall Warning System.....TEST  
 Elevator and Rudder Trim.....NEUTRAL  
 Flaps.....EXTEND




4.5a Preflight Checklist (4.9) (Continued)

COCKPIT (4.9a) (Continued)

- Pilot's Emergency Oxygen System.....ON/Verify Charge 800 psi  
Minimum/Check Mask  
and Microphone
- Exterior Lighting Switches.....ON, CHECK OPERATION, THEN OFF
- Pitot Heat.....ON, CHECK OPERATION  
(Amber pitot heat annunciator extinguished. Monitor volt/ammeter for  
voltage drop.)
- Pitot Heat .....OFF
- Battery Switch .....OFF
- Interior Lighting.....ON and CHECK
- All Lighting Switches.....OFF
- Pitot Heat Switch.....OFF
- Stall Warning Heat Switch.....OFF
- Battery Switch .....OFF
- Empty Seats .....SEAT BELTS SNUGLY FASTENED
- Windows.....CHECK CLEAN
- Required Papers .....CHECK ON BOARD
- Baggage .....STOW and SECURE

THIS SPACE INTENTIONALLY LEFT BLANK

4.5a Preflight Checklist (4.9) (Continued)

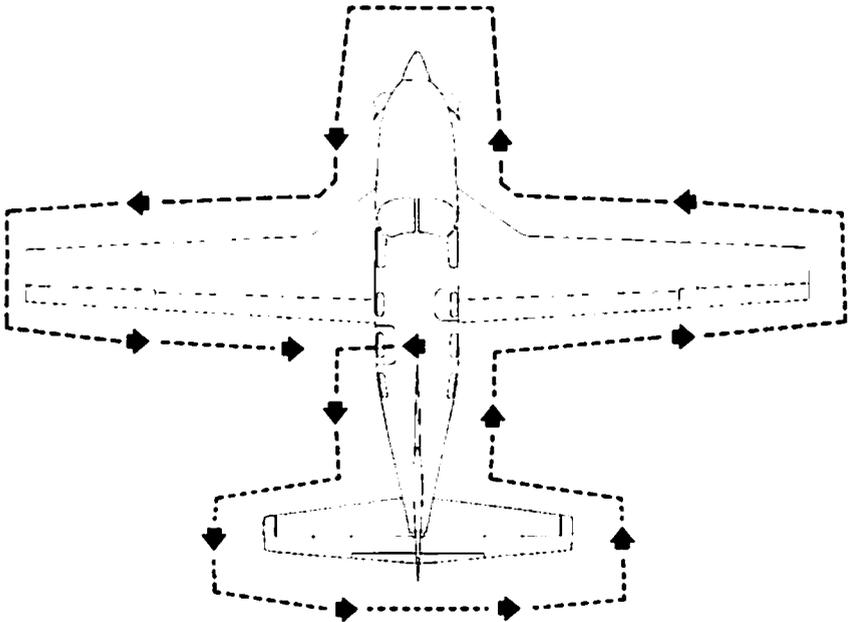

**WALK-AROUND**

Figure 4-1



**4.5a Preflight Checklist (4.9) (Continued)****NOSE SECTION (4.9d)**

General Condition and Cowling Fasteners.....	CHECK
Right Cowl Door.....	OPEN - CHECK GENERAL CONDITION - SECURE DOOR
Air Outlet and Exhaust Covers.....	REMOVE
Generator / Alternator Cooling Air Inlet.....	CLEAR
Exhaust Stacks.....	CHECK
Forward Upper Cowling.....	HORIZONTAL LATCH SLOTS ALIGNED and PINS EXTENDED
EPA Tank.....	DRAIN
Fuel Sump.....	DRAIN and CHECK for water, sediment and proper fuel
Air Inlets.....	CLEAR
Propeller Spinner.....	CHECK
Propeller.....	CHECK for nicks and general condition, ROTATE PROPELLER - listen for noise, check for binding
Landing Light.....	CHECK
Chock.....	REMOVE
Nose Gear Strut.....	PROPER INFLATION - approx. 2.7 in. (6.8 cm)
Nose Tire.....	CHECK
Gear Doors.....	CHECK
Fuel Sumps (2).....	DRAIN and CHECK for water, sediment and proper fuel
Forward Upper Cowling.....	HORIZONTAL LATCH SLOTS ALIGNED and PINS EXTENDED
Left Cowl Door.....	OPEN and CHECK OIL LEVEL
Oil Filler Cap.....	VERIFY FULLY CLOSED
Alternator and Airecond Compressor Belts.....	CHECK FOR TENSION and EXCESSIVE WEAR
Brake Fluid Reservoir Cap.....	VERIFY CLOSED
Left Cowl Door.....	CLOSED and SECURE



4.5a Preflight Checklist (4.9)(Continued)

LEFT WING (4.9e)

- Surface Condition .....CLEAR OF ICE, FROST, SNOW
- Main Gear Strut.....PROPER INFLATION - approx. 3 in. (8 cm)
- Gear Door.....CHECK
- Tire .....CHECK
- Brake Block and Disc.....CHECK
- Tie Down and Chock.....REMOVE
- Pitot Head.....CHECK
- Deice Boot .....CHECK
- Stall Strips .....CHECK
- Stall Warning Vane .....CHECK
- Fuel Tank and Filler Cap .....CHECK supply visually - SECURE CAP
- Fuel Tank Vent .....CLEAR
- Wing Tip and Lights .....CHECK
- Static Wicks (3).....CHECK
- Aileron and Hinges .....CHECK
- Flap and Hinges .....CHECK

THIS SPACE INTENTIONALLY LEFT BLANK



4.5b Before Starting Engine Checklist (4.11)

BEFORE STARTING ENGINE (4.11)

Passengers .....BOARD
Door .....CLOSE and LATCH

WARNING

Do not initiate any flight if all four door pin indicators are not green and/or the DOOR AJAR annunciator is illuminated.

Door Pins .....ALL INDICATORS GREEN
Seats.....ADJUSTED and LOCKED in position
Seat Belts and Harness .....FASTEN / ADJUST
- CHECK inertia reel
Parking Brake .....SET
Mic Select Switch .....Boom
Firewall Shutoff Valve .....IN (open) and COVER CLOSED
Bleed Air Lever.....(OUT (closed)
Power Lever .....IDLE
Condition Lever .....CUTOFF / FEATHER
Manual Override Lever (MOR).....FULL AFT and
LOCKED IN PLACE
ECS Switch .....OFF
Cabin Comfort Controls .....OFF
Electrical Switches .....OFF
Circuit Breakers.....CHECK
Avionics Switch.....OFF

**4.5c Engine Start Checklist (4.13)****ENGINE START - USING AIRPLANE BATTERY (4.13a)**

Battery Switch .....ON  
 Battery .....CHECK 24 to 26 VOLTS

**NOTE**

For warm weather operation engine starts may be attempted with a battery voltage of 23.5 volts minimum. Observe the engine start ITT limitation. Ng minimum speed of 13% and ensure combustion occurs within 10 seconds after moving the condition lever to run. Failure to observe these limitations can result in damage to the engine.

Fire Detection Test .....PUSH ANNUN. ILLUMINATED  
 Fuel Pump Switch .....MANUAL  
 Left and Right Fuel Pump Annun. ....ILLUMINATED  
 Ignition Switch .....MANUAL  
 Ignition Annunciator .....ILLUMINATED  
 Prop Area .....CLEAR  
 Start Mode Switch .....AUTO (Light in Switch Extinguished)  
 Start Switch .....LIFT COVER/PUSH  
 Oil Pressure .....CHECK RISING  
 Ng (min. 13%) .....STABILIZED  
 Condition Lever .....RUN  
 ITT .....MAX. 1000°C LIMITED TO 5 SEC.

**If combustion is not initiated within 10 sec. of moving Condition Lever to Run then:**

- Condition Lever .....CUTOFF / FEATHER
- Start Mode Switch .....PUSH MAN/STOP
- Allow minimum of 30 seconds fuel draining period, then refer to DRY MOTORING RUN (4.5 d)

Starter @ 56% .....VERIFY DISENGAGED  
 (If not - PUSH START MODE MAN/STOP SWITCH)

Ng .....STABLE above 60%

Np .....VERIFY 1200 RPM MINIMUM

Generator .....ON/CHECK POSITIVE AMPS/28 VOLTS/  
 GENERATOR INOP Annunciator Extinguished

Alternator .....ON/ALTERNATOR INOP Annunciator Extinguished

Fuel Pump Switch .....AUTO

Ignition Switch .....OFF

Oil Pressure .....CHECK (Min. 60 PSI)



#### 4.5c Engine Start Checklist (4.13) (Continued)

##### ENGINE START - USING EXTERNAL POWER (4.13c)

External Power Unit.....CONNECT

##### NOTE

For engine starting, the external power source must be capable of providing 24 to 29 Volts and 1200 Amps.

Battery Switch .....ON  
 Voltmeter .....CHECK STABLE 24 to 29 VOLTS  
 Fire Detection Test .....PUSH ANNUN. ILLUMINATED  
 Fuel Pump Switch .....MANUAL.  
 Left and Right Fuel Pump Annun. ....ILLUMINATED  
 Ignition Switch .....MANUAL  
 Ignition Annunciator .....ILLUMINATED  
 Prop Area .....CLEAR  
 Start Mode Switch.....AUTO (Light in Switch Extinguished)  
 Start Switch.....LIFT COVER/PUSH  
 Oil Pressure .....CHECK RISING  
 Ng (min. 13%).....STABILIZED  
 Condition Lever .....RUN  
 ITT .....MAX. 1000°C LIMITED TO 5 SEC.

**If combustion is not initiated within 10 sec. of moving Condition Lever to Run then:**

- Condition Lever.....CUTOFF / FEATHER
- Start Mode Switch.....PUSH MAN/STOP
- Allow minimum of 30 seconds fuel draining period, then refer to DRY MOTORING RUN (4.5 d)

Starter @ 56% .....VERIFY DISENGAGED  
 (If not - PUSH START MODE MAN/STOP SWITCH)

Ng .....STABLE above 60%  
 Np .....VERIFY 1200 RPM MINIMUM  
 Generator .....ON/CHECK POSITIVE AMPS/28 VOLTS/  
 GENERATOR INOP Annunciator Extinguished  
 Alternator .....ON/ALTERNATOR INOP Annunciator Extinguished  
 Fuel Pump Switch .....AUTO  
 Ignition Switch .....OFF  
 Oil Pressure .....CHECK (Min. 60 PSI)  
 External Power Unit .....DISCONNECT

**4.5d ENGINE DRY MOTORING RUN (4.15)**

Allow minimum of 30 seconds fuel draining period, then:

- Power Lever .....IDLE
- Condition Lever .....CUTOFF / FEATHER
- Fuel Pump Switch.....OFF
- Ignition Switch .....OFF
- Battery Switch .....ON
- Start Mode .....MANUAL (Switch Light Illuminated)
- Starter.....PUSH and HOLD (15 SEC.)
- Starter .....RELEASE

**NOTE**

Observe starter cooling limits (Section 2.9).

**4.5e BEFORE TAXIING (4.17)**

- Avionics Switch .....ON

**NOTE**

Movement of the aircraft prior to or during AHRS initialization may extend the time required for initialization. The initialization process is normally completed in 3 minutes.

- Bleed Air Lever .....IN (open)
- Cabin Pressure Dump Switch.....VERIFY POSITION
- ECS Switch.....NORMAL
- Pressurization Control.....SET

**NOTE**

Maximum cooling on the ground may be achieved by operating with the Bleed Air lever in the OUT (closed) position and the ECS control selected OFF.

**4.5e BEFORE TAXIING (4.17) (Continued)**

Cabin Comfort Controls .....	AS REQUIRED
Radios / Avionics .....	CHECK
Flaps .....	RETRACT
Autopilot Master Switch .....	SELECT FD/AP/Verify Self Test Completed per S-TEC Airplane Flight Manual Supplement (Ref. Section 9)
Manual Electric Trim Preflight Check.....	Perform per procedure defined in S-TEC Airplane Flight Manual Supplement (Ref. Section 9)
Electric Elevator Trim .....	SET IN TAKEOFF RANGE
Yaw Damper Switch.....	VERIFY OFF
Standby Attitude Indicator .....	TEST (verify green STBY ATT IND TEST annunciator illuminated) / ON / ERECT
Rudder Trim.....	SET 2° to 3° RT
Altimeter/Standby Altimeter.....	SET
Nav & Strobe Lights.....	AS REQUIRED
Taxi/Rec Lights.....	AS REQUIRED
Pilot / Copilot AHRS .....	VERIFY INITIALIZED
Parking Brake .....	RELEASE

**4.5f TAXIING (4.19)**

Taxi Area.....	CLEAR
Power Lever .....	ADVANCE SLOWLY
Brakes .....	CHECK
Steering.....	CHECK
Flight Instruments.....	CHECK

**CAUTION**

Propeller operation below 1200 rpm is prohibited.

**NOTE**

Beta range (aft of idle detent) may be used during taxi to control taxi speed and reduce wear on brakes.

**4.5g ENGINE RUN UP (4.21)**

- Parking Brake .....SET
- Power Lever..... 1900 RPM
- Overspeed Governor Test Switch.....LIFT COVER / PUSH and HOLD  
NP .....OBSERVE APPROX. 60 RPM DROP
- Overspeed Governor Test Switch.....RELEASE  
Np.....RETURN TO 1900 RPM
- Power Lever .....IDLE
- Reverse Lockout Switch.....PUSH and HOLD (Min. 5 sec.)
- Power Lever.....LIFT and RETARD TOWARDS REVERSE
- Beta and Prop Reverse .....NOT ATTAINABLE
- Reverse Lockout Switch.....RELEASE. POWER LEVER CAN  
BE MOVED TOWARDS REVERSE
- Power Lever .....IDLE
- Generator.....OFF (verify alternator picks up load  
and red GENERATOR INOP  
annunciator is illuminated)
- Alternator.....OFF (red ALTERNATOR INOP  
annunciator illuminated)
- Generator .....ON (red GENERATOR INOP  
annunciator extinguished)
- Alternator.....ON (red ALTERNATOR INOP  
annunciator extinguished)
- Quadrant Friction Lock.....SET

**NOTE**

Refer to Section 9, Supplement 12, for Meridian Aircraft Flight Into Known Terrain (FIKT), prior to any flight operations (takeoff, cruise, landing, etc.).

**4.5h BEFORE TAKEOFF (4.23)**

Seat Backs .....	ERECT
Seats .....	ADJUSTED & LOCKED IN POSITION
Armrests .....	STOWED
Belts/Harness .....	FASTENED / ADJUSTED
Generator .....	ON
Alternator .....	ON
Bleed Air Lever .....	IN (open)
ECS Switch.....	NORMAL
Pressurization System .....	SET
Flight Instruments .....	CHECK
Engine Instruments.....	CHECK
Radios / Avionics .....	AS REQUIRED
Elevator and Rudder Trim .....	SET
Flaps .....	UP
Flight Controls .....	FREE & PROPER TRAVEL
Fuel Pump Switch.....	MANUAL
Ignition Switch .....	MANUAL
Windshield Heat .....	AS REQUIRED
Pitot Heat.....	ON
Nav & Strobe Lights .....	ON
Landing Light .....	AS REQUIRED
Taxi/Rec Light .....	AS REQUIRED
Annunciator Lights.....	CONSIDER ANY LIGHTS ILLUMINATED

**NOTE**

Refer to Section 9, Supplement 12, for Meridian Aircraft Flight Into Known Icing (FIKI), prior to any flight operations (takeoff, cruise, landing, etc.).



4.5i TAKEOFF (4.25)

NOTE

Increasing airspeed will cause torque to increase.

NOTE

Demonstrated crosswind component is 17 knots.

WARNING

Positioning the Power Lever aft of the flight idle stop in flight is prohibited. Such positioning may cause loss of airplane control or may result in an engine overspeed condition and consequent loss of engine power.

NORMAL TAKEOFF (0° FLAPS) (4.25a)

- Nav Display .....CROSS CHECK HEADING WITH  
CORRECTION CARD (If Installed)
- Brakes .....APPLY
- Power Lever .....SET TO TAKEOFF
- Brakes .....RELEASE
- Engine Instruments.....MONITOR
- Rotation and Liftoff (V<sub>R</sub>).....85 KIAS
- Obstacle Clearance Speed .....100 KIAS
- After liftoff and positive rate of climb:
- Landing Gear .....UP
- Fuel Pump .....AUTO
- Ignition .....AUTO
- Landing Light .....OFF
- Taxi/Rec Lights.....AS REQUIRED

## 4.5i TAKEOFF (4.25) (Continued)

**SHORT FIELD TAKEOFF PERFORMANCE (20° FLAPS) (4.25b)**

Flaps .....20°  
 Nav Display .....CROSS CHECK HEADING WITH  
 CORRECTION CARD (If Installed)  
 Brakes .....APPLY  
 Power Lever .....SET TO TAKEOFF (MCP)  
 Brakes .....RELEASE  
 Engine Instruments.....MONITOR  
 Rotation and Ltoff (V<sub>R</sub>).....85 KIAS  
 Obstacle Clearance Speed .....95 KIAS

After liftoff and positive rate of climb:

Flaps .....RETRACT  
 Landing Gear .....UP  
 Fuel Pump .....AUTO  
 Ignition .....AUTO  
 Landing Light .....OFF  
 Taxi/Rec Lights.....AS REQUIRED

**NOTE**

The Ignition may be operated continuously and can be used for takeoff, landing, or flight into precipitation. There is no time limitation, although continuous operation will reduce component life.

## 4.5j MAXIMUM CONTINUOUS POWER CLIMB (4.27a)

Power Lever.....MCP  
 Ice Protection Equipment .....AS REQUIRED  
 Engine Instruments  
 a. Torque.....MONITOR (1313 FT-LB MAX.)  
 b. ITT .....MONITOR (770°C MAX.)  
 c. Ng .....MONITOR (101.7% MAX.)  
 Climb Speed (best rate) .....125 KIAS  
 Pressurization System .....SET& MONITOR  
 Aircraft Heading.....CROSS CHECK WITH  
 CORRECTION CARD  
 (If Installed)

**4.5k CRUISE CLIMB (4.27b)**

- Climb Power.....SET MCP
- Ice Protection Equipment .....AS REQUIRED
- Engine Instruments
  - a. Torque.....MONITOR (1313 FT-LB MAX.)
  - b. ITT .....MONITOR (770 C MAX.)
  - c. Ng .....MONITOR (101.7% MAX.)
- Cruise Climb Speed.....145 KIAS (to 20,000 FT)  
135 KIAS (20,000 FT to 30,000 FT)
- Pressurization System .....SET& MONITOR
- Altimeters .....CHECK
- Aircraft Heading.....CROSS CHECK WITH  
CORRECTION CARD  
(If Installed)

**4.5l CRUISE (4.29)**

- Cruise Power.....SET PER POWER  
TABLES IN SECTION 5
- Engine / Fuel Instruments .....MONITOR
- Pressurization System .....SET& MONITOR
- Cabin Comfort Controls.....AS DESIRED
- Aircraft Heading.....CROSS CHECK WITH  
CORRECTION CARD  
(If Installed)

**4.5m FLIGHT IN ICING CONDITIONS**

**Reference Section 9, Supplement 12, for  
Meridian Aircraft Flight Into Known Icing  
(FIKI).**

**THIS SPACE INTENTIONALLY LEFT BLANK**

**4.5n DESCENT (4.33)**

- Windshield Defrost .....PULL ON
- Windshield Heat .....DEFOG
- Ice Protection Equipment.....AS REQUIRED
- Power Lever .....SET TO DESIRED TORQUE
- Altimeter & Standby Altimeter.....CHECK
- Cabin Pressure Controller .....SET (field elev. +500 ft)
- Cabin Rate Control .....SET for comfort  
(approx. 9 o'clock position)
- Cabin Comfort Controls .....AS REQUIRED
- Aircraft Heading.....CROSS CHECK WITH  
CORRECTION CARD  
(If Installed)

**THIS SPACE INTENTIONALLY LEFT BLANK**

**4.5o BEFORE LANDING (4.35)****APPROACH CHECK (4.35a)**

Altimeter & Standby Altimeter.....SET  
 Pressurization.....SET  
 Fuel Pump.....MANUAL  
 Ignition .....MANUAL  
 Fuel Quantity.....CHECK  
 Seats.....ADJUSTED & LOCKED IN POSITION  
 Armrests .....STOWED  
 Belts/Harness .....FASTEN & ADJUSTED  
 Landing Gear .....DOWN (below 168 KIAS)  
 Flaps.....SET (10° @ 168 KIAS max.)  
 Aircraft Heading.....CROSS CHECK WITH  
 CORRECTION CARD  
 (If Installed)

**NOTE**

During landing gear operation it is normal for the HYDRAULIC PUMP annunciator light to illuminate until full system pressure is restored.

**LANDING CHECK (4.35b)**

Landing Gear.....3 GREEN LIGHTS  
 Brakes.....CHECK

**WARNING**

After pumping several times, if one or both toe brakes are inoperative, DO NOT attempt landing on a short field.

Flaps.....SET (36° @ 118 KIAS max.)  
 Airspeed.....85 KIAS

**NOTE**

Landing distance performance was established by maintaining a power on (280 ft. lb. torque), stabilized 3° approach at 85 KIAS, and reducing power to idle during the flare.

Autopilot .....DISENGAGE  
 Yaw Damper (prior to landing) .....DISENGAGE



4.5p LANDING (4.37)

NORMAL TECHNIQUE (4.37a)

Power Lever .....IDLE

Touch Down Main Wheels First

Brakes .....MODERATE or AS REQUIRED

Power Lever.....BETA or AS REQUIRED

NOTE

Landing distance was determined by selecting beta immediately after touchdown (all three landing gear) and applying moderate braking.

SHORT FIELD TECHNIQUE (4.37b)

Power Lever .....IDLE

Touch Down Main Wheels First

Reverse (After Touchdown) .....MAXIMUM

Brakes.....MODERATE

Power Lever .....IDLE (before aircraft stops)

4.5q BALKED LANDING (Go-Around) (4.39)

Power Lever.....SET TAKEOFF TORQUE

Climb Airspeed .....85 KIAS

 
Flaps (after climb established .....RETRACT TO 20°  
and obstacle has been cleared)

Climb Airspeed .....ACCELERATE TO 100 KIAS

Flaps .....RETRACT TO 0°

Landing Gear .....RETRACT

Aircraft Heading .....CROSS CHECK WITH  
CORRECTION CARD  
(If Installed)



4.5r AFTER LANDING (4.41)

- Flaps .....RETRACT
- Strobe Lights.....OFF
- Ice Protection Equipment .....OFF
- Landing / Taxi Lights.....AS REQUIRED
- Fuel Pumps.....AUTO
- Ignition .....OFF
- ECS Switch.....OFF
- WX Radar .....STBY
- Transponder .....AS REQUIRED
- Standby Attitude Indicator.....OFF

**THIS SPACE INTENTIONALLY LEFT BLANK**



## 4.5s SHUTDOWN (4.43)

**WARNING**

If there is evidence of fire within the engine after shutdown, proceed immediately with the Dry Motoring Run Procedure, Section 4.5d.

**CAUTION**

Do not allow the engine to idle for more than 30 minutes. If the engine is idled for more than 30 minutes, the engine oil must be changed. Do not allow the engine to idle for more than 15 minutes if the engine is idled with the propeller feathered. Do not allow the engine to idle for more than 15 minutes if the engine is idled with the propeller feathered and the engine is idled with the propeller feathered.

Power Lever .....	IDLE
Parking Brake .....	SET
Cabin Comfort Controls .....	OFF
Exterior Lighting Switches .....	OFF
Fuel Pump.....	OFF
Avionics Switch.....	OFF
Generator .....	OFF
Alternator.....	OFF

**NOTE**

Allow ITT to stabilize at least two minutes at idle.

Condition Lever .....	CUTOFF / FEATHER
Feather Annunciator .....	CHECK ON
Battery Switch .....	OFF
Bleed Air Lever.....	OUT (closed)
Flight Controls .....	SECURED
Oxygen System.....	OFF
Wheel Chocks.....	AS REQUIRED
Tie Downs.....	AS REQUIRED
Air Inlets, Exhaust and Pitot Covers.....	INSTALL

## 4.7 AMPLIFIED NORMAL PROCEDURES (GENERAL)

The following paragraphs are provided to supply detailed information and the explanation of the normal procedures for operation of the airplane.

## 4.9 PREFLIGHT CHECK (4.5a)

The airplane should be given a thorough preflight and walk-around check. The preflight should include a check of the airplane's operational status, computation of weight and C.G. limits, takeoff distance, and in-flight performance. A weather briefing should be obtained for the intended flight path, and any other factors relating to a safe flight should be checked before takeoff.

### 4.9a Cockpit (4.5a)

Upon entering the cockpit, verify the landing gear handle is in the DOWN position, then release the seat belts securing the control wheel. Verify that the alternate static system valve is in the normal (DOWN) position. Drain the pitot and static systems using drain valves located on both the right and left cockpit lower side panels next to the crew seats (two valves on the pilot's side and four on the copilot's side).

Set the parking brake by first depressing and holding the toe brake pedals and then pull the parking brake knob.

Ensure that all electrical switches are OFF.

Check the primary flight controls for proper operation.

Push ON the emergency ground clearance switch and verify activation of the No. 1 GNS 530, the audio panel, and illumination of the landing gear down indicators, standby airspeed, altitude and attitude indicators, and the magnetic compass. Push OFF the emergency ground clearance switch and turn ON the battery switch. The emergency ground clearance switch will not activate if the battery switch is on.

Check and verify exceedances displayed on the copilot's engine display unit (EDU), then press the PAGE button to display the secondary display page. Check and note OAT and fuel quantity.

#### NOTE

Refer to Section 2, Limitations, Paragraph 2.7, Power Plant Limitations, Table 2-1, for disposition of engine exceedances.

## 4.9 PREFLIGHT CHECK (4.5a) (Continued)

### 4.9a Cockpit (4.5a) (Continued)

Verify the fuel imbalance falls within the maximum allowed per Section 2.7. Verify that all the annunciators illuminate by selecting TEST on the annunciator. In addition, the landing gear warning horn should sound. (The landing gear warning horn can be silenced by pressing the landing gear warning horn mute switch, if installed, and verifying the switch illuminates.)

#### NOTE

If equipped with the auto dimming feature on the annunciator panel, verify operation in the full bright mode.

Press the fire detection switch and verify the red "ENGINE FIRE" annunciator is illuminated. Press the stall warning press-to-test button and verify activation of the stall aural warning horn. Set the elevator and rudder trims to neutral and extend the flaps.

Check the charge and operation of the pilot's emergency oxygen system. Verify the charge is above the yellow arc (800 psi minimum). Verify proper mask and microphone operation as follows: Depress and hold the reset test button on the mask, while depressing the press-to-test button on the stowage box. Visually verify that the test indicator located on the stowage box and auditory cues signify oxygen flow. Also verify the mask microphone operation by monitoring the ship speaker system during the oxygen system test. The mask microphone, intercom, and ship speaker must be activated prior to testing. The mask does not have to be removed from the stowage box for preflight testing.

Turn ON and check operation of exterior lights (taxi/rec lights, landing lights, nav lights, strobe lights and ice lights).

After completing the exterior lighting check, turn OFF all light switches. Select pitot heat switch ON, check operation then select OFF. Note proper operation of pitot heat by verifying amber pitot heat annunciator extinguished and monitoring the volt/ammeter for a corresponding voltage drop.

Turn the battery switch OFF.

Check seat belts on empty seats are snugly fastened and check the windows for cleanliness. Verify that all required papers, flight manuals, flight manual supplements, and pilot operating handbooks are on board. Stow and secure any baggage.

## 4.9 PREFLIGHT CHECK (4.5a) (Continued)

### 4.9b Empennage (4.5a)

Begin the walk-around at the left side of the aft fuselage. Ensure that the primary and pressurization static ports on the underside of the aft fuselage and the alternate static port on the left side of the aft fuselage are clear of obstructions. Verify the contents of the tail storage compartment are secured properly, then close and verify that the compartment door is secured. Verify the EPU access door is closed or the EPU is connected. Check the condition of antennas located on the fuselage and the vertical tail. All surfaces of the empennage must be clear of ice, frost, snow or other extraneous substances. Check the condition of the stabilizer and rudder de-ice boots for any nicks, tears or delamination. Check the condition of the elevator trim tab and ensure that all hinges and pushrods are sound and operational. The elevator and rudder should be operational and free from damage or interference of any type, and the static wicks (total of 11) should be firmly attached and in good condition. Check the rudder trim tab for neutral position and excessive free play. If the tail has been tied down, remove the tie-down rope. Verify the alternate static port on the right side of the aft fuselage is clear of obstructions.

### 4.9c Right Wing (4.5a)

Check that the wing surface and control surfaces are clear of ice, frost, snow or other extraneous substances. Check the flap, aileron and hinges for damage and operational interference. Static wicks (total of 3) should be firmly attached and in good condition. Check the wing tip and lights for damage.

Check and verify that the fuel tank vent is clear of any obstructions. Open the fuel cap and visually check the fuel quantity. The quantity should match the indication that was observed on the fuel quantity display. Replace the cap securely. Check the condition of the deice boot for any nicks, tears or delamination, and verify that the stall strips are securely attached. Check the radar pod for any damage, that all attachment points are secure, and the storage door is closed and latched. If installed, remove the cover from the pitot head and verify that it is clear of obstructions.

Remove the tiedown and chock.

Next, complete a check of the landing gear and general area. Check the gear strut for proper inflation. There should be approximately 3 in. (8 cm) of strut exposure under a normal static load. Also, check for hydraulic leaks. Check the integrity of the gear door, and check the tire for cuts, wear, and proper inflation. Make a visual check of the brake block and disc.

## 4.9 PREFLIGHT CHECK (4.5a) (Continued)

### 4.9d Nose Section (4.5a)

Check the general condition of the nose section; look for oil or fluid leakage and that the cowling fasteners are secure. The upper forward cowling latches consist of three slot type latches on the right and three on the left side of the cowling. Prior to flight, visually verify that each latch fastener is properly fastened. When the latch is properly fastened, the slot will be in the horizontal position and aligned with indicator marks on the cowling, and the indicator pin in the center of the slot will be extended into the slot. Open the right side cowling door and check general condition of the linkage, hoses, and wiring, then close and secure the door. Remove the outlet and exhaust covers, and verify the generator/alternator cooling air inlet is clear of obstructions. Check the exhaust stacks for cracks and that they are securely attached. Drain the EPA tank and drain the fuel sump to check for water, sediment, and proper fuel. Verify that the engine and oil cooler air inlets and outlets are clear of obstructions. The propeller spinner and propeller should be checked for detrimental nicks, cracks, or other defects. Rotate the propeller and listen for noises and check for binding. Verify that the landing light is clean and intact.

Remove the chock and check the nose gear strut for proper inflation. There should be approximately 2.7 in. (6.8 cm) of strut exposure under a normal static load. Check the tire for cuts, wear, and proper inflation. Check the integrity of the gear doors. Drain the fuel sumps through the quick drains located under the aft nose section, making sure that enough fuel has been drained to ensure that all water and sediment is removed and to verify proper fuel type. The fuel system should be drained daily prior to the first flight and after each refueling.

Open the left cowl door and visually check the oil level. If low, refer to Section 8 for servicing.

Oil quantity may be checked either by the sight gage or the dipstick (refer to Section 8 for procedures). Verify the oil filler cap is closed and the locking tab is down. Check the alternator and air conditioner drive belts for tension and excessive wear. Verify no leaks and that the brake fluid reservoir cap is secure. Close and secure the cowl door.

## 4.9 PREFLIGHT CHECK (4.5a) (Continued)

### 4.9e Left Wing (4.5a)

Check that the wing surface and control surfaces are clear of ice, frost, snow or other extraneous substances. Next, make a check of the landing gear area. Check the gear strut for proper inflation. There should be approximately 3 in. (8 cm) of strut exposure under a normal static load. Also, check for hydraulic leaks. Check the integrity of the gear door and check the tire for cuts, wear, and proper inflation. Make a visual check of the brake block and disc. Remove the tiedown and chock.

If installed, remove the cover from the pitot head and verify that it is clear of obstructions. Check the condition of the deice boot for any nicks or tears and verify that the stall strips are securely fastened. Check the stall warning vane for obstructions and freedom of movement.

Open the fuel cap and visually check the fuel quantity. The quantity should match the indication that was observed on the fuel quantity display. Replace the cap securely. Check and verify that the fuel tank vent is clear of any obstructions.

Check the wing tip and lights for damage. Static wicks should be firmly attached and in good condition. Check the aileron, hinges, and flap for damage and operational interference.

#### 4.11 BEFORE STARTING ENGINE (4.5b)

When all passengers are on board, the pilot should check that the cabin door is properly closed and latched, and visually check that all four door pin indicators are green.

#### WARNING

Do not initiate any flight if all four door pin indicators are not green and/or the "DOOR AJAR" annunciator is illuminated.

Seats should be adjusted and locked in position. Seat belts on empty seats should be snugly fastened. All passengers should fasten their seat belts and shoulder harnesses. A pull test of the inertia reel locking restraint feature should be performed.

Before starting the engine, verify the parking brake is set and the area around the airplane is clear of personnel and equipment. Verify the Mic Select switch is in the BOOM position.

Verify the firewall shutoff valve is open (IN position) and the cover is closed. The bleed air lever should be closed (OUT position). The power lever should be in the IDLE position and the condition lever should be in CUTOFF/FEATHER. Check that the manual override lever (MOR) is FULL AFT and locked in place. Verify the ECS switch, cabin comfort controls, and electrical switches are in the OFF positions. Check the circuit breaker panels and verify circuit breakers are in. The avionics switch should be OFF.

### 4.13 ENGINE START (4.5c)

#### 4.13a Engine Start - Using Airplane Battery (4.5c)

Turn the battery switch ON and check the voltmeter for output of 24 to 26 Volts.

#### NOTE

For warm weather operation engine starts may be attempted with a battery voltage of 23.5 volts minimum. Observe the engine start ITT limitation, Ng minimum speed of 13% and ensure combustion occurs within 10 seconds after moving the condition lever to run. Failure to observe these limitations can result in damage to the engine.

Depress the engine fire detection test switch and verify the engine fire annunciator illuminates. Select MAN on the fuel pump switch and verify the left and right fuel pump annunciators illuminate. Select the ignition switch to MAN and verify the ignition annunciator illuminates.

Verify area around propeller is clear. Verify the start mode switch is in the AUTO position (light in the switch is extinguished).

Lift cover and push start switch to ENGAGE the starter. Check that oil pressure rises, and Ng stabilizes above 13%.

Move the condition lever to RUN.

Monitor ITT to make sure the temperature does not exceed the maximum of 1000°C for more than 5 seconds.

**If combustion is not initiated within 10 seconds of moving the Condition Lever to Run then:**

Move the condition lever to CUTOFF/FEATHER and push the start mode switch to MAN/STOP. Allow a minimum of 30 seconds for fuel draining, then refer to Dry Motoring Run, Section 4.5d.

Verify that the starter automatically disengages at 56% Ng. If the starter does not automatically disengage at 56% Ng, push the start mode MAN/STOP switch. Verify Ng is stable above 60% and prop rpm (Np) is 1200 rpm or above.

Select the generator ON and check for an indication of positive amps, 28 Volts, and GENERATOR INOP annunciator extinguished. Select the alternator ON and verify the ALTERNATOR INOP annunciator has extinguished and in it's standby state is indicating zero(s) on the display. Select the fuel pump switch to AUTO and the ignition switch to OFF. Monitor oil pressure to verify a minimum of 60 psi.



**4.13 ENGINE START (4.5c) (Continued)****4.13c Engine Start - Using External Power (4.5c)**

Connect the external power unit to the aircraft and check that the voltmeter remains stable at 24 to 29 volts.

**NOTE**

For engine starting, the external power source must be capable of providing 24 to 29 Volts and 1200 Amps.

Turn the battery switch ON. Depress the engine fire detection test button and verify the engine fire annunciator illuminates. Select MAN on the fuel pump switch and verify the left and right fuel pump annunciators illuminate. Select MAN on the ignition switch and verify the ignition annunciator illuminates.

Verify area around propeller is clear. Verify the start mode switch is in the AUTO position (light in the switch is extinguished).

Lift cover and push start switch to ENGAGE the starter. Check that oil pressure rises, and Ng stabilizes above 13%. Move the condition lever to RUN.

Monitor ITT to make sure the temperature does not exceed the maximum of 1000°C for more than 5 seconds.

**If combustion is not initiated within 10 seconds of moving the Condition Lever to Run then:**

Move the condition lever to CUTOFF/FEATHER and push the start mode switch to MAN/STOP. Allow a minimum of 30 seconds for fuel draining, then refer to Dry Motoring Run, Section 4.5d.

Verify that the starter automatically disengages at 56% Ng. If the starter does not automatically disengage at 56% Ng, push the start mode MAN/STOP switch. Verify Ng is stable above 60% and prop rpm (Np) is 1200 rpm or above.

Select the generator ON and check for an indication of positive amps, 28 Volts, and GENERATOR INOP annunciator extinguished. Select the alternator ON and verify the ALTERNATOR INOP annunciator has extinguished and in it's standby state is indicating zero(s) on the display. Select the fuel pump switch to AUTO and the ignition switch to OFF.

Monitor oil pressure to verify a minimum of 60 psi. Disconnect the external power unit from the aircraft.

#### 4.15 DRY MOTORING RUN (4.5d)

After allowing a minimum of 30 seconds for fuel to drain, move the power lever to IDLE and the condition lever to CUTOFF/FEATHER. The fuel pump switch and the ignition switch should be selected OFF. Turn the battery switch ON and select MANUAL on the start mode switch. The light in the start mode switch should be illuminated. Select and hold the starter switch to ENGAGE for 15 seconds, then release the starter switch to OFF.

#### NOTE

Observe starter cooling limits (Section 2.9).

#### 4.17 BEFORE TAXIING (4.5e)

Push avionics switch ON.

#### NOTE

Movement of the aircraft prior to or during AHRS initialization may extend the time required for initialization. The initialization process is normally completed in 3 minutes.

Position the bleed air lever to the open position (IN). Verify the cabin pressure dump switch is in the pressurize position (light in switch extinguished and switch in the out position). Select NORMAL on the ECS switch and set the pressurization control to field elevation plus 500 feet and the rate control knob to the 9 o'clock position.

#### NOTE

Maximum cooling on the ground may be achieved by operating with the bleed air lever in the OUT (closed) position and the ECS control selected OFF.

The cabin comfort controls can be set as desired.

#### 4.17 BEFORE TAXIING (4.5e) (Continued)

Check that the radios and avionics are set and functioning as required. (Utilize the avionics self-test operations where applicable.) Retract the flaps. Turn the autopilot master switch to FD/AP and verify the autopilot self test is completed per procedures in the S-TEC Airplane Flight Manual Supplement located in Section 9. Perform the Manual Electric Trim Preflight Check per procedures defined in the S-TEC Airplane Flight Manual Supplement located in Section 9. Set the electric elevator trim in takeoff range. Verify the yaw damp switch is OFF. Select TEST on the standby attitude indicator switch and verify the standby attitude indicator annunciator illuminates, then select ON. Pull the ERECT knob to erect the gyro. Set the rudder trim for 2° to 3° right. Set the altimeter/standby altimeters as required. The navigation and strobe lights and the taxi/rec lights should be utilized as required. Verify the pilot and copilot AHRS is initialized prior to aircraft movement. Initialization should be accomplished in 180 seconds after the avionics switch is activated. Release the parking brake.

#### 4.19 TAXIING (4.5f)

After making sure the taxi area is clear, slowly advance the power lever. Taxi a few feet forward and apply the brakes to determine their effectiveness. While taxiing, make slight turns to check the effectiveness of the steering. Check the flight instruments for proper operation.

#### CAUTION

Propeller operation below 1200 rpm is prohibited.

#### NOTE

Beta range (aft of idle detent) may be used during taxi to control taxi speed and reduce wear on brakes.

#### 4.21 ENGINE RUN UP (4.5g)

Make sure the parking brake is set. Apply brakes with rudder pedals, then pull out the parking brake control. Advance the power lever to attain 1900 RPM. Move the friction lever forward to apply throttle friction so that the throttle will maintain a set position.

Lift the cover, push and hold the overspeed governor test switch and observe approximate 60 RPM drop in Np. Release the overspeed governor test switch and check that Np returns and stabilizes at 1900 RPM.

Move the power lever to IDLE and depress and hold the reverse lockout switch for a minimum of 5 seconds. Keeping the reverse lockout switch depressed, lift and retard the power lever toward beta and reverse. Beta and reverse should not be attainable. Release the reverse lockout switch and repeat lifting and retarding the power lever aft to beta and reverse. Beta and reverse should now be attainable.

Return the power lever to IDLE. Select the generator OFF, verify the alternator picks up the load. This is accomplished by monitoring the Volt/Amp/Rudder trim position indicator in the center of the lower portion of the instrument panel. Verify the red GENERATOR INOP annunciator is illuminated. Select the alternator OFF, verify the red ALTERNATOR INOP annunciator is illuminated. Select the generator ON, verify the red GENERATOR INOP annunciator is extinguished. Select the alternator ON, verify the red ALTERNATOR INOP annunciator is extinguished.

#### NOTE

Refer to Section 9, Supplement 12, for Meridian Aircraft Flight Into Known Ice (FIKI), prior to any flight operations (takeoff, cruise, landing, etc.).

### 4.23 BEFORE TAKEOFF (4.5h)

Make sure seat backs are erect and seats are adjusted and locked in position. Armrests should be stowed and seat belts and harnesses should be fastened and adjusted. Verify the generator and alternator are ON with a positive indication of amps.

The bleed air lever should be IN (open), the ECS switch should be set to NORMAL, the pressurization controller should be set to 500 feet above the airport pressure altitude, the rate control should be set to the approximate 9 o'clock position, and the DUMP/NORM switch should be set to NORM and the cover closed.

Check all the flight instruments and set as required. Check all the engine instruments to verify the engine indications are within the normal operating range. Radios and avionics should be set as required. Verify elevator trim and rudder trim are in the takeoff range, and flaps are up. Check the flight controls for free and proper travel.

Select the fuel pump switch and the ignition switch to the manual position. Select windshield heat as required. Select pitot heat ON. Select nav lights and strobe lights ON and the landing light and taxi/rec lights as required. The landing light is only usable when the landing gear is extended. For maximum aircraft visibility, select pulse mode taxi/rec lights. Check the annunciator panel lights and consider any lights that are illuminated.

#### NOTE

Refer to Section 9, Supplement 12, for Meridian Aircraft Flight Into Known Icing (FIKI), prior to any flight operations (takeoff, cruise, landing, etc.).

**4.25 TAKEOFF (4.5i)****NOTE**

Increasing airspeed will cause torque to increase.

**NOTE**

Demonstrated crosswind component is 17 knots.

**WARNING**

Positioning the power lever aft of the flight idle stop in flight is prohibited. Such positioning may cause loss of airplane control or may result in an engine overspeed condition and consequent loss of engine power.

**4.25a NORMAL TAKEOFF (0° FLAPS) (4.5i)**

Align the airplane with the runway and apply the brakes. Verify the heading shown on the navigation display is accurate and cross checked against the correction card. Move the power lever to takeoff power and release the brakes. Scan the engine instruments to verify all indications are within the normal operating range. Accelerate to attain rotation speed ( $V_R$ ) of 85 KIAS. After liftoff, adjust the airplane attitude as required to attain the obstacle clearance speed of 100 KIAS.

After liftoff and a positive rate of climb is established, retract the landing gear. Select the fuel pump and ignition switch to the AUTO position and turn OFF the landing light. The taxi/rec lights may be utilized as required.

## 4.25 TAKEOFF (4.5i) (Continued)

### 4.25b Short Field Takeoff Performance (20° Flaps) (4.5i)

Set the flaps to the 20° position. Align the airplane with the runway and apply the brakes. Verify the heading shown on the navigation display is accurate and cross checked against the correction card. Set the power lever to takeoff power (MCP) and release the brakes. Monitor the engine instruments to verify all indications are within the normal operating range. Accelerate to attain rotation speed of 85 KIAS. After liftoff, adjust the airplane attitude as required to attain the obstacle clearance speed of 95 KIAS.

After liftoff and a positive rate of climb is established, retract the flaps and the landing gear. Select the fuel pump and ignition switch to the AUTO position and turn the landing light OFF. The taxi/tee lights may be utilized as required.

#### NOTE

The Ignition may be operated continuously and can be used for takeoff, landing, or flight into precipitation. There is no time limitation, although continuous operation will reduce component life.

## 4.27 CLIMB (4.5j)

### 4.27a Maximum Continuous Power Climb (4.5j)

Position the power control lever to maintain maximum continuous power climb. Use ice protection equipment as required. Monitor the engine instruments: torque 1313 ft. lb. max, ITT (770°C max.), and Ng (101.7% max.). Adjust the airplane attitude to obtain the best rate of climb speed of 125 KIAS. Check that the pressurization system controls are properly set, and continuously monitor. Verify aircraft heading against the correction card.

### 4.27b Cruise Climb (4.5k)

Position the power lever to maintain maximum continuous power. Use ice protection equipment as required. Monitor the engine instruments: torque 1313 ft. lb. max, ITT (770°C max.), and Ng (101.7% max.). Adjust the airplane attitude to obtain the best cruise climb speed of 145 KIAS (to 20,000 feet) or 135 KIAS (20,000 to 30,000 feet). Check that the pressurization system controls are properly set, and continuously monitor. Check the altimeters. Verify aircraft heading against the correction card.

**4.29 CRUISE (4.51)**

The cruising speed is determined by many factors including power setting, altitude, temperature, loading, and equipment installed on the airplane. Also, weather conditions should be continuously monitored, with special attention to conditions which could lead to icing.

When leveling off at cruise altitude, determine the cruise power setting by referring to the power tables located in Section 5, Performance. Continuously monitor the engine and fuel instruments to verify all indications are within the normal operating range and that fuel is being properly managed. Check that the pressurization system controls are properly set, and continuously monitor. Adjust the cabin comfort controls as desired. Verify aircraft heading against the correction card.

**THIS SPACE INTENTIONALLY LEFT BLANK**

**4.31 FLIGHT IN ICING CONDITIONS**

**Reference Section 9, Supplement 12, for  
Meridian Aircraft Flight Into Known Icing  
(FIKI).**

**THIS SPACE INTENTIONALLY LEFT BLANK**



#### 4.35 BEFORE LANDING (4.5o)

##### 4.35a Approach Check (4.5o)

Set the altimeter and standby altimeter. Verify that the cabin pressurization is set. Select the fuel pump and ignition switches to MANUAL. Verify fuel quantity and balance. Make sure seat backs are erect and seats are adjusted and locked in position. Armrests should be stowed and seat belts and harnesses should be fastened and adjusted. The landing gear may be extended and the flaps may be set to 10° at airspeeds up to 168 KIAS maximum. Verify aircraft heading against the correction card.

##### NOTE

During landing gear operation it is normal for the HYDRAULIC PUMP annunciator light to illuminate until full system pressure is restored.

##### 4.35b Landing Check (4.5o)

Verify 3 green lights indicating that the landing gear are down and locked. Pump the toe brakes to ensure that the system is capable of uniform braking during landing rollout.

##### WARNING

After pumping several times, if one or both toe brakes are inoperative, DO NOT attempt landing on a short field.

As the airspeed is reduced to 118 KIAS or lower, the flaps can be set to 36°. Set power (approximately 280 ft. lb. torque for a 3° approach) to maintain an airspeed of 85 KIAS.

##### NOTE

Landing distance performance was established by maintaining a power on (280 ft. lb. torque), stabilized 3° approach at 85 KIAS, and reducing power to idle during the flare.

The autopilot and the yaw damper must be disengaged for landing.



#### 4.41 AFTER LANDING (4.5r)

When clear of the active runway, retract the flaps. Turn OFF the strobe lights and the ice protection equipment. The landing and taxi lights may be used as required. Turn the fuel pump to AUTO, and the ignition and ECS to OFF. Turn the weather radar to STBY and the transponder to STBY or ALT, as required. Turn the standby attitude indicator OFF.

#### 4.43 SHUTDOWN (4.5s)

##### WARNING

If there is evidence of fire within the engine after shutdown, proceed immediately with the Dry Motoring Run Procedure, Section 4.5d.

##### CAUTION

When the condition lever is selected to CUTOFF/FEATHER, the propeller should quickly stop (in up to 30 seconds) in the feather position. If the propeller continues to windmill for an extended period, a feathering system failure has occurred. Investigate and correct the problem prior to the next flight.

With the power lever in IDLE and the airplane at a complete stop, set the parking brake. Turn the cabin comfort controls and the exterior lighting switches to OFF. The fuel pump, ignition, and avionics switches should all be set to OFF. Also, turn the generator and alternator switches to OFF.

##### NOTE

Allow ITT to stabilize at least two minutes at idle.

The condition lever can now be moved to CUTOFF/FEATHER and the battery switch can be turned to OFF. The bleed air lever should be closed (OUT position).

The aileron and elevator controls should be secured by looping the safety belt through the control wheel and pulling it snug. Turn the pilot's emergency oxygen system OFF. Wheel chocks should be positioned in place and tiedowns should be secured to the main landing gear and to the tail skid. The rudder is held in position by its connections to the nose wheel steering and normally does not have to be secured.

Place protective covers on all air inlets, exhaust openings and pitot heads.

#### 4.45 STALLS

The stall characteristics of the Meridian are conventional. An approaching stall is indicated by a stall warning horn which is activated at least 5 knots above the actual stall. Mild airframe buffeting and pitching may also precede the stall.

The stalling speed at maximum gross weight with power off, landing gear extended, and full flaps is 69 KIAS (61 KCAS). With the landing gear retracted and flaps up, stall speed is increased to 79 KIAS (69 KCAS). Loss of altitude during stalls can be as great as 900 feet, depending on configuration and power.

#### NOTE

The stall warning system is inoperative with the battery and generator/alternator switches OFF.

During preflight, the stall warning system should be checked by turning the battery switch ON and pressing the stall warning test switch to determine if the horn is actuated.

#### 4.47 TURBULENT AIR OPERATION

In keeping with good operating practice, it is recommended that when turbulent air is encountered or expected, the airspeed be reduced to maneuvering speed to reduce the structural loads caused by gusts and to allow for inadvertent speed build-ups which may occur as a result of the turbulence or of distractions caused by the conditions (refer to paragraph 2.3 for maneuvering speeds).

#### 4.49 CABIN PRESSURIZATION

Cabin pressurization system controls, gauges and switches are located on the lower left instrument panel. (Refer to Section 7, Figure 7-22.)

The cabin pressurization system controls, gauges and switches are as follows:

- (a) Cabin Altitude Controller with Rate of Change Control
- (b) Cabin Pressure Altitude/Differential Pressure/Rate of Climb Gauge
- (c) Cabin Pressure Dump/Normal Switch
- (d) Cabin Pressurization Control

#### 4.49 CABIN PRESSURIZATION (continued)

Set *cabin* altitude (outer scale) on the cabin altitude controller to 500 feet above the field pressure altitude before takeoff. (Cabin pressurization will begin as the cabin passes through the altitude selected.) If no further adjustments are made, cabin altitude will remain at the selected altitude until maximum cabin differential (5.5 PSI) is reached, at which time the cabin altitude will begin to climb until at 30,000 feet aircraft pressure altitude the cabin pressure altitude will be approximately 10,630 feet.

For flight below an airplane altitude of 12,500 feet, the cabin altitude control should be left at the takeoff setting. For flight above 12,500 feet, at which point maximum differential will be achieved, smoother operation will result by setting the *cabin* altitude (outer scale) on the cabin altitude controller to 500 feet above field elevation for takeoff. Once the cabin has begun to pressurize and the controller has captured isobaric control, reset the *aircraft* altitude (inner scale) on the cabin altitude controller to 500 feet above the cruise altitude and adjust the cabin rate of climb as desired. The normal 9 o'clock position should provide a cabin rate of climb of approximately 500 feet per minute. No additional adjustment should be required prior to descent unless cruise altitude is changed, at which point the *aircraft* altitude (inner scale) should be reset to 500 feet above the new cruise altitude.

To descend for landing be certain that the selected *cabin* altitude (outer scale) is higher than the pressure altitude of the landing field. Shortly after letdown is initiated, set the *cabin* altitude (outer scale) to 500 feet above the pressure altitude of the landing field and adjust the rate of control high enough to allow the cabin to descend to the landing setting before the aircraft descends to that altitude. For normal letdown the rate knob should be at the 9 o'clock position. A higher setting should be selected for rapid descents so that the aircraft altitude does not catch up with the cabin altitude.

#### WARNING

Do not land with aircraft pressurized.

## **4.51 CABIN COMFORT CONTROL PANEL OPERATION**

### **4.51a Cabin Comfort Control Panel Controls and Switches**

Cabin comfort controls and switches are located at the bottom of the center instrument panel below the radar display in the cabin comfort control panel. (Refer to Section 7, Figure 7-21.)

The cabin comfort system controls and switches from left to right on the panel are:

- Airconditioner (AIR COND) ON switch
- BLOWER HI/LOW and OFF switch
- VENT ON switch
- CLIMATE CONTROL - Auto Rotary switch
- Mode switch (AUTO - MANUAL)
- MANUAL WARM/COOL switch

### **4.51b Auto Temp Operation**

Set the ECS selector on the ECS CABIN COMFORT panel to the NORM position.

Under normal conditions, temperature will be maintained automatically. For automatic operation, set the mode switch to AUTO. Set the temperature control to the desired temperature. Set the blower fan switch to either HI or LOW as desired.

## 4.51 CABIN COMFORT CONTROL PANEL OPERATION (continued)

### 4.51c Manual Temp Operation

#### NOTE

Maximum heat can be obtained in the manual mode by positioning the ECS selector to HIGH. This position should only be used on the ground with ambient temperature less than 20 F (-7 C). Should the bleed overtemperature annunciator light illuminate, manually decrease the temperature by pulsing the WARM/COOL switch to the cool position.

For maximum airconditioning, hold the manual WARM/COOL switch to the cool position for 45 seconds. The switch may be pulsed to the WARM position to control the cabin temperature desired.

To meet POH performance, the ECS selector must be in the NORM position.

### 4.51d Maximum Cabin Cooling

#### On Ground

On the ground, maximum cabin cooling may be obtained by placing the bleed air lever OUT (closed) position, the ECS selector OFF, Air Conditioner ON and the blower fan to HI.

#### In Flight

Unpressurized flights can be conducted with the bleed air lever pulled OUT (closed) and the ECS selector OFF. This will provide maximum ventilation. Set the blower fan to HI or LO as desired and turn the vent fan ON.



## 4.57 HIGH ALTITUDE OPERATION

During high altitude operations above approximately 28,500 ft. MSL, the cabin altitude will exceed 10,000 ft. MSL and an amber "CABIN ALT 10K" annunciator light will illuminate continuously accompanied by a warning horn that the pilot can mute. This is an indication for the pilot to:

- Be vigilant about monitoring the cabin altitude.
- Check the bleed air selector is ON.
- Check the cabin dump switch is OFF.
- Check the cabin altitude selector is properly set to 500 ft. above the destination airport altitude.
- Check the pilot's emergency oxygen system charge (1850 psig).

If the cabin altitude rises above 12,000 ft. MSL, a red "CABIN ALTITUDE" annunciator light will illuminate, a warning horn that the pilot can mute will sound and the emergency pressurization system will activate, indicating the pilot should:

- Don the pilot's emergency oxygen mask and insure that oxygen is flowing.
- Descend to an altitude where the red "CABIN ALTITUDE" annunciator light extinguishes.

AND

- Make an emergency descent if required.

### CAUTION

A fully charged (1850 psig) pilot supplemental demand flow oxygen system contains a supply (approximately 30 minutes) of oxygen for the pilot to breath in the "normal" state for a duration in excess of that required for an emergency descent. The minimum duration of oxygen required for an emergency descent to an appropriate altitude for unpressurized flight is indicated on the oxygen gauge by a yellow arc.



TABLE OF CONTENTS  
SECTION 5  
PERFORMANCE

Paragraph No.		Page No.
5.1	General .....	5-1
5.2	Aircraft Configuration.....	5-1
5.3	Introduction - Performance and Flight Planning.....	5-1
5.5	Flight Planning Example.....	5-3
5.7	Performance Graphs.....	5-9
	List of Figures.....	5-9
	List of Figures - Metric.....	5-13



**THIS PAGE INTENTIONALLY LEFT BLANK**

## **SECTION 5 PERFORMANCE**

### **5.1 GENERAL**

All of the required (FAA regulations) and complementary performance information is provided by this section.

True airspeed may vary  $\pm 1\%$  due to tolerances in power, airspeed and temperature indications.

Performance information associated with those optional systems and equipment which require handbook supplements is provided by Section 9 (Supplements).

Performance is predicated on NORMAL ECS setting. Setting ECS to HI, while maintaining a constant power, will increase fuel flow by approximately 9 gph, or, if ITT is maintained at the temperature limit, power will be reduced by 8%.

While some performance charts show information below  $-41^{\circ}\text{C}$ , performance information presented in this chapter is valid for the range from  $+50^{\circ}\text{C}$  ( $122^{\circ}\text{F}$ ) to  $-41^{\circ}\text{C}$  ( $-41.8^{\circ}\text{F}$ ) only.

### **5.2 AIRCRAFT CONFIGURATION**

Performance depicted in Section 5 is applicable to aircraft equipped with a weather radar pod, main landing gear fairings, 2 communications antennas, 2 GPS antennas, 1 dual purpose navigation antenna, 1 radar altitude antenna, 2 transponder antennas, 1 marker beacon antenna, 1 stormscope antenna, 1 ADF antenna, 1 DME antenna and 1 AM/FM radio antenna.

### **5.3 INTRODUCTION - PERFORMANCE AND FLIGHT PLANNING**

The performance information presented in this section is based on measured Flight Test Data corrected to I.C.A.O. standard day conditions, or non parametric coefficients, and analytically expanded for the various parameters of weight, altitude, temperature, etc.

The performance charts are unfactored and do not make any allowance for varying degrees of pilot proficiency or mechanical deterioration of the aircraft. This performance, however, can be duplicated by following the stated procedures in a properly maintained airplane.



**5.3 INTRODUCTION - PERFORMANCE AND FLIGHT PLANNING  
(continued)**

Effects of conditions not considered on the charts must be evaluated by the pilot, such as the effect of winds aloft on cruise and range performance.

**REMEMBER!** To get chart performance, follow the chart procedures.

The information provided by paragraph 5.5 (Flight Planning Example) outlines a detailed flight plan using performance charts in this section. Each chart includes its own example to show how it is used.

**WARNING**

Performance information derived by extrapolation beyond the limits shown on the charts should not be used for flight planning purposes.

**THIS SPACE INTENTIONALLY LEFT BLANK**

**5.5 FLIGHT PLANNING EXAMPLE****(a) Aircraft Loading**

The first step in planning the flight is to calculate the airplane weight and center of gravity by utilizing the information provided by Section 6 (Weight and Balance) of this handbook.

The basic empty weight for the airplane as licensed at the factory has been entered in Figure 6-5. If any alterations to the airplane have been made affecting weight and balance, reference to the aircraft logbook and Weight and Balance Record (Figure 6-7) should be made to determine the current basic empty weight of the airplane.

Make use of the Weight and Balance Loading Forms (Section 6) and the C.G. Range and Weight graph (Figure 6-33) to determine the total weight of the airplane and the center of gravity position.

After proper utilization of the information provided, the following weights have been determined for consideration in the flight planning example.

The landing weight cannot be determined until the weight of the fuel to be used has been established. Refer to item (g) (1).

(1) Basic Empty Weight	3380 lb
(2) Occupants	520 lb
(3) Baggage and Cargo	80 lb
(4) Fuel (6.7 lb/gal. x 135)	904.5 lb
(5) Ramp Weight	4884.5 lb
(6) Start, Taxi and Runup Weight	-43.0 lb
(7) Takeoff Weight	4841.5 lb
(8) Landing Weight	
(a)(5) minus (g)(1).	
(4884.5 lb minus 220 lb)	4664.5 lb

The takeoff weight is below the maximum of 4850 lbs and the weight and balance calculations have determined the C.G. position within the approved limits. Refer to Figure 6-9.

## 5.5 FLIGHT PLANNING EXAMPLE (continued)

### (b) Takeoff and Landing

Now that the aircraft loading has been determined, all aspects of the takeoff and landing must be considered.

All of the existing conditions at the departure and destination airport must be acquired, evaluated and maintained throughout the flight.

Apply the departure airport conditions and takeoff weight to the appropriate Takeoff Ground Roll and Takeoff Distance (Figures 5-41, 5-43, 5-45 and 5-47) to determine the length of runway necessary for the takeoff and/or obstacle clearance.

The landing distance calculations are performed in the same manner using the existing conditions at the destination airport and, when established, the landing weight.

The conditions and calculations for the example flight are listed below. The takeoff and landing distances required for the flight have fallen well below the available runway lengths.

	Departure Airport	Destination Airport
(1) Pressure Altitude	1000 ft	3500 ft
(2) Temperature	29°C	25°C
(3) Wind Component (Headwind)	10 KTS	5 KTS
(4) Runway Length Available	3400 ft	5000 ft
(5) Runway Gradient	2% up	2% up
(6) Takeoff and Landing Distance Required	2764 ft*	2205 ft**

\* reference Figure 5-47

\*\* reference Figure 5-137

**5.5 FLIGHT PLANNING EXAMPLE (continued)****NOTE**

The remainder of the performance charts used in this flight plan example assume a no wind condition. The effect of winds aloft must be considered by the pilot when computing climb, cruise and descent performance.

**(c) Climb**

The next step in the flight plan is to determine the necessary climb segment components.

The desired cruise pressure altitude and corresponding cruise outside air temperature values are the first variables to be considered in determining the climb components from the Fuel, Time, and Distance to Climb graph (Figures 5-55, 5-57, 5-59). After the fuel, time, and distance for the cruise pressure altitude and outside air temperature values have been established, apply the existing conditions at the departure field to graph (Figures 5-55, 5-57, 5-59). Now, subtract the values obtained from the graph for the field of departure conditions from those for the cruise pressure altitude.

The remaining values are the true fuel, time, and distance components for the climb segment of the flight plan corrected for field pressure altitude and temperature.

The following values were determined from the above instructions in the flight planning example.

(1) Cruise Pressure Altitude	25000 ft
(2) Cruise OAT	-20° C
(3) Fuel to Climb (includes Start, Taxi and Takeoff) (138 lb. minus 47 lb.)	91 lb.*
(4) Time to Climb (17.5 min. minus 0.6 min.)	16.9 min.**
(5) Distance to Climb (45.5 nautical miles minus 1.3 nautical miles)	44.2 nautical miles***

\* reference Figure 5-57

\*\* reference Figure 5-55

\*\*\*reference Figure 5-59



### 5.5 FLIGHT PLANNING EXAMPLE (continued)

#### (d) Descent

The descent data will be determined prior to the cruise data to provide the descent distance for establishing the total cruise distance.

Utilizing the cruise pressure altitude and OAT, determine the basic fuel, time, and distance for descent (Figures 5-115, 5-117, 5-119). These figures must be adjusted for the field pressure altitude and temperature at the destination airport. To find the necessary adjustment values, use the existing pressure altitude and temperature conditions at the destination airport as variables to find the fuel, time, and distance values from the graph (Figures 5-115, 5-117, 5-119). Now, subtract the values obtained from the field conditions from the values obtained from the cruise conditions to find the true fuel, time and distance values needed for the descent segment of the flight plan.

The values obtained by proper utilization of the graphs for the descent segment of the example are shown below.

- |  |                      |
|--|----------------------|
| (1) Fuel to Descend<br>(50.1 lb. minus 10.7 lb.)                             | 39.4 lb.*            |
| (2) Time to Descend<br>(16.6 min. minus 2.6 min.)                            | 14 min.**            |
| (3) Distance to Descend<br>(60.2 nautical miles minus 8.2<br>nautical miles) | 52 nautical miles*** |

#### (e) Cruise

Using the total distance to be traveled during the flight, subtract the previously calculated distance to climb and distance to descend to establish the total cruise distance. Refer to the appropriate Power Setting Table (refer to Figure 5-69) when selecting the cruise power setting. The established pressure altitude and temperature values and the selected cruise power should now be used to determine the true airspeed from the Power Setting tables (Figure 5-69). Interpolation may be required if altitude and/or temperature falls between cardinal values on power tables.

\* reference Figure 5-117

\*\* reference Figure 5-115

\*\*\*reference Figure 5-119

**5.5 FLIGHT PLANNING EXAMPLE (continued)**

Calculate the cruise fuel consumption for the cruise power setting from the information provided by the Power Setting Table (refer to Figure 5-69).

The cruise time is found by dividing the cruise distance by the cruise speed and the cruise fuel is found by multiplying the cruise fuel consumption by the cruise time.

The cruise calculations established for the cruise segment of the flight planning example are as follows:

(1) Total Distance	188 nautical miles
(2) Cruise Distance	
(e)(1) minus (e)(5) minus	
(d)(3), (188 nautical miles	
minus 44.2 nautical miles	
minus 52 nautical miles)	91.8 nautical miles
(3) Cruise Torque	1174 FT.-LB.
	maximum speed cruise
(4) Cruise Speed	263 KTS TAS*
(5) Cruise Fuel Consumption	255 pph*
(6) Cruise Time	
(e)(2) divided by (e)(4).	
(91.8 nautical miles	
divided by 263 KTS)	0.35 hrs
(7) Cruise Fuel	
(e)(5) multiplied by (e)(6)	
(255 pph multiplied by 0.35 hrs)	89.25 lb.
(f) Total Flight Time	

The total flight time is determined by adding the time to climb, the time to descend and the cruise time. Remember! The time values taken from the climb and descent graphs are in minutes and must be converted to hours before adding them to the cruise time.

\*reference Figure 5-69

### 5.5 FLIGHT PLANNING EXAMPLE (continued)

The flight time required for the flight planning example is shown below:

- (1) Total Flight Time  
(c)(4) plus (d)(2) plus (e)(6).  
(0.28 hrs plus 0.23 hrs plus 0.35 hrs)  
(16.9 min. plus 14 min. plus 21 min.) 0.86 hrs

#### (g) Total Fuel Required

Determine the total fuel required by adding the fuel to climb (includes fuel to start, taxi and runup), the fuel to descend, and the cruise fuel. When the total fuel (in pounds) is determined, divide this value by 6.7 lb/gal. to determine the total fuel in gallons used for the flight.

The total fuel calculations for the example flight plan are shown below.

- (1) Total Fuel Required  
(c)(3) plus (d)(1) plus (e)(7).  
(13.6 gal. plus 5.9 gal. plus 13.3 gal.) 32.8 gal./220 lb.

**5.7 PERFORMANCE GRAPHS****LIST OF FIGURES**

Figure No.		Page No.
5-1	Temperature Conversion .....	5-19
5-2	Volume Conversion .....	5-20
5-3	Feet to Meters Conversion (0 to 30,000 feet) .....	5-21
5-4	Feet to Meters Conversion (0 to 100 feet) .....	5-22
5-5	Pounds to Kilograms Conversion (3,800 to 4,850 pounds) .....	5-23
5-6	Pounds to Kilograms Conversion (0 to 300 pounds) .....	5-24
5-7	Inches of Mercury to Millibars Conversion .....	5-25
5-8	ISA Temperature Conversion .....	5-26
5-9	Wind Components .....	5-27
5-11	Aviation Fuel Specific Weight .....	5-29
5-13	Airspeed Calibration, Primary Static (Flaps 0° and 10°) .....	5-30
5-15	Airspeed Calibration, Primary Static (Flaps 20°, Gear Down) .....	5-31
5-17	Airspeed Calibration, Primary Static (Flaps 36°, Gear Down) .....	5-32
5-19	Airspeed Calibration, Alternate Static (Flaps 0° and 10°) .....	5-33
5-21	Airspeed Calibration, Alternate Static (Flaps 20°, Gear Down) .....	5-34
5-23	Airspeed Calibration, Alternate Static (Flaps 36°, Gear Down) .....	5-35
5-25	Altitude Calibration, Primary Static (Flaps 0° and 10°) .....	5-36
5-27	Altitude Calibration, Primary Static (Flaps 20°, Gear Down) .....	5-37
5-29	Altitude Calibration, Primary Static (Flaps 36°, Gear Down) .....	5-38
5-31	Altitude Calibration, Alternate Static (Flaps 0° and 10°) .....	5-39
5-33	Altitude Calibration, Alternate Static (Flaps 20°, Gear Down) .....	5-40
5-35	Altitude Calibration, Alternate Static (Flaps 36°, Gear Down) .....	5-41
5-37	Temperature Probe Calibration .....	5-42
5-39	Angle of Bank vs. Stall Speed .....	5-43
5-41	Normal Takeoff Ground Roll, 0° Flaps .....	5-44
5-43	Normal Takeoff Performance over 50 ft. Obstacle, 0° Flaps .....	5-45
5-45	Maximum Effort Takeoff Ground Roll, 20° Flaps .....	5-46



**5.7 PERFORMANCE GRAPHS (continued)**

**LIST OF FIGURES (continued)**

Figure No.		Page No.
5-47	Maximum Effort Takeoff Performance over 50 ft. Obstacle, 20° Flaps.....	5-47
5-49	Enroute Climb Performance .....	5-48
5-51	Enroute Climb Gradient.....	5-49
5-53	Takeoff Climb Performance.....	5-50
5-55	Maximum Climb Time .....	5-51
5-57	Maximum Climb Fuel.....	5-52
5-59	Maximum Climb Distance.....	5-53
5-61	Cruise Climb Time.....	5-54
5-63	Cruise Climb Fuel.....	5-55
5-65	Cruise Climb Distance.....	5-56
5-67	Maximum Speed Cruise (ISA, ISA -10, ISA -20).....	5-58
5-69	Maximum Speed Cruise (ISA +10, ISA +20, ISA +35).....	5-59
5-71	Intermediate Cruise Power, 400 FT-LB (ISA, ISA -10, ISA -20).....	5-60
5-73	Intermediate Cruise Power, 400 FT-LB (ISA +10, ISA +20, ISA +35).....	5-61
5-75	Intermediate Cruise Power, 500 FT-LB (ISA, ISA -10, ISA -20).....	5-62
5-77	Intermediate Cruise Power, 500 FT-LB (ISA +10, ISA +20, ISA +35).....	5-63
5-79	Intermediate Cruise Power, 600 FT-LB (ISA, ISA -10, ISA -20).....	5-64
5-81	Intermediate Cruise Power, 600 FT-LB (ISA +10, ISA +20, ISA +35).....	5-65
5-83	Intermediate Cruise Power, 700 FT-LB (ISA, ISA -10, ISA -20).....	5-66
5-85	Intermediate Cruise Power, 700 FT-LB (ISA +10, ISA +20, ISA +35).....	5-67

**5.7 PERFORMANCE GRAPHS (continued)****LIST OF FIGURES (continued)**

Figure No.		Page No.
5-87	Intermediate Cruise Power, 800 FT-LB (ISA, ISA -10, ISA -20).....	5-68
5-89	Intermediate Cruise Power, 800 FT-LB (ISA +10, ISA +20, ISA +35).....	5-69
5-91	Intermediate Cruise Power, 900 FT-LB (ISA, ISA -10, ISA -20).....	5-70
5-93	Intermediate Cruise Power, 900 FT-LB (ISA +10, ISA +20, ISA +35).....	5-71
5-95	Intermediate Cruise Power, 1000 FT-LB (ISA, ISA -10, ISA -20).....	5-72
5-97	Intermediate Cruise Power, 1000 FT-LB (ISA +10, ISA +20, ISA +35).....	5-73
5-99	Intermediate Cruise Power, 1100 FT-LB (ISA, ISA -10, ISA -20).....	5-74
5-101	Intermediate Cruise Power, 1100 FT-LB (ISA +10, ISA +20, ISA +35).....	5-75
5-103	Intermediate Cruise Power, 1200 FT-LB (ISA, ISA -10, ISA -20).....	5-76
5-105	Intermediate Cruise Power, 1200 FT-LB (ISA +10, ISA +20, ISA +35).....	5-77
5-107	Maximum Range Cruise (ISA, ISA -10, ISA -20) .....	5-78
5-109	Maximum Range Cruise (ISA +10, ISA +20, ISA +35) .....	5-79
5-111	Specific Air Range .....	5-80
5-113	Holding Time vs. Fuel on Board.....	5-81
5-115	Time to Descend .....	5-82
5-117	Fuel to Descend .....	5-83
5-119	Distance to Descend .....	5-84
5-121	Glide Endurance .....	5-85
5-123	Glide Distance .....	5-86

**5.7 PERFORMANCE GRAPHS (continued)**

**LIST OF FIGURES (continued)**

<b>Figure No.</b>		<b>Page No.</b>
5-125	Balked Landing Climb Performance .....	5-87
5-127	Not Used .....	5-88
5-129	Landing Ground Roll, Flaps 36°, Without Reverse .....	5-89
5-131	Not Used .....	5-90
5-133	Not Used .....	5-91
5-135	Not Used .....	5-92
5-137	Landing Distance, Flaps 36°, Without Reverse .....	5-93
5-139	Not Used .....	5-94
5-141	Not Used .....	5-95

**5.7 PERFORMANCE GRAPHS (continued)****LIST OF FIGURES (continued)****METRIC**

Figure No.		Page No.
5-145	Aviation Fuel Specific Weight .....	5-97
5-147	Airspeed Calibration, Primary Static (Flaps 0° and 10°).....	5-98
5-149	Airspeed Calibration, Primary Static (Flaps 20°, Gear Down)...	5-99
5-151	Airspeed Calibration, Primary Static (Flaps 36°, Gear Down)...	5-100
5-153	Airspeed Calibration, Alternate Static (Flaps 0° and 10°).....	5-101
5-155	Airspeed Calibration, Alternate Static (Flaps 20°, Gear Down).	5-102
5-157	Airspeed Calibration, Alternate Static (Flaps 36°, Gear Down).	5-103
5-159	Altitude Calibration, Primary Static (Flaps 0° and 10°).....	5-104
5-161	Altitude Calibration, Primary Static (Flaps 20°, Gear Down)....	5-105
5-163	Altitude Calibration, Primary Static (Flaps 36°, Gear Down)....	5-106
5-165	Altitude Calibration, Alternate Static (Flaps 0° and 10°).....	5-107
5-167	Altitude Calibration, Alternate Static (Flaps 20°, Gear Down)..	5-108
5-169	Altitude Calibration, Alternate Static (Flaps 36°, Gear Down)..	5-109
5-171	Temperature Probe Calibration .....	5-110
5-173	Angle of Bank vs. Stall Speed .....	5-111
5-175	Normal Takeoff Ground Roll, 0° Flaps.....	5-112
5-177	Normal Takeoff Performance over 50 ft. Obstacle, 0° Flaps.....	5-113
5-179	Maximum Effort Takeoff Ground Roll, 20° Flaps.....	5-114
5-181	Maximum Effort Takeoff Performance over 50 ft. Obstacle, 20° Flaps.....	5-115
5-183	Enroute Climb Performance .....	5-116
5-185	Enroute Climb Gradient.....	5-117
5-187	Takeoff Climb Performance.....	5-118
5-189	Maximum Climb Time .....	5-119
5-191	Maximum Climb Fuel.....	5-120

5.7 PERFORMANCE GRAPHS (continued)

LIST OF FIGURES (continued)

METRIC (continued)

Figure No.		Page No.
5-193	Maximum Climb Distance.....	5-121
5-195	Cruise Climb Time.....	5-122
5-197	Cruise Climb Fuel.....	5-123
5-199	Cruise Climb Distance.....	5-124
5-201	Maximum Speed Cruise (ISA, ISA -10, ISA -20).....	5-126
5-203	Maximum Speed Cruise (ISA +10, ISA +20, ISA +35).....	5-127
5-205	Intermediate Cruise Power, 400 FT-LB (ISA, ISA -10, ISA -20).....	5-128
5-207	Intermediate Cruise Power, 400 FT-LB (ISA +10, ISA +20, ISA +35).....	5-129
5-209	Intermediate Cruise Power, 500 FT-LB (ISA, ISA -10, ISA -20).....	5-130
5-211	Intermediate Cruise Power, 500 FT-LB (ISA +10, ISA +20, ISA +35).....	5-131
5-213	Intermediate Cruise Power, 600 FT-LB (ISA, ISA -10, ISA -20).....	5-132
5-215	Intermediate Cruise Power, 600 FT-LB (ISA +10, ISA +20, ISA +35).....	5-133
5-217	Intermediate Cruise Power, 700 FT-LB (ISA, ISA -10, ISA -20).....	5-134
5-219	Intermediate Cruise Power, 700 FT-LB (ISA +10, ISA +20, ISA +35).....	5-135
5-221	Intermediate Cruise Power, 800 FT-LB (ISA, ISA -10, ISA -20).....	5-136
5-223	Intermediate Cruise Power, 800 FT-LB (ISA +10, ISA +20, ISA +35).....	5-137
5-225	Intermediate Cruise Power, 900 FT-LB (ISA, ISA -10, ISA -20).....	5-138

**5.7 PERFORMANCE GRAPHS (continued)****LIST OF FIGURES (continued)**


Figure No.	METRIC (continued)	Page No.
5-227	Intermediate Cruise Power, 900 FT-LB (ISA +10, ISA +20, ISA +35).....	5-139
5-229	Intermediate Cruise Power, 1000 FT-LB (ISA, ISA -10, ISA -20).....	5-140
5-231	Intermediate Cruise Power, 1000 FT-LB (ISA +10, ISA +20, ISA +35).....	5-141
5-233	Intermediate Cruise Power, 1100 FT-LB (ISA, ISA -10, ISA -20).....	5-142
5-235	Intermediate Cruise Power, 1100 FT-LB (ISA +10, ISA +20, ISA +35).....	5-143
5-237	Intermediate Cruise Power, 1200 FT-LB (ISA, ISA -10, ISA -20).....	5-144
5-239	Intermediate Cruise Power, 1200 FT-LB (ISA +10, ISA +20, ISA +35).....	5-145
5-241	Maximum Range Cruise (ISA, ISA -10, ISA -20) .....	5-146
5-243	Maximum Range Cruise (ISA +10, ISA +20, ISA +35) .....	5-147
5-245	Specific Air Range .....	5-148
5-247	Holding Time vs. Fuel on Board.....	5-149
5-249	Time to Descend .....	5-150
5-251	Fuel to Descend .....	5-151
5-253	Distance to Descend .....	5-152
5-255	Glide Endurance .....	5-153
5-257	Glide Distance .....	5-154
5-259	Balked Landing Climb Performance .....	5-155
5-261	Reserved .....	5-156
5-263	Landing Ground Roll, Flaps 36°, Without Reverse .....	5-157
5-265	Not Used .....	5-158

5.7 PERFORMANCE GRAPHS (continued)

LIST OF FIGURES (continued)


METRIC (continued)

Figure No.		Page No.
5-267	Not Used .....	5-159
5-269	Not Used .....	5-160
5-271	Landing Distance, Flaps 36°, Without Reverse .....	5-161
5-273	Not Used .....	5-162
5-275	Not Used .....	5-163

 


THIS PAGE INTENTIONALLY LEFT BLANK


**THIS PAGE INTENTIONALLY LEFT BLANK**

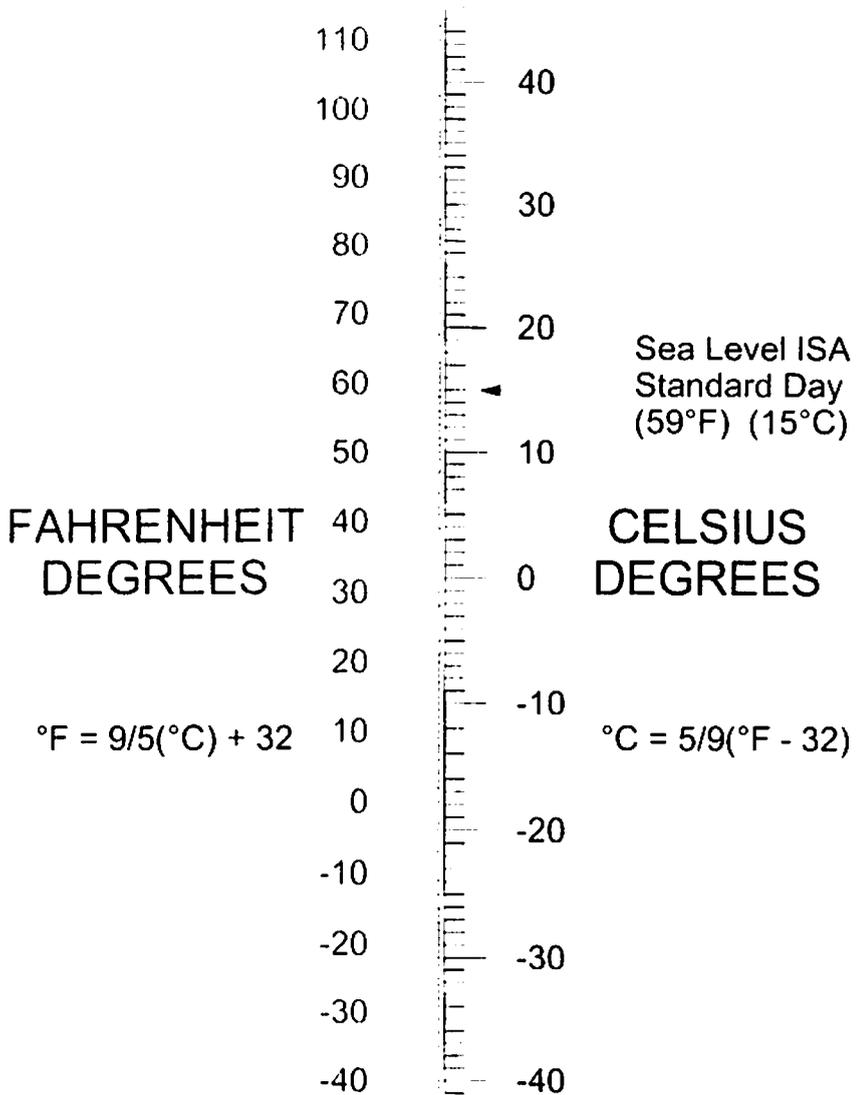

Temperature Conversion  
Figure 5-1

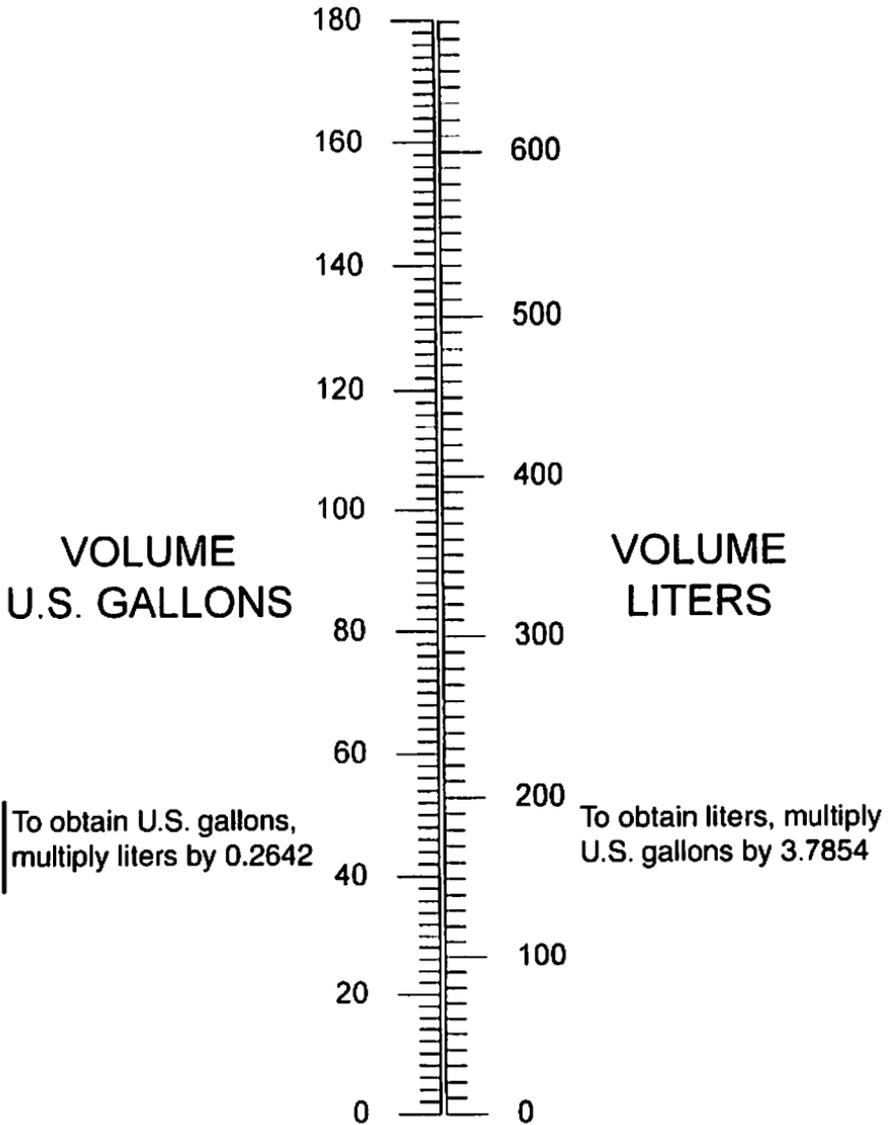


**Volume Conversion**  
Figure 5-2

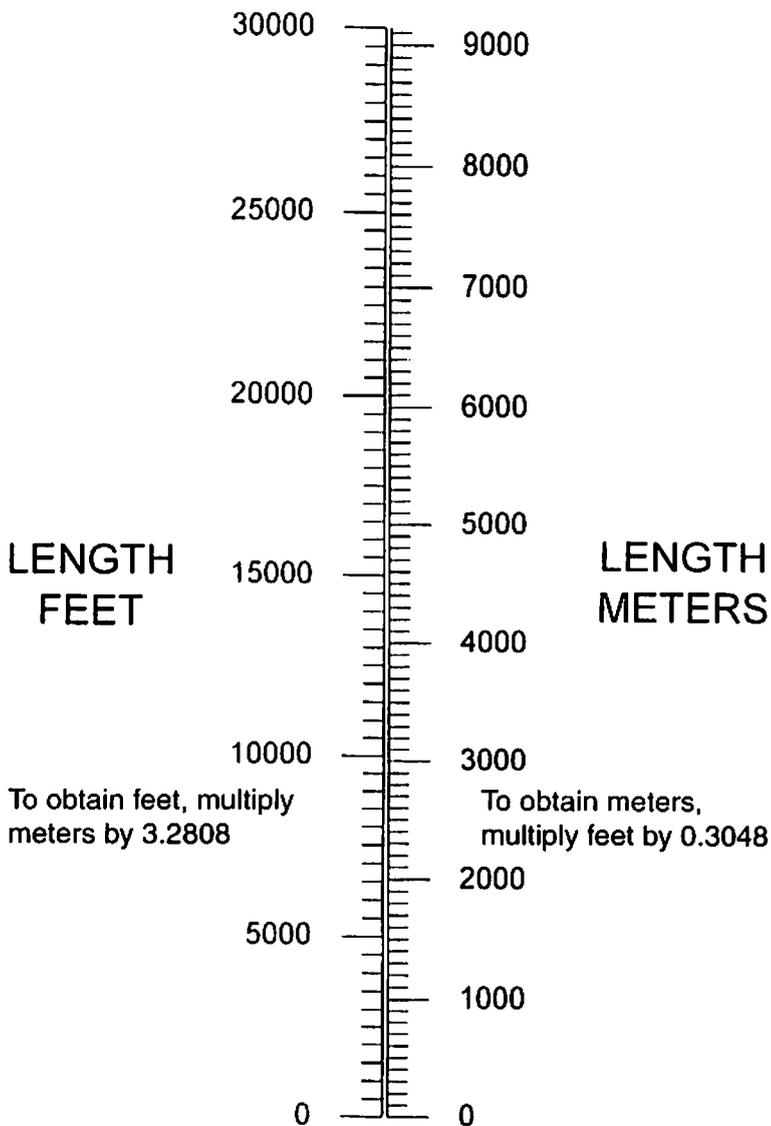


Feet to Meters Conversion (0 to 30,000 feet)



Figure 5-3

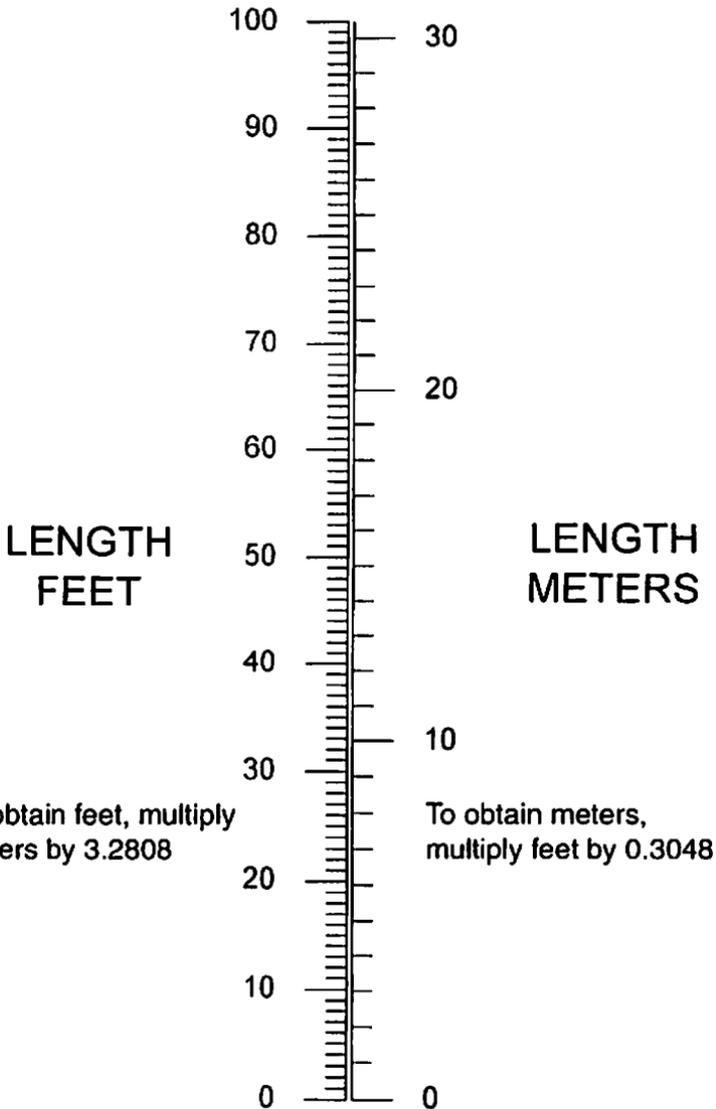

Feet to Meters Conversion (0 to 100 feet)  
Figure 5-4


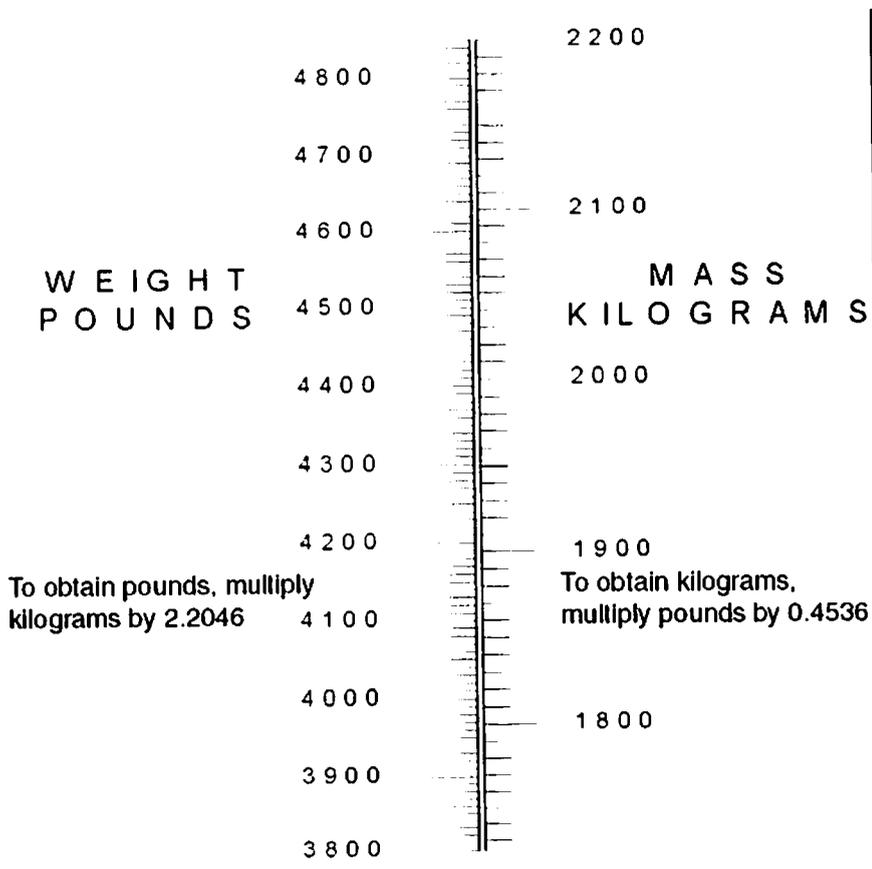


 **Pounds to Kilograms Conversion (3,800 to 4,850 pounds)**  
Figure 5-5

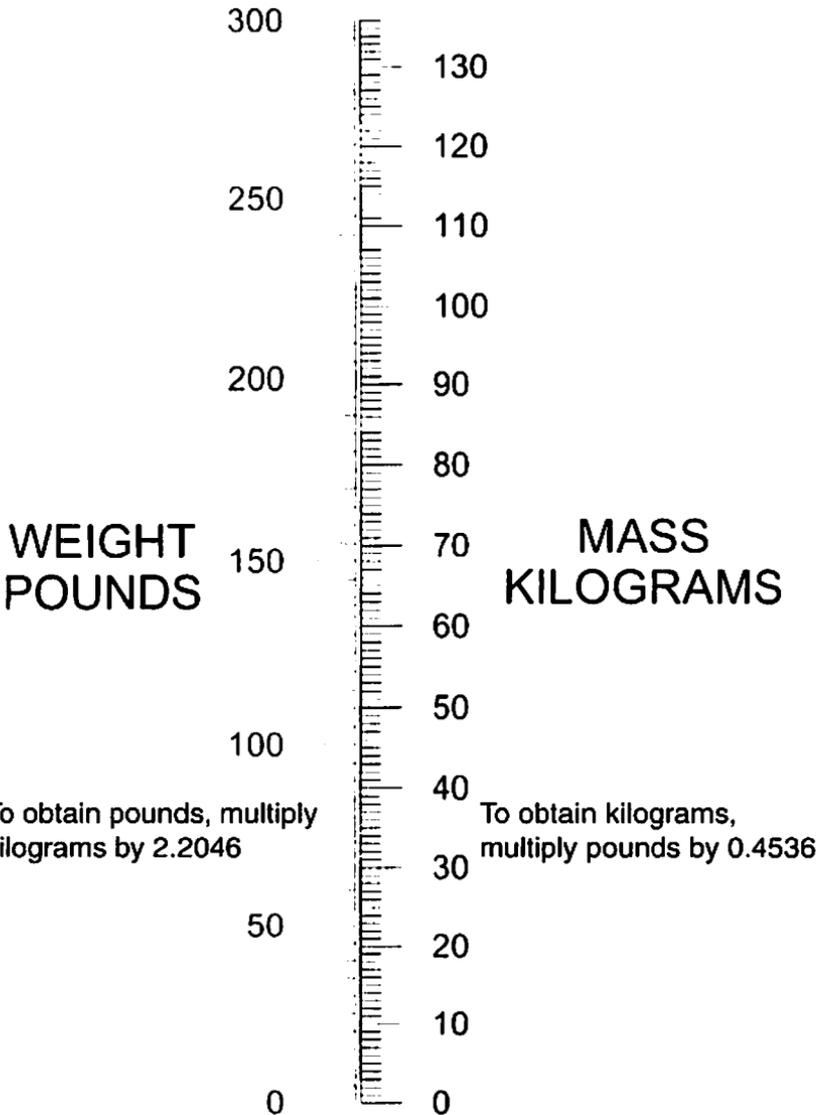


Pounds to Kilograms Conversion (0 to 300 pounds)

 Figure 5-6

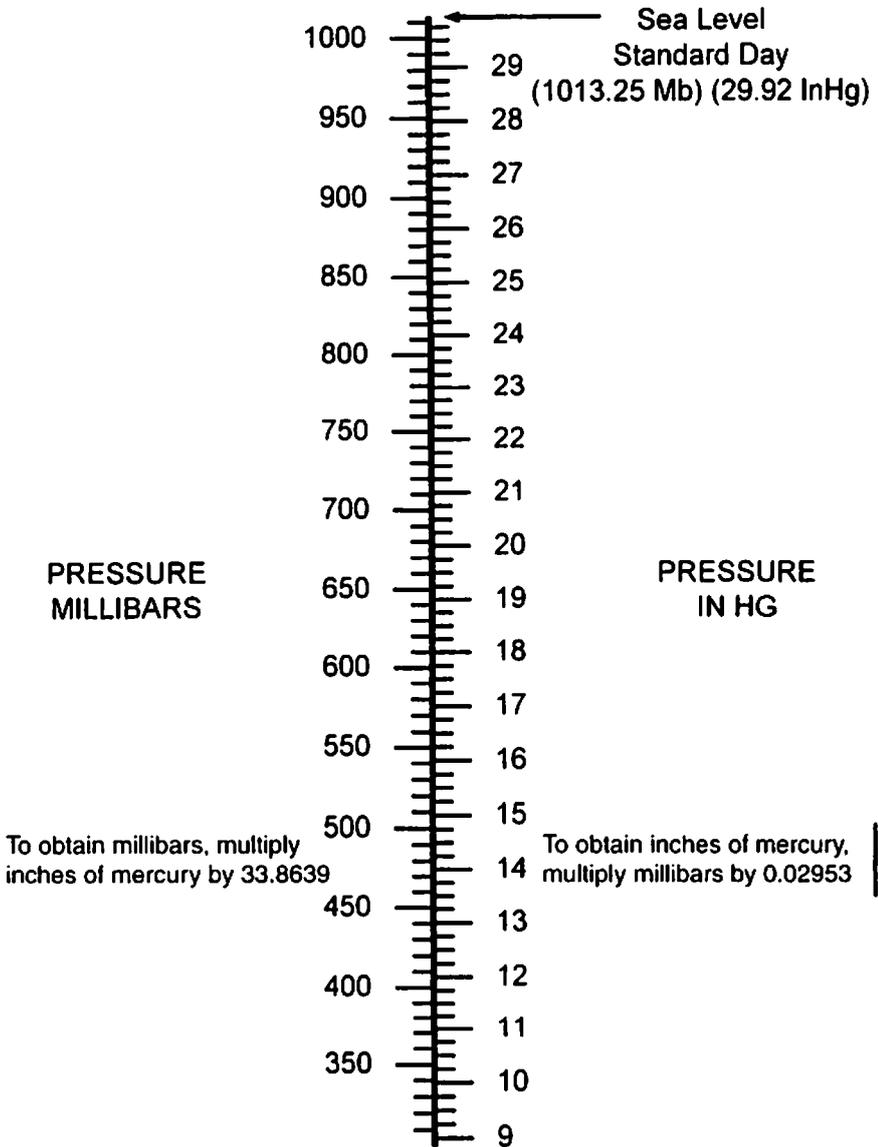

Inches of Mercury to Millibars Conversion  
Figure 5-7

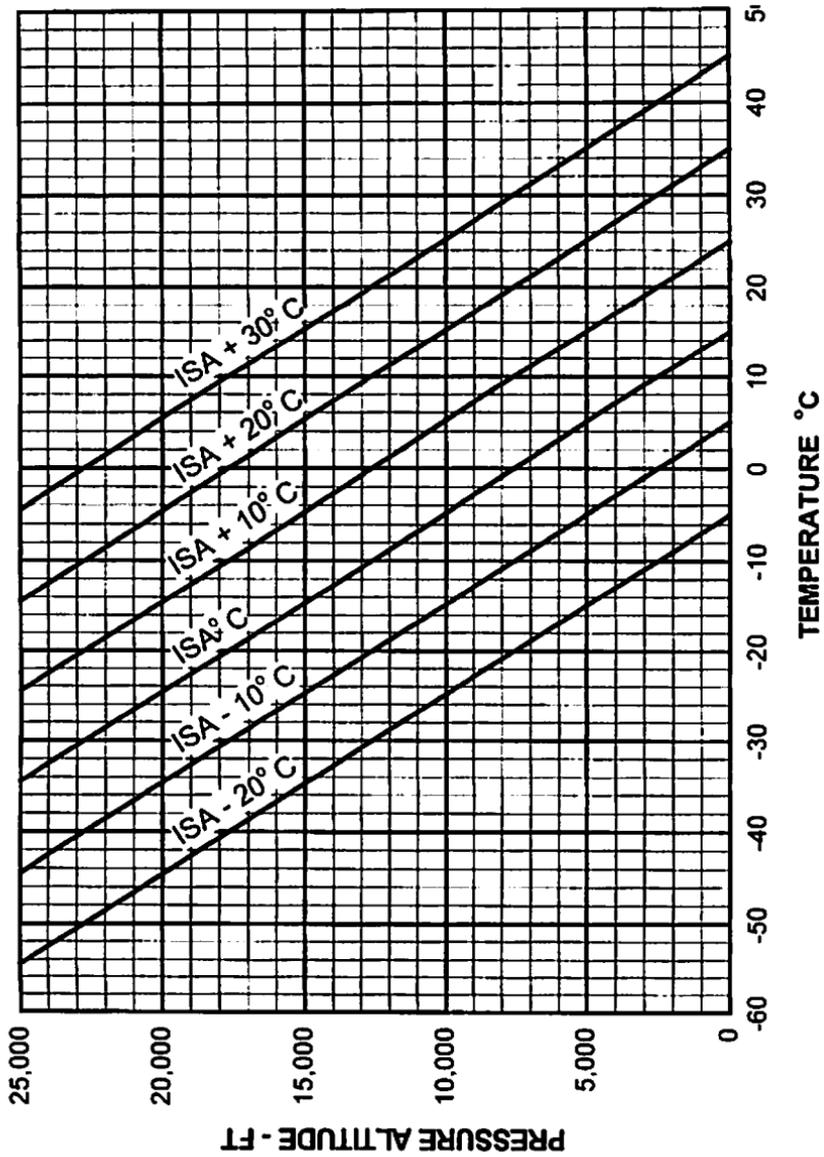


ISA Temperature Conversion  
Figure 5-8



**EXAMPLE:**

Wind Velocity: 30 Kt  
 Angle between flight path and wind: 30°  
 Headwind: 26 Kt  
 Crosswind: 15 Kt

Demonstrated Crosswind:  
 17 KTAS

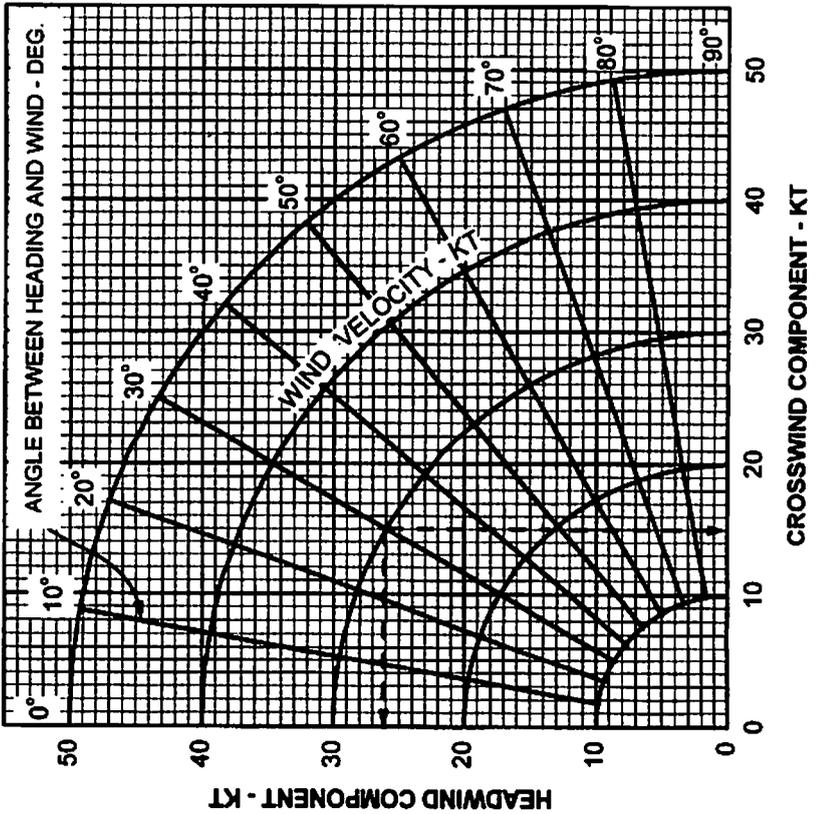


Wind Components

Figure 5-9




**THIS PAGE INTENTIONALLY LEFT BLANK**

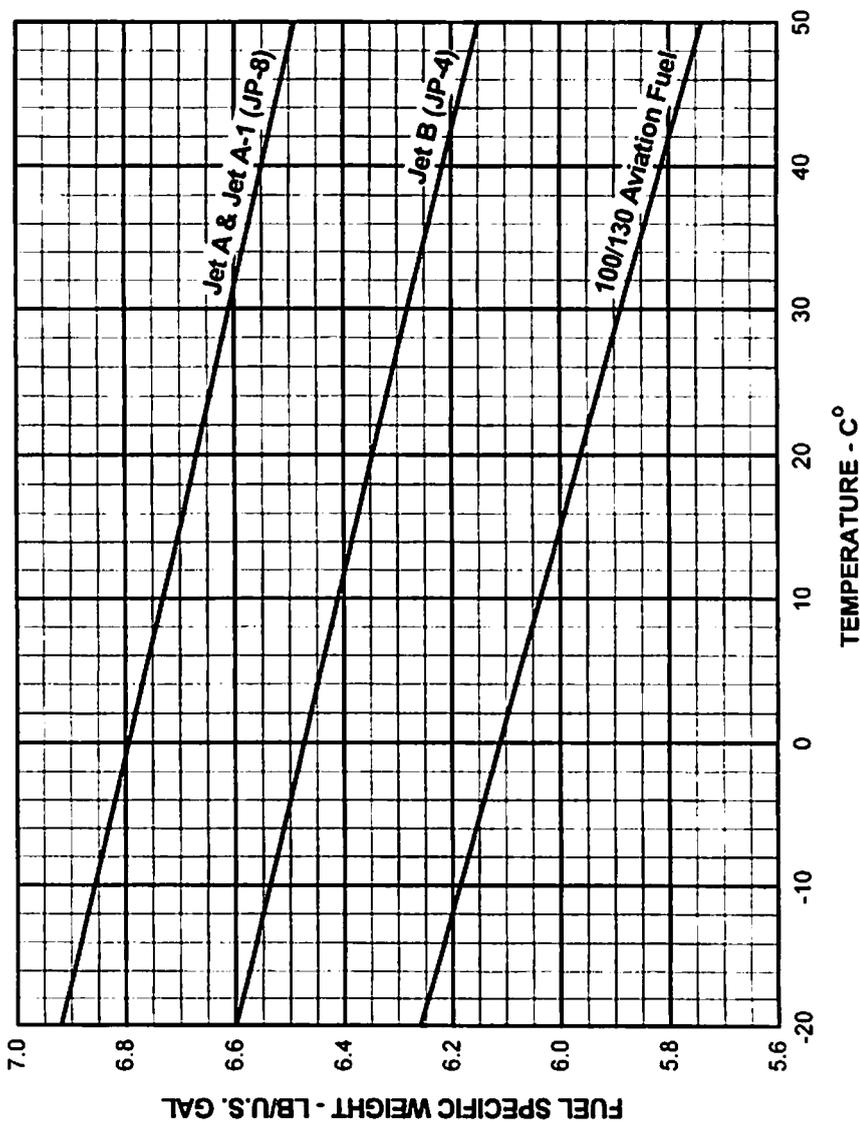


Aviation Fuel Specific Weight

 Figure 5-11




**EXAMPLE**  
Indicated Airspeed: 125 KT  
Calibrated Airspeed: 124 KT

**ASSOCIATED CONDITIONS**  
Flaps: 0° & 10°, Gear: RETRACTED

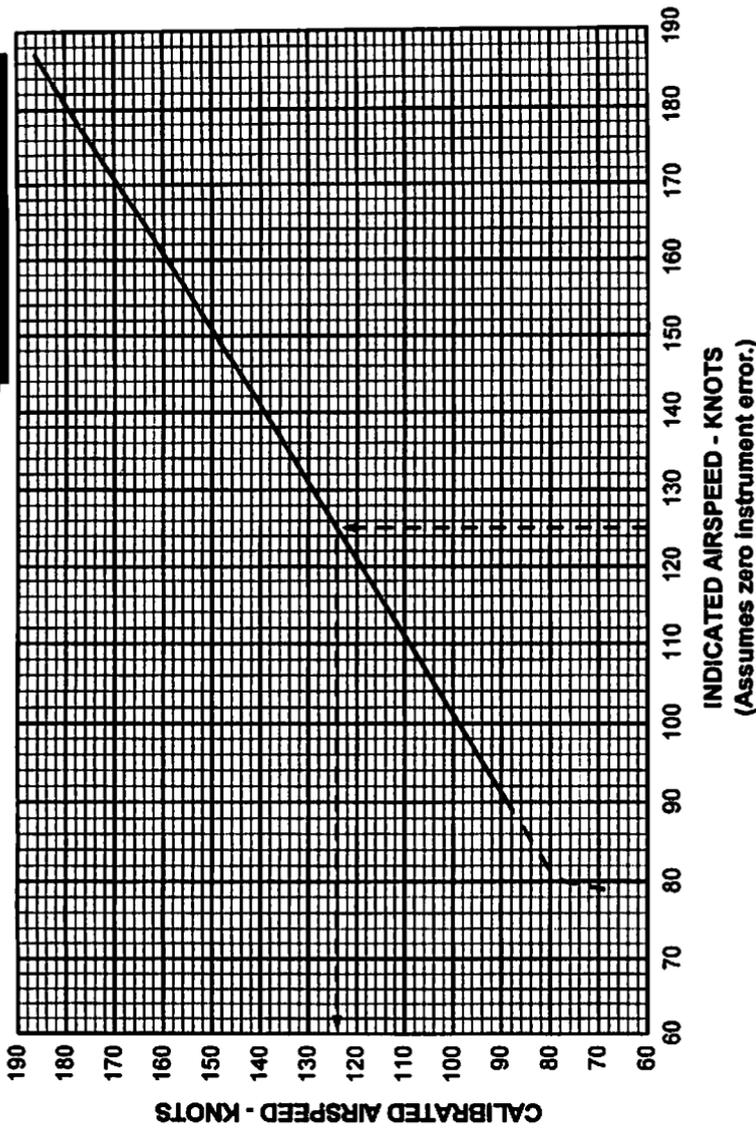


Airspeed Calibration  
Primary Static (Flaps 0° and 10°)  
Figure 5-13

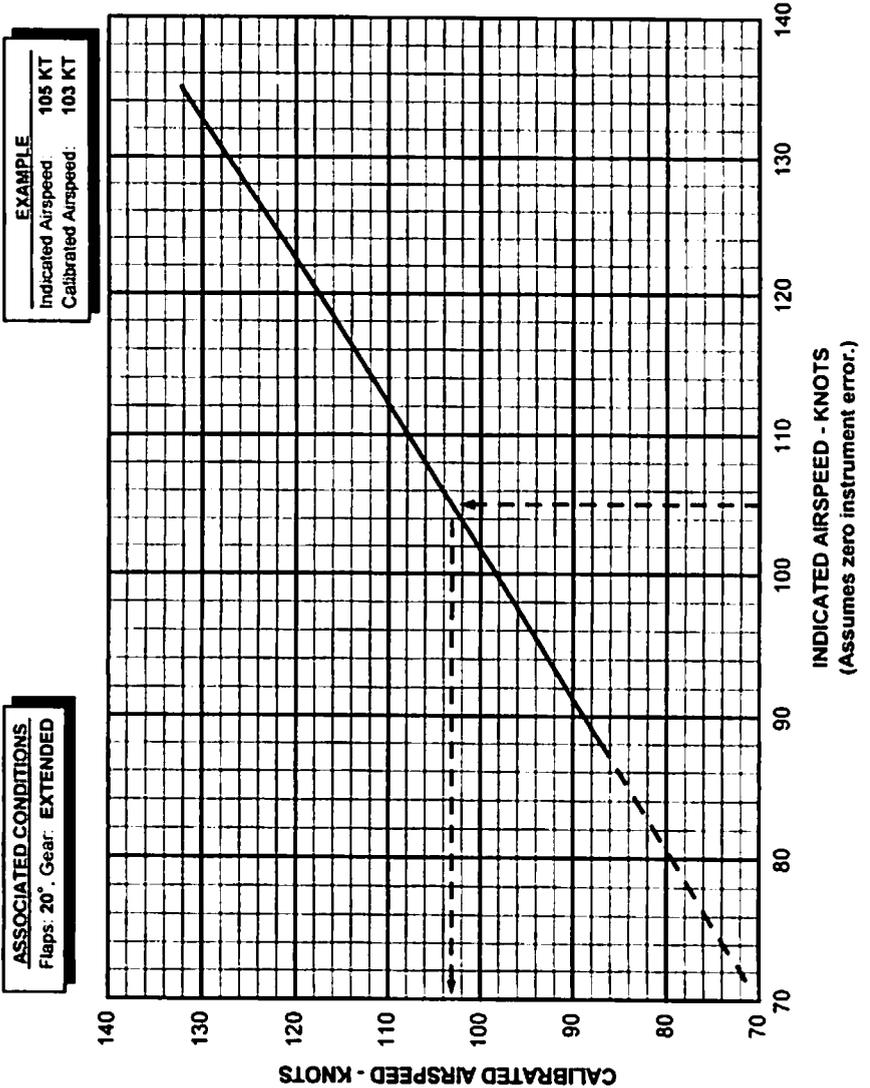


Airspeed Calibration  
Primary Static (Flaps 20°, Gear DOWN)

Figure 5-15


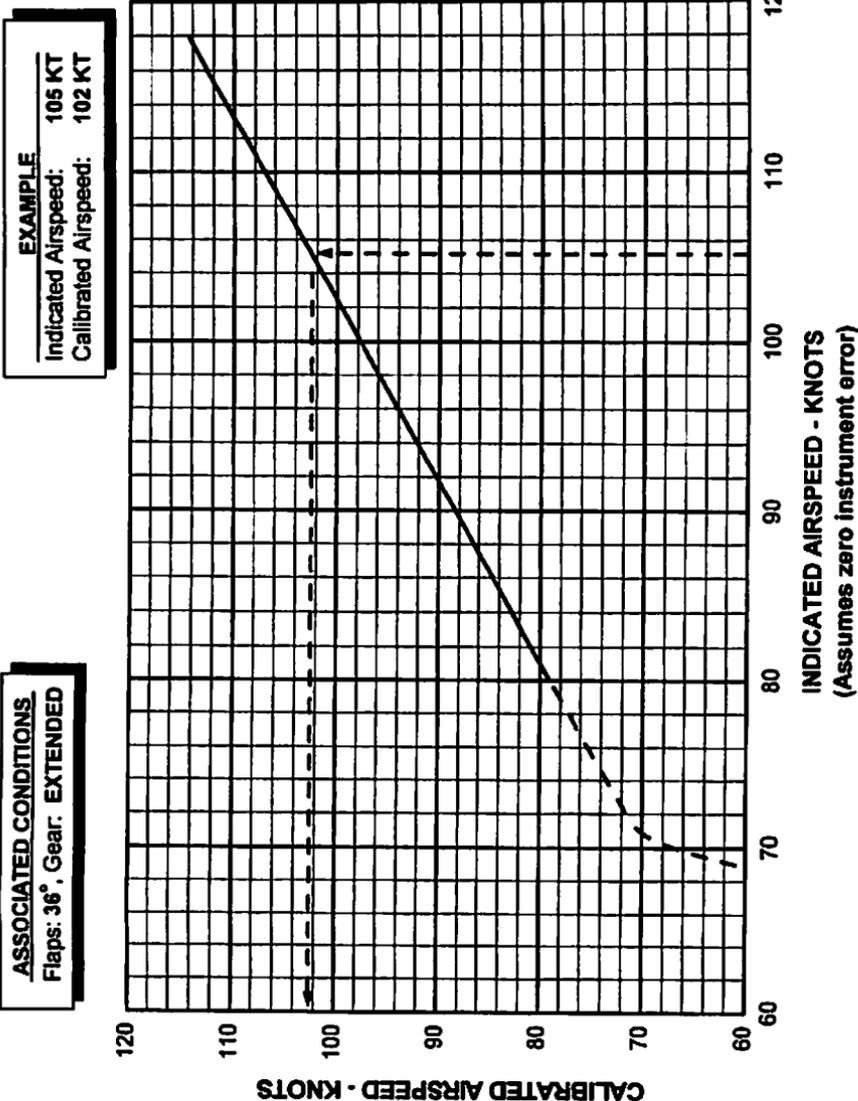


Airspeed Calibration  
Primary Static (Flaps 36°, Gear DOWN)

Figure 5-17

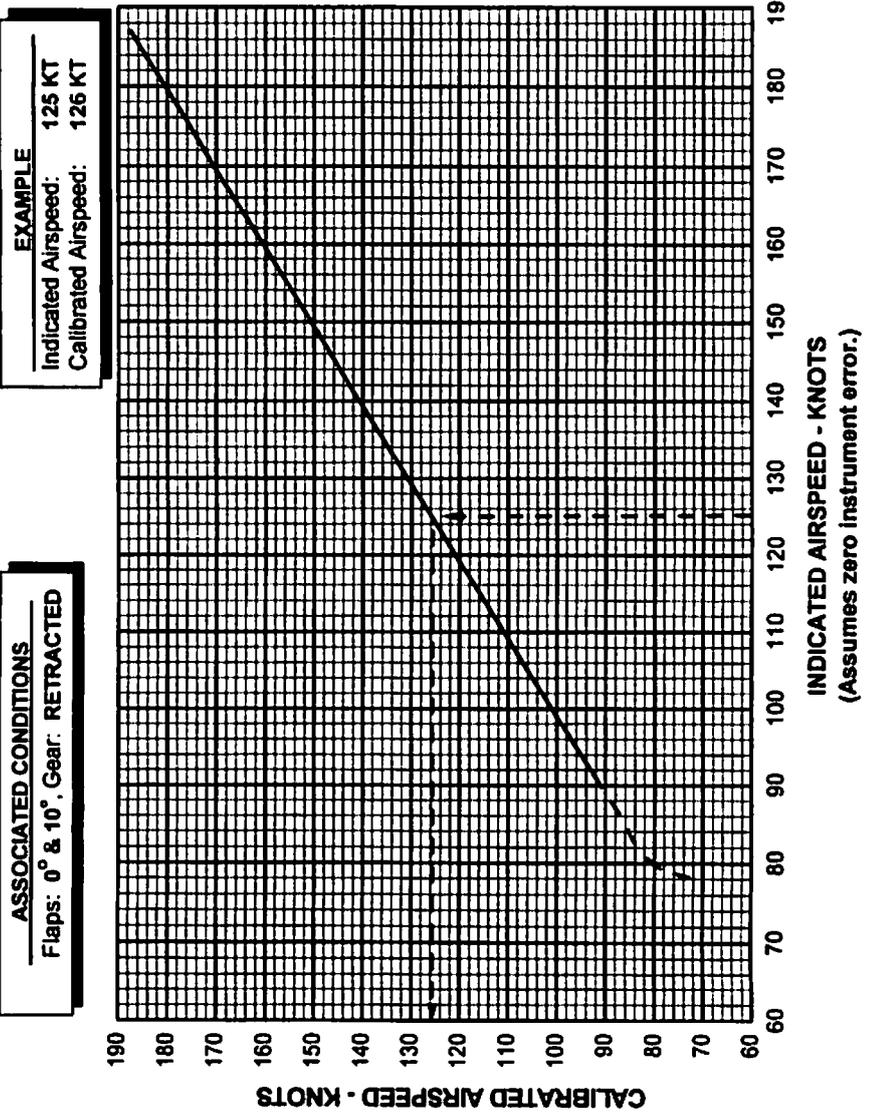

 
Airspeed Calibration  
 Alternate Static (Flaps 0° and 10°)  
 Figure 5-19

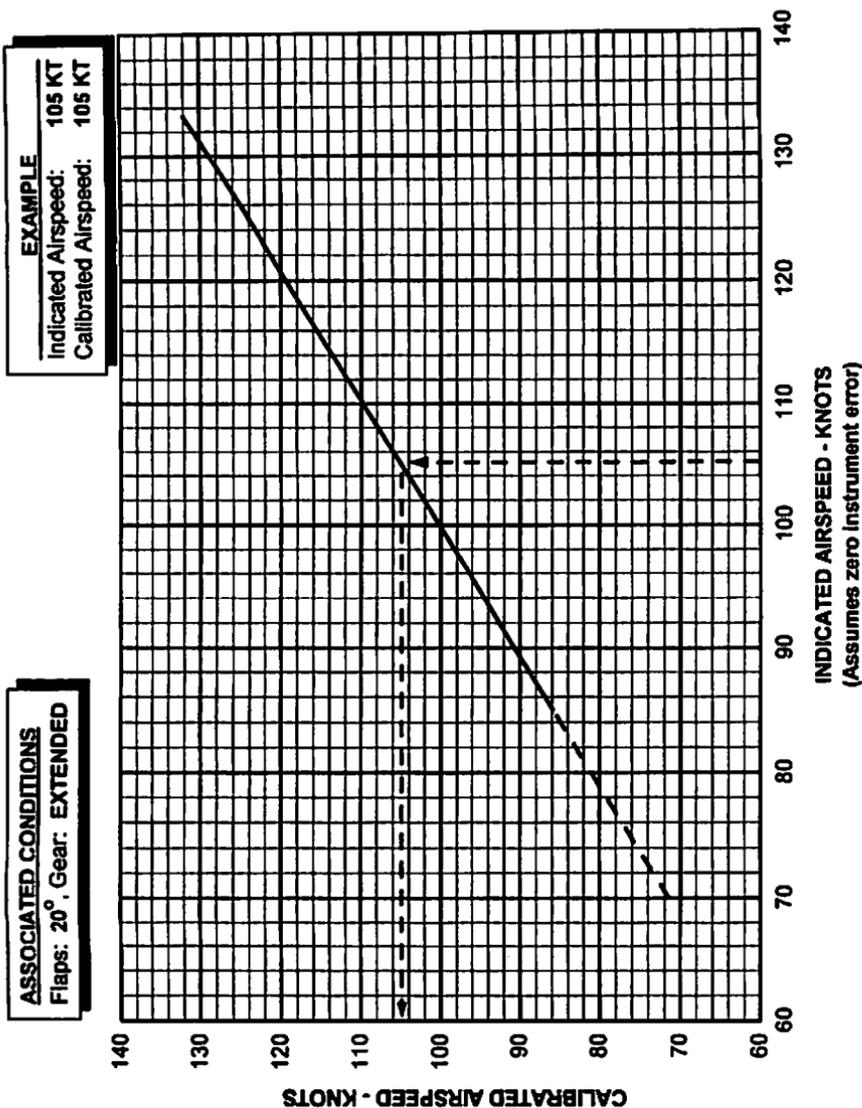


Airspeed Calibration  
Alternate Static (Flaps 20°, Gear DOWN)  
Figure 5-21

**EXAMPLE**  
 Indicated Airspeed: 105 KT  
 Calibrated Airspeed: 104 KT

**ASSOCIATED CONDITIONS**  
 Flaps: 36°, Gear: EXTENDED

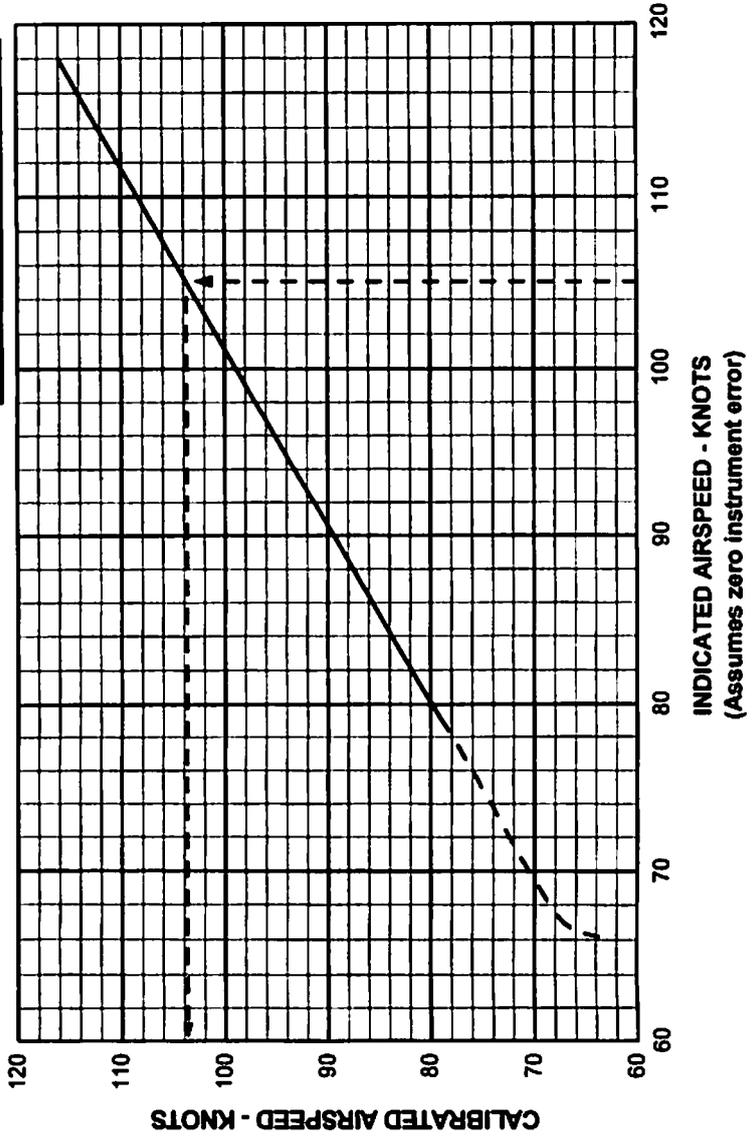


 Airspeed Calibration  
 Alternate Static (Flaps 36°, Gear DOWN)  
 Figure 5-23



**EXAMPLE**  
 Indicated Airspeed: 170 KT  
 Pressure Altitude: 25,000 FT  
 Altitude Correction: -22 FT  
 Add Correction to Press. Alt. = 24,978 FT

**ASSOCIATED CONDITIONS**  
 Flaps: 0° & 10°  
 Gear: RETRACTED

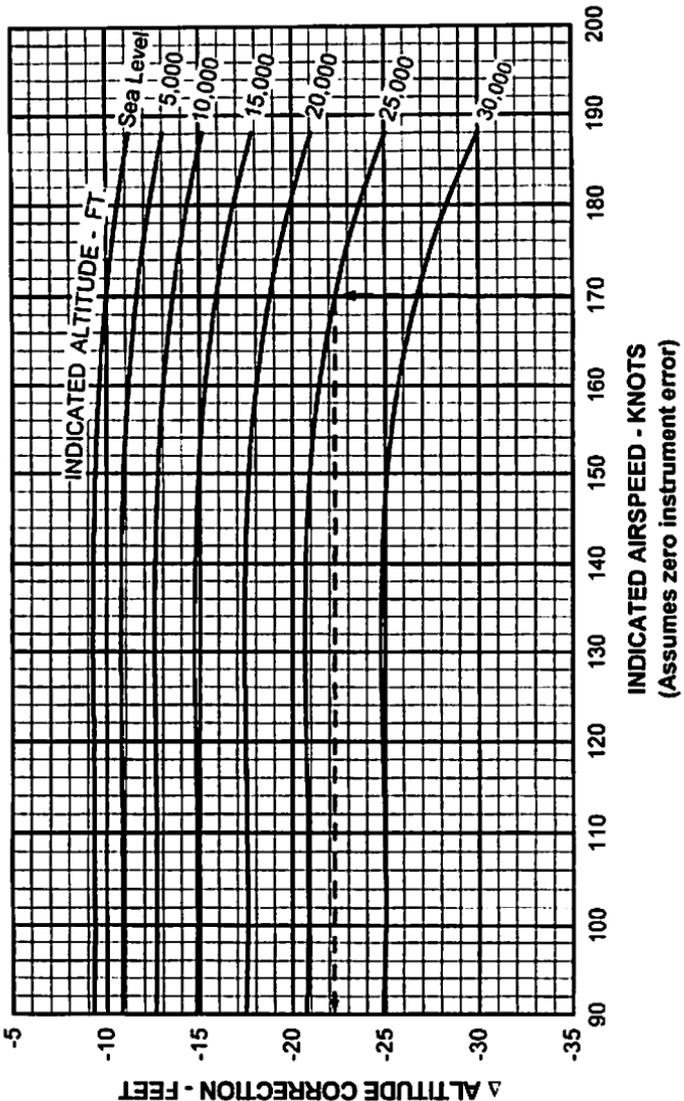


Altitude Calibration  
 Primary Static (Flaps 0° and 10°)  
 Figure 5-25

**EXAMPLE**

Indicated Airspeed: 105 KT  
 Pressure Altitude: 4,500 FT  
 Altitude Correction: -20 FT  
 Add Correction to Press. Alt.: = 4,480 FT

**ASSOCIATED CONDITIONS**

Flaps: 20°  
 Gear: EXTENDED

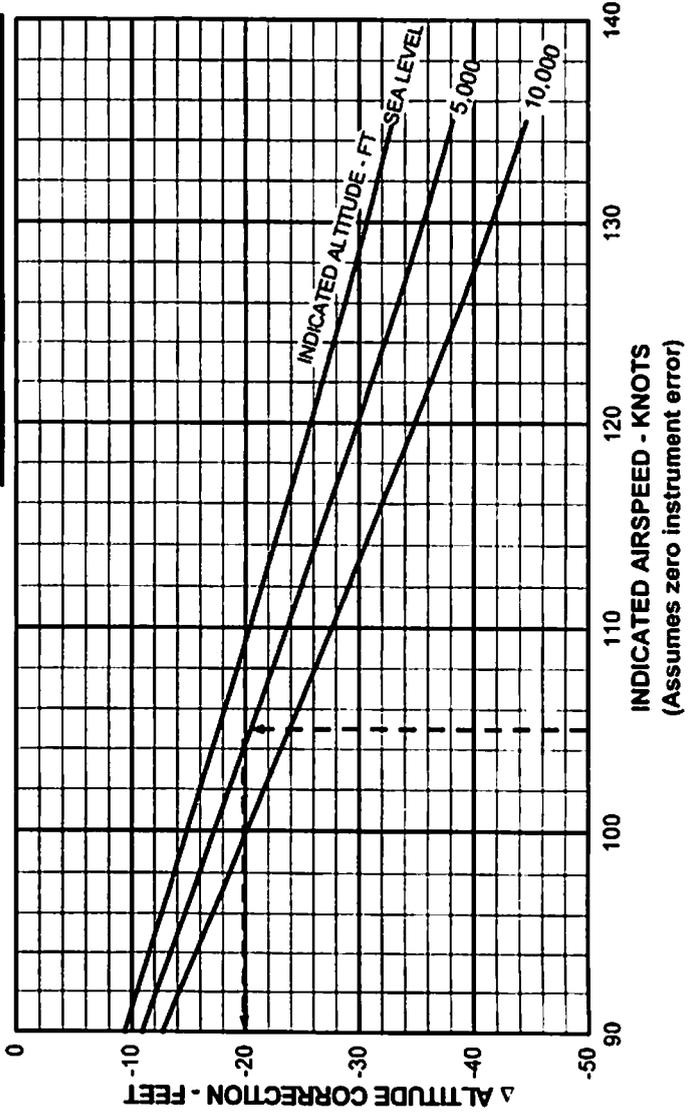


Altitude Calibration  
 Primary Static (Flaps 20°, Gear DOWN)  
 Figure 5-27



**EXAMPLE**  
 Indicated Airspeed: 90 KT  
 Pressure Altitude: 5,000 FT  
 Altitude Correction: 14 FT  
 Add Correction to Press. Alt. = 4,986 FT


**ASSOCIATED CONDITIONS**  
 Flaps: 36°  
 Gear: EXTENDED

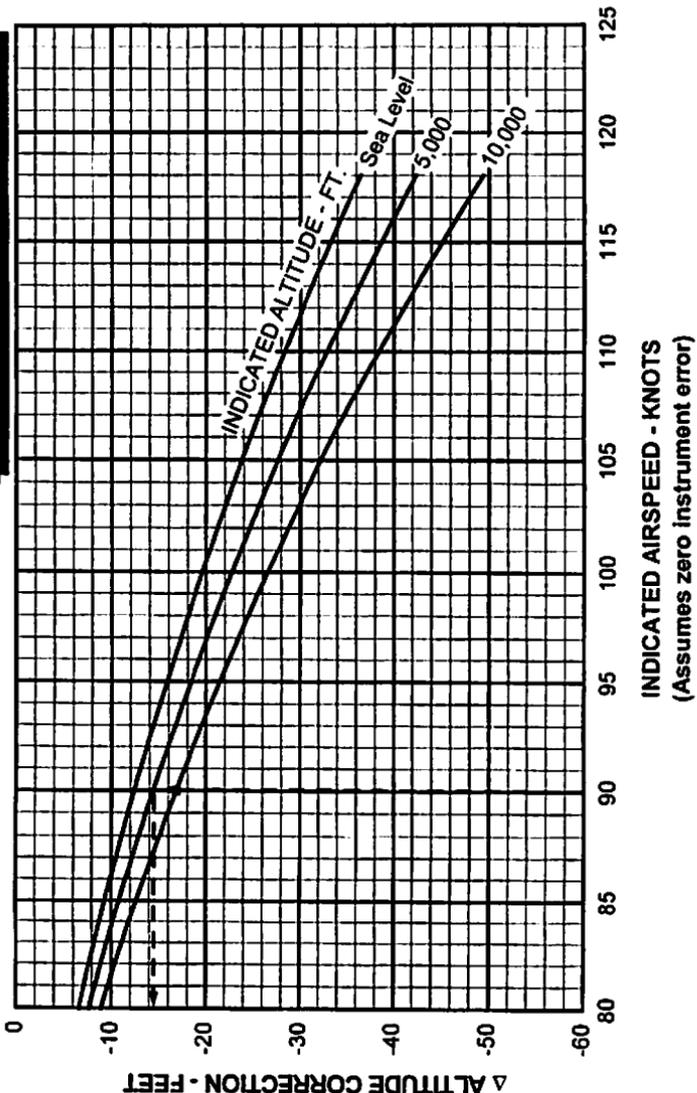

**Altitude Calibration**  
 Primary Static (Flaps 36°, Gear DOWN)  
 Figure 5-29

**EXAMPLE**  
 Indicated Airspeed: 170 KT  
 Pressure Altitude: 25,000 FT  
 Altitude Correction: 19 FT  
 Add Correction to Press. Alt. = 25,019 FT

**ASSOCIATED CONDITIONS**  
 Flaps: 0° & 10°  
 Gear: RETRACTED

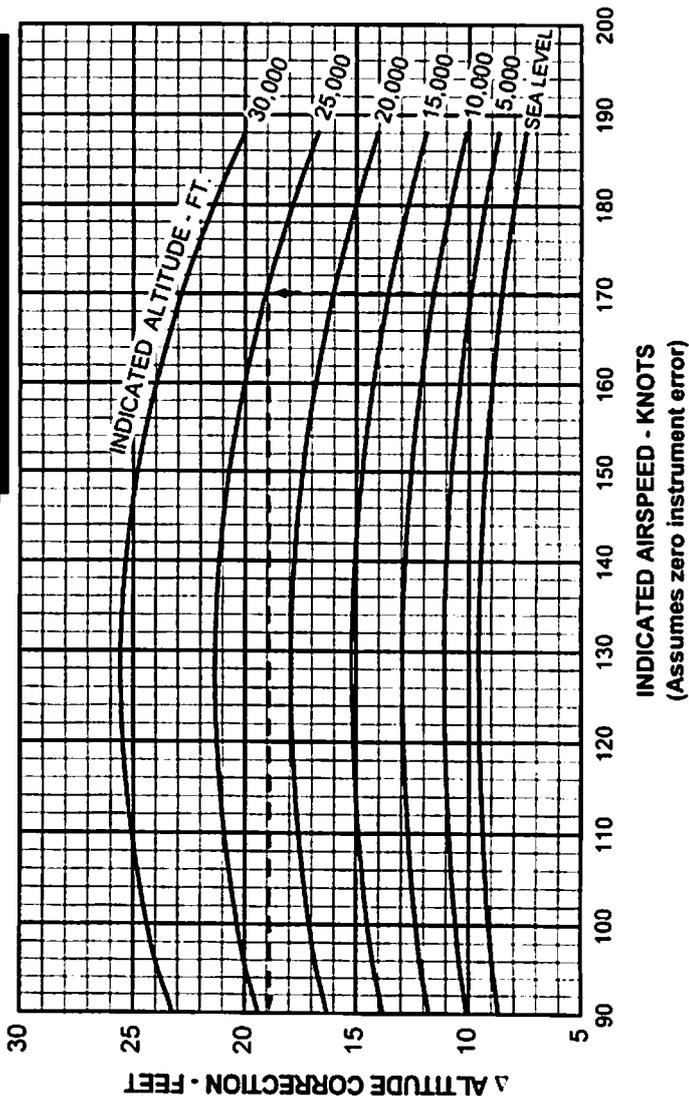

Altitude Calibration  
 Alternate Static (Flaps 0° and 10°)

Figure 5-31




**EXAMPLE**

Indicated Airspeed: 105 KT  
 Pressure Altitude: 4,500 FT  
 Altitude Correction: 0 FT  
 Add Correction to Press. Alt.: = 4,500 FT

**ASSOCIATED CONDITIONS**

Flaps: 20°  
 Gear: EXTENDED

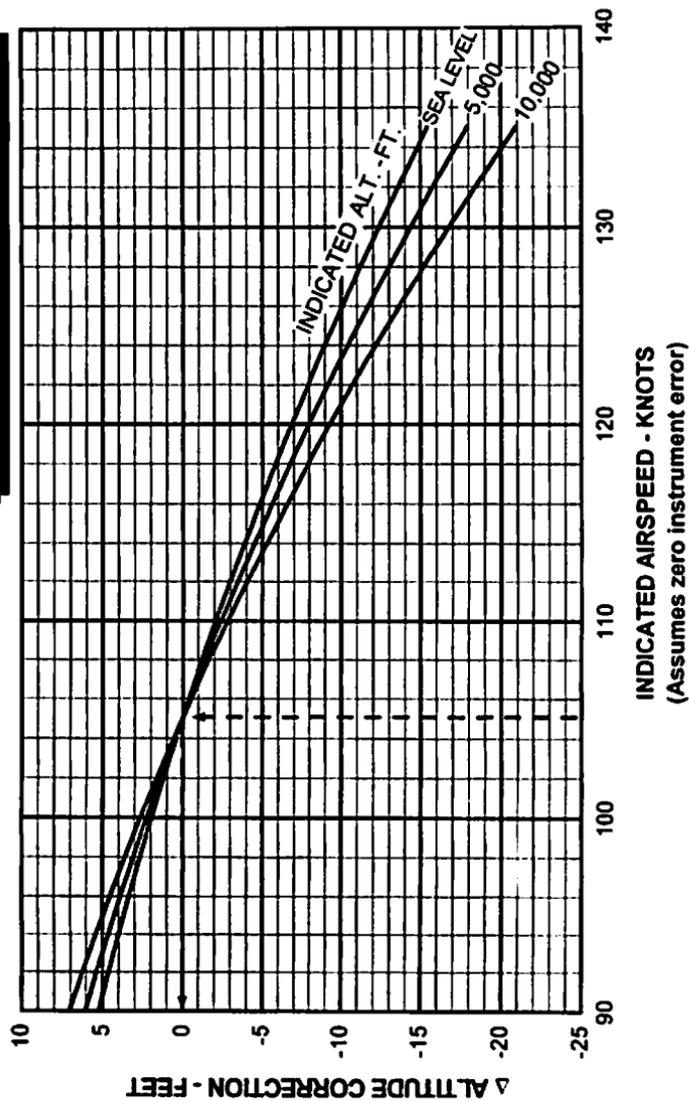

Altitude Calibration  
 Alternate Static (Flaps 20°, Gear DOWN)


Figure 5-33

**EXAMPLE**


Indicated Airspeed: 90 KT  
 Pressure Altitude: 5,000 FT  
 Altitude Correction: -5 FT  
 Add Correction to Press. Alt. = 4,995 FT

**ASSOCIATED CONDITIONS**

Flaps: 36°  
 Gear: EXTENDED

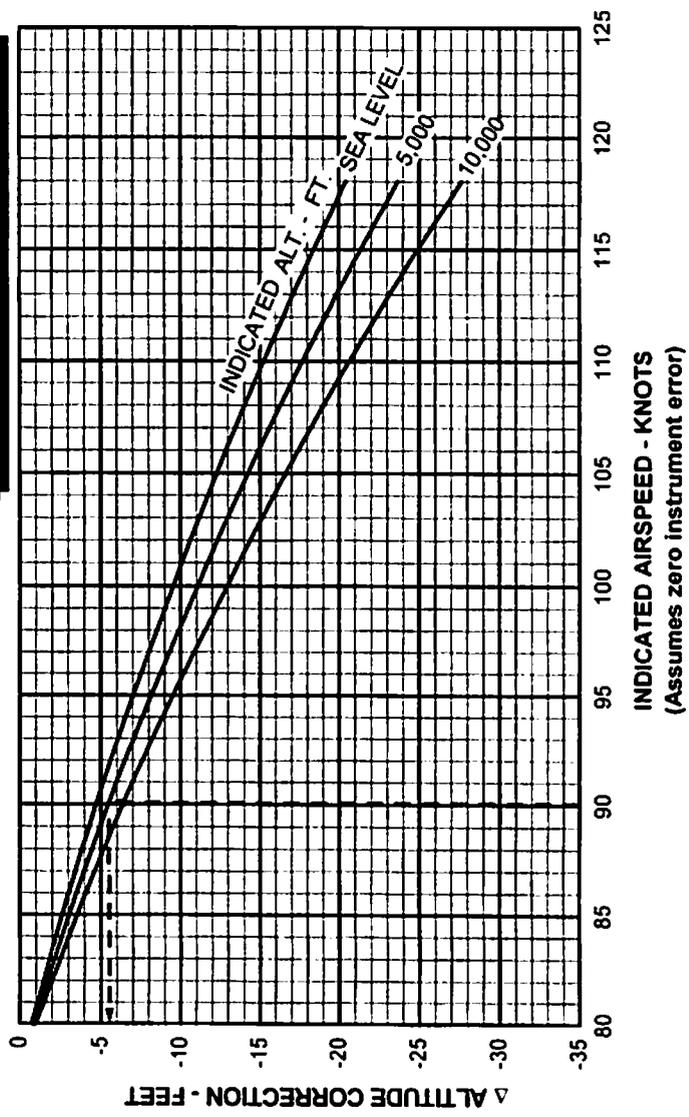


 Altitude Calibration  
 Alternate Static (Flaps 36°, Gear DOWN)  
 Figure 5-35



**EXAMPLE**  
 Indicated Airspeed: 173 KTS  
 Pressure Altitude: 25,000 FT  
 Temperature Error: 5.5 °C


**ASSOCIATED CONDITIONS**  
 STANDARD DAY ISA  
 PROBE RECOVERY FACTOR OF 64%  
 ZERO INSTRUMENT ERROR

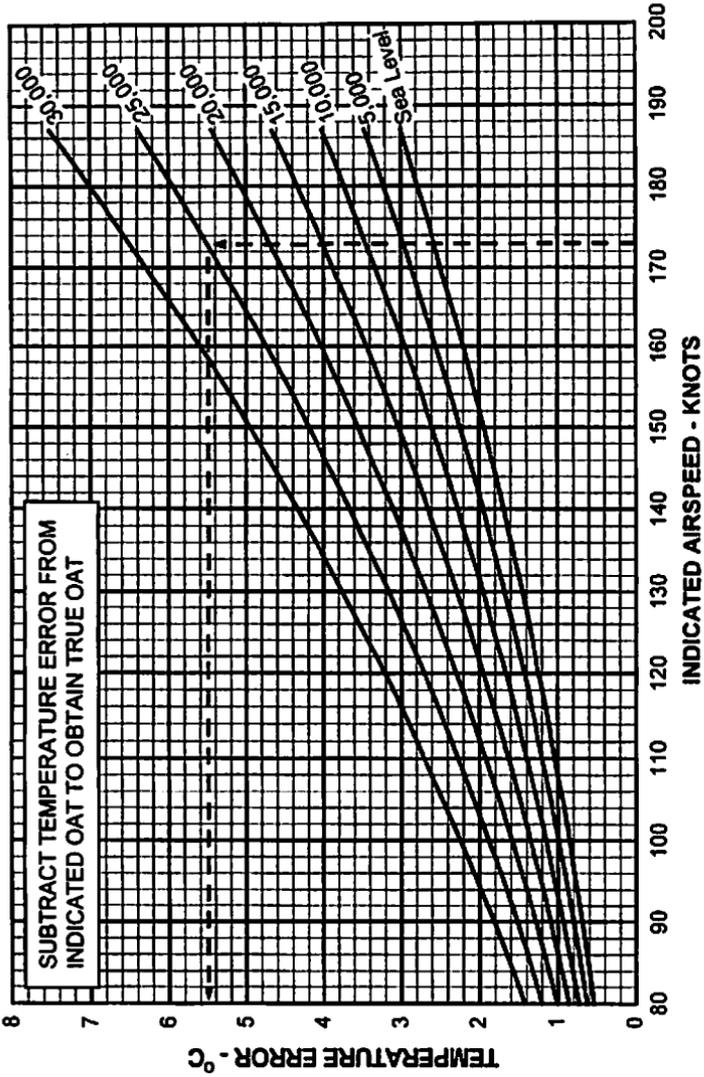


Temperature Probe Calibration  
 Figure 5-37

**ASSOCIATED CONDITION**  
 AIRCRAFT WEIGHT: 4,850 LB

**EXAMPLE**  
 FLAPS: UP    BANK ANGLE: 40°    FLT IDLE  
 GEAR: UP    POWER:  
 INDICATED STALL SPEED: 90 KT

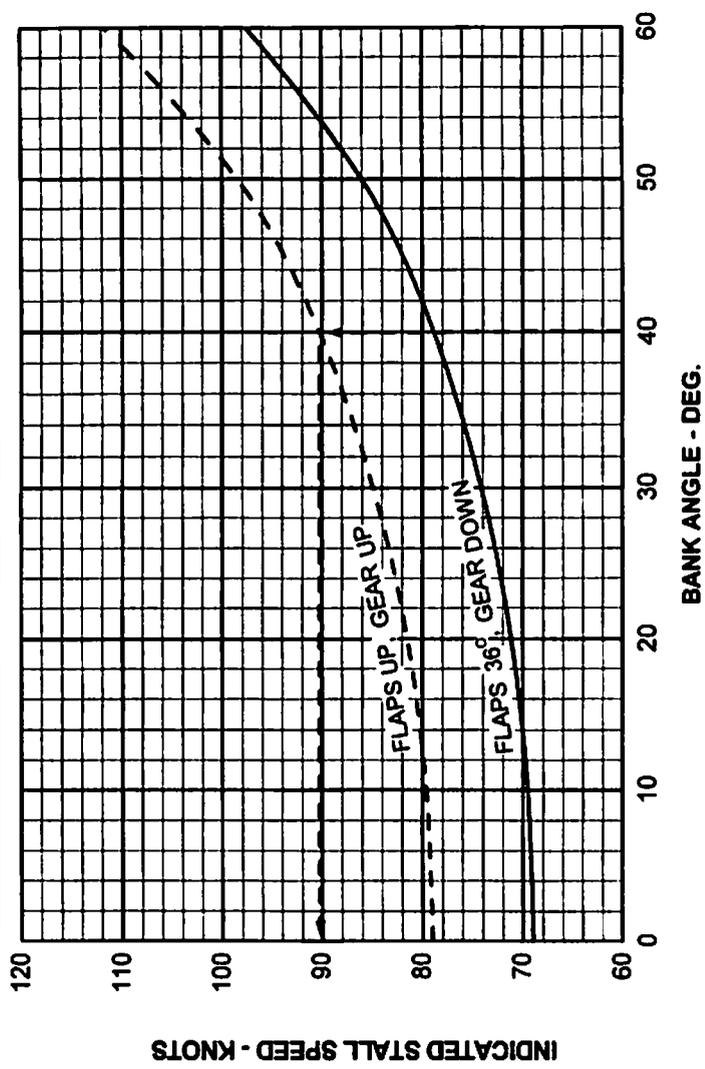

Angle of Bank vs. Stall Speed  
 Figure 5-39

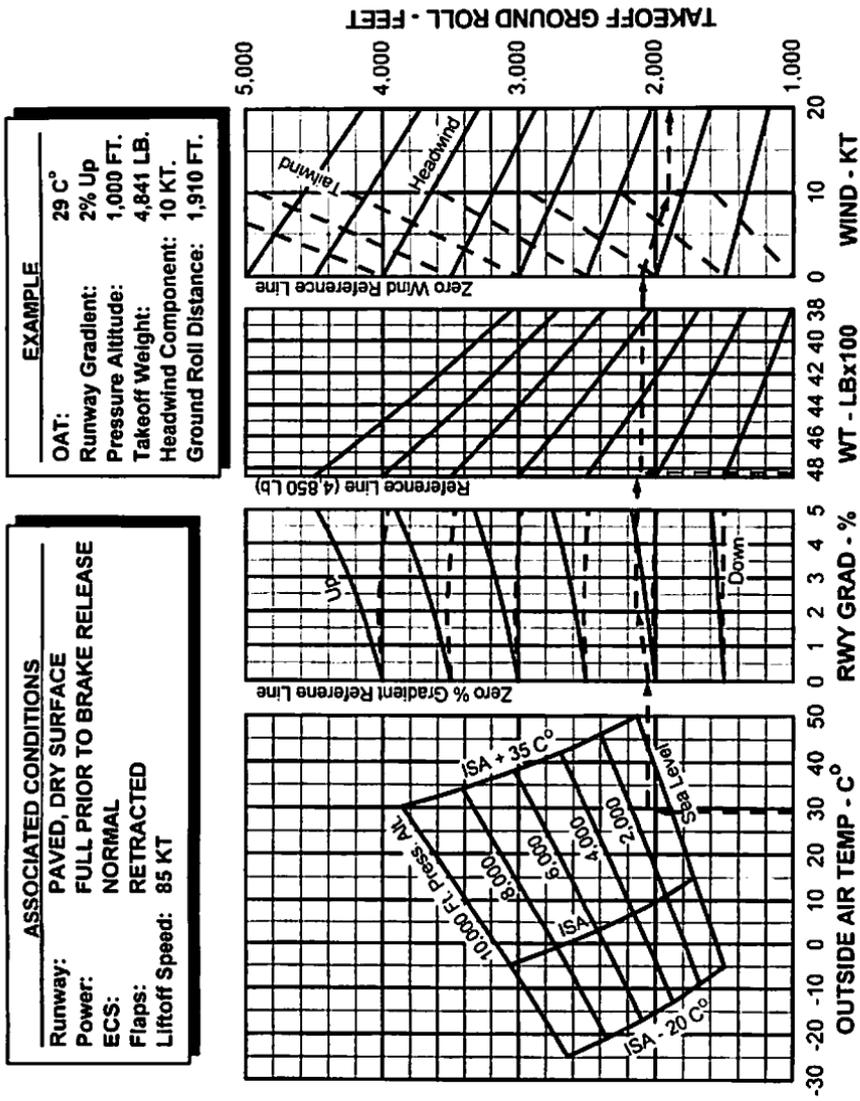


Normal Takeoff Ground Roll, 0° Flaps  
Figure 5-41

**EXAMPLE**

OAT: 29 °C  
 Runway Gradient: 2% UP  
 Pressure Altitude: 1,000 FT.  
 Takeoff Weight: 4,841 LB.  
 Headwind Component: 10 KT.  
 Takeoff Distance: 3,000 FT.

**ASSOCIATED CONDITIONS**

Runway: PAVED, DRY SURFACE  
 Power: FULL PRIOR TO BRAKE RELEASE  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Liftoff Speed: 85 KT  
 Obstacle Speed: 100 KT  
 Gear: DOWN

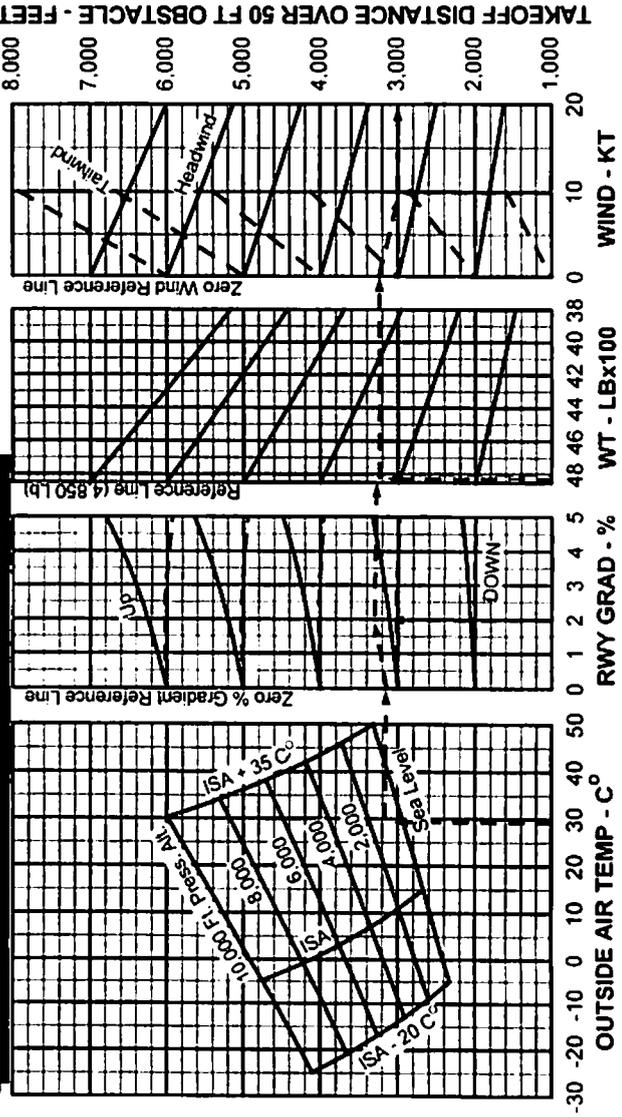

Normal Takeoff Performance over 50 ft. Obstacle, 0° Flaps

Figure 5-43




**EXAMPLE**

OAT: 29 °C  
 Runway Gradient: 2% UP  
 Pressure Altitude: 1,000 FT.  
 Takeoff Weight: 4,841 LB.  
 Headwind Component: 10 KT.  
 Ground Roll Distance: 1,800 FT.

**ASSOCIATED CONDITIONS**

Runway: PAVED, DRY SURFACE  
 Power: FULL PRIOR TO BRAKE RELEASE  
 ECS: NORMAL  
 Flaps: 20°  
 Liftoff Speed: 85 KT

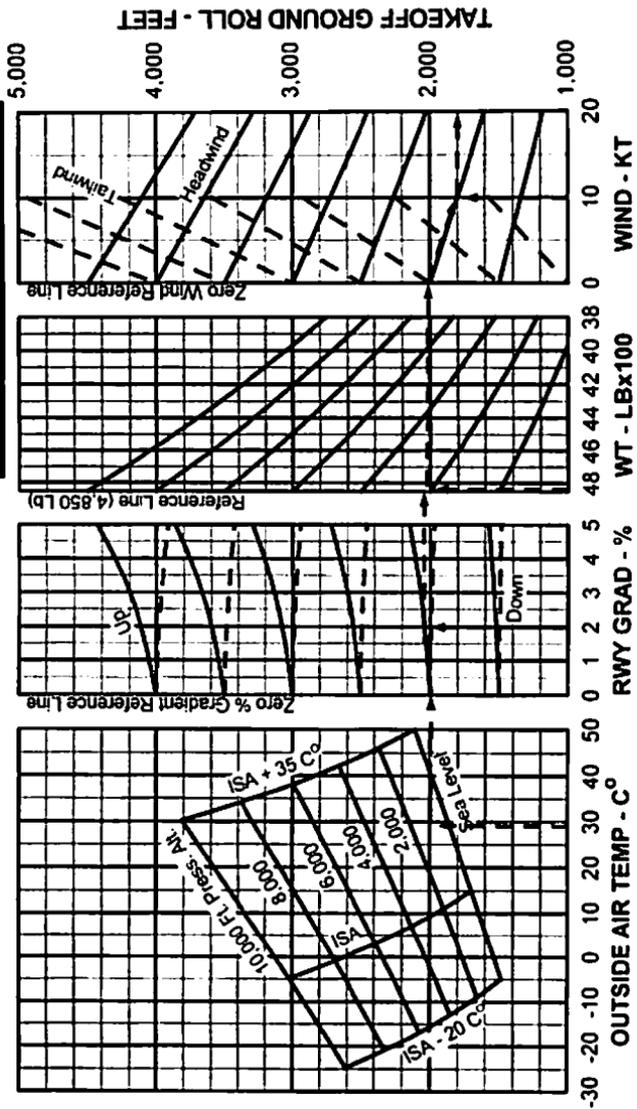


Maximum Effort Takeoff Ground Roll, 20° Flaps  
Figure 5-45

**EXAMPLE**


OAT: 29 °C  
 Runway Gradient: 2% UP  
 Pressure Altitude: 1,000 FT.  
 Takeoff Weight: 4,841 LB.  
 Headwind Component: 10 KT.  
 Takeoff Distance: 2,764 FT.

**ASSOCIATED CONDITIONS**

Runway: PAVED, DRY SURFACE  
 Power: FULL PRIOR TO BRAKE RELEASE  
 ECS: NORMAL  
 Flaps: 20°  
 Liftoff Speed: 85 KT  
 Obstacle Speed: 95 KT  
 Gear: DOWN

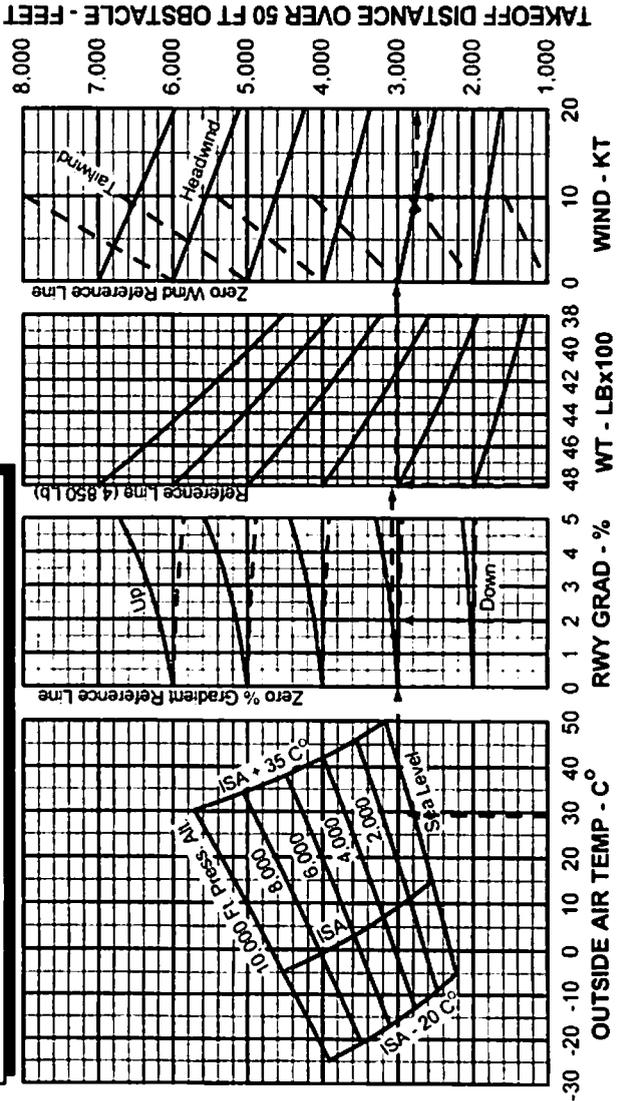

Maximum Effort Takeoff Performance over 50 ft. Obstacle,  
 20° Flaps  
 Figure 5-47

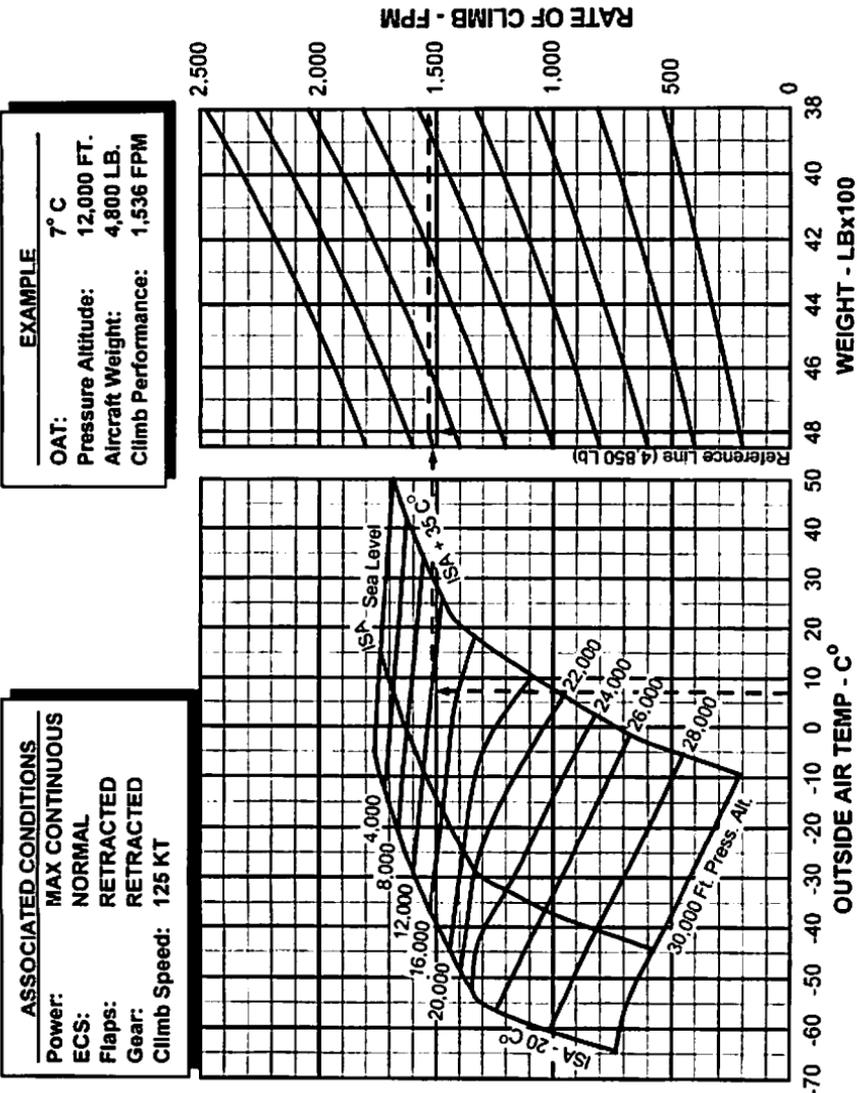

Enroute Climb Performance


Figure 5-49

**EXAMPLE**

OAT: 7° C  
 Pressure Altitude: 12,000 FT.  
 Aircraft Weight: 4,800 LB.  
 Climb Gradient: 609 FT/NM

**ASSOCIATED CONDITIONS**

Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 125 KIAS

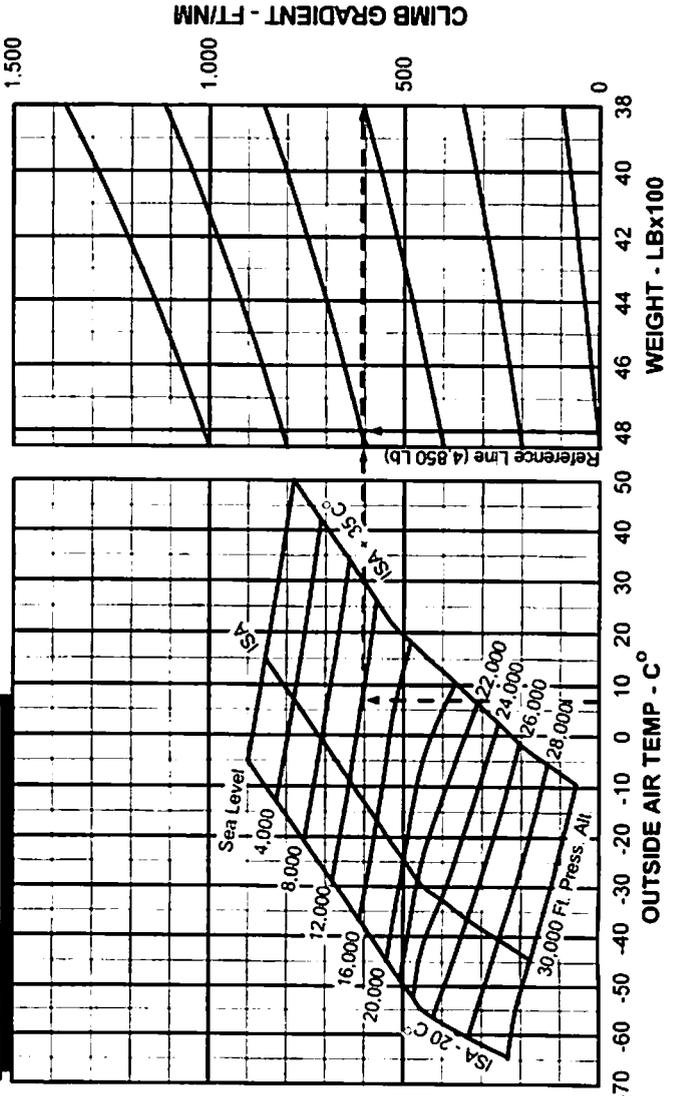

Enroute Climb Gradient

Figure 5-51




**EXAMPLE**

OAT: 29.0 C°  
 Pressure Altitude: 1,000 FT.  
 Aircraft Weight: 4,840 LB.  
 Climb Performance: 1,230 FPM

**ASSOCIATED CONDITIONS**

Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: EXTENDED  
 Climb Speed: 125 KIAS

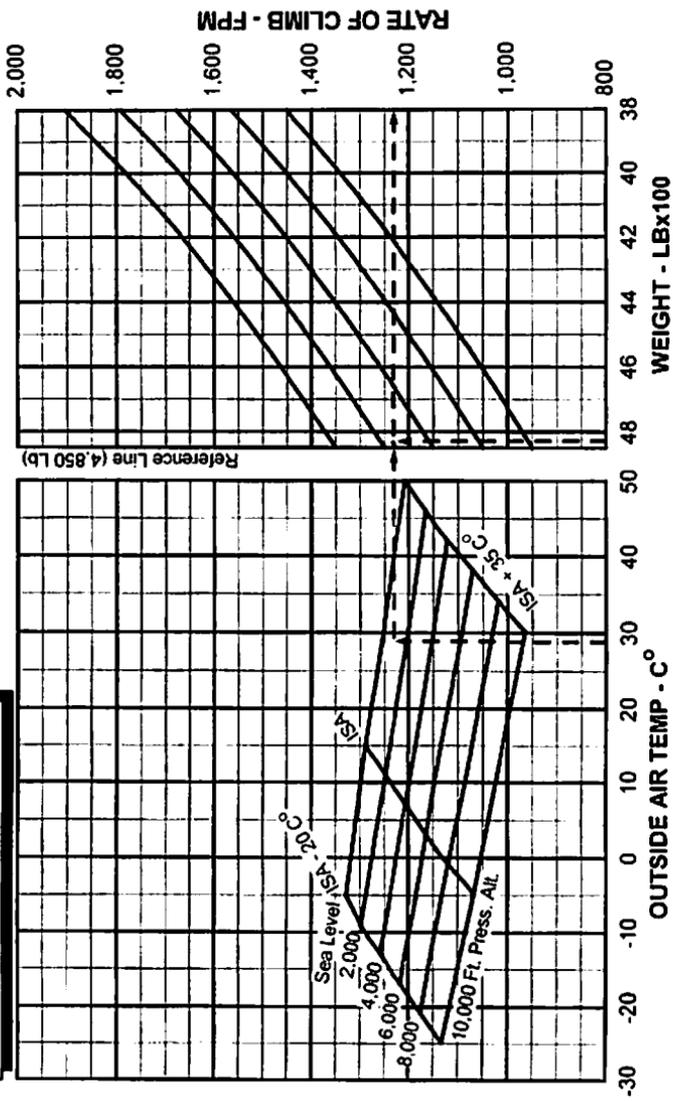


Takeoff Climb Performance  
Figure 5-53

**EXAMPLE**

Departure OAT: 29° C      Cruise OAT: -20° C  
 Departure Press. Alt.: 1,000 FT.      Cruise Press. Alt.: 25,000 FT.  
 Time To Departure Alt.: 0.6 Min.      Time To Cruise Alt.: 17.5 Min  
 Time During Climb: 17.5 · 0.6 = 16.9 Min

**ASSOCIATED CONDITIONS**

Weight:      MAX TAKEOFF  
 Power:      MAX CONTINUOUS  
 Flaps:      RETRACTED  
 Gear:      RETRACTED  
 Climb Speed: 125 KT

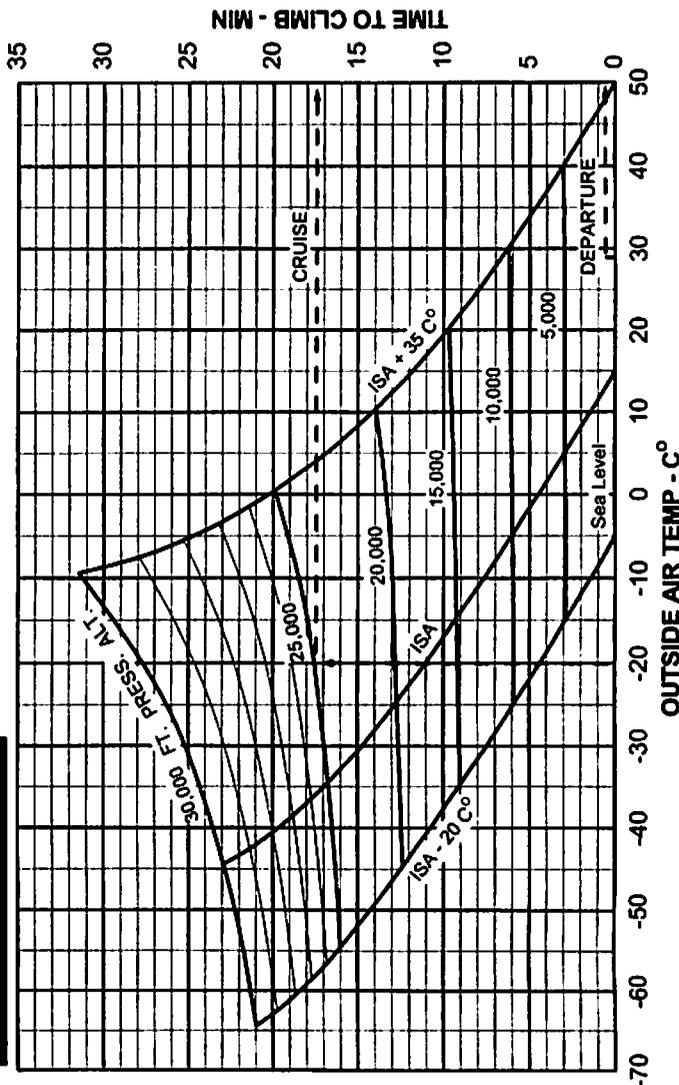


Maximum Climb Time  
 Figure 5-55

**EXAMPLE**


Departure OAT: 29° C Cruise OAT: -28° C  
 Departure Press. Alt.: 1,000 FT. Cruise Press. Alt.: 25,000 FT.  
 Fuel To Departure Alt.: 46.6 LB. Fuel To Cruise Alt.: 137.6 LB.  
 Fuel Used During Climb: 137.6 - 46.6 = 91.0 LB.




**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 125 KT

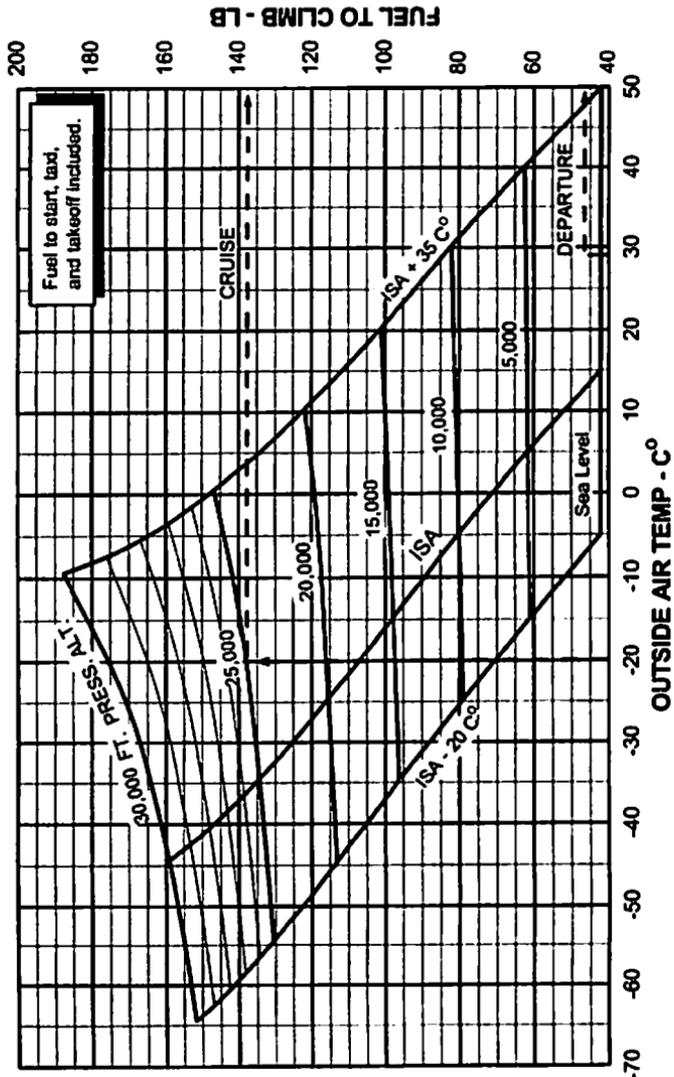

Maximum Climb Fuel  
Figure 5-57

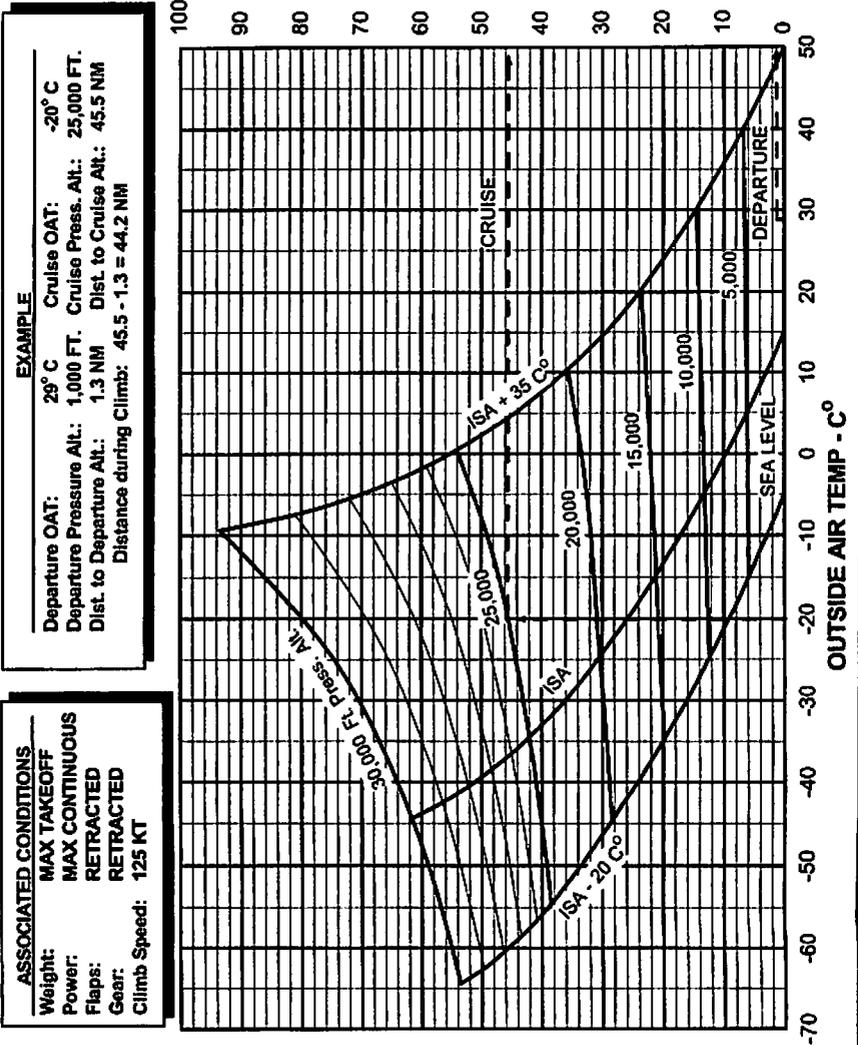

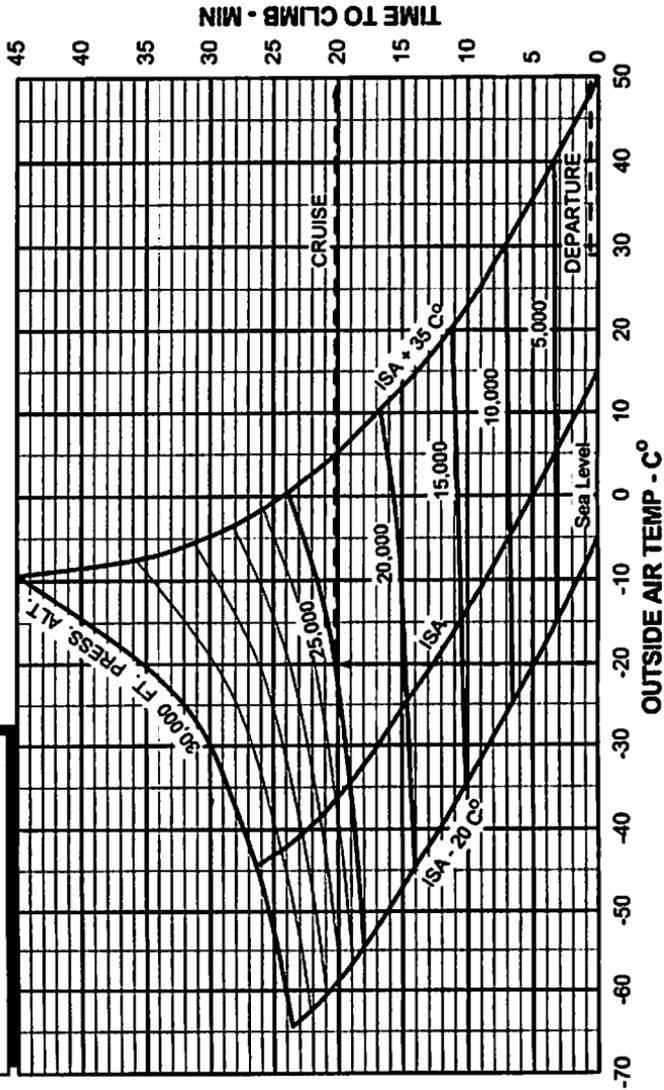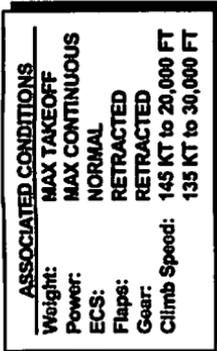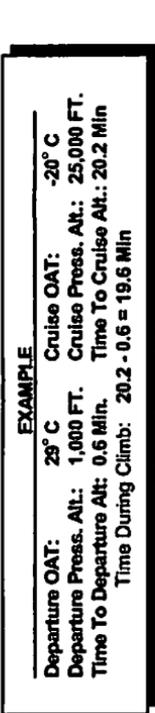

Cruise Climb Time


Figure 5-61

**EXAMPLE**


Departure OAT: 29° C Cruise OAT: -20° C  
 Departure Press. Alt.: 1,000 FT. Cruise Procs. Alt.: 25,000 FT.  
 Fuel To Departure Alt.: 46.5 LB. Fuel To Cruise Alt.: 151.8 LB.  
 Fuel Used During Climb: 151.8 - 46.5 = 105.3 LB.

**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 145 KT TO 20,000 FT  
 135 KT TO 30,000 FT

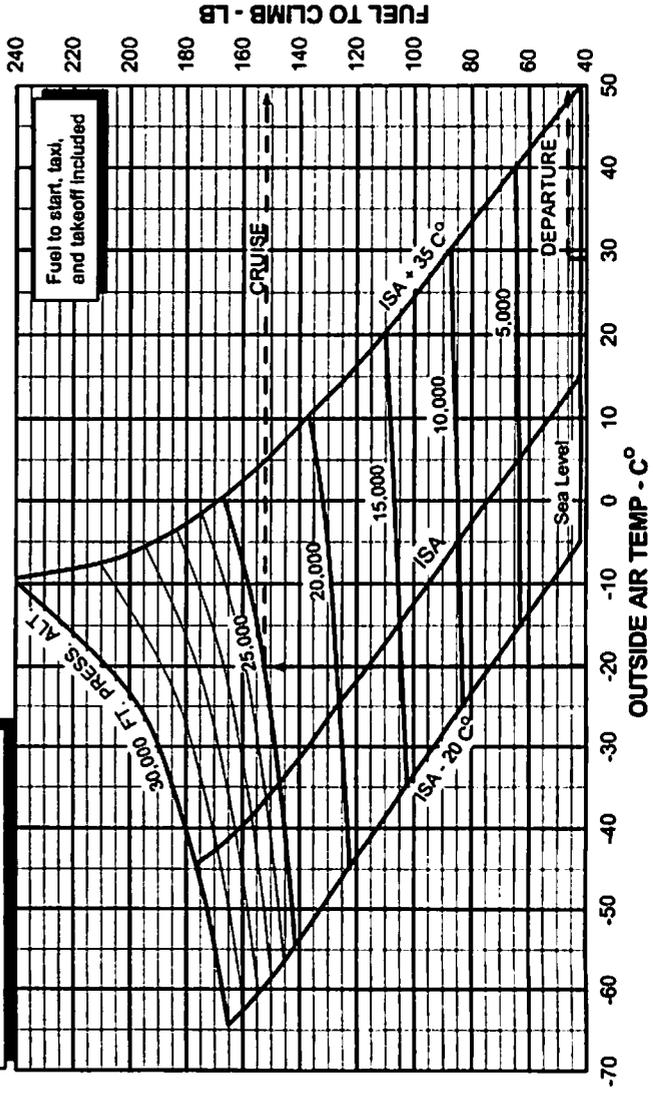

Cruise Climb Fuel  
 Figure 5-63

 


**EXAMPLE**

Departure OAT: 28° C Cruise OAT: -20° C  
 Departure Press Alt.: 1,000 FT. Cruise Press. Alt.: 25,000 FT.  
 Dist. to Departure Alt.: 1.5 NM Dist. to Cruise Alt.: 60.6 NM  
 Distance during Climb: 60.6 - 1.5 = 59.1 NM

**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 145 KT to 30,000 FT

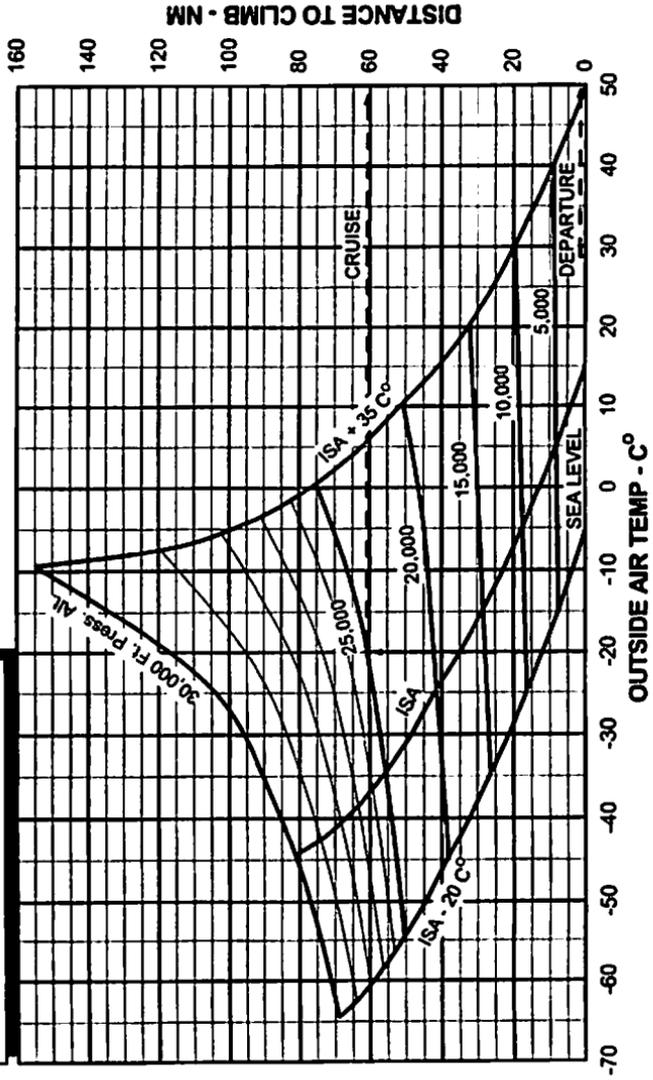

Cruise Climb Distance  
Figure 5-65

THIS PAGE INTENTIONALLY LEFT BLANK



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-2	-5	943	350	180
5000	-12	-15	998	318	194
10000	-21	-25	1067	293	209
15000	-31	-35	1153	280	226
20000	-40	-45	1255	281	245
25000	-49	-55	1313	282	262
30000	-	-	-	-	-
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	8	5	956	353	183
5000	-2	-5	1014	322	197
10000	-11	-15	1088	297	213
15000	-20	-25	1177	285	231
20000	-30	-35	1285	286	250
25000	-39	-45	1298	278	265
30000	-49	-54	1077	230	262
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	18	15	969	357	186
5000	8	5	1030	325	201
10000	-1	-5	1106	301	217
15000	-10	-15	1201	290	235
20000	-19	-25	1313	291	256
25000	-29	-35	1250	269	265
30000	-39	-44	1040	222	262

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Maximum Speed Cruise  
(ISA, ISA -10, ISA -20)

Figure 5-67



ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	28	25	982	360	190
5000	19	15	1048	330	205
10000	9	5	1127	305	221
15000	0	-5	1224	295	240
20000	-9	-15	1313	292	259
25000	-18	-25	1200	260	264
30000	-28	-34	997	214	261
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	38	35	995	363	193
5000	29	25	1064	334	208
10000	20	15	1148	310	225
15000	11	5	1248	299	244
20000	2	-5	1310	292	262
25000	-8	-15	1147	250	263
30000	-18	-24	955	207	260
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	54	50	1017	368	198
5000	44	40	1088	339	213
10000	35	30	1177	317	231
15000	26	20	1285	307	251
20000	17	10	1201	274	258
25000	7	0	1071	237	261
30000	-3	-9	891	195	257

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Maximum Speed Cruise  
(ISA +10, ISA +20, ISA +35)

Figure 5-69



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-4	-5		277	111
5000	-14	-15		238	123
10000	-23	-25		201	133
15000	-33	-35	400	172	142
20000	-43	-45		148	151
25000	-52	-55		128	159
30000	-62	-64		115	166
ISA - 10(°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	6	5		277	115
5000	-4	-5		238	126
10000	-13	-15		201	136
15000	-23	-25	400	172	144
20000	-33	-35		148	153
25000	-42	-45		129	161
30000	-52	-54		115	168
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	16	15		277	117
5000	7	5		238	128
10000	-3	-5		202	137
15000	-13	-15	400	172	146
20000	-23	-25		148	155
25000	-32	-35		129	163
30000	-42	-44		115	170

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 400 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-71

ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	OAT (°C)	Fuel Flow (PPH)*	TAS (KT)
0	26	25		277	120
5000	17	15		239	130
10000	7	5		203	139
15000	-3	-5	400	173	148
20000	-12	-15		149	156
25000	-22	-25		130	164
30000	-32	-34		115	171
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	36	35		276	124
5000	27	25		239	132
10000	17	15		203	141
15000	7	5	400	173	150
20000	-2	-5		149	158
25000	-12	-15		130	166
30000	-22	-24		115	172
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	52	50		278	127
5000	42	40		240	136
10000	32	30		204	144
15000	23	20	400	174	152
20000	13	10		150	161
25000	3	0		131	168
30000	-6	-9		116	174

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 400 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-73



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-4	-5	500	292	133
5000	-13	-15		252	142
10000	-23	-25		213	152
15000	-33	-35		185	161
20000	-42	-45		161	170
25000	-52	-55		143	179
30000	-62	-64		129	188
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	7	5	500	292	135
5000	-3	-5		252	145
10000	-13	-15		214	154
15000	-22	-25		185	163
20000	-32	-35		161	172
25000	-42	-45		143	181
30000	-51	-54		129	191
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	17	15	500	292	137
5000	7	5		253	147
10000	-3	-5		215	156
15000	-12	-15		185	165
20000	-22	-25		162	174
25000	-32	-35		143	184
30000	-41	-44		129	193

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 500 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-75

ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	27	25		293	140
5000	17	15		254	149
10000	7	5		215	158
15000	-2	-5	500	185	167
20000	-12	-15		162	177
25000	-21	-25		143	186
30000	-31	-34		130	195
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	37	35		293	141
5000	27	25		254	151
10000	18	15		216	160
15000	8	5	500	186	169
20000	-2	-5		163	179
25000	-11	-15		144	188
30000	-21	-24		130	197
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	52	50		294	145
5000	42	40		255	154
10000	33	30		217	163
15000	23	20	500	187	172
20000	14	10		163	181
25000	4	0		145	191
30000	-5	-9		131	200

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 500 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-77



ISA -20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-3	-5	600	305	147
5000	-13	-15		264	156
10000	-23	-25		227	166
15000	-32	-35		199	175
20000	-42	-45		175	185
25000	-51	-55		157	195
30000	-61	-64		144	205
ISA -10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	7	5	600	306	150
5000	-3	-5		265	159
10000	-12	-15		227	168
15000	-22	-25		199	177
20000	-32	-35		175	187
25000	-41	-45		157	197
30000	-51	-54		144	208
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	17	15	600	307	152
5000	7	5		266	161
10000	-2	-5		227	170
15000	-12	-15		199	180
20000	-21	-25		175	190
25000	-31	-35		157	200
30000	-41	-44		144	210

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 600 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-79


ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	27	25		308	154
5000	17	15		267	163
10000	8	5		228	172
15000	-2	-5	600	199	182
20000	-11	-15		176	192
25000	-21	-25		158	202
30000	-30	-34		145	213
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	37	35		308	156
5000	28	25		269	165
10000	18	15		228	175
15000	8	5	600	200	184
20000	-1	-5		176	194
25000	-11	-15		158	205
30000	-20	-24		145	215
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	52	50		309	159
5000	43	40		269	168
10000	33	30		230	178
15000	24	20	600	201	187
20000	14	10		178	198
25000	5	0		159	208
30000	-5	-9		146	218

NOTE: Shaded areas may be beyond aircraft OAT limit  
See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 600 FT-LB  
(ISA +10, ISA +20, ISA +35)

 Figure 5-81



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-3	-5		319	158
5000	-13	-15		278	168
10000	-22	-25		240	177
15000	-32	-35	700	211	187
20000	-41	-45		189	197
25000	-51	-55		173	208
30000	-61	-64		161	219
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	7	5		320	161
5000	-2	-5		278	170
10000	-12	-15		241	180
15000	-22	-25	700	212	190
20000	-31	-35		190	200
25000	-41	-45		173	211
30000	-50	-54		161	222
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	17	15		321	163
5000	8	5		278	172
10000	-2	-5		242	182
15000	-11	-15	700	212	192
20000	-21	-25		190	203
25000	-31	-35		173	213
30000	-40	-44		162	225

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 700 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-83

ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	27	25		322	165
5000	18	15		279	175
10000	8	5		243	184
15000	-1	-5	700	213	194
20000	-11	-15		191	205
25000	-20	-25		173	216
30000	-30	-34		162	227
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	38	35		323	167
5000	28	25		281	177
10000	18	15		243	186
15000	9	5	700	214	197
20000	-1	-5		192	207
25000	-10	-15		174	218
30000	-19	-24		162	230
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	53	50		324	170
5000	43	40		283	180
10000	34	30		245	190
15000	24	20	700	216	200
20000	15	10		193	211
25000	5	0		175	222
30000	-4	-9		163	234

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 700 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-85



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-3	-5		331	168
5000	-12	-15		291	177
10000	-22	-25		254	187
15000	-32	-35	800	226	197
20000	-41	-45		204	208
25000	-51	-55		188	219
30000	-60	-64		179	231
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	7	5		332	170
5000	-2	-5		293	180
10000	-12	-15		255	190
15000	-21	-25	800	227	200
20000	-31	-35		205	211
25000	-40	-45		189	222
30000	-50	-54		179	234
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	18	15		333	173
5000	8	5		293	182
10000	-2	-5		256	192
15000	-11	-15	800	227	202
20000	-21	-25		205	214
25000	-30	-35		189	225
30000	-40	-44		179	237

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 800 FT-LB

(ISA, ISA -10, ISA -20)

Figure 5-87

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	28	25		334	175
5000	18	15		295	184
10000	9	5		257	194
15000	-1	-5	800	228	205
20000	-10	-15		206	216
25000	-20	-25		190	228
30000	-29	-34		179	240
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	38	35		335	177
5000	28	25		295	187
10000	19	15		258	197
15000	9	5	800	229	207
20000	0	-5		207	219
25000	-10	-15		190	230
30000	-19	-24		179	243
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	53	50		338	180
5000	44	40		297	190
10000	34	30		259	200
15000	25	20	800	230	211
20000	15	10		208	222
25000	6	0		191	234
30000	-3	-9		180	247

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 800 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-89



ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-2	-5		344	177
5000	-12	-15		305	186
10000	-22	-25		268	196
15000	-31	-35	900	241	206
20000	-41	-45		220	217
25000	-50	-55		205	229
30000	-60	-64		197	242
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	8	5		345	179
5000	-2	-5		306	188
10000	-11	-15		269	199
15000	-21	-25	900	241	209
20000	-31	-35		220	220
25000	-40	-45		206	232
30000	-49	-54		197	245
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	18	15		346	181
5000	8	5		307	191
10000	-1	-5		270	201
15000	-11	-15	900	242	212
20000	-20	-25		221	223
25000	-30	-35		206	235
30000	-39	-44		197	248

NOTE: Shaded areas may be beyond aircraft OAT limit  
See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 900 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-91



ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	28	25		348	183
5000	18	15		308	193
10000	9	5		271	204
15000	-1	-5	900	243	214
20000	-10	-15		221	226
25000	-19	-25		207	238
30000	-29	-34		197	251
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	38	35		349	185
5000	29	25		310	195
10000	19	15		272	206
15000	10	5	900	243	217
20000	0	-5		222	229
25000	-9	-15		207	241
30000	-18	-24		197	254
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	53	50		352	189
5000	44	40		312	199
10000	34	30		274	209
15000	25	20	900	245	221
20000	16	10		223	232
25000	6	0		208	245
30000	-	-		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 900 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-93



ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	-5		-	-
5000	-	-15		-	-
10000	-21	-25		283	204
15000	-31	-35	1000	256	215
20000	-41	-45		237	226
25000	-50	-55		223	238
30000	-59	-64		215	251
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	5		-	-
5000	-2	-5		320	196
10000	-11	-15		284	207
15000	-21	-25	1000	256	218
20000	-30	-35		237	229
25000	-40	-45		223	241
30000	-49	-54		215	255
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	15		-	-
5000	9	5		321	199
10000	-1	-5		285	209
15000	-10	-15	1000	257	220
20000	-20	-25		238	232
25000	-29	-35		223	245
30000	-39	-44		215	258

NOTE: Shaded areas may be beyond aircraft OAT limit  
See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1000 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-95

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	25		-	-
5000	19	15		323	201
10000	9	5		286	212
15000	0	-5	1000	258	223
20000	-10	-15		238	235
25000	-19	-25		223	248
30000	-	-34		-	-
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	35		-	-
5000	29	25		324	203
10000	20	15		287	214
15000	10	5	1000	259	226
20000	1	-5		239	238
25000	-9	-15		224	251
30000	-	-24		-	-
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	54	50		366	196
5000	44	40		327	207
10000	35	30		289	218
15000	25	20	1000	261	229
20000	16	10		240	242
25000	7	0		225	255
30000	-	-9		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1000 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-97



ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	-5		-	-
5000	-	-15		-	-
10000	-	-25		-	-
15000	-31	-35	1100	271	222
20000	-40	-45		254	234
25000	-50	-55		241	247
30000	-59	-64		235	260
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	5		-	-
5000	-	-5		-	-
10000	-	-15		-	-
15000	-20	-25	1100	272	225
20000	-30	-35		254	237
25000	-39	-45		241	250
30000	-	-54		-	-
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	15		-	-
5000	-	5		-	-
10000	-1	-5		300	217
15000	-10	-15	1100	273	228
20000	-20	-25		255	240
25000	-29	-35		241	253
30000	-	-44		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1100 FT-LB

(ISA, ISA -10, ISA -20)

Figure 5-99

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	25		-	-
5000	-	15		-	-
10000	10	5		301	219
15000	0	-5	1100	274	231
20000	-9	-15		255	243
25000	-19	-25		241	256
30000	-	-34		-	-
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	35		-	-
5000	-	25		-	-
10000	20	15		302	222
15000	10	5	1100	275	233
20000	1	-5		256	246
25000	-8	-15		241	259
30000	-	-24		-	-
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	50		-	-
5000	-	40		-	-
10000	35	30		304	225
15000	26	20	1100	276	237
20000	17	10		257	250
25000	-	0		-	-
30000	-	-9		-	-

\* ECS: NORMAL

Intermediate Cruise Power, 1100 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-101



ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	-5		-	-
5000	-	-15		-	-
10000	-	-25		-	-
15000	-	-35	1200	-	-
20000	-40	-45		271	241
25000	-49	-55		258	254
30000	-	-64		-	-
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	5		-	-
5000	-	-5		-	-
10000	-	-15		-	-
15000	-	-25	1200	-	-
20000	-30	-35		271	245
25000	-39	-45		259	258
30000	-	-54		-	-
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	15		-	-
5000	-	5		-	-
10000	-	-5		-	-
15000	-10	-15	1200	290	235
20000	-19	-25		272	248
25000	-29	-35		260	261
30000	-	-44		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit  
See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1200 FT-LB  
(ISA, ISA -10, ISA -20)


Figure 5-103

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	25		-	-
5000	-	15		-	-
10000	-	5		-	-
15000	0	-5	1200	290	238
20000	-9	-15		272	251
25000	-18	-25		260	264
30000	-	-34		-	-
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	35		-	-
5000	-	25		-	-
10000	-	15		-	-
15000	11	5	1200	291	241
20000	1	-5		273	254
25000	-	-15		-	-
30000	-	-24		-	-
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-	50		-	-
5000	-	40		-	-
10000	-	30		-	-
15000	26	20	1200	292	245
20000	17	10		274	258
25000	-	0		-	-
30000	-	-9		-	-

\* ECS: NORMAL

Intermediate Cruise Power, 1200 FT-LB  
(ISA +10, ISA +20, ISA +35)

 Figure 5-105



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	-4	-5	420	280	118
5000	-14	-15	383	236	118
10000	-24	-25	350	194	119
15000	-34	-35	326	162	123
20000	-43	-45	328	139	131
25000	-53	-55	341	121	142
30000	-63	-64	362	109	155
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	6	5	409	278	117
5000	-4	-5	375	235	118
10000	-14	-15	344	194	120
15000	-23	-25	324	162	124
20000	-33	-35	331	139	133
25000	-43	-45	346	122	145
30000	-53	-54	369	110	158
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	16	15	397	276	117
5000	6	5	367	233	118
10000	-4	-5	340	193	120
15000	-13	-15	325	163	126
20000	-23	-25	335	140	136
25000	-33	-35	351	123	148
30000	-42	-44	376	111	162

NOTE: Shaded areas may be beyond aircraft OAT limit.

See paragraph 2.28.

\* ECS: NORMAL

Maximum Range Cruise  
(ISA, ISA -10, ISA -20)

Figure 5-107



ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	26	25	389	274	118
5000	16	15	363	233	119
10000	6	5	336	193	121
15000	-3	-5	328	164	128
20000	-13	-15	338	141	139
25000	-23	-25	356	123	151
30000	-32	-34	383	113	166
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	36	35	381	273	118
5000	26	25	356	231	119
10000	17	15	331	192	122
15000	7	5	330	165	130
20000	-3	-5	342	141	142
25000	-13	-15	362	125	154
30000	-22	-24	391	114	169
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (PPH)*	TAS (KT)
0	51	50	368	272	118
5000	41	40	342	229	120
10000	32	30	327	192	123
15000	22	20	334	166	134
20000	12	10	348	143	146
25000	3	0	370	126	159
30000	-7	-9	401	116	174


NOTE: Shaded areas may be beyond aircraft OAT limit.

See paragraph 2.28.

\* ECS: NORMAL

Maximum Range Cruise  
(ISA +10, ISA +20, ISA +35)

 Figure 5-109



**MAXIMUM SPEED CRUISE**

Altitude	Cruise Nautical Miles / 100 Lbs. Fuel					
	FT	ISA - 20° C	ISA - 10° C	ISA	ISA + 10° C	ISA + 20° C
0	51.4	51.8	52.1	52.8	53.2	53.8
5000	61.0	61.2	61.8	62.1	62.3	62.8
10000	71.3	71.7	72.1	72.5	72.6	72.9
15000	80.7	81.1	81.0	81.4	81.6	81.8
20000	87.2	87.4	88.0	88.7	89.7	94.2
25000	92.9	95.3	98.5	101.5	105.2	110.1
30000	-	113.9	118.1	122.0	125.6	131.8

**INTERMEDIATE POWER CRUISE - 1000 FT-LB**

Altitude	Cruise Nautical Miles / 100 Lbs. Fuel					
	FT	ISA - 20° C	ISA - 10° C	ISA	ISA + 20° C	ISA + 35° C
0	-	-	-	-	-	53.6
5000	-	61.3	62.1	62.2	62.7	63.4
10000	72.3	73.0	73.4	74.3	74.7	75.5
15000	84.0	85.3	85.6	86.8	87.4	87.7
20000	95.4	96.7	97.5	99.0	99.7	100.9
25000	106.7	108.1	110.2	111.4	112.1	113.5
30000	116.8	119.0	120.0	-	-	-

**MAXIMUM RANGE CRUISE**

Altitude	Cruise Nautical Miles / 100 Lbs. Fuel					
	FT	ISA - 20° C	ISA - 10° C	ISA	ISA + 20° C	ISA + 35° C
0	42.1	42.1	42.4	43.1	43.2	43.4
5000	50.0	50.2	50.6	51.1	51.5	52.4
10000	61.3	61.9	62.2	62.7	63.5	64.1
15000	75.3	76.2	77.3	78.3	79.2	80.8
20000	84.2	86.2	87.6	89.7	100.7	102.1
25000	117.7	119.3	121.0	123.3	123.9	126.3
30000	142.3	144.4	146.5	146.9	148.8	150.3

Note:

ECS: NORMAL

Shaded areas may be beyond aircraft OAT limit. See paragraph 2.28.

Does not include 45 minute reserve, 26 gal. (174.2 Lb).

To obtain 45 minute reserve endurance set power to Max Range Cruise Power @ 5,000'

Specific Air Range  
Figure 5-111

**HOLDING TIME**

FUEL REQUIRED - LB

AIRSPEED - 130 KIAS

		Pressure Altitude - Ft.						
Delta ISA	Holding Time	Sea Level	5,000	10,000	15,000	20,000	25,000	29,000
Deg C	Min.							
-20	Torque FT-LB	451	449	454	468	490	522	554
	10	49	42	35	31	27	25	24
	20	98	83	70	61	53	49	47
	30	146	125	105	91	80	73	70
	40	195	166	140	121	106	97	93
-10	Torque FT-LB	452	450	458	473	498	532	566
	10	49	42	36	31	27	25	24
	20	97	83	71	61	54	49	47
	30	146	125	106	91	80	74	71
	40	194	166	141	122	107	98	94
0	Torque FT-LB	452	451	462	479	506	542	578
	10	49	42	36	31	27	25	24
	20	97	83	71	61	54	50	48
	30	146	125	106	92	81	74	71
	40	194	166	142	122	108	99	95
10	Torque FT-LB	453	455	466	486	515	553	590
	10	49	42	36	31	28	26	25
	20	97	84	71	62	55	51	49
	30	145	125	107	92	82	76	73
	40	193	167	142	123	110	101	97
20	Torque FT-LB	453	457	470	492	523	563	603
	10	49	42	36	31	28	26	25
	20	97	84	72	62	55	51	50
	30	145	125	107	93	83	77	74
	40	194	167	143	124	110	102	99
35	Torque FT-LB	448	461	477	501	535	579	622
	10	49	42	36	32	28	26	26
	20	97	84	72	63	56	52	51
	30	145	126	108	94	84	78	76
	40	193	168	144	125	112	104	102

Holding Time vs. Fuel On Board

Figure 5-113




**EXAMPLE**

Cruise OAT: -20 C° Destination OAT: 25 C°  
 Cruise Press. Alt.: 25,000 FT. Destination Press. Alt.: 3,500 FT.  
 Time To Descend.: 16.6 Min Time To Descend: 2.9 Min.  
 Time During Descent: 16.6 - 2.6 = 14.0 Min

**ASSOCIATED CONDITIONS**

Power: 350 FT-LB  
 ECS: NORMAL  
 Flaps & Gear: RETRACTED  
 Descent Speed: 170 KT at 3,800 LB  
 174 KT at 4,400 LB  
 177 KT at 4,800 LB

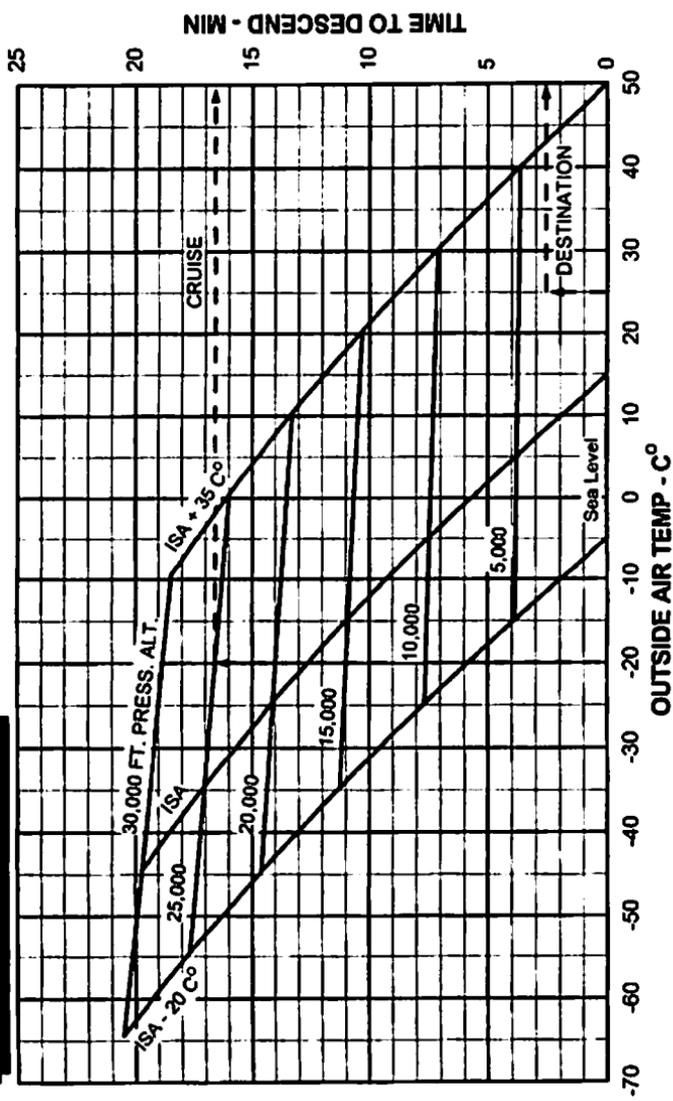


Time to Descend  
Figure 5-115

**EXAMPLE**

Cruise OAT: -20°C    Destination OAT: 25°C  
 Cruise Press. Alt.: 25,000 FT.    Destination Press. Alt.: 3,500 FT.  
 Fuel To Descend: 50.1 LB.    Fuel To Descend: 10.7 LB.  
 Fuel Used During Descent: 50.1 - 10.7 = 39.4 LB.

**ASSOCIATED CONDITIONS**

Power: 350 FT-LB  
 Flaps & Gear: RETRACTED  
 Descent Speed: 170 KT AT 3,800 LB  
 174 KT AT 4,400 LB  
 177 KT AT 4,800 LB

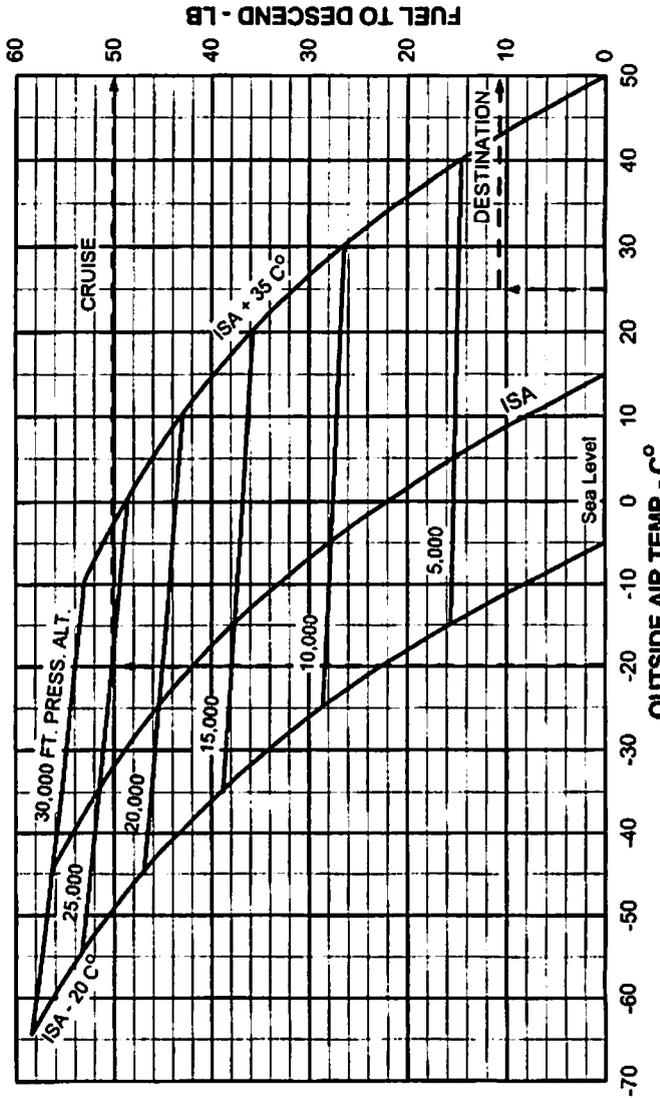

Fuel to Descend  
Figure 5-117




**EXAMPLE**

Cruise OAT: -20 C° Destination OAT: 25 C°  
 Cruise Press. Alt.: 25,000 FT. Destination Press Alt.: 3,500 FT.  
 Dist. to Descend: 60.2 NM Dist. to Descend: 8.2 NM  
 Distance during Climb: 60.2 - 8.2 = 52 NM

**ASSOCIATED CONDITIONS**

Power: 350 FT-LB  
 ECS: NORMAL  
 Flaps & Gear: RETRACTED  
 Descent Speed: 170 KT AT 3,800 LB  
 174 KT AT 4,400 LB  
 177 KT AT 4,800 LB

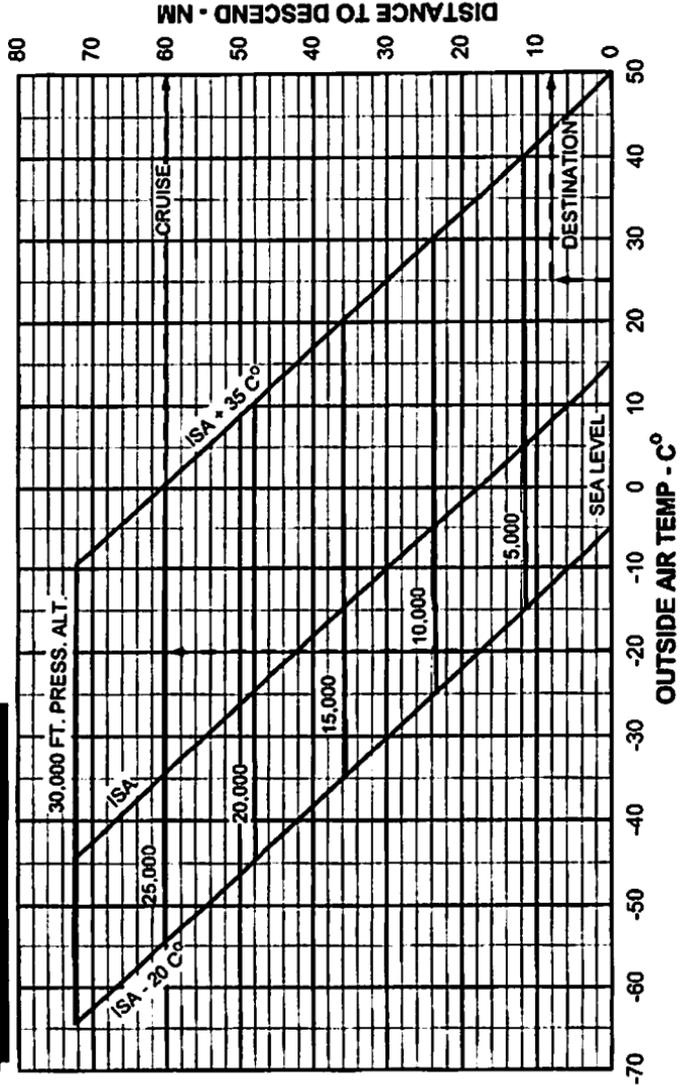


Distance to Descend  
Figure 5-119

**EXAMPLE**

Weight: 4,350 LB    Airspeed: 100 KIAS  
 Cruise OAT: -20° C    Destination OAT: 25° C  
 Cruise Press. Alt.: 25,000 FT.    Destination Press. Alt.: 3,500 FT.  
 Glide Time: 37.4 Min    Glide Time: 6.0 Min.  
 Glide Endurance: 37.4 - 6 = 31.4 Min

**ASSOCIATED CONDITIONS**

Power: OUT  
 Flaps And Gear: RETRACTED  
 Propeller: FEATHERED

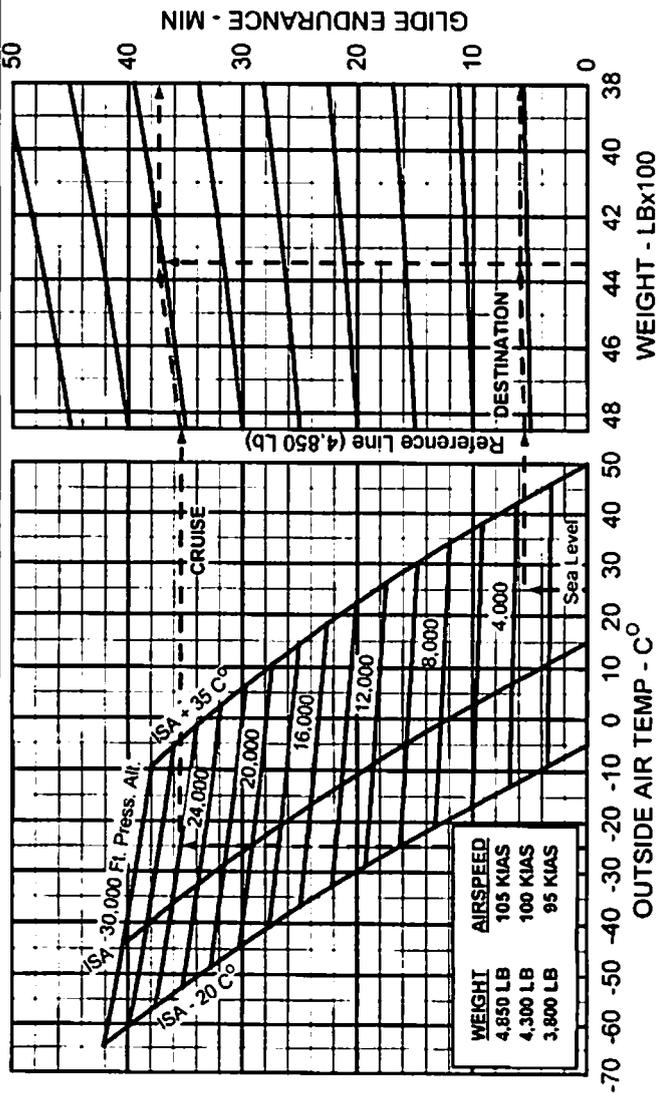

Glide Endurance  
 Figure 5-121

SECTION 5  
PERFORMANCE

PA-46-500TP




**EXAMPLE**

Cruise Press. Alt.: 25,000 Ft. Dest. Press. Alt.: 3,500 Ft.  
Cruise Glide Range: 72.4 N.M. Dest. Glide Range: 9.8 N.M.  
Glide Range: 72.4 - 9.8 = 62.6 N.M.

**ASSOCIATED CONDITIONS**


Flaps And Gear: RETRACTED  
Propeller: FEATHERED  
Power: OFF

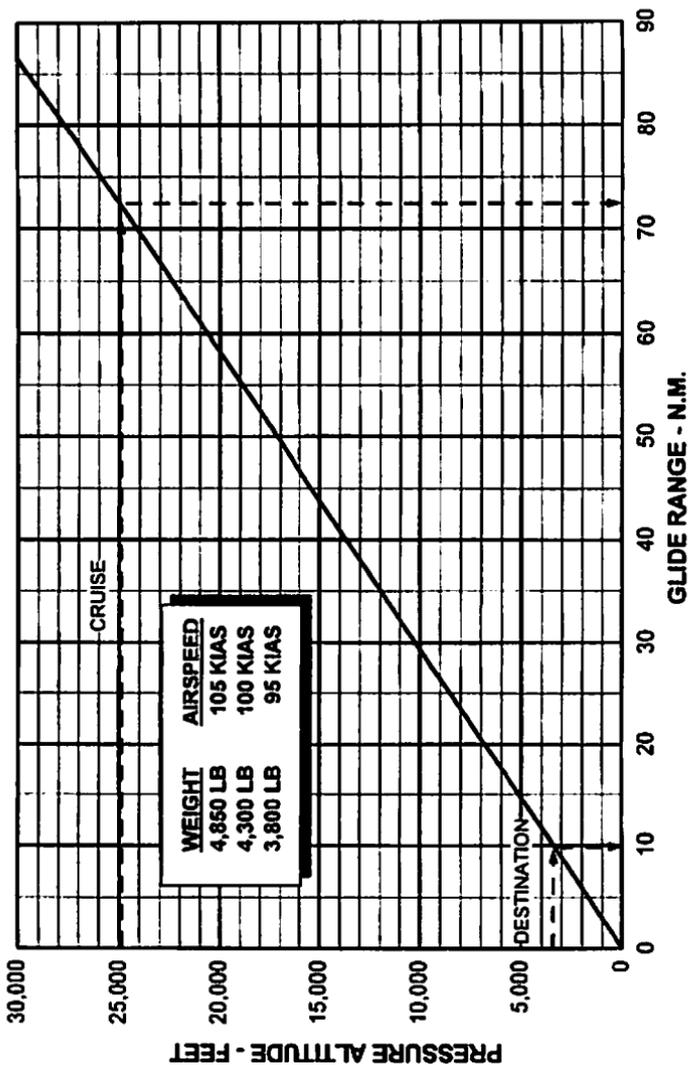


Glide Distance  
Figure 5-123



**EXAMPLE**  
 OAT: 25°C  
 Press. Altit.: 3,500 FT.  
 Weight: 4,500 LB.  
 Rate of Climb: 1,208 FPM

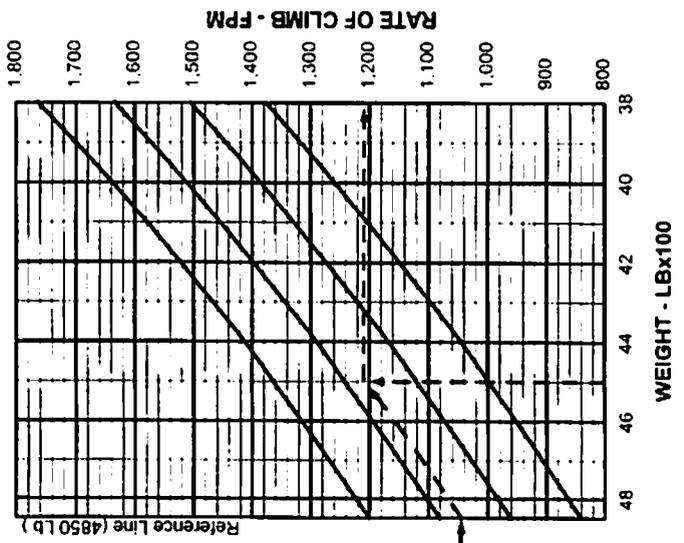

**ASSOCIATED CONDITIONS**  
 Power: MAXIMUM CONTINUOUS  
 ECS: NORMAL  
 Gear: EXTENDED  
 Flaps: 36°  
 Climb speed: 85 KIAS

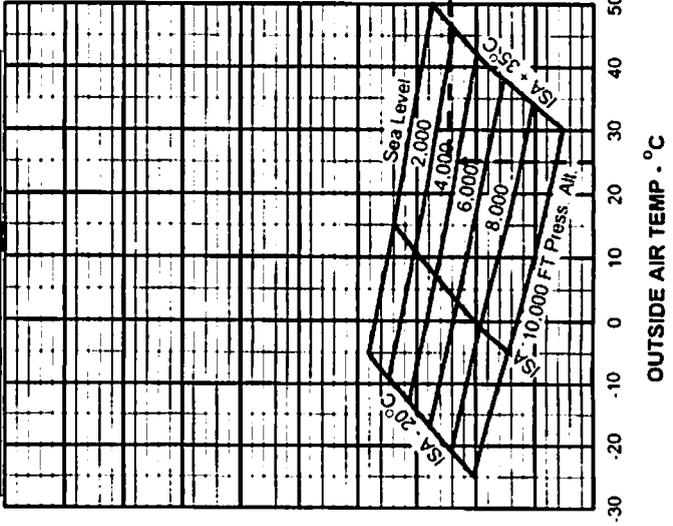

Balked Landing Climb Performance


Figure 5-125

**SECTION 5**  
**PERFORMANCE**

*PA-46-500TP*



**THIS PAGE INTENTIONALLY LEFT BLANK**

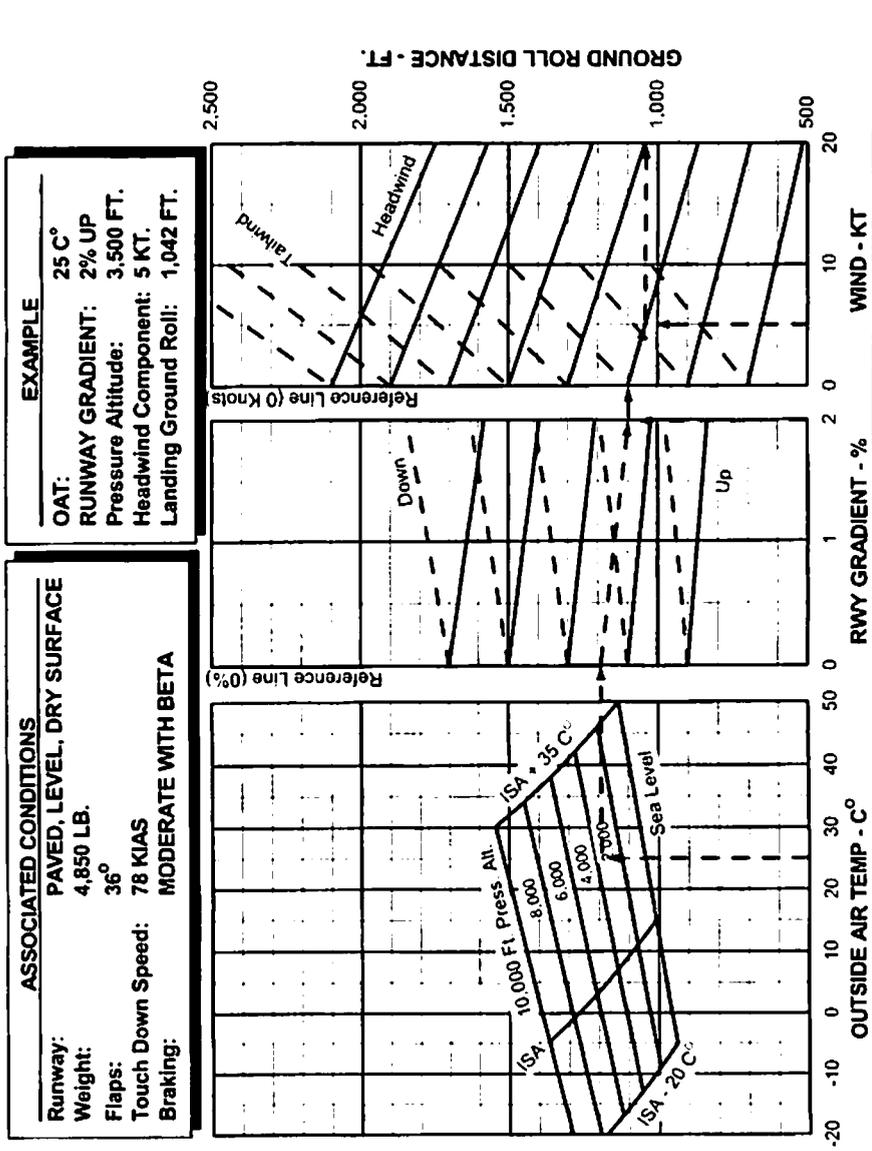

Landing Ground Roll, Flaps 36°, without Reverse

Figure 5-129



**THIS PAGE INTENTIONALLY LEFT BLANK**

THIS PAGE INTENTIONALLY LEFT BLANK




**THIS PAGE INTENTIONALLY LEFT BLANK**

**EXAMPLE**

OAT: 25 °C  
 Runway Gradient: 2% UP  
 Pressure Altitude: 3,500 FT.  
 Headwind Component: 5 KT.  
 Landing Distance: 2,205 FT.

**ASSOCIATED CONDITIONS**

Runway: PAVED, LEVEL, DRY SURFACE  
 Weight: 4,850 LB.  
 Approach Power: 280 FT-LB.  
 Flaps: 36°  
 Approach Speed: 85 KIAS  
 Touch Down Speed: 78 KIAS  
 Braking: MODERATE WITH BETA

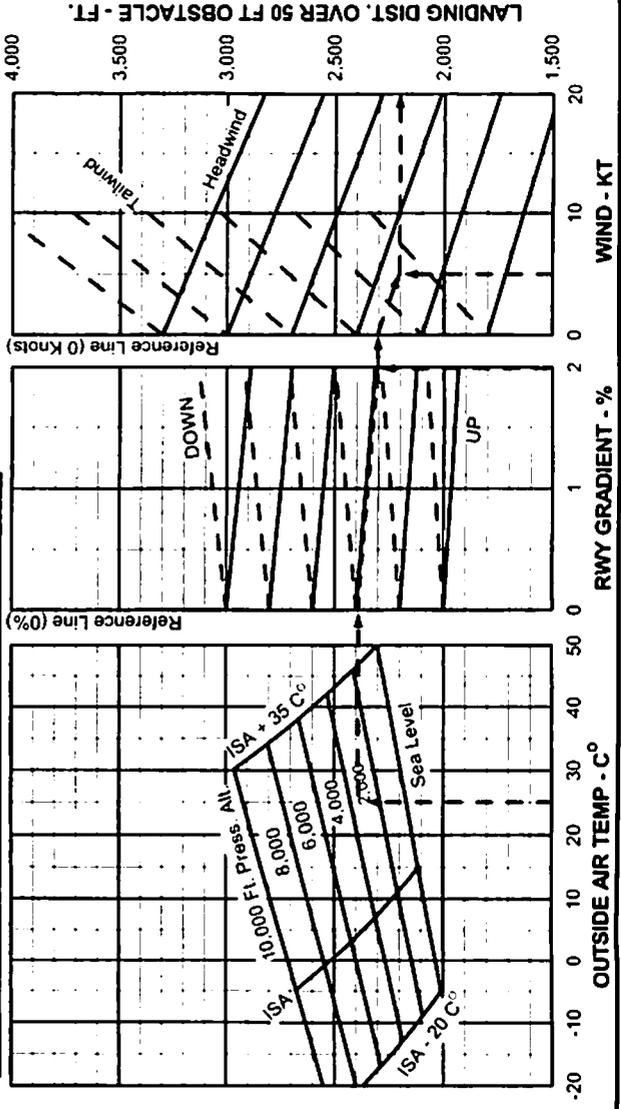

Landing Distance, Flaps 36°, without Reverse  
 Figure 5-137




**THIS PAGE INTENTIONALLY LEFT BLANK**

THIS PAGE INTENTIONALLY LEFT BLANK



**THIS PAGE INTENTIONALLY LEFT BLANK**

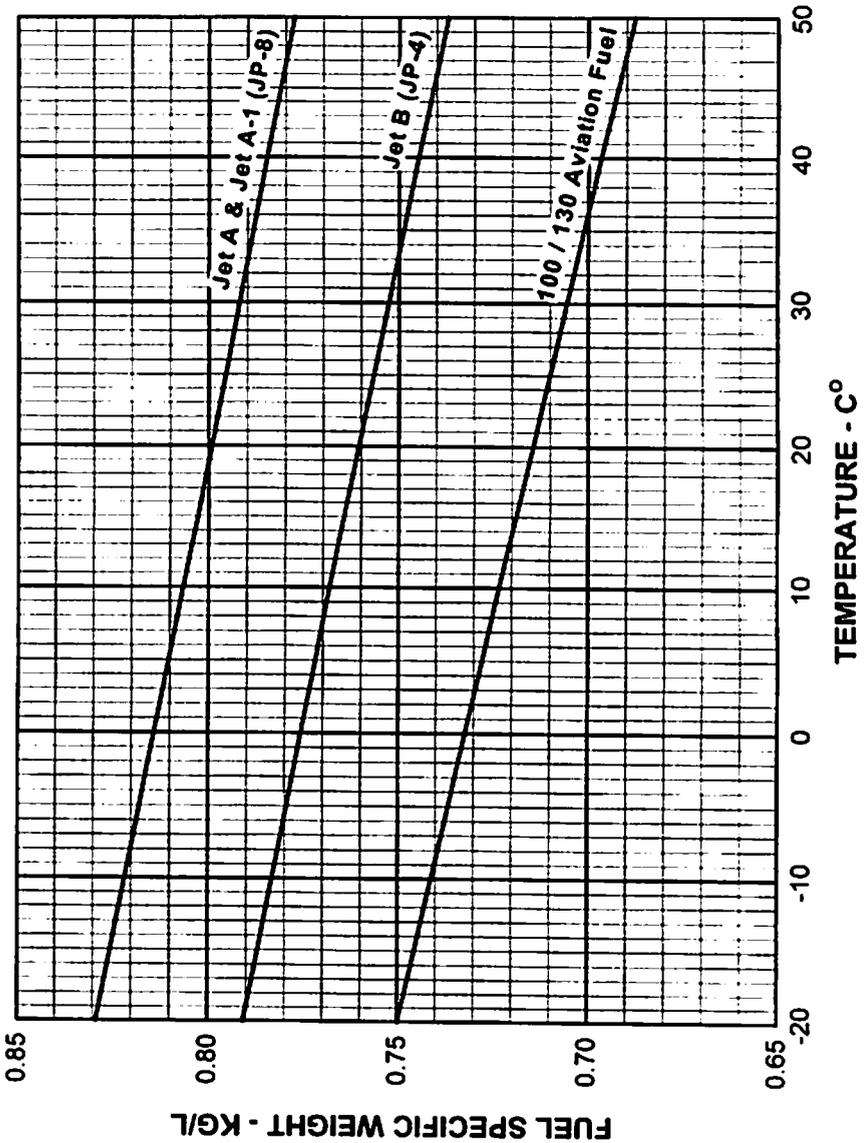


Aviation Fuel Specific Weight

Figure 5-145




**EXAMPLE**  
 Indicated Airspeed: 125 KT  
 Calibrated Airspeed: 124 KT

**ASSOCIATED CONDITIONS**  
 Flaps: 0° & 10°, Gear: RETRACTED


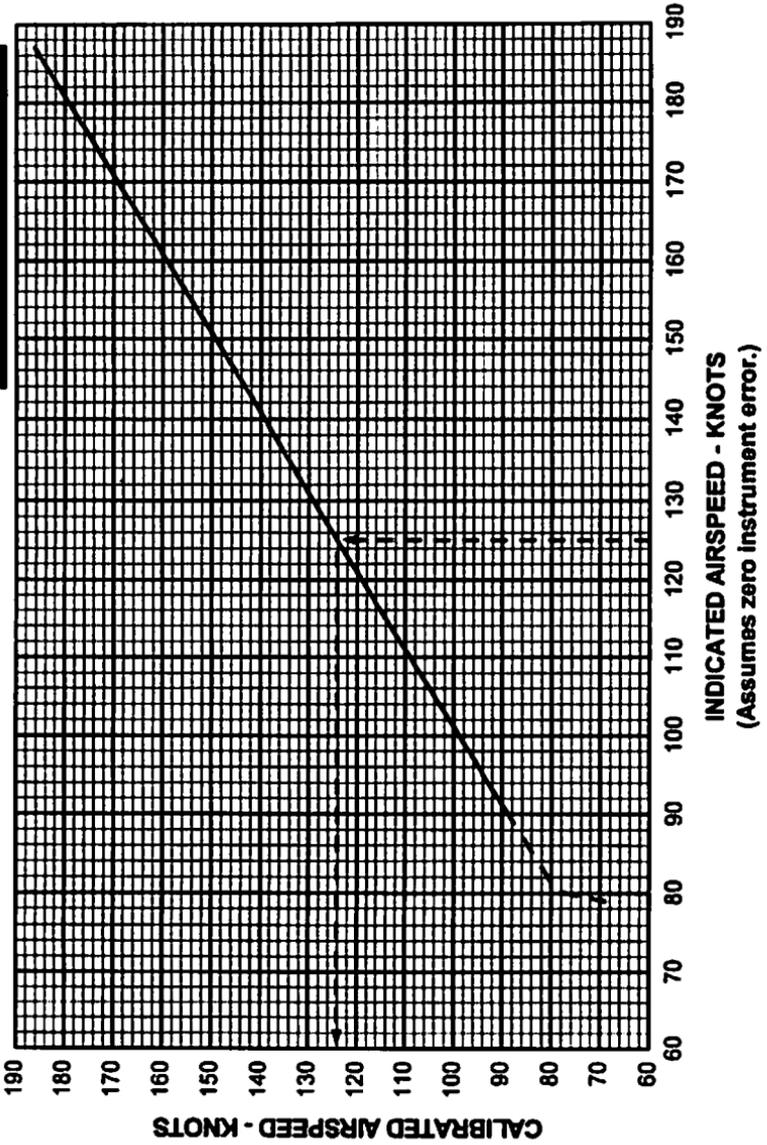


**Airspeed Calibration**  
 Primary Static (Flaps 0° and 10°)  
 Figure 5-147

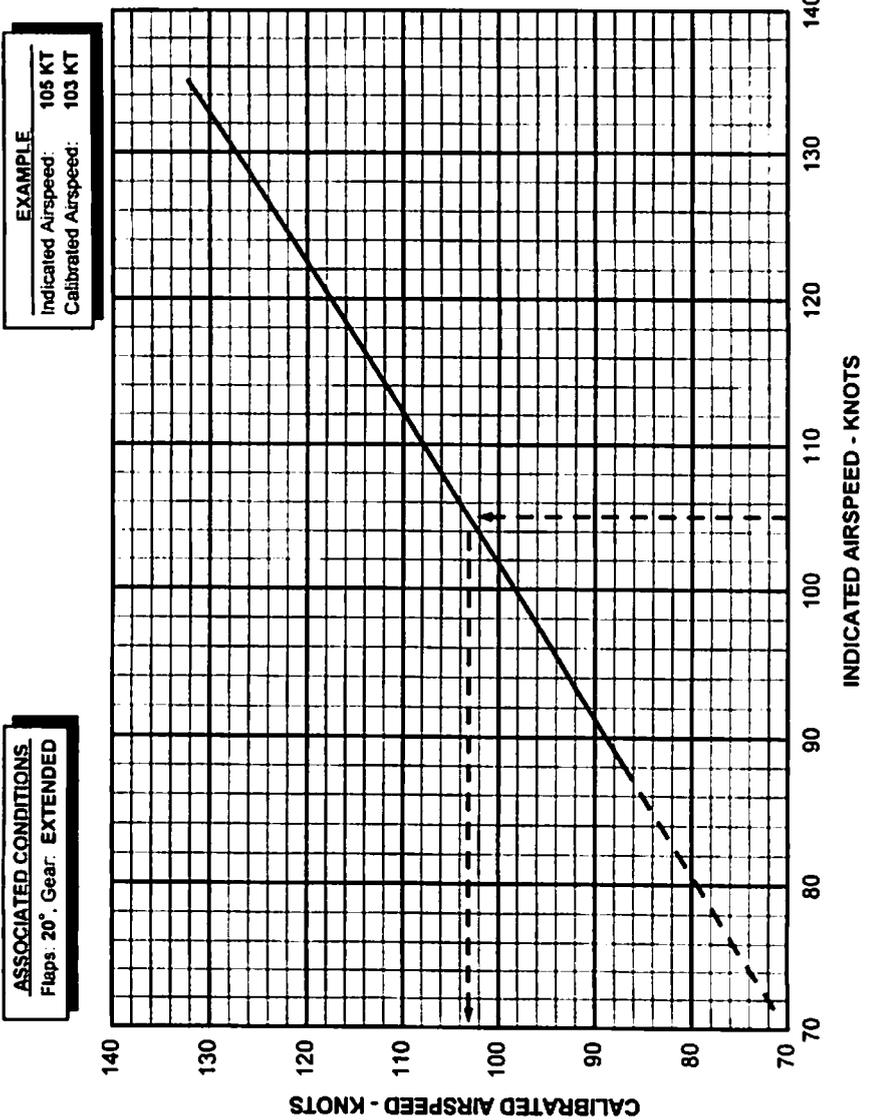


Airspeed Calibration  
Primary Static (Flaps 20°, Gear DOWN)

 Figure 5-149

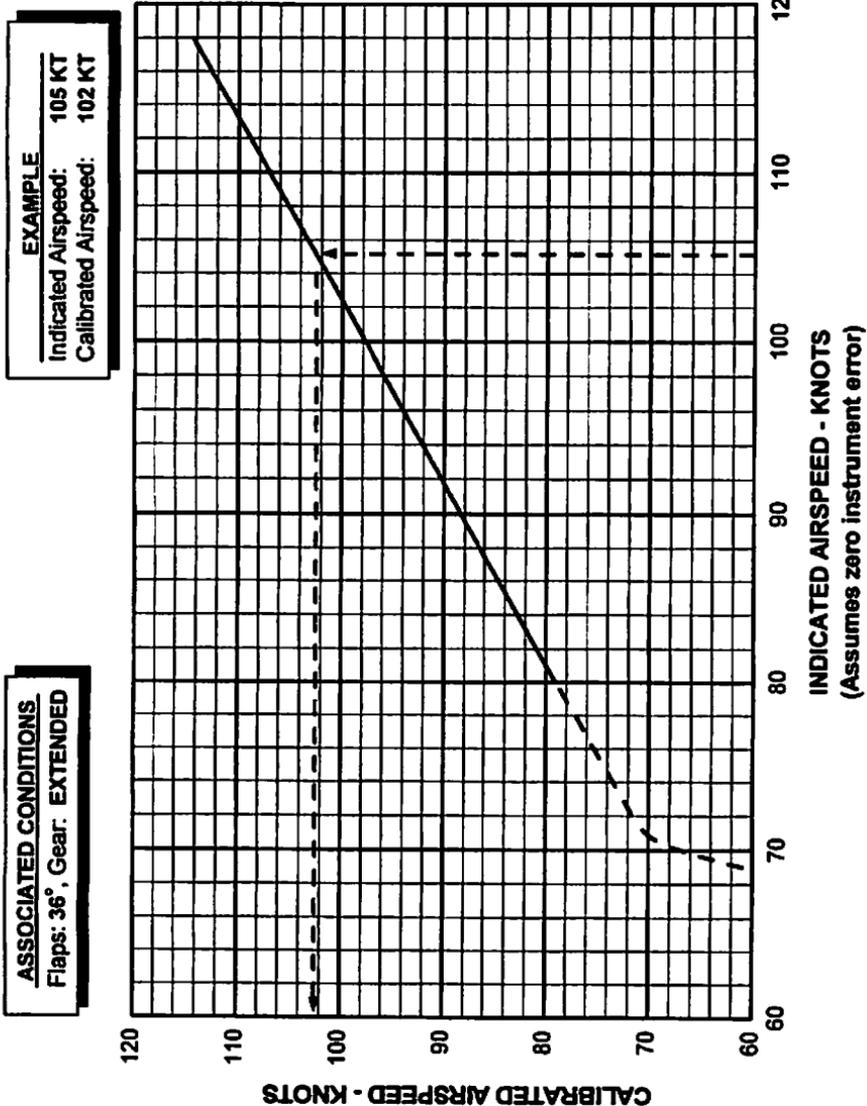

Airspeed Calibration  
Primary Static (Flaps 36°, Gear DOWN)  
Figure 5-151

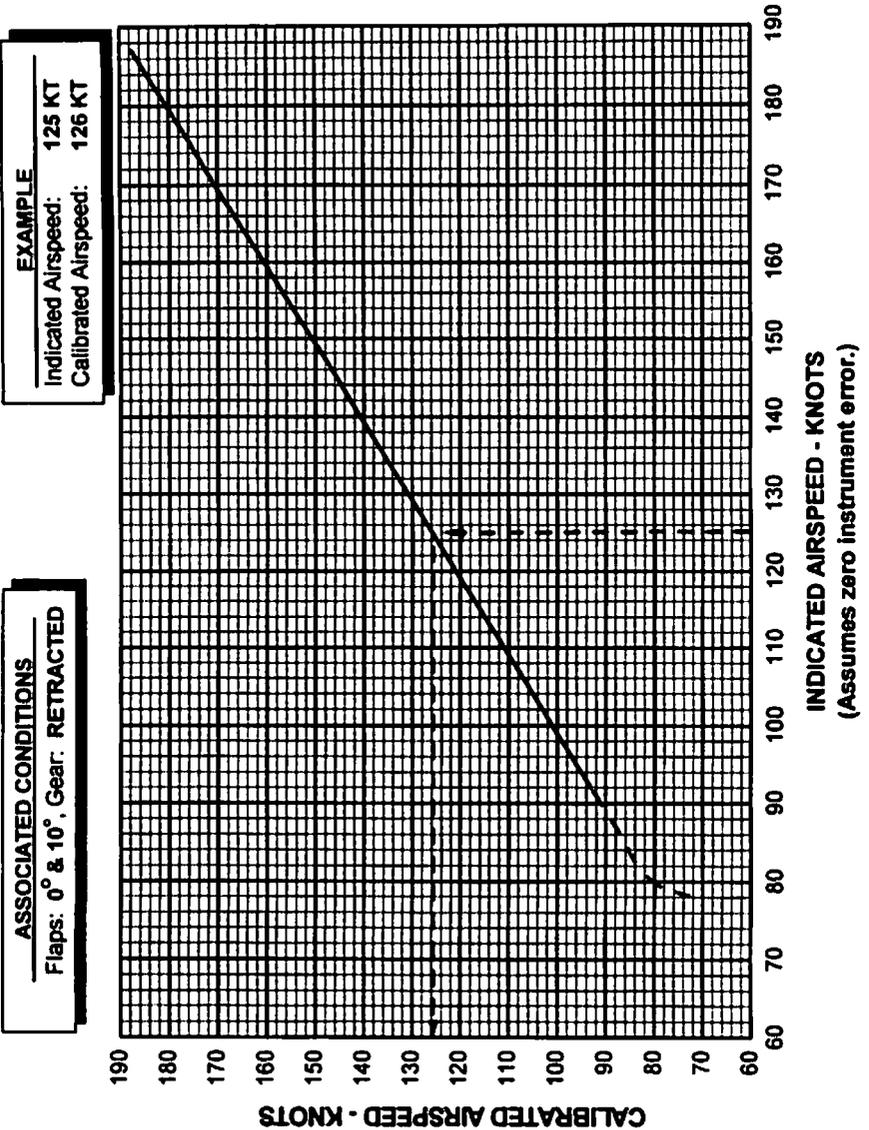


Airspeed Calibration  
 Alternate Static (Flaps 0° and 10°)  
 Figure 5-153





**EXAMPLE**  
Indicated Airspeed: 106 KT  
Calibrated Airspeed: 105 KT


**ASSOCIATED CONDITIONS**  
Flaps: 20°, Gear: EXTENDED

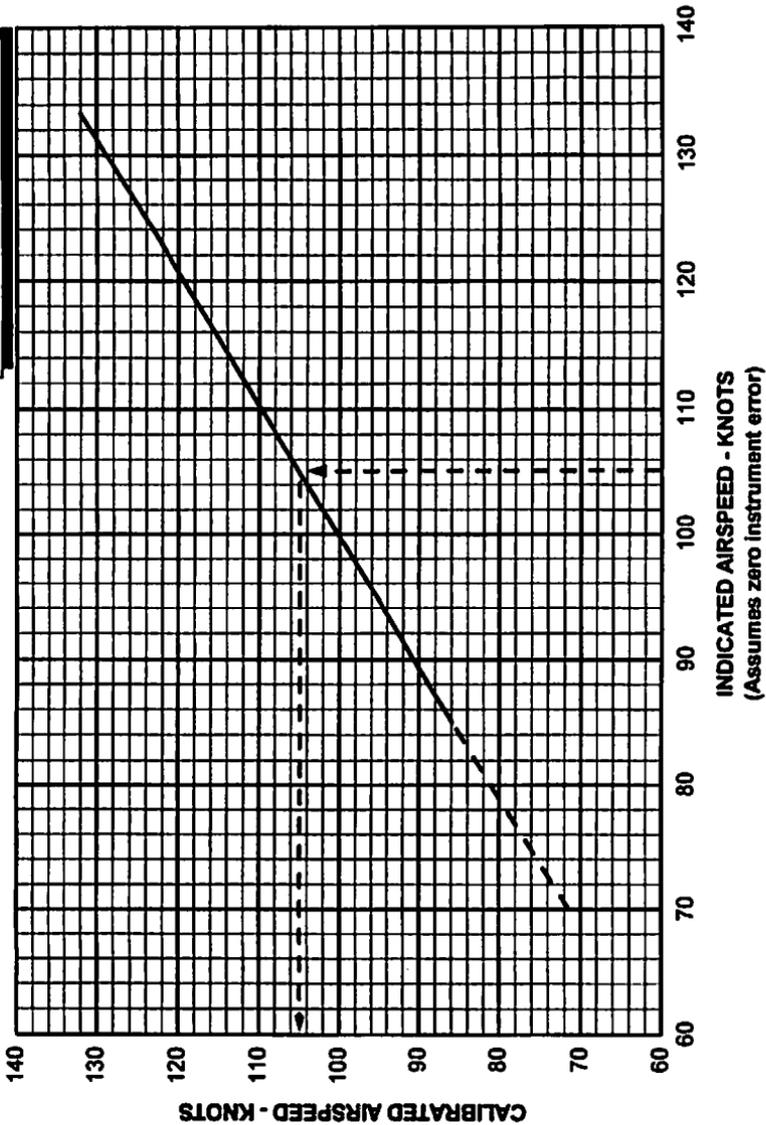

 Airspeed Calibration  
Alternate Static (Flaps 20°, Gear DOWN)  
Figure 5-155

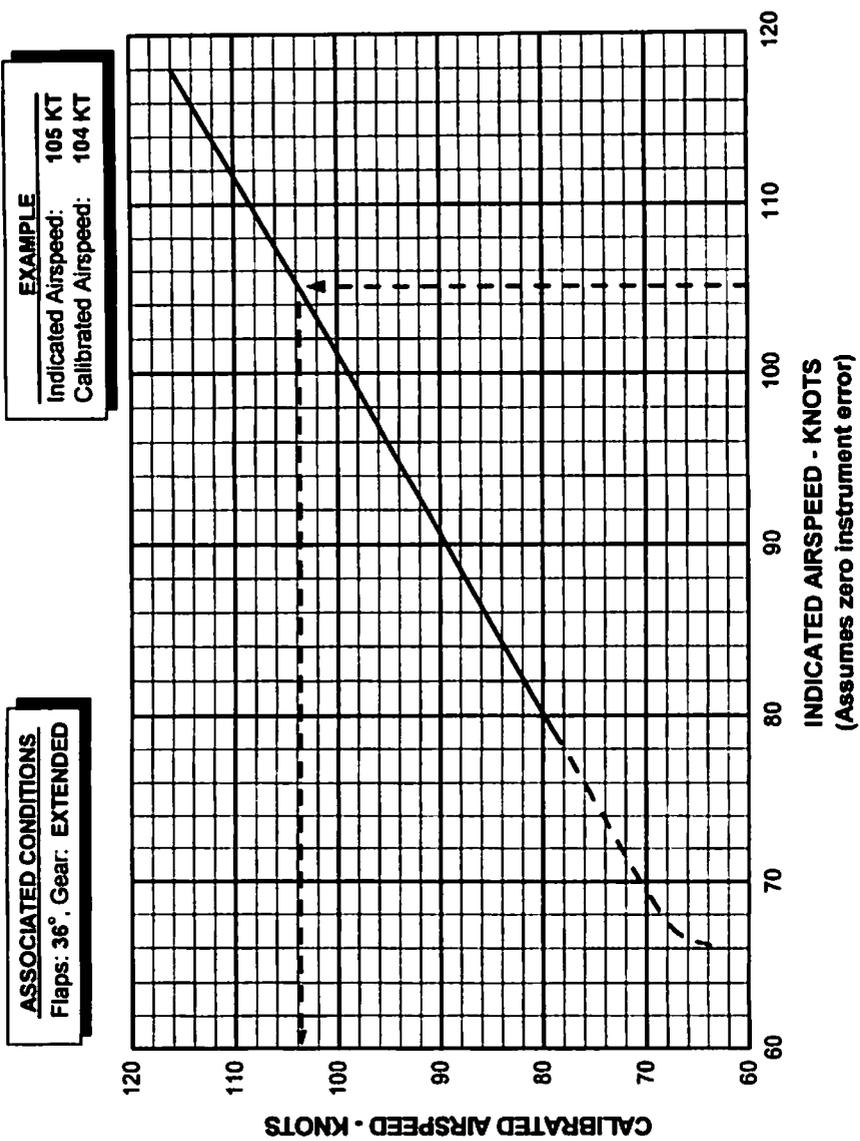


 Airspeed Calibration  
Alternate Static (Flaps 36°, Gear DOWN)  
Figure 5-157




**EXAMPLE**  
 Indicated Airspeed: 170 KT  
 Pressure Altitude: 25,000 FT  
 Altitude Correction: -22 FT  
 Add Correction to Press. Alt. = 24,978 FT

**ASSOCIATED CONDITIONS**  
 Flaps: 0° & 10°  
 Gear: RETRACTED

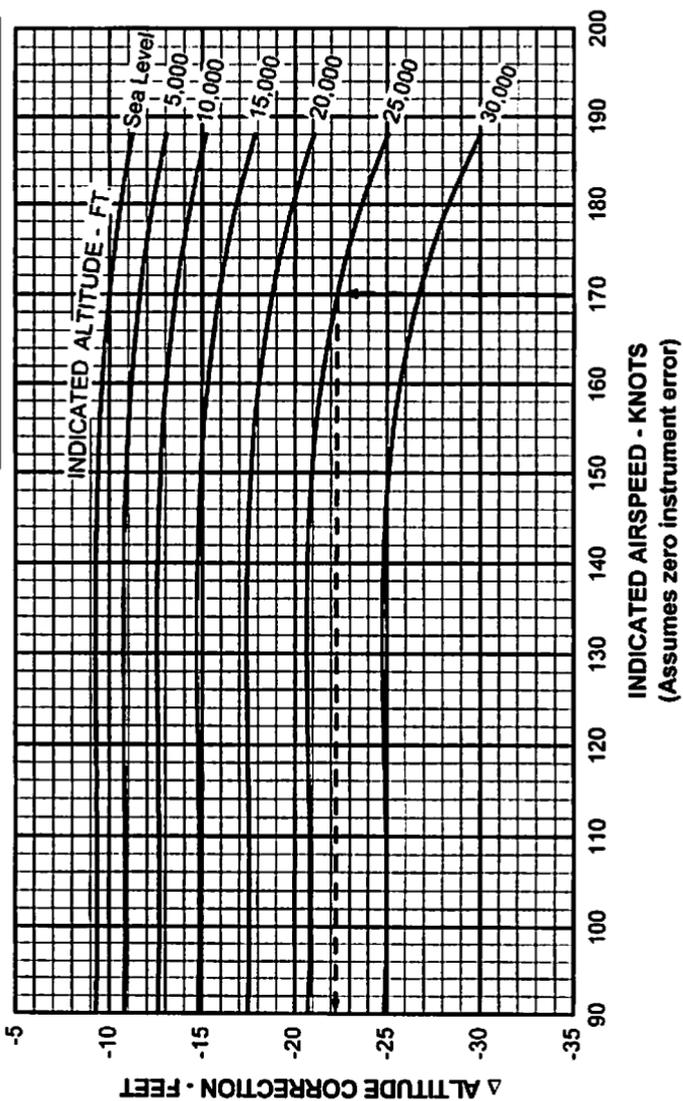

 Altitude Calibration  
 Primary Static (Flaps 0° and 10°)  
 Figure 5-159




**EXAMPLE**


Indicated Airspeed: 105 KT  
 Pressure Altitude: 4,500 FT  
 Altitude Correction: -20 FT  
 Add Correction to Press. Alt.: = 4,480 FT

**ASSOCIATED CONDITIONS**

Flaps: 20°  
 Gear: EXTENDED

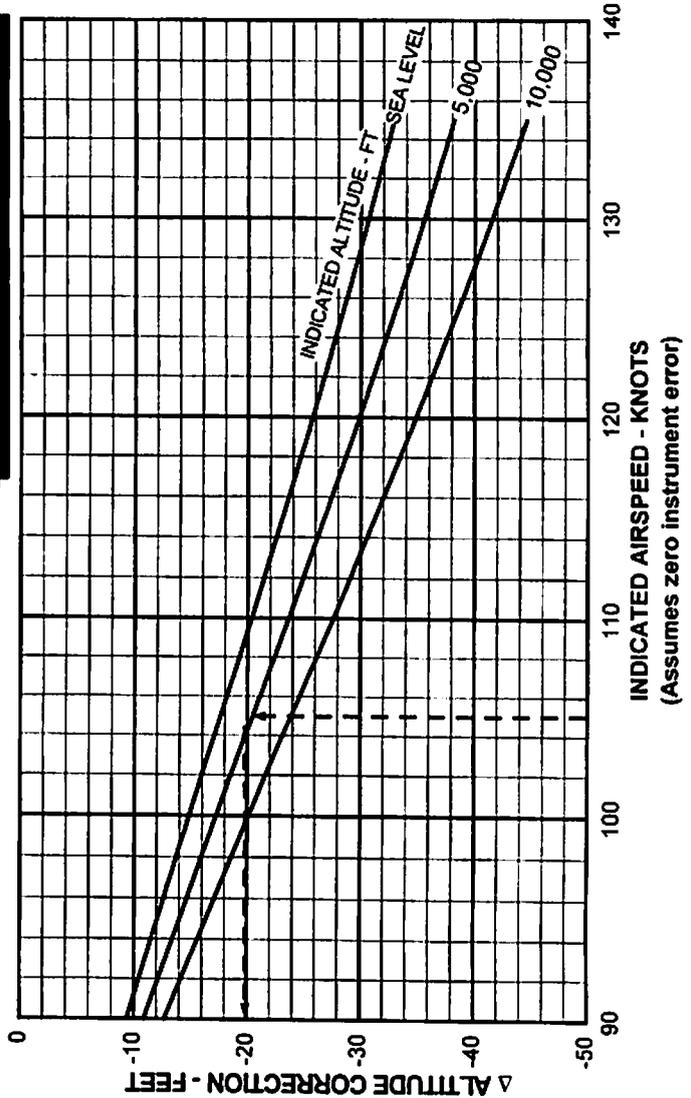

 Altitude Calibration  
 Primary Static (Flaps 20°, Gear DOWN)  
 Figure 5-161




**EXAMPLE**

Indicated Airspeed: 90 KT  
 Pressure Altitude: 5,000 FT  
 Altitude Correction: 14 FT  
 Add Correction to Press. Alt. = 4,986 FT

**ASSOCIATED CONDITIONS**

Flaps: 36°  
 Gear: EXTENDED

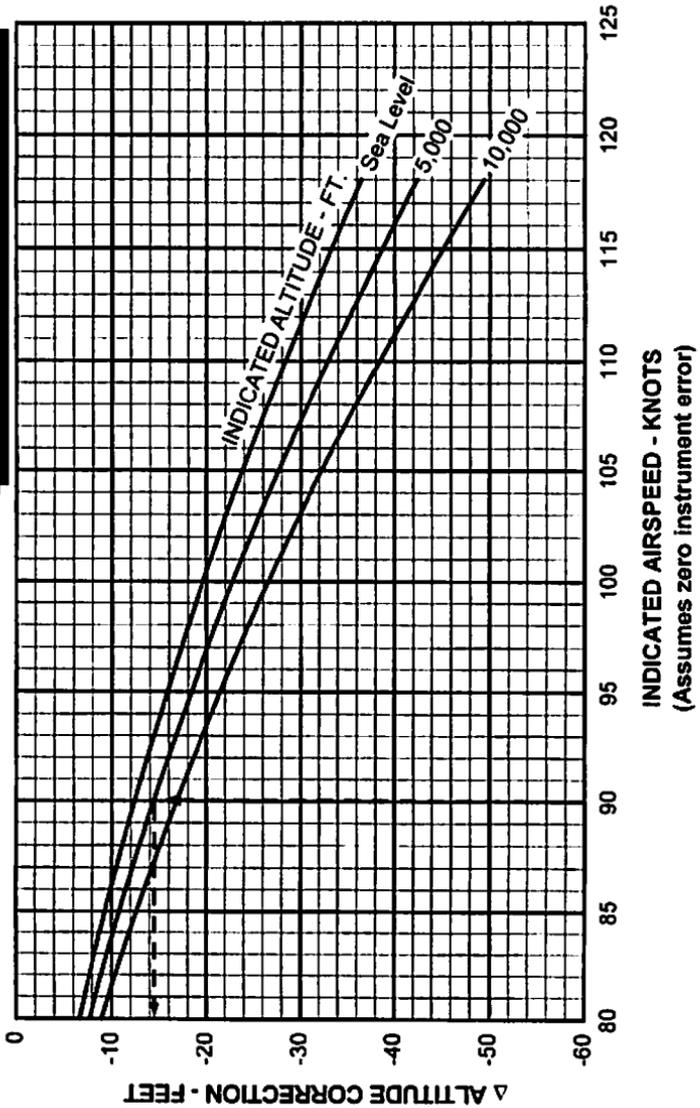

Altitude Calibration  
 Primary Static (Flaps 36°, Gear DOWN)

Figure 5-163




**EXAMPLE**

Indicated Airspeed: 170 KT  
 Pressure Altitude: 25,000 FT  
 Altitude Correction: 19 FT  
 Add Correction to Press. Alt. = 25,019 FT

**ASSOCIATED CONDITIONS**

Flaps: 0° & 10°  
 Gear: RETRACTED

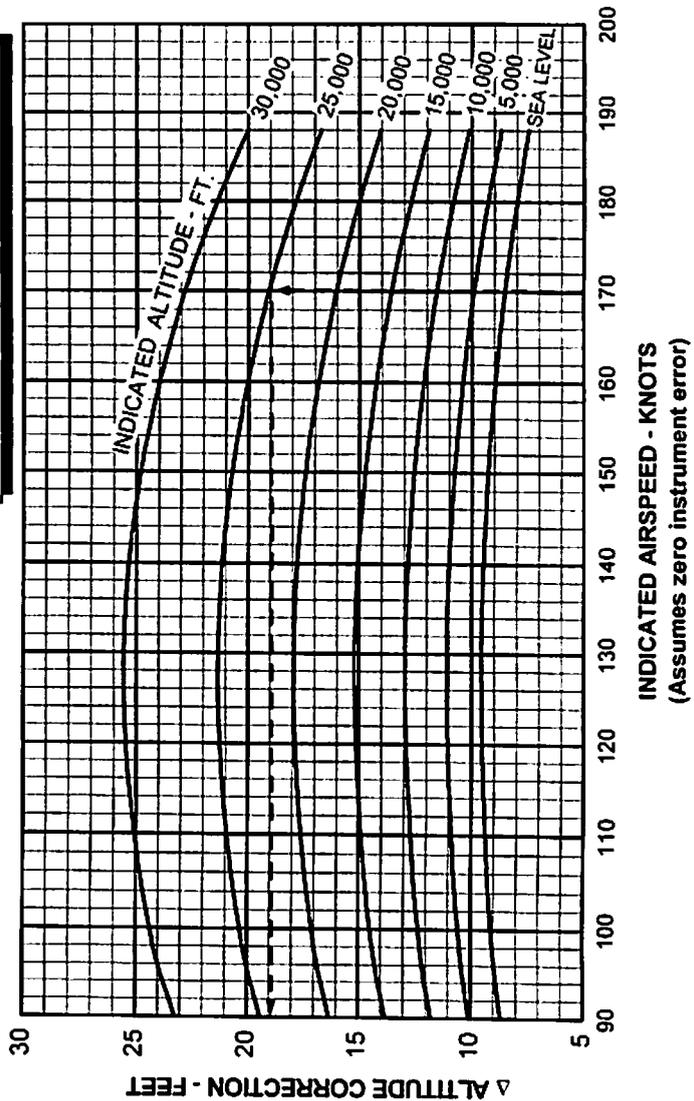

Altitude Calibration  
 Alternate Static (Flaps 0° and 10°)  
 Figure 5-165




**EXAMPLE**

Indicated Airspeed: 105 KT  
 Pressure Altitude: 4,500 FT  
 Altitude Correction: 0 FT  
 Add Correction to Press. Alt.: = 4,500 FT


**ASSOCIATED CONDITIONS**

Flaps: 20°  
 Gear: EXTENDED

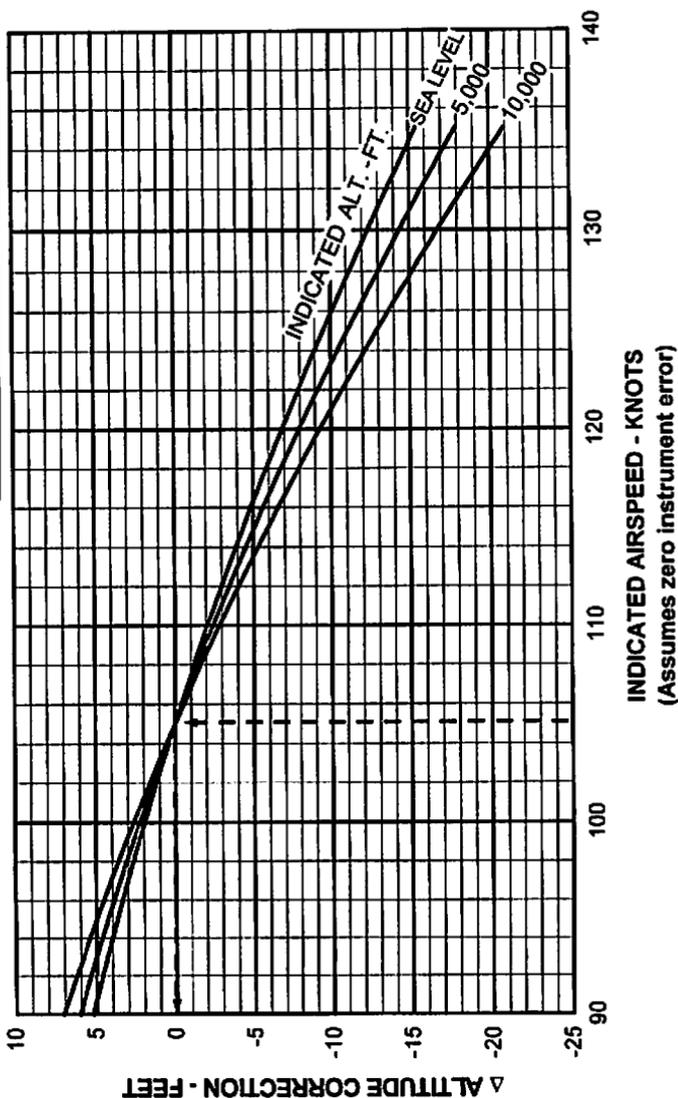

Altitude Calibration  
 Alternate Static (Flaps 20°, Gear DOWN)

 Figure 5-167




**EXAMPLE**


Indicated Airspeed: 90 KT  
 Pressure Altitude: 5,000 FT  
 Altitude Correction: -5 FT  
 Add Correction to Press. Alt. = 4,995 FT

**ASSOCIATED CONDITIONS**

Flaps: 36°  
 Gear: EXTENDED

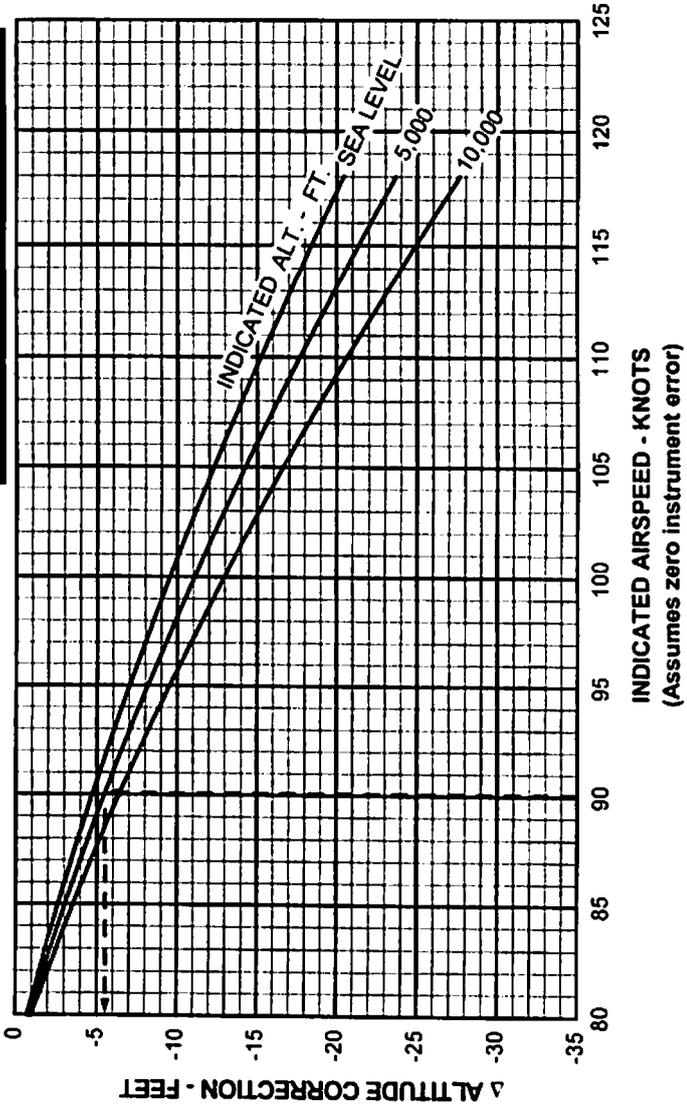

Altitude Calibration  
 Alternate Static (Flaps 36°, Gear DOWN)  
 Figure 5-169

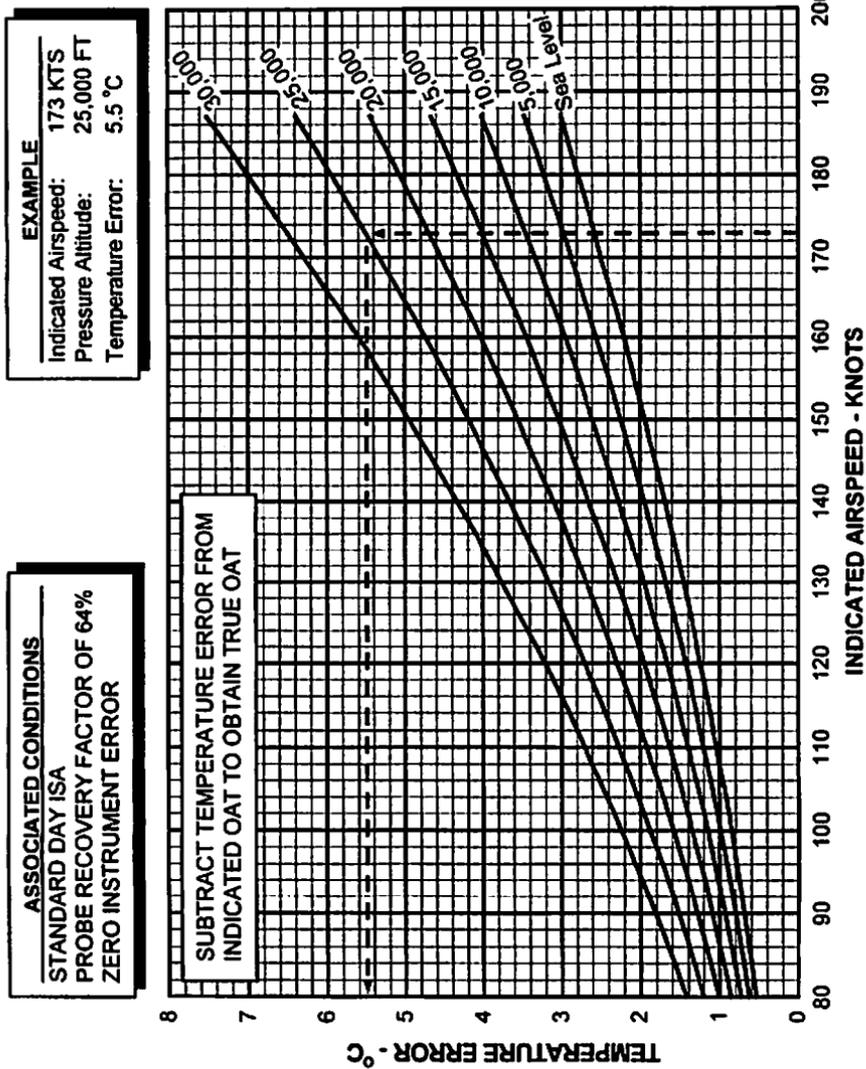


Temperature Probe Calibration

Figure 5-171



ASSOCIATED CONDITION  
AIRCRAFT WEIGHT: 2,200 KG

EXAMPLE  
FLAPS: UP BANK ANGLE: 40°  
GEAR: UP POWER: FLT IDLE  
INDICATED STALL SPEED: 90.3 KT

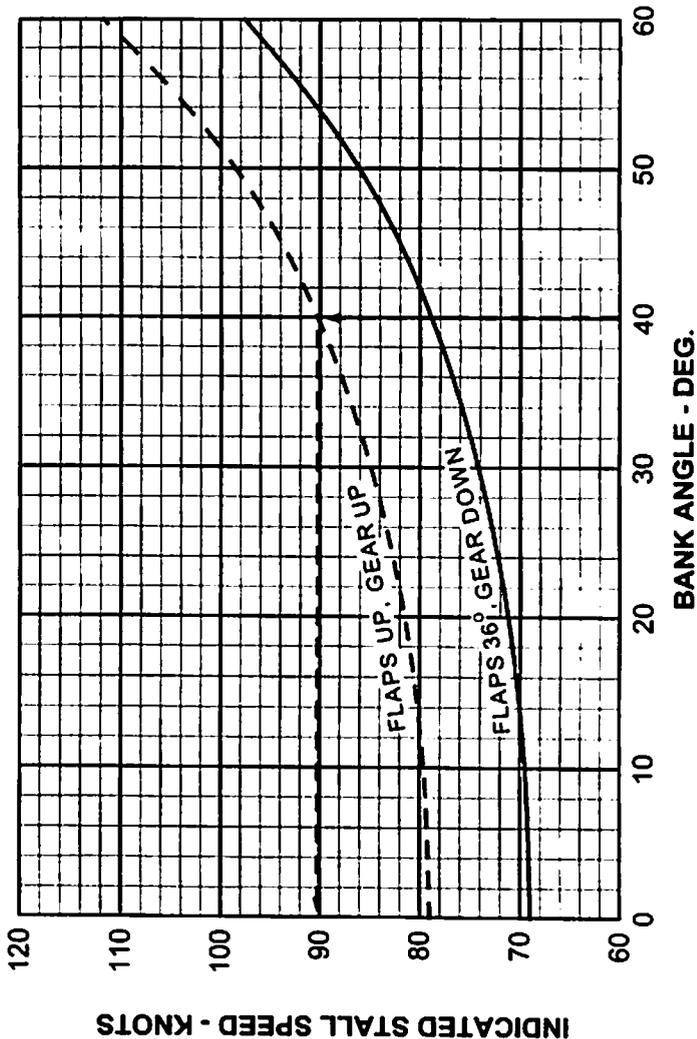

Angle of Bank vs. Stall Speed  
Figure 5-173




**EXAMPLE**

OAT: 29°C  
 Runway Gradient: 2% Up  
 Pressure Altitude: 1,000 FT.  
 Takeoff Weight: 2,196 KG  
 Headwind Component: 10 KT.  
 Ground Roll Distance: 582 MTR

**ASSOCIATED CONDITIONS**

Runway: PAVED, DRY SURFACE  
 Power: FULL PRIOR TO BRAKE RELEASE  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Liftoff Speed: 85 KT

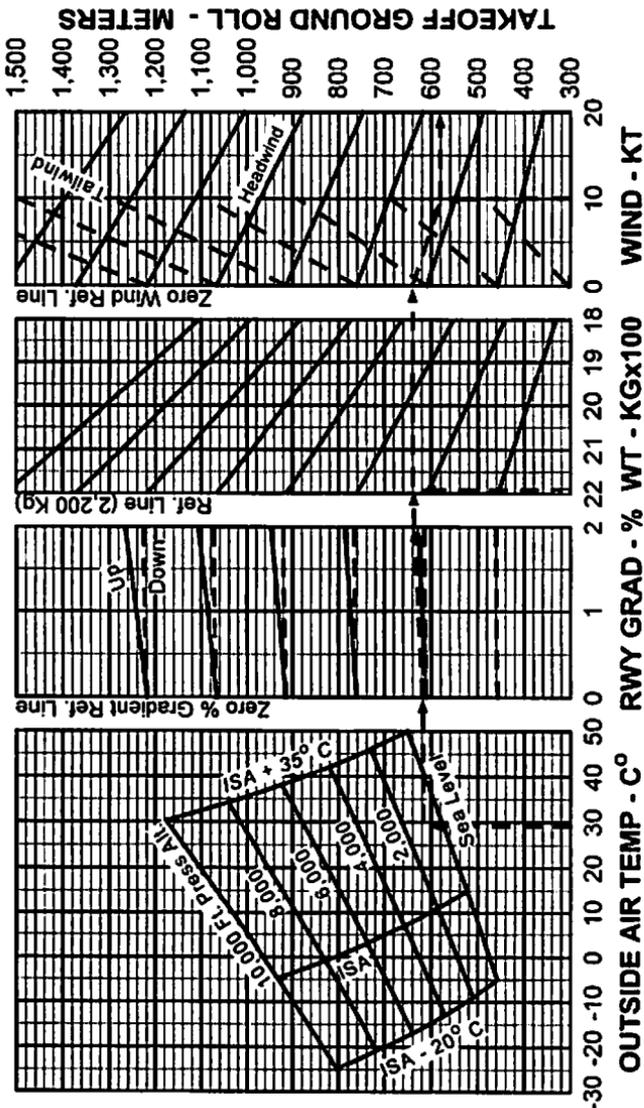


Normal Takeoff Ground Roll, 0° Flaps

Figure 5-175



EXAMPLE	
OAT:	29 C°
Runway Gradient:	2% UP
Pressure Altitude:	1,000 FT.
Takeoff Weight:	2,196 KG
Headwind Component:	10 KT.
Takeoff Distance:	914 MTR

ASSOCIATED CONDITIONS	
Runway:	PAVED, DRY SURFACE
Power:	FULL PRIOR TO BRAKE RELEASE
ECS:	NORMAL
Flaps:	RETRACTED
Liftoff Speed:	85 KT
Obstacle Speed:	100 KT
Gear:	DOWN

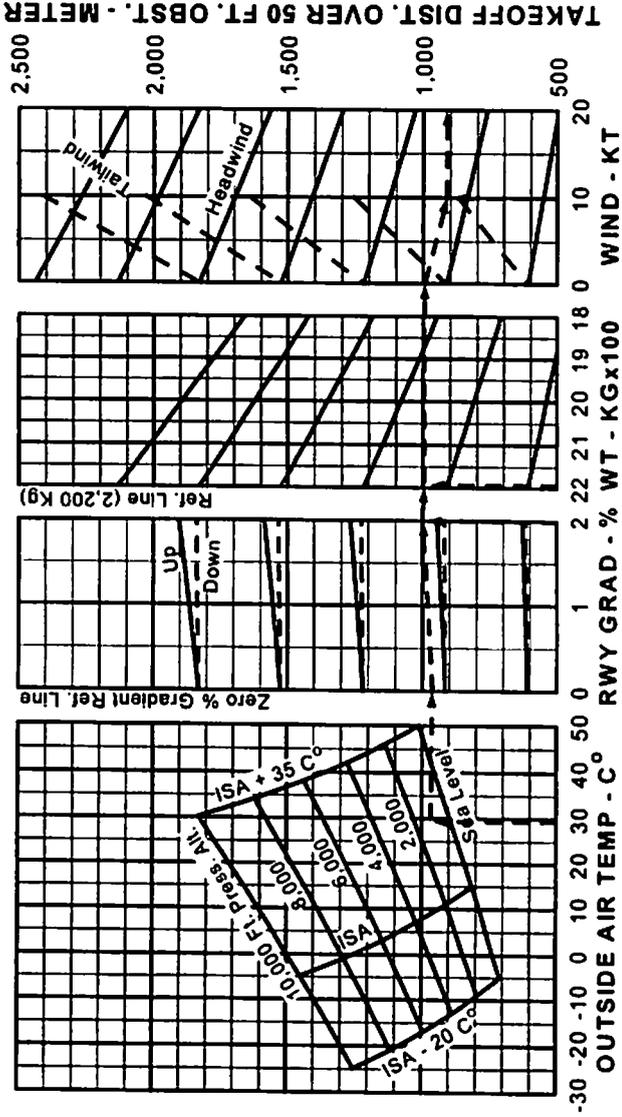

Normal Takeoff Performance over 50 ft. Obstacle, 0° Flaps  
Figure 5-177




**EXAMPLE**

OAT: 29°C  
 Runway Gradient: 2% UP  
 Pressure Altitude: 1,000 FT.  
 Takeoff Weight: 2,195 KG  
 Headwind Component: 10 KT.  
 Ground Roll Distance: 549 MTR


**ASSOCIATED CONDITIONS**

Runway: PAVED, DRY SURFACE  
 Power: FULL PRIOR TO BRAKE RELEASE  
 ECS: NORMAL  
 Flaps: 20°  
 Liftoff Speed: 85 KT

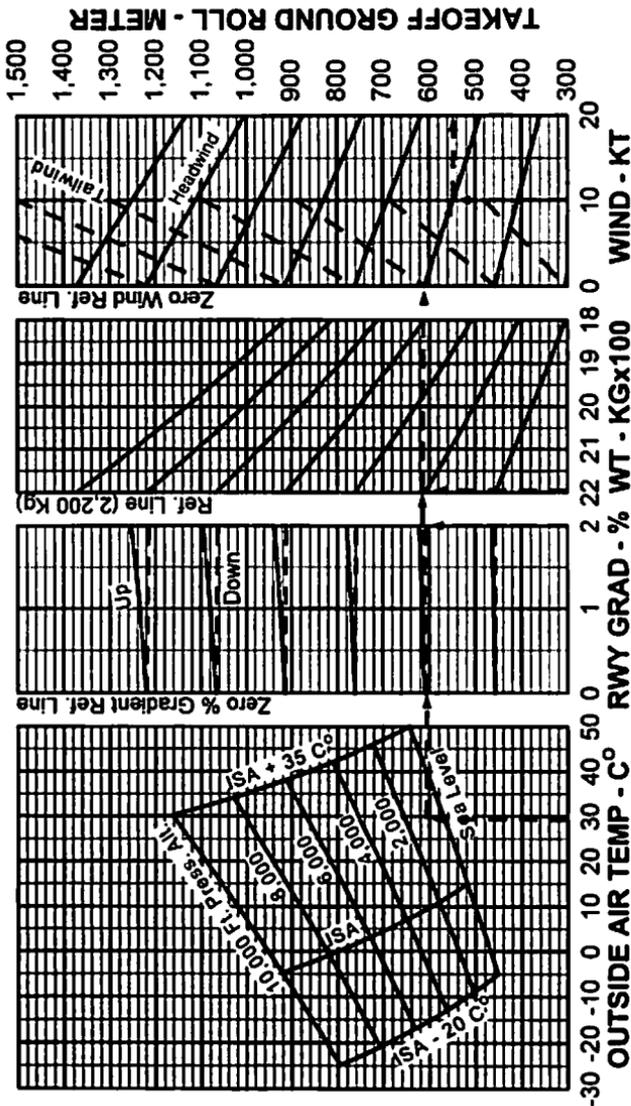

Maximum Effort Takeoff Ground Roll, 20° Flaps

 
Figure 5-179



ASSOCIATED CONDITIONS	
Runway:	PAVED, DRY SURFACE
Power:	FULL PRIOR TO BRAKE RELEASE
ECS:	NORMAL
Flaps:	20°
Liftoff Speed:	85 KT
Obstacle Speed:	95 KT
Gear:	DOWN

EXAMPLE	
OAT:	29 C°
Runway Gradient:	2% UP
Pressure Altitude:	1,000 FT.
Takeoff Weight:	2,196 KG.
Headwind Component:	10 KT.
Takeoff Distance:	843 MTR

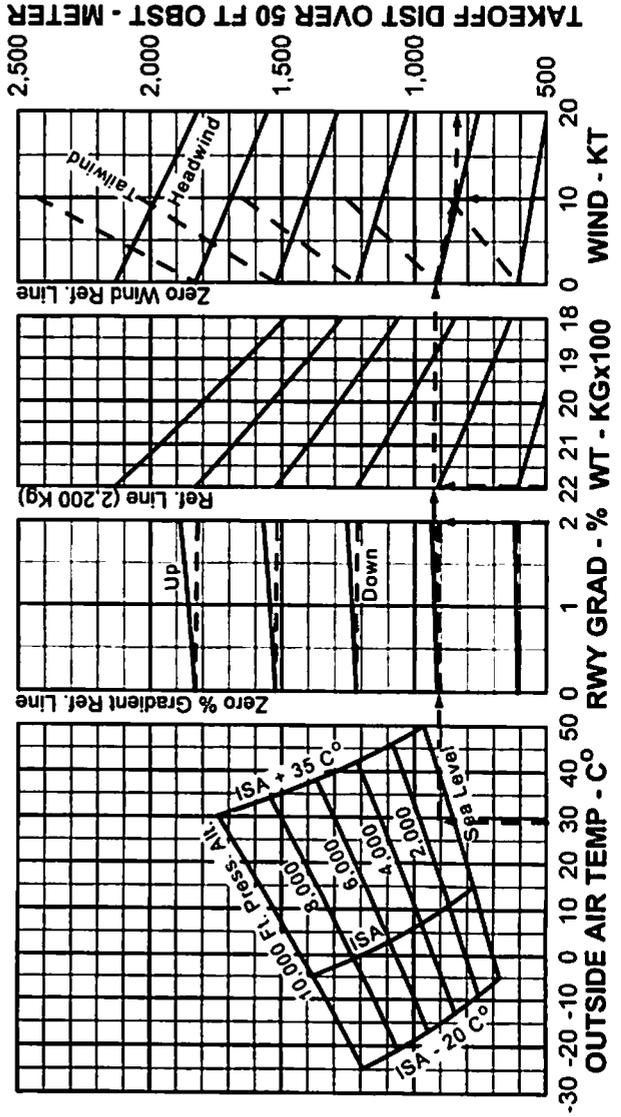

Maximum Effort Takeoff Performance over 50 ft. Obstacle,

20° Flaps

Figure 5-181




**EXAMPLE**


OAT: 7° C  
 Pressure Altitude: 12,000 FT.  
 Aircraft Weight: 2,177 KG  
 Climb Performance: 1,536 FPM

**ASSOCIATED CONDITIONS**

Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 125 KT

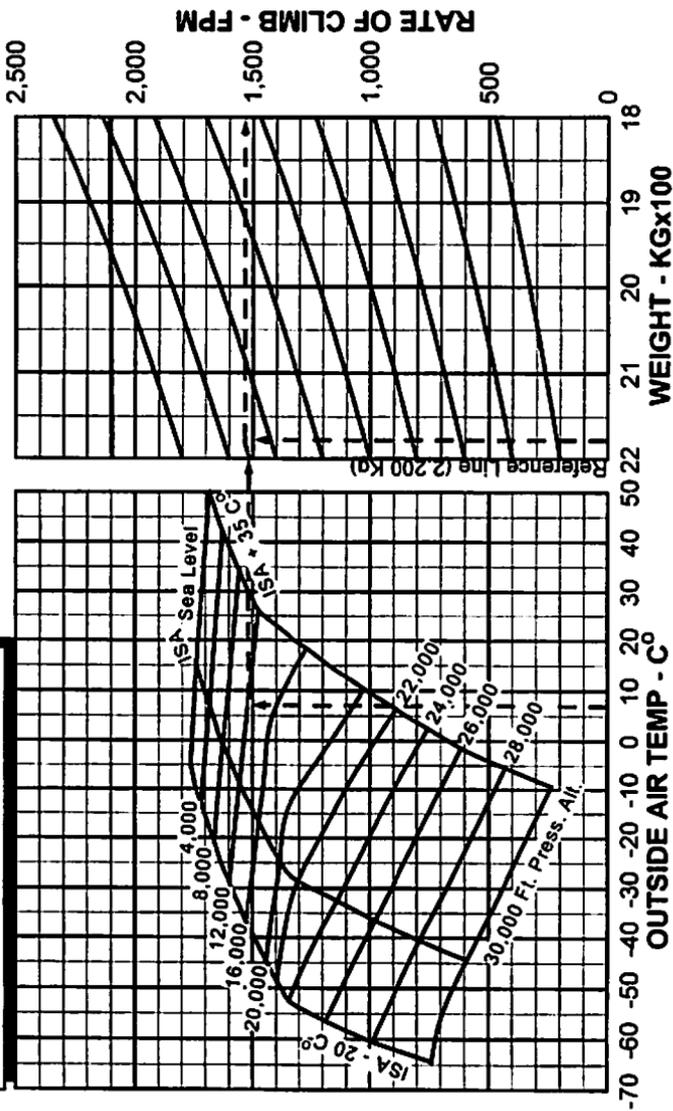

 Enroute Climb Performance  
 Figure 5-183




**EXAMPLE**

OAT: 7° C  
 Pressure Altitude: 12,000 FT.  
 Aircraft Weight: 2,177 KG  
 Climb Gradient: 609 FT/NM

**ASSOCIATED CONDITIONS**

Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 125 KIAS

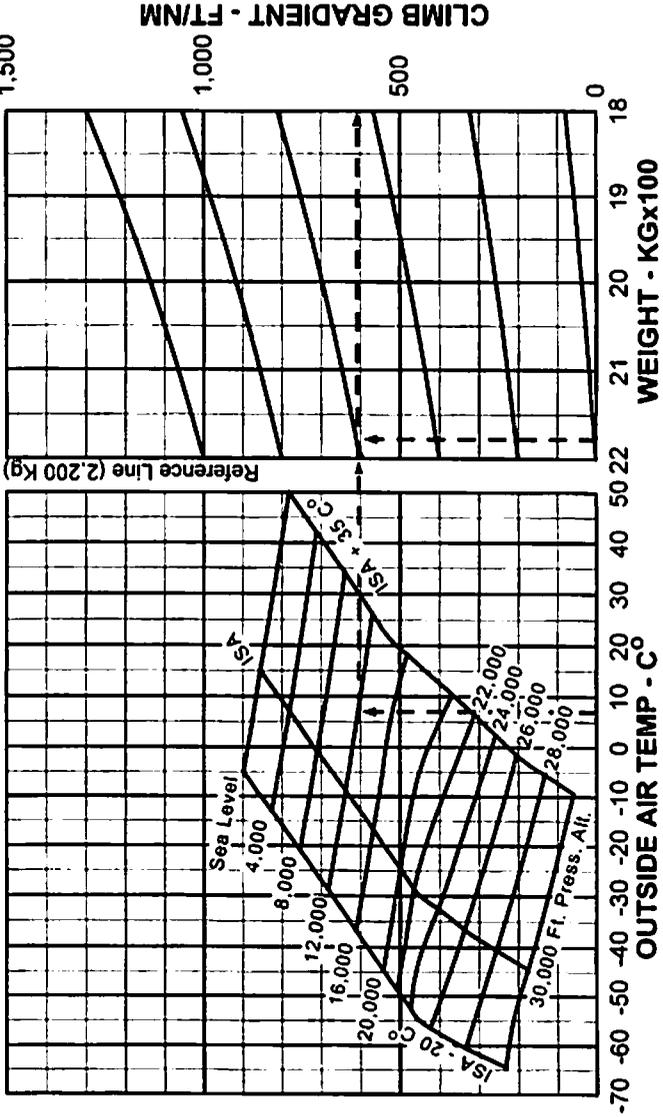

Enroute Climb Gradient  
 Figure 5-185




**EXAMPLE**

OAT: 29.0 C°  
 Pressure Altitude: 1,000 FT.  
 Aircraft Weight: 2,195 KG  
 Climb Performance: 1,230 FPM

**ASSOCIATED CONDITIONS**

Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: EXTENDED  
 Climb Speed: 125 KIAS

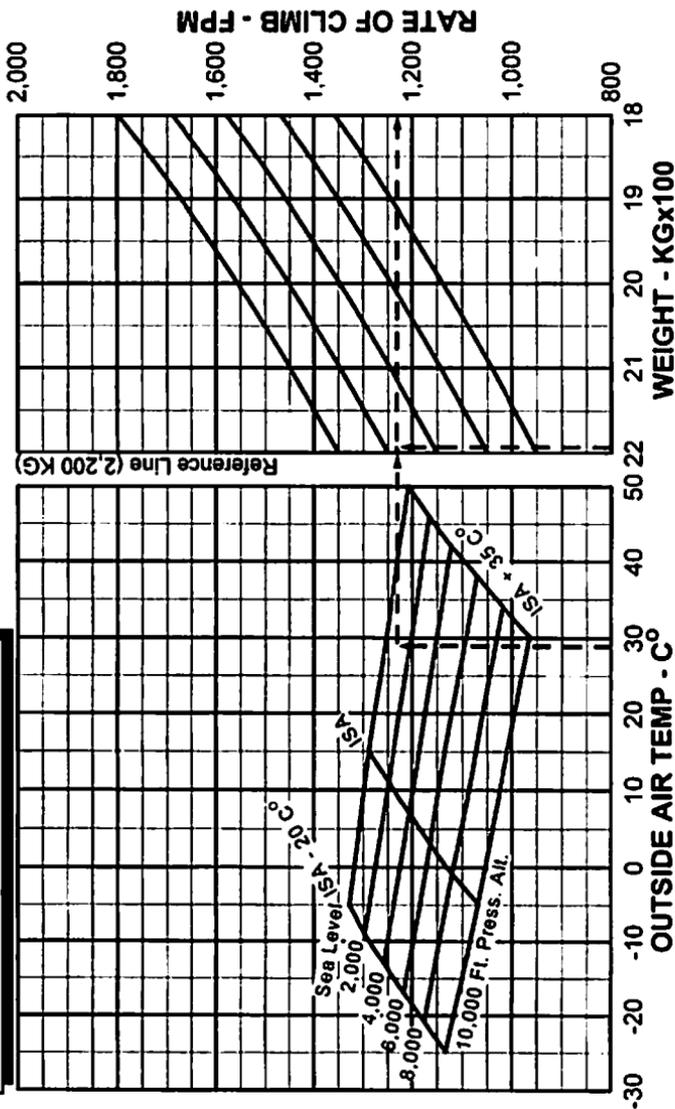

Takeoff Climb Performance

Figure 5-187




**EXAMPLE**

Departure OAT: 29° C    Cruise OAT: -20° C  
 Departure Press. Alt.: 1,000 FT.    Cruise Press. Alt.: 25,000 FT.  
 Time To Departure Alt.: 0.6 Min.    Time To Cruise Alt.: 17.9 Min  
 Time During Climb: 17.5 - 0.6 = 16.9 Min

**ASSOCIATED CONDITIONS**

Weight: \_\_\_\_\_  
 Max Takeoff \_\_\_\_\_  
 Power: MAX CONTINUOUS  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 125 KT

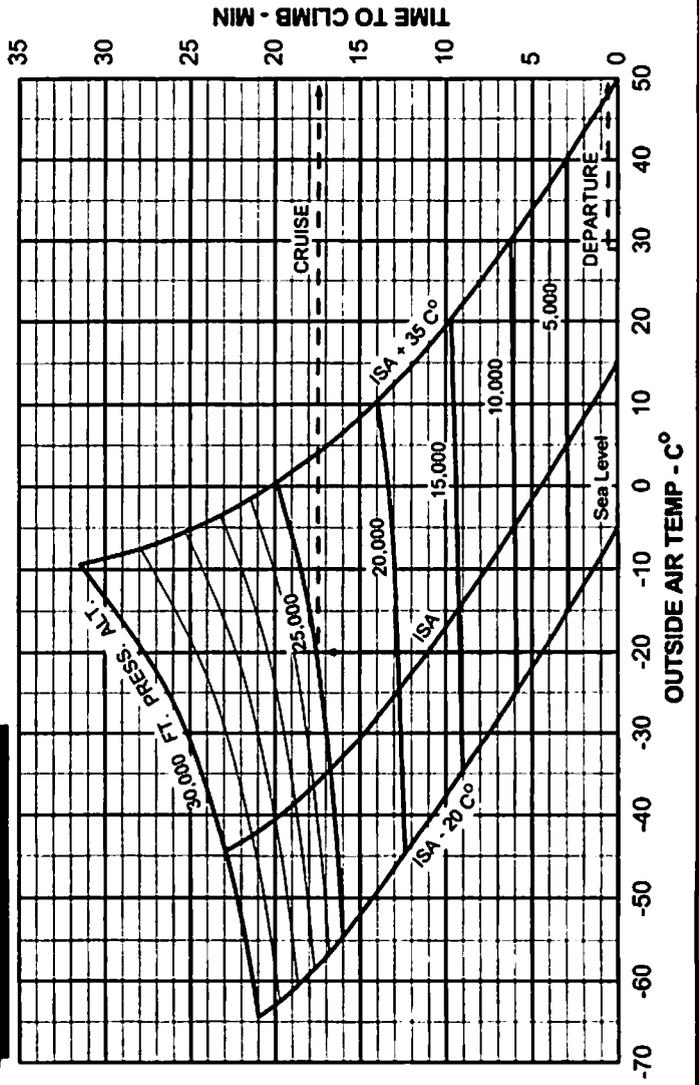

Maximum Climb Time

Figure 5-189




**EXAMPLE**



Departure OAT: 29° C Cruise OAT: -20° C  
 Departure Press. Alt.: 1,000 FT. Cruise Press. Alt.: 25,000 FT.  
 Fuel To Departure Alt.: 21.1 KG Fuel To Cruise Alt.: 62.4 KG  
 Fuel Used During Climb: 62.4 - 21.1 = 41.3 KG

**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 125 KT

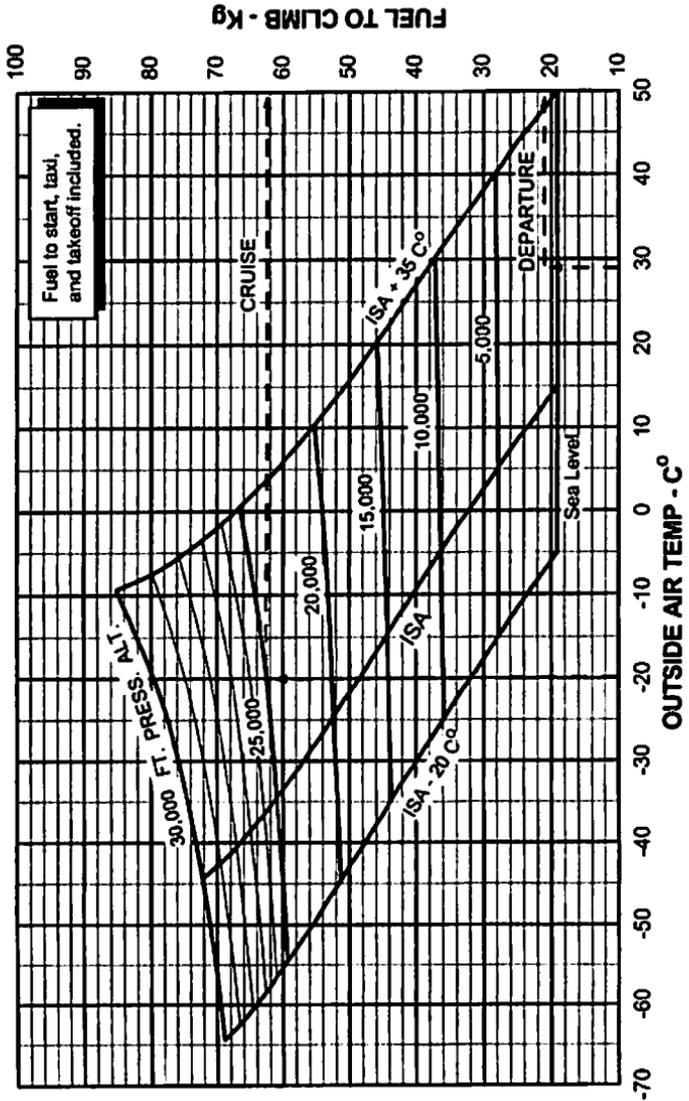

Maximum Climb Fuel  
Figure 5-191

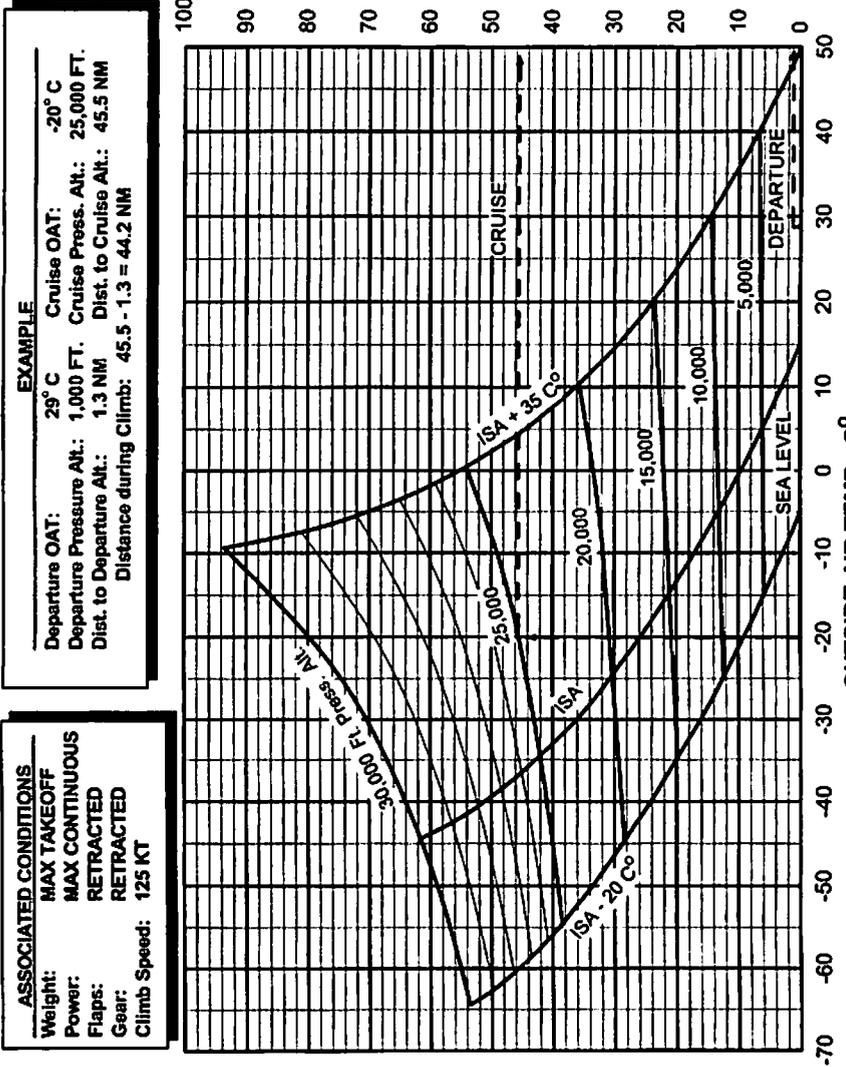 

Maximum Climb Distance

Figure 5-193




**EXAMPLE**

Departure OAT: 29° C      Cruise OAT: -20° C  
 Departure Press. Alt.: 1,000 FT.      Cruise Press. Alt.: 25,000 FT.  
 Time To Departure Alt.: 0.6 Min.      Time To Cruise Alt.: 20.2 Min  
 Time During Climb: 20.2 - 0.6 = 19.6 Min

**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 145 KT to 20,000 FT  
 135 KT to 30,000 FT

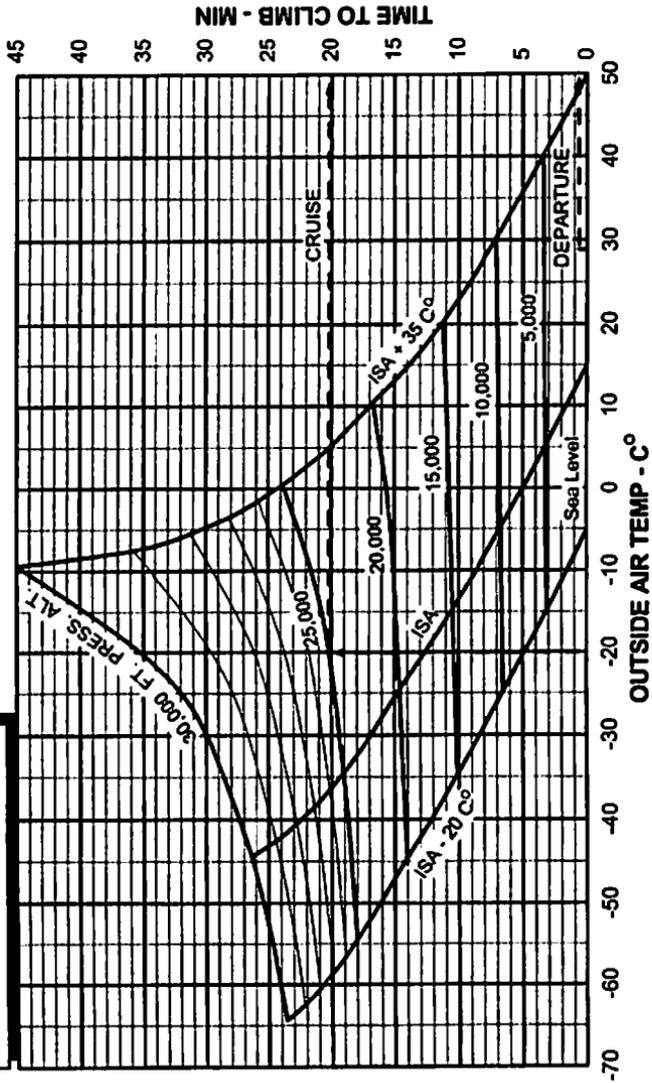


Cruise Climb Time  
 Figure 5-195

**EXAMPLE**

Departure OAT: 29° C    Cruise OAT: -20° C  
 Departure Press. Alt.: 1,000 FT.    Cruise Press. Alt.: 25,000 FT.  
 Fuel To Departure Alt.: 21 KG    Fuel To Cruise Alt.: 68.9 KG  
 Fuel Used During Climb: 68.9 - 21 = 47.9 KG

**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 145 KT TO 20,000 FT  
 135 KT TO 30,000 FT

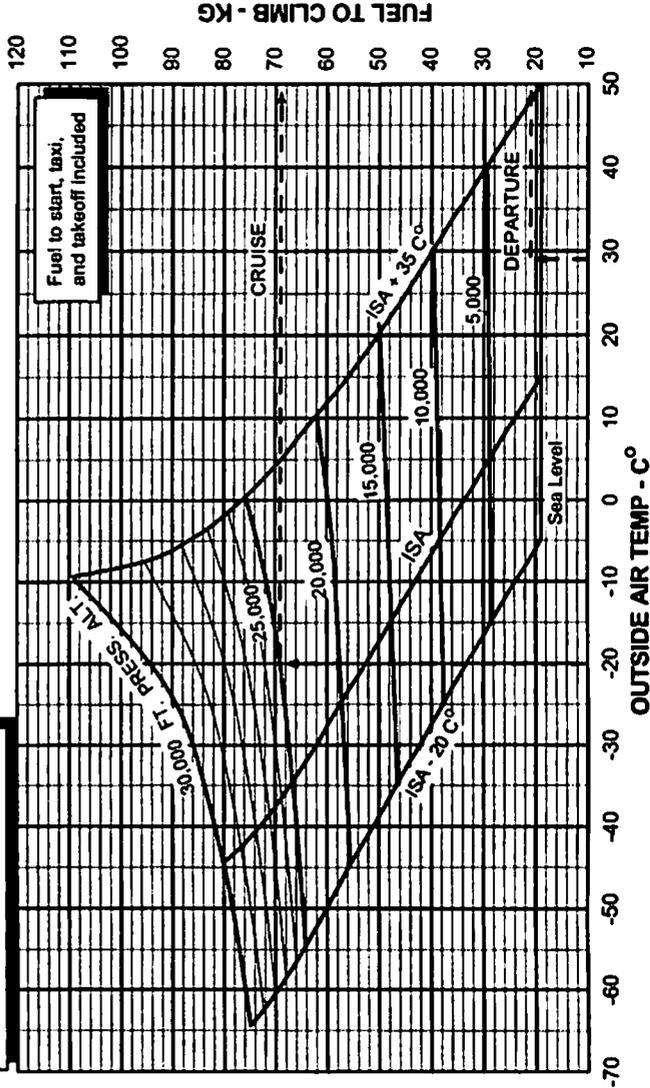

Cruise Climb Fuel

Figure 5-197




**EXAMPLE**

Departure OAT: 29° C Cruise OAT: -20° C  
 Departure Press Alt.: 1,000 FT. Cruise Press. Alt.: 25,000 FT.  
 Dist. to Departure Alt.: 1.5 NM Dist. to Cruise Alt.: 60.6 NM  
 Distance during Climb: 60.6 - 1.5 = 59.1 NM


**ASSOCIATED CONDITIONS**

Weight: MAX TAKEOFF  
 Power: MAX CONTINUOUS  
 ECS: NORMAL  
 Flaps: RETRACTED  
 Gear: RETRACTED  
 Climb Speed: 145 KT to 20,000 FT  
 135 KT to 30,000 FT

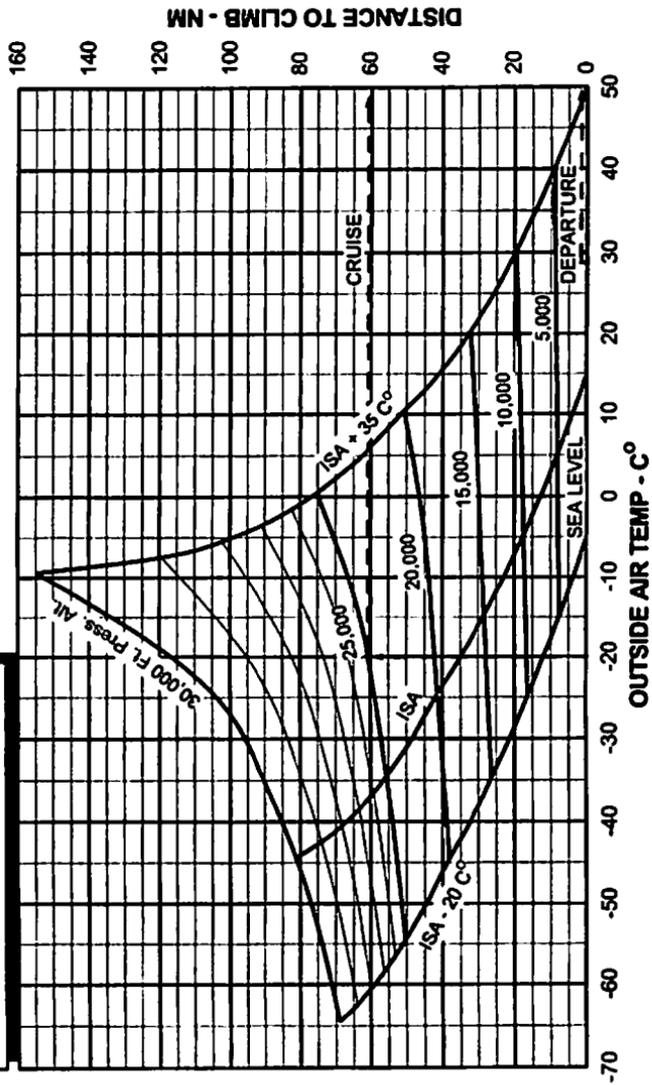

Cruise Climb Distance  
 Figure 5-199

**THIS PAGE INTENTIONALLY LEFT BLANK**

 

ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-2	-5	943	158.8	180
5000	-12	-15	998	144.2	194
10000	-21	-25	1067	132.9	209
15000	-31	-35	1153	127.0	226
20000	-40	-45	1255	127.5	245
25000	-49	-55	1313	127.9	262
30000	-	-	-	-	-
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	8	5	956	160.1	183
5000	-2	-5	1014	146.1	197
10000	-11	-15	1088	134.7	213
15000	-20	-25	1177	129.3	231
20000	-30	-35	1285	129.7	250
25000	-39	-45	1298	126.1	265
30000	-49	-54	1077	104.3	262
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	18	15	969	161.9	186
5000	8	5	1030	147.4	201
10000	-1	-5	1106	136.5	217
15000	-10	-15	1201	131.5	235
20000	-19	-25	1313	132.0	256
25000	-29	-35	1250	122.0	265
30000	-39	-44	1040	100.7	262

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Maximum Speed Cruise  
(ISA, ISA -10, ISA -20)

Figure 5-201

ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	28	25	982	163.3	190
5000	19	15	1048	149.7	205
10000	9	5	1127	138.3	221
15000	0	-5	1224	133.8	240
20000	-9	-15	1313	132.4	259
25000	-18	-25	1200	117.9	264
30000	-28	-34	997	97.1	261
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	38	35	995	164.7	193
5000	29	25	1064	151.5	208
10000	20	15	1148	140.6	225
15000	11	5	1248	135.6	244
20000	2	-5	1310	132.4	262
25000	-8	-15	1147	113.4	263
30000	-18	-24	955	93.9	260
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	54	50	1017	166.9	198
5000	44	40	1088	153.8	213
10000	35	30	1177	143.8	231
15000	26	20	1285	139.3	251
20000	17	10	1201	124.3	258
25000	7	0	1071	107.5	261
30000	-3	-9	891	88.5	257


NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Maximum Speed Cruise  
(ISA +10, ISA +20, ISA +35)

 Figure 5-203



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-4	-5		125.6	111
5000	-14	-15		107.9	123
10000	-23	-25		91.2	133
15000	-33	-35	400	78.0	142
20000	-43	-45		67.0	151
25000	-52	-55		58.0	159
30000	-62	-64		52.2	166
ISA - 10(°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	6	5		125.6	115
5000	-4	-5		107.8	126
10000	-13	-15		91.2	136
15000	-23	-25	400	78.0	144
20000	-33	-35		67.0	153
25000	-42	-45		58.5	161
30000	-52	-54		52.2	168
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	16	15		125.6	117
5000	7	5		107.9	128
10000	-3	-5		91.6	137
15000	-13	-15	400	78.0	146
20000	-23	-25		67.1	155
25000	-32	-35		58.3	163
30000	-42	-44		52.2	170

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 400 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-205



ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	26	25		125.6	120
5000	17	15		108.4	130
10000	7	5		92.1	139
15000	-3	-5	400	78.5	148
20000	-12	-15		67.6	156
25000	-22	-25		59.0	164
30000	-32	-34		52.0	171
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	36	35		125.2	124
5000	27	25		108.3	132
10000	17	15		91.9	141
15000	7	5	400	78.5	150
20000	-2	-5		67.6	158
25000	-12	-15		58.8	166
30000	-22	-24		52.2	172
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	52	50		125.0	127
5000	42	40		108.9	136
10000	32	30		92.5	144
15000	23	20	400	78.8	152
20000	13	10		68.0	161
25000	3	0		59.4	168
30000	-6	-9		52.4	174

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 400 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-207



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-4	-5	500	132.4	133
5000	-13	-15		114.3	142
10000	-23	-25		96.6	152
15000	-33	-35		83.9	161
20000	-42	-45		73.0	170
25000	-52	-55		64.9	179
30000	-62	-64		58.5	188
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	7	5	500	132.4	135
5000	-3	-5		114.2	145
10000	-13	-15		97.1	154
15000	-22	-25		83.9	163
20000	-32	-35		73.0	172
25000	-42	-45		64.9	181
30000	-51	-54		58.5	191
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	17	15	500	132.4	137
5000	7	5		114.6	147
10000	-3	-5		97.5	156
15000	-12	-15		83.7	165
20000	-22	-25		73.5	174
25000	-32	-35		64.9	184
30000	-41	-44		58.3	193


NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 500 FT-LB  
(ISA, ISA -10, ISA -20)

 Figure 5-209



ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	27	25		132.9	140
5000	17	15		115.2	149
10000	7	5		97.4	158
15000	-2	-5	500	83.8	167
20000	-12	-15		73.3	177
25000	-21	-25		64.8	186
30000	-31	-34		58.0	195
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	37	35		132.8	141
5000	27	25		115.2	151
10000	18	15		98.0	160
15000	8	5	500	84.4	169
20000	-2	-5		73.9	179
25000	-11	-15		65.3	188
30000	-21	-24		59.0	197
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	52	50		133.1	145
5000	42	40		115.5	154
10000	33	30		98.4	163
15000	23	20	500	84.8	172
20000	14	10		73.9	181
25000	4	0		65.8	191
30000	-5	-9		59.4	200

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 500 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-211



ISA -20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-3	-5		138.3	147
5000	-13	-15		119.6	156
10000	-23	-25		103.0	166
15000	-32	-35	600	90.3	175
20000	-42	-45		79.4	185
25000	-51	-55		71.2	195
30000	-61	-64		65.3	205
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	7	5		138.7	150
5000	-3	-5		120.0	159
10000	-12	-15		103.0	168
15000	-22	-25	600	90.3	177
20000	-32	-35		79.4	187
25000	-41	-45		71.0	197
30000	-51	-54		65.3	208
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	17	15		139.1	152
5000	7	5		120.7	161
10000	-2	-5		102.8	170
15000	-12	-15	600	90.3	180
20000	-21	-25		79.3	190
25000	-31	-35		71.2	200
30000	-41	-44		65.3	210

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 600 FT-LB

(ISA, ISA -10, ISA -20)

Figure 5-213

ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	27	25	600	139.7	154
5000	17	15		121.1	163
10000	8	5		103.4	172
15000	-2	-5		90.1	182
20000	-11	-15		79.8	192
25000	-21	-25		71.7	202
30000	-30	-34		65.8	213
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	37	35	600	139.7	156
5000	28	25		122.0	165
10000	18	15		103.4	175
15000	8	5		90.7	184
20000	-1	-5		79.8	194
25000	-11	-15		71.6	205
30000	-20	-24		65.7	215
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	52	50	600	140.1	159
5000	43	40		122.0	168
10000	33	30		104.3	178
15000	24	20		91.2	187
20000	14	10		80.7	198
25000	5	0		72.0	208
30000	-5	-9		66.2	218

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 600 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-215

ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-3	-5	700	144.7	158
5000	-13	-15		126.1	168
10000	-22	-25		108.7	177
15000	-32	-35		95.7	187
20000	-41	-45		85.7	197
25000	-51	-55		78.5	208
30000	-61	-64		73.0	219
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	7	5	700	145.1	161
5000	-2	-5		126.1	170
10000	-12	-15		109.3	180
15000	-22	-25		96.2	190
20000	-31	-35		86.2	200
25000	-41	-45		78.5	211
30000	-50	-54		72.9	222
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	17	15	700	145.6	163
5000	8	5		126.1	172
10000	-2	-5		109.8	182
15000	-11	-15		96.1	192
20000	-21	-25		86.1	203
25000	-31	-35		78.5	213
30000	-40	-44		73.5	225

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 700 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-217



ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	27	25	700	146.1	165
5000	18	15		126.5	175
10000	8	5		110.2	184
15000	-1	-5		96.4	194
20000	-11	-15		86.4	205
25000	-20	-25		78.3	216
30000	-30	-34		73.5	227
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	38	35	700	146.5	167
5000	28	25		127.5	177
10000	18	15		110.2	186
15000	9	5		96.9	197
20000	-1	-5		87.1	207
25000	-10	-15		78.9	218
30000	-19	-24		73.4	230
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	53	50	700	146.9	170
5000	43	40		128.4	180
10000	34	30		111.1	190
15000	24	20		98.0	200
20000	15	10		87.5	211
25000	5	0		79.4	222
30000	-4	-9		73.7	234

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 700 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-219



ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-3	-5	800	150.1	168
5000	-12	-15		131.9	177
10000	-22	-25		115.2	187
15000	-32	-35		102.5	197
20000	-41	-45		92.4	208
25000	-51	-55		85.3	219
30000	-60	-64		81.2	231
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	7	5	800	150.6	170
5000	-2	-5		132.9	180
10000	-12	-15		115.7	190
15000	-21	-25		103.0	200
20000	-31	-35		93.0	211
25000	-40	-45		85.7	222
30000	-50	-54		81.2	234
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	18	15	800	151.0	173
5000	8	5		132.8	182
10000	-2	-5		116.1	192
15000	-11	-15		102.8	202
20000	-21	-25		92.8	214
25000	-30	-35		85.7	225
30000	-40	-44		81.2	237

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 800 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-221



ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	28	25	800	151.5	175
5000	18	15		133.8	184
10000	9	5		116.6	194
15000	-1	-5		103.4	205
20000	-10	-15		93.4	216
25000	-20	-25		86.2	228
30000	-29	-34		81.2	240
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	38	35	800	151.8	177
5000	28	25		133.8	187
10000	19	15		117.0	197
15000	9	5		103.9	207
20000	0	-5		93.9	219
25000	-10	-15		86.1	230
30000	-19	-24		81.0	243
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	53	50	800	153.3	180
5000	44	40		134.5	190
10000	34	30		117.4	200
15000	25	20		104.3	211
20000	15	10		94.2	222
25000	6	0		86.6	234
30000	-3	-9		81.6	247

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 800 FT-LB

(ISA +10, ISA +20, ISA +35)

Figure 5-223



ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-2	-5		155.9	177
5000	-12	-15		138.2	186
10000	-22	-25		121.4	196
15000	-31	-35	900	109.3	206
20000	-41	-45		99.6	217
25000	-50	-55		92.9	229
30000	-60	-64		89.4	242
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	8	5		156.3	179
5000	-2	-5		138.7	188
10000	-11	-15		122.0	199
15000	-21	-25	900	109.3	209
20000	-31	-35		99.8	220
25000	-40	-45		93.4	232
30000	-49	-54		89.4	245
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	18	15		156.8	181
5000	8	5		139.2	191
10000	-1	-5		122.5	201
15000	-11	-15	900	109.6	212
20000	-20	-25		100.2	223
25000	-30	-35		93.3	235
30000	-39	-44		89.4	248

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 900 FT-LB

(ISA, ISA -10, ISA -20)

Figure 5-225

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	28	25	900	157.8	183
5000	18	15		139.7	193
10000	9	5		122.9	204
15000	-1	-5		110.2	214
20000	-10	-15		100.1	226
25000	-19	-25		93.9	238
30000	-29	-34		89.4	251
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	38	35	900	158.2	185
5000	29	25		140.6	195
10000	19	15		123.2	206
15000	10	5		110.2	217
20000	0	-5		100.6	229
25000	-9	-15		93.7	241
30000	-18	-24		89.4	254
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	53	50	900	159.7	189
5000	44	40		141.5	199
10000	34	30		124.3	209
15000	25	20		111.0	221
20000	16	10		101.1	232
25000	6	0		94.3	245
30000	-	-		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 900 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-227



ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	-5		-	-
5000	-	-15		-	-
10000	-21	-25	1000	128.3	204
15000	-31	-35		116.1	215
20000	-41	-45		107.5	226
25000	-50	-55		101.2	238
30000	-59	-64		97.4	251
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	5		-	-
5000	-2	-5		145.1	196
10000	-11	-15	1000	128.7	207
15000	-21	-25		115.9	218
20000	-30	-35		107.4	229
25000	-40	-45		101.2	241
30000	-49	-54		97.3	255
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	15		-	-
5000	9	5		145.5	199
10000	-1	-5	1000	129.1	209
15000	-10	-15		116.6	220
20000	-20	-25		108.0	232
25000	-29	-35		100.9	245
30000	-39	-44		97.5	258

NOTE: Shaded areas may be beyond aircraft OAT limit


See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1000 FT-LB

(ISA, ISA -10, ISA -20)

 Figure 5-229



ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	25		-	-
5000	18.76114	15		146.5	201
10000	9.275613	5		129.5	212
15000	-0.19331	-5	1000	116.8	223
20000	-9.59503	-15		107.8	235
25000	-18.9163	-25		101.1	248
30000	-	-34		-	-
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	35		-	-
5000	29	25		146.9	203
10000	20	15		130.0	214
15000	10	5	1000	117.3	226
20000	1	-5		108.4	238
25000	-9	-15		101.6	251
30000	-	-24		-	-
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	54	50		166.0	196
5000	44	40		148.3	207
10000	35	30		131.1	218
15000	25	20	1000	118.4	229
20000	16	10		108.9	242
25000	7	0		102.1	255
30000	-	-9		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1000 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-231

ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	-5		-	-
5000	-	-15		-	-
10000	-	-25		-	-
15000	-31	-35	1100	122.7	222
20000	-40	-45		115.2	234
25000	-50	-55		109.3	247
30000	-59	-64		106.6	260

ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	5		-	-
5000	-	-5		-	-
10000	-	-15		-	-
15000	-20	-25	1100	123.4	225
20000	-30	-35		115.1	237
25000	-39	-45		109.3	250
30000	-	-54		-	-

ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	15		-	-
5000	-	5		-	-
10000	-1	-5		135.9	217
15000	-10	-15	1100	123.8	228
20000	-20	-25		115.7	240
25000	-29	-35		109.2	253
30000	-	-44		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1100 FT-LB  
(ISA, ISA -10, ISA -20)

Figure 5-233

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	25		-	-
5000	-	15		-	-
10000	10	5	1100	136.3	219
15000	0	-5		124.3	231
20000	-9	-15		115.6	243
25000	-19	-25		109.2	256
30000	-	-34		-	-
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	35		-	-
5000	-	25		-	-
10000	20	15	1100	137.0	222
15000	10	5		124.7	233
20000	1	-5		116.1	246
25000	-8	-15		109.2	259
30000	-	-24		-	-
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	50		-	-
5000	-	40		-	-
10000	35	30	1100	137.9	225
15000	26	20		125.2	237
20000	17	10		116.6	250
25000	-	0		-	-
30000	-	-9		-	-

\* ECS: NORMAL

Intermediate Cruise Power, 1100 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-235

ISA (°C)		ISA - 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	-5		-	-
5000	-	-15		-	-
10000	-	-25		-	-
15000	-	-35	1200	-	-
20000	-40	-45		122.9	241
25000	-49	-55		117.0	254
30000	-	-64		-	-
ISA (°C)		ISA - 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	5		-	-
5000	-	-5		-	-
10000	-	-15		-	-
15000	-	-25	1200	-	-
20000	-30	-35		122.7	245
25000	-39	-45		117.5	258
30000	-	-54		-	-
ISA (°C)		ISA (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	15		-	-
5000	-	5		-	-
10000	-	-5		-	-
15000	-10	-15	1200	131.5	235
20000	-19	-25		123.4	248
25000	-29	-35		117.9	261
30000	-	-44		-	-

NOTE: Shaded areas may be beyond aircraft OAT limit

See paragraph 2.28

\* ECS: NORMAL

Intermediate Cruise Power, 1200 FT-LB

(ISA, ISA -10, ISA -20)

Figure 5-237

ISA (°C)		ISA + 10 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	25		-	-
5000	-	15		-	-
10000	-	5		-	-
15000	0	-5	1200	131.5	238
20000	-9	-15		123.3	251
25000	-18	-25		117.7	264
30000	-	-34		-	-
ISA (°C)		ISA + 20 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	35		-	-
5000	-	25		-	-
10000	-	15		-	-
15000	11	5	1200	131.8	241
20000	1	-5		123.8	254
25000	-	-15		-	-
30000	-	-24		-	-
ISA (°C)		ISA + 35 (°C)			
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-	50		-	-
5000	-	40		-	-
10000	-	30		-	-
15000	26	20	1200	132.4	245
20000	17	10		124.3	258
25000	-	0		-	-
30000	-	-9		-	-

\* ECS: NORMAL

Intermediate Cruise Power, 1200 FT-LB  
(ISA +10, ISA +20, ISA +35)

Figure 5-239

ISA - 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	-4	-5	420	127.0	118
5000	-14	-15	383	107.0	118
10000	-24	-25	350	88.0	119
15000	-34	-35	326	73.5	123
20000	-43	-45	328	63.0	131
25000	-53	-55	341	54.9	142
30000	-63	-64	362	49.4	155
ISA - 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	6	5	409	126.1	117
5000	-4	-5	375	106.6	118
10000	-14	-15	344	88.0	120
15000	-23	-25	324	73.5	124
20000	-33	-35	331	63.0	133
25000	-43	-45	346	55.3	145
30000	-53	-54	369	49.9	158
ISA (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	16	15	397	125.2	117
5000	6	5	367	105.7	118
10000	-4	-5	340	87.5	120
15000	-13	-15	325	73.9	126
20000	-23	-25	335	63.5	136
25000	-33	-35	351	55.8	148
30000	-42	-44	376	50.3	162

NOTE: Shaded areas may be beyond aircraft OAT limit.

See paragraph 2.28.

\* ECS: NORMAL

**Maximum Range Cruise**  
(ISA, ISA -10, ISA -20)

Figure 5-241



ISA + 10 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	26	25	389	124.3	118
5000	16	15	363	105.7	119
10000	6	5	336	87.5	121
15000	-3	-5	328	74.4	128
20000	-13	-15	338	64.0	139
25000	-23	-25	356	55.8	151
30000	-32	-34	383	51.3	166
ISA + 20 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	36	35	381	123.8	118
5000	26	25	356	104.8	119
10000	17	15	331	87.1	122
15000	7	5	330	74.8	130
20000	-3	-5	342	64.0	142
25000	-13	-15	362	56.7	154
30000	-22	-24	391	51.7	169
ISA + 35 (°C)					
Altitude (FT)	IOAT (°C)	OAT (°C)	Torque (FT-LB)	Fuel Flow (Kg/Hr)*	TAS (KT)
0	51	50	368	123.4	118
5000	41	40	342	103.9	120
10000	32	30	327	87.1	123
15000	22	20	334	75.3	134
20000	12	10	348	64.9	146
25000	3	0	370	57.2	159
30000	-7	-9	401	52.6	174

NOTE: Shaded areas may be beyond aircraft OAT limit.

See paragraph 2.28.

\* ECS: NORMAL

Maximum Range Cruise  
(ISA +10, ISA +20, ISA +35)

Figure 5-243

**MAXIMUM SPEED CRUISE**

Altitude	Cruise Nautical Miles / 100 Kg Fuel					
	ISA - 20° C	ISA - 10° C	ISA	ISA + 10° C	ISA + 20° C	ISA + 35° C
0	113.4	114.3	114.9	116.4	117.2	118.6
5000	134.5	134.9	136.3	137.0	137.3	138.5
10000	157.3	158.1	158.9	159.7	160.0	160.7
15000	177.9	178.7	178.6	179.4	179.9	180.2
20000	192.2	192.7	193.9	195.5	197.8	207.6
25000	204.8	210.2	217.2	223.9	231.9	242.8
30000	-	251.1	260.4	268.9	276.9	290.6

**INTERMEDIATE POWER CRUISE - 1000 FT-LB**

Altitude	Cruise Nautical Miles / 100 Kg Fuel					
	ISA - 20° C	ISA - 10° C	ISA	ISA + 10° C	ISA + 20° C	ISA + 35° C
0	-	-	-	-	-	118.1
5000	-	135.0	136.8	137.2	138.2	139.7
10000	159.3	160.9	161.9	163.7	164.6	166.4
15000	185.2	188.1	188.7	191.3	192.7	193.4
20000	210.2	213.2	214.9	218.3	219.7	222.5
25000	235.3	238.3	242.9	245.5	247.1	250.2
30000	257.6	262.2	264.6	-	-	-

**MAXIMUM RANGE CRUISE**

Altitude	Cruise Nautical Miles / 100 Kg Fuel					
	ISA - 20° C	ISA - 10° C	ISA	ISA + 10° C	ISA + 20° C	ISA + 35° C
0	92.9	92.8	93.5	94.9	95.3	95.8
5000	110.2	110.7	111.6	112.6	113.6	115.5
10000	135.2	136.4	137.1	138.2	140.1	141.2
15000	166.0	167.9	170.5	172.7	174.5	178.2
20000	207.6	212.1	215.1	217.7	222.0	225.1
25000	259.4	263.1	266.6	271.9	273.2	278.5
30000	313.8	318.4	322.9	323.8	328.0	331.4

**Note:**

ECS: NORMAL


Shaded areas may be beyond aircraft OAT limit. See paragraph 2.28.

Does not include 45 minute reserve, 26 gal. (174.2 Lb).

To obtain 45 minute reserve endurance set power to Max Range Cruise Power @ 5,000'

**Specific Air Range**

 Figure 5-245



## HOLDING TIME

FUEL REQUIRED - KG

AIRSPEED - 130 KIAS

		Pressure Altitude - Ft.						
Delta ISA	Holding Time	Sea Level	5,000	10,000	15,000	20,000	25,000	29,000
Deg C	Min.							
<b>Torque FT-LB</b>		<b>451</b>	<b>449</b>	<b>454</b>	<b>468</b>	<b>490</b>	<b>522</b>	<b>554</b>
-20	10	23	20	16	15	13	12	11
	20	44	38	32	28	24	23	22
	30	67	57	48	42	37	34	32
	40	88	76	64	55	49	44	23
<b>Torque FT-LB</b>		<b>452</b>	<b>450</b>	<b>458</b>	<b>473</b>	<b>498</b>	<b>532</b>	<b>566</b>
-10	10	23	20	17	15	13	12	11
	20	44	38	33	28	24	23	22
	30	67	57	49	42	37	34	33
	40	88	76	64	56	49	44	43
<b>Torque FT-LB</b>		<b>452</b>	<b>451</b>	<b>462</b>	<b>479</b>	<b>506</b>	<b>542</b>	<b>578</b>
0	10	23	20	17	15	13	12	11
	20	44	38	33	28	24	23	22
	30	67	57	49	42	37	34	33
	40	88	76	65	56	49	45	44
<b>Torque FT-LB</b>		<b>453</b>	<b>455</b>	<b>466</b>	<b>486</b>	<b>515</b>	<b>553</b>	<b>590</b>
10	10	23	20	17	15	13	12	12
	20	44	39	33	29	25	24	23
	30	66	57	49	42	38	34	34
	40	88	76	65	56	50	46	44
<b>Torque FT-LB</b>		<b>453</b>	<b>457</b>	<b>470</b>	<b>492</b>	<b>523</b>	<b>563</b>	<b>603</b>
20	10	23	20	17	15	13	12	12
	20	44	39	33	29	25	24	23
	30	66	57	49	43	38	35	34
	40	88	76	65	57	50	47	45
<b>Torque FT-LB</b>		<b>446</b>	<b>461</b>	<b>477</b>	<b>501</b>	<b>535</b>	<b>579</b>	<b>622</b>
35	10	23	20	17	15	13	12	12
	20	44	39	33	29	26	24	24
	30	66	58	49	43	39	36	34
	40	88	77	66	57	51	48	47

Holding Time vs. Fuel On Board

Figure 5-247




**EXAMPLE**

Cruise OAT: -20 C° Destination OAT: 25 C°  
 Cruise Press. Alt.: 25,000 FT. Destination Press. Alt.: 3,500 FT.  
 Time To Descend.: 16.6 Min Time To Descend: 2.6 Min.  
 Time During Descent: 16.6 - 2.6 = 14.0 Min

**ASSOCIATED CONDITIONS**

Power: 350 FT-LB  
 ECS: NORMAL  
 Flaps & Gear: RETRACTED  
 Descent Speed: 170 KT at 1,724 KG  
 174 KT at 1,968 KG  
 177 KT at 2,177 KG

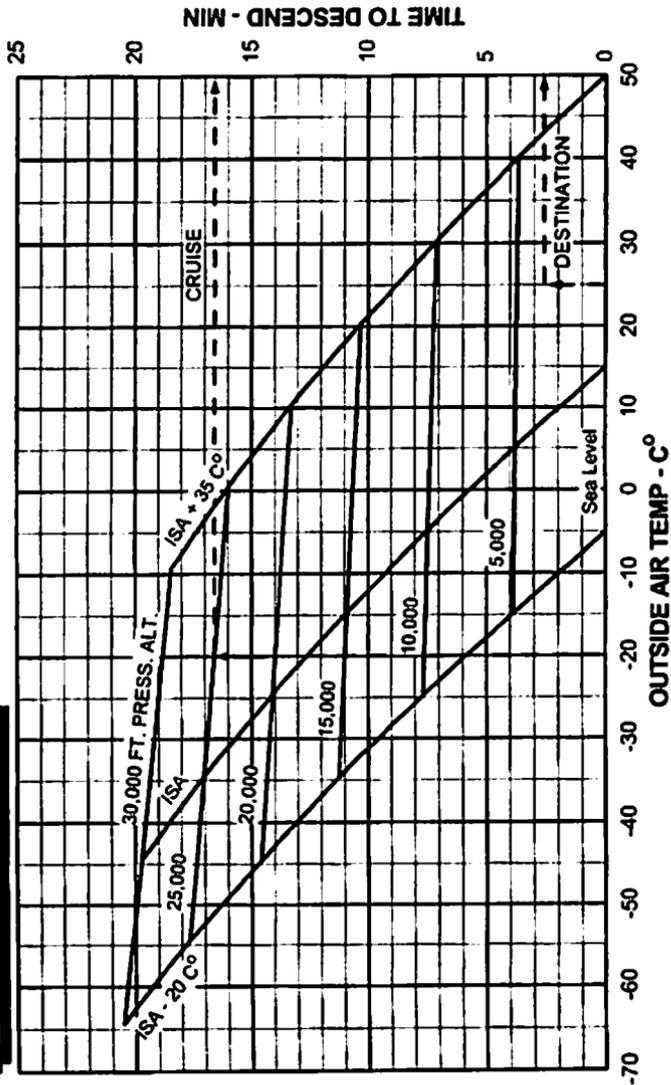

Time to Descend

Figure 5-249




**EXAMPLE**

Cruise OAT: -20 C° Destination OAT: 25 C°  
 Cruise Press. Alt.: 25,000 FT. Destination Press. Alt.: 3,500 FT.  
 Fuel To Descend: 22.7 KG Fuel To Descend: 4.8 KG  
 Fuel Used During Descent: 22.7 - 4.8 = 17.9 KG

**ASSOCIATED CONDITIONS**

Power 350 FT-LB  
 Flaps & Gear RETRACTED  
 Descent Speed: 174 KT AT 1,724 KG  
 177 KT AT 2,177 KG

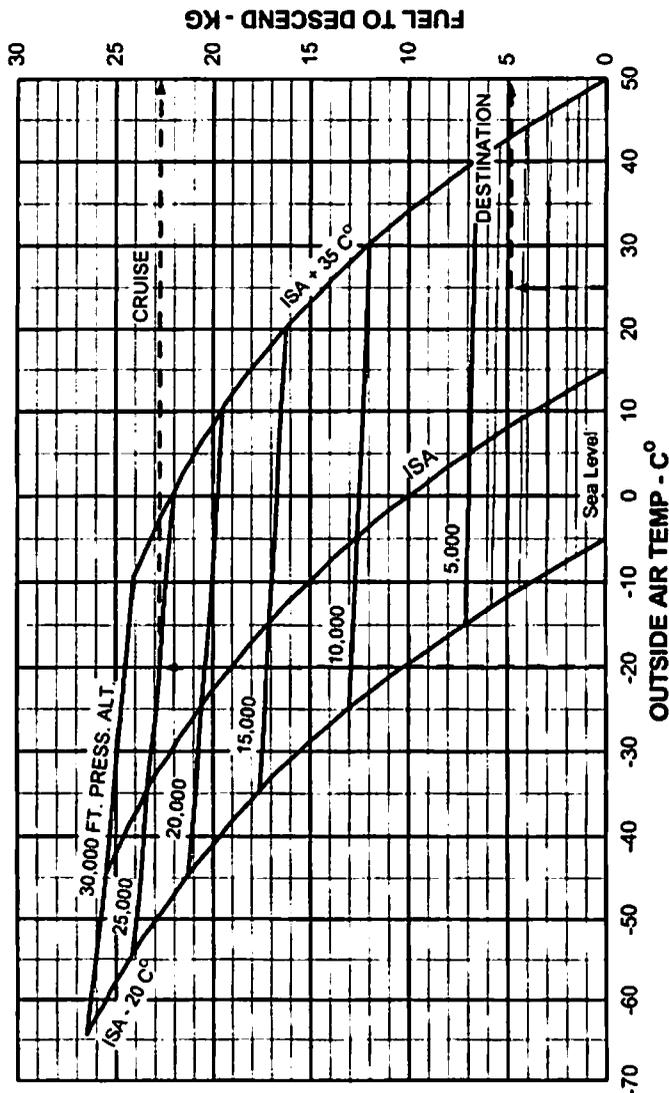

Fuel to Descend  
 Figure 5-251




**EXAMPLE**

Cruise OAT: -20 C° Destination OAT: 25 C°  
 Cruise Press. Alt.: 25,000 FT. Destination Press Alt.: 3,500 FT.  
 Dist. to Descend: 60.2 NM Dist. to Descend: 8.2 NM  
 Distance during Climb: 60.2 - 8.2 = 52 NM

**ASSOCIATED CONDITIONS**

Power: 350 FT-LB  
 ECS: NORMAL  
 Flaps & Gear: RETRACTED  
 Descent Speed: 170 KT AT 1,724 KG  
 174 KT AT 1,996 KG  
 177 KT AT 2,177 KG

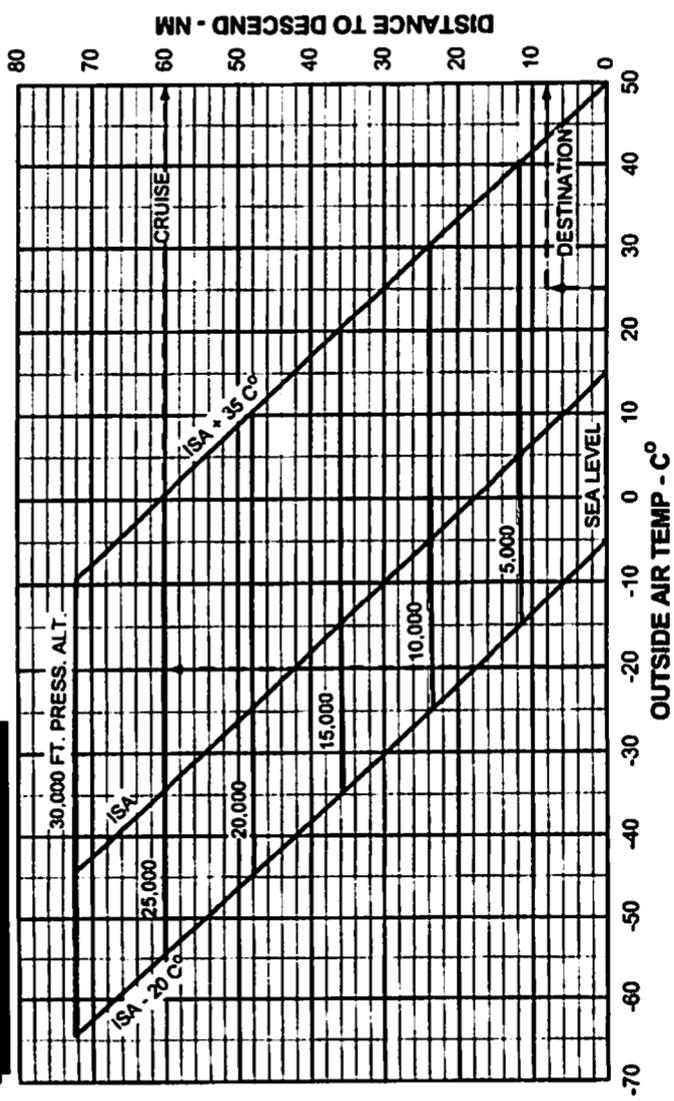


Distance to Descend  
 Figure 5-253



**ASSOCIATED CONDITIONS**  
 Power: **OUT**  
 Flaps And Gear: **RETRACTED**  
 Propeller: **FEATHERED**

**EXAMPLE**  
 Weight: **1,973 KG** Airspeed: **100 KIAS**  
 Cruise OAT: **-20° C** Destination OAT: **25° C**  
 Cruise Press. Alt.: **25,000 FT.** Destination Press. Alt.: **3,500 FT.**  
 Glide Time: **37.4 Min** Glide Time: **6.0 Min.**  
 Glide Endurance: **37.4 - 6 = 31.4 Min**

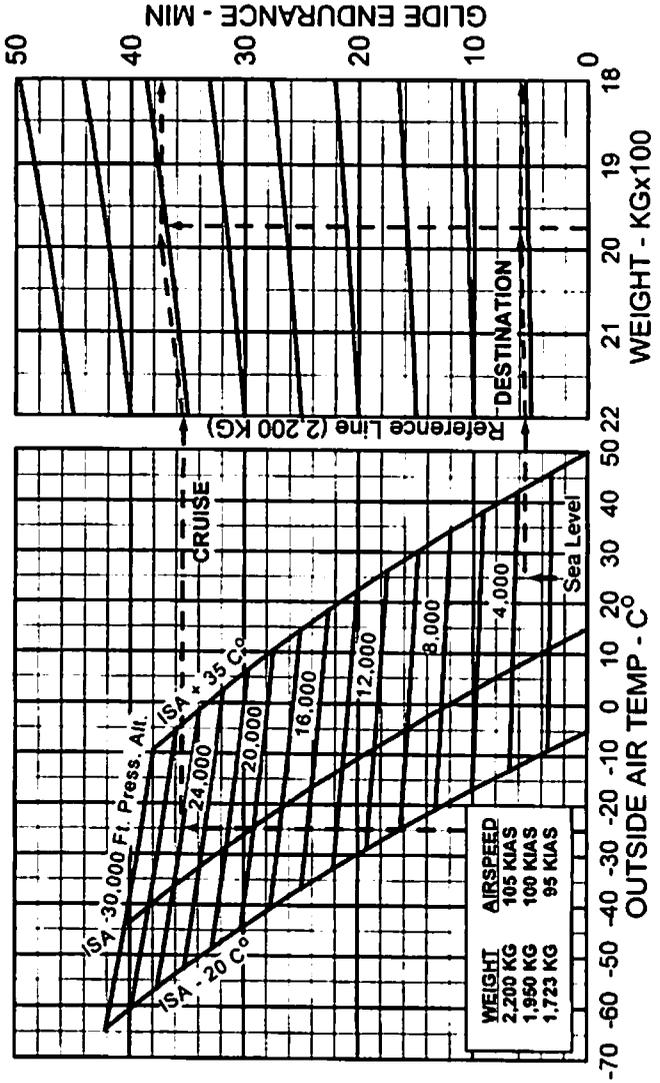


Glide Endurance

Figure 5-255




**ASSOCIATED CONDITIONS**  
 Flaps And Gear: **RETRACTED**  
 Propeller: **FEATHERED**  
 Power: **OFF**

**EXAMPLE**  
 Cruise Press. Alt.: 25,000 Ft. Dest. Press. Alt.: 3,500 FL.  
 Cruise Glide Range: 72.4 N.M. Dest. Glide Range: 9.8 N.M.  
 Glide Range: 72.4 - 9.8 = 62.6 N.M.

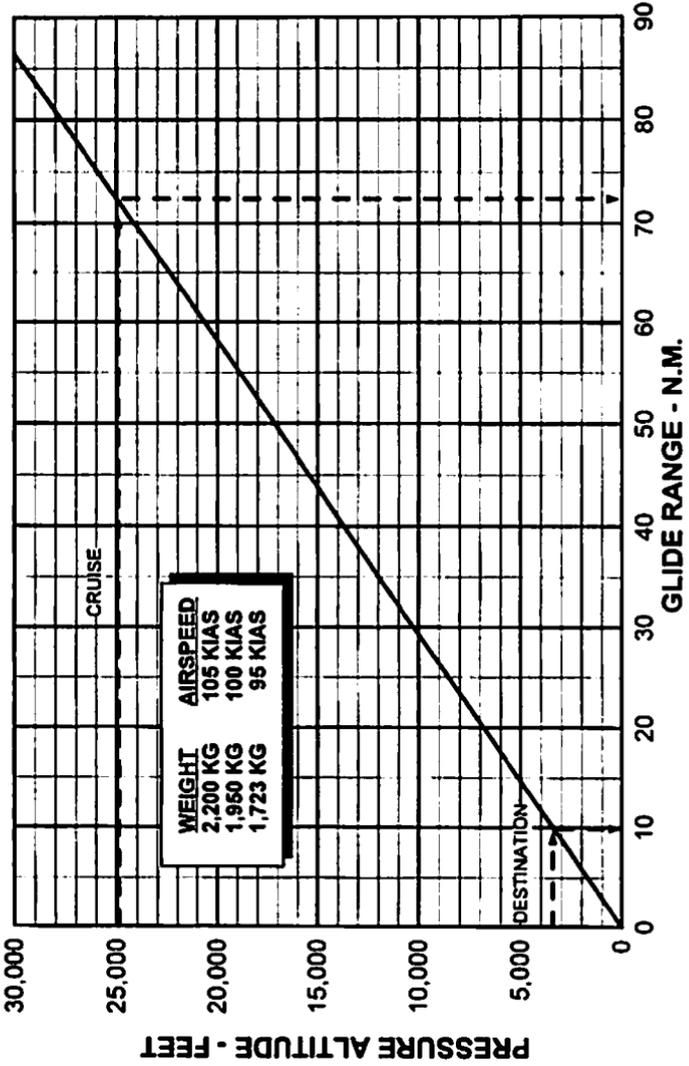


Glide Distance  
 Figure 5-257

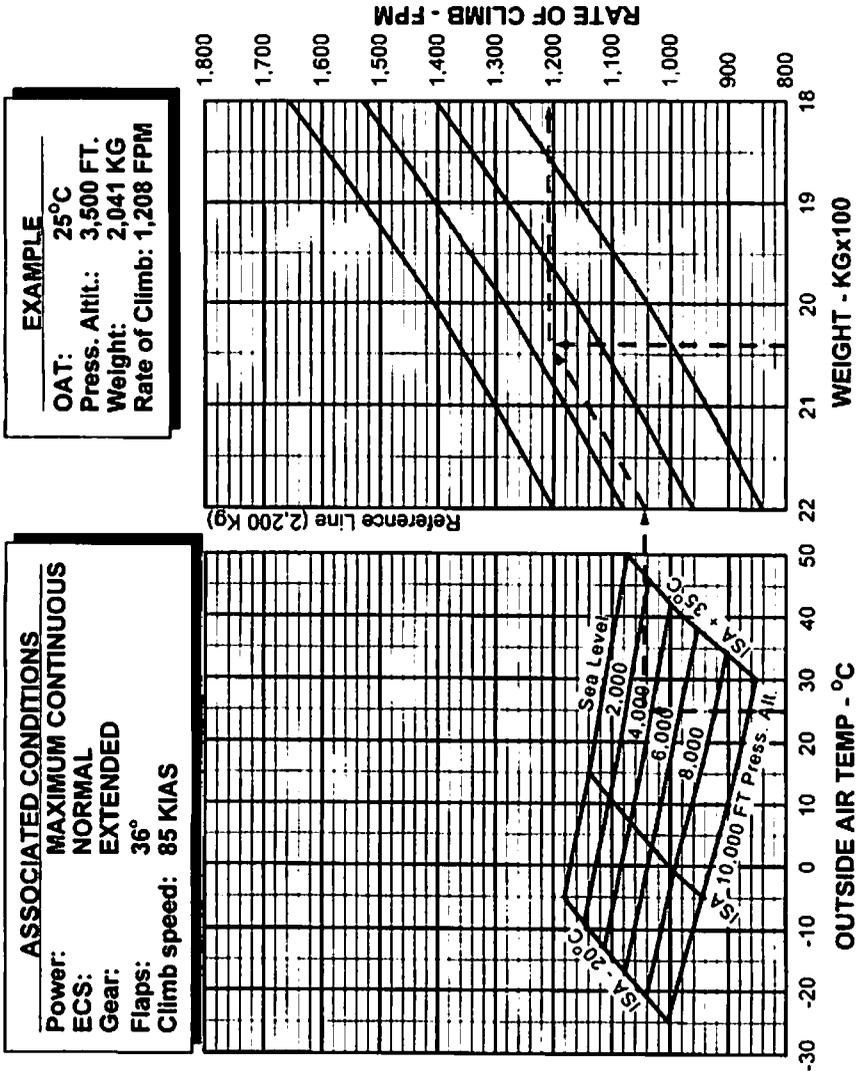


Balked Landing Climb Performance

 
Figure 5-259



**THIS PAGE INTENTIONALLY LEFT BLANK**

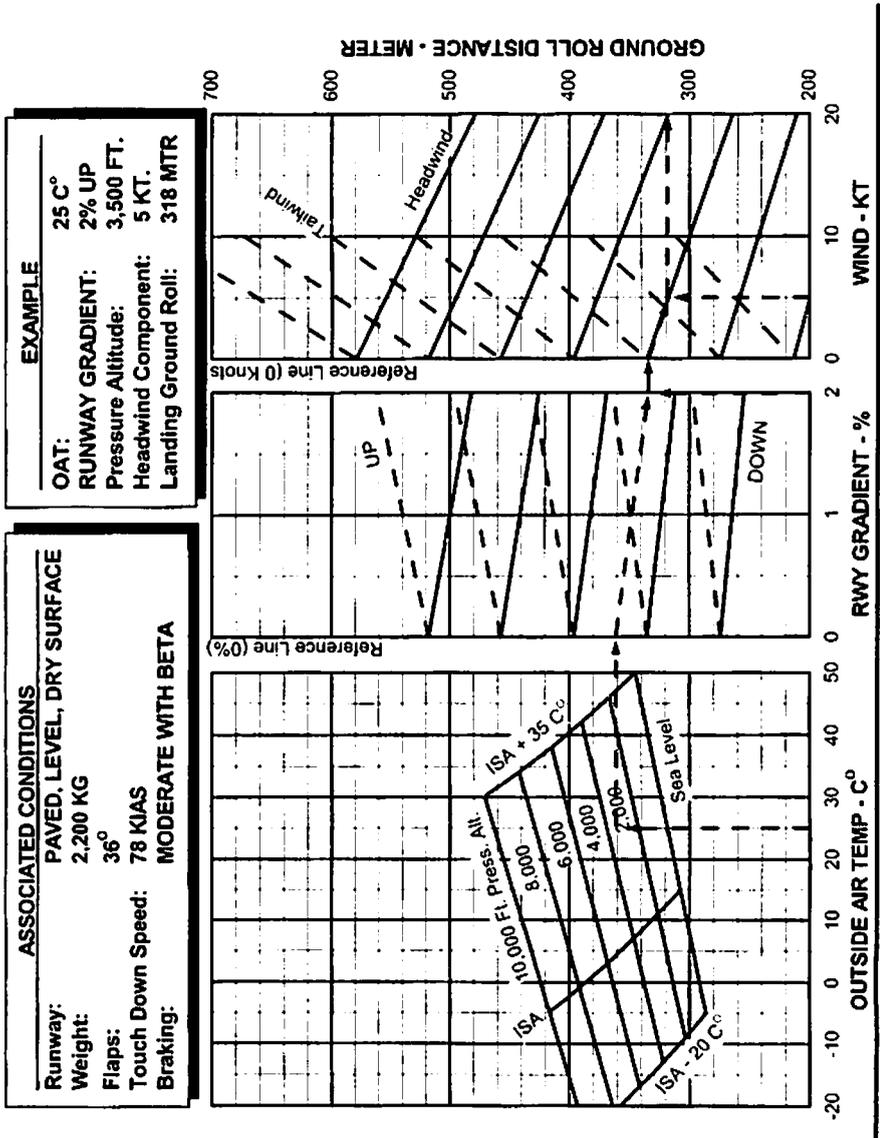


 Landing Ground Roll, Flaps 36°, without Reverse  
 Figure 5-263




**THIS PAGE INTENTIONALLY LEFT BLANK**

 **THIS PAGE INTENTIONALLY LEFT BLANK**



**THIS PAGE INTENTIONALLY LEFT BLANK**

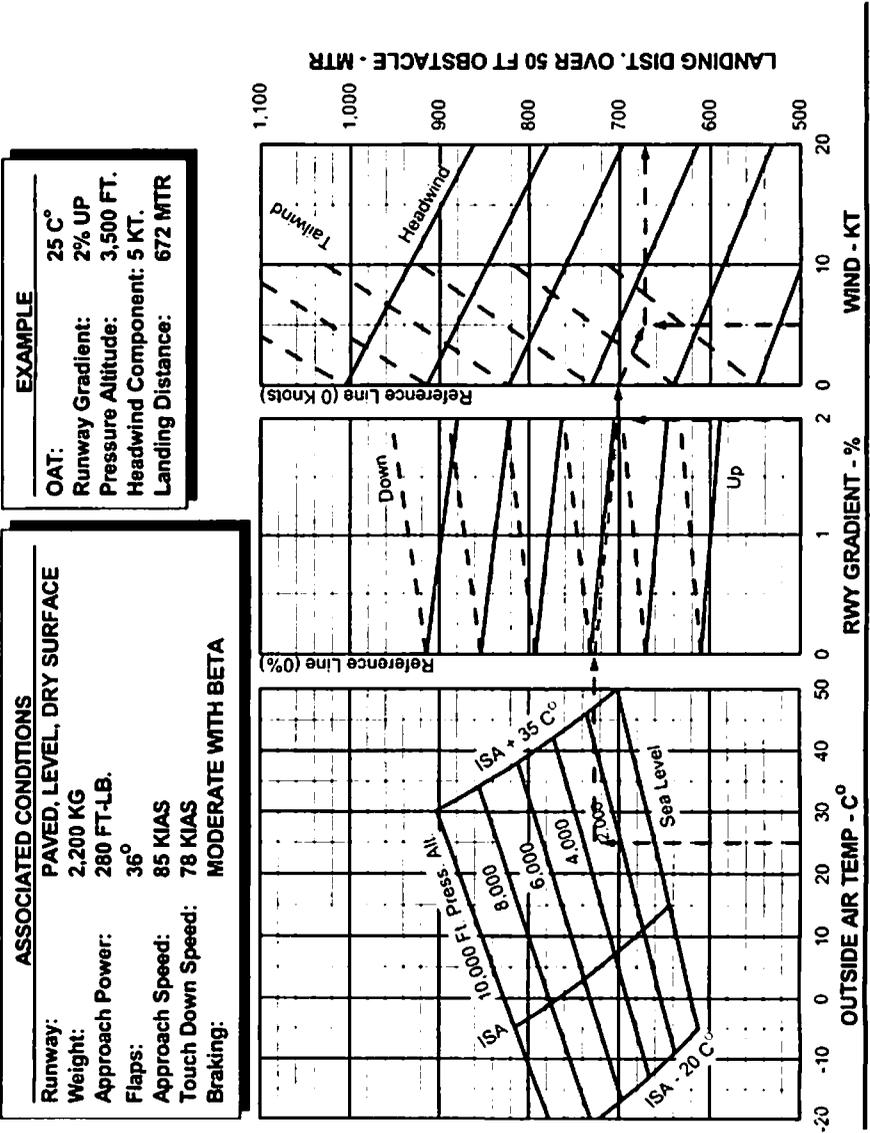


Landing Distance, Flaps 36°, without Reverse

Figure 5-271



**THIS PAGE INTENTIONALLY LEFT BLANK**

 **THIS PAGE INTENTIONALLY LEFT BLANK**



**THIS PAGE INTENTIONALLY LEFT BLANK**

**TABLE OF CONTENTS**  
**SECTION 6**  
**WEIGHT AND BALANCE**

Paragraph No.		Page No.
6.1	General .....	6-1
6.3	Airplane Weighing Procedure .....	6-2
6.5	Weight and Balance Data and Record .....	6-5
6.7	General Loading Recommendations .....	6-9
6.9	Weight and Balance Determination for Flight .....	6-10

**METRIC**

6.1	General - Metric .....	6-31
6.3	Airplane Weighing Procedure - Metric .....	6-32
6.5	Weight and Balance Data and Record - Metric .....	6-35
6.7	General Loading Recommendations - Metric .....	6-39
6.9	Weight and Balance Determination for Flight - Metric .....	6-40

Equipment List .....	Supplied with aircraft paperwork
----------------------	--



**THIS PAGE INTENTIONALLY LEFT BLANK**

## SECTION 6 WEIGHT AND BALANCE

### 6.1 GENERAL

In order to achieve design performance and flying characteristics, the airplane must be operated and flown within the approved weight vs. center of gravity (C.G.) envelope. (Refer to Figure 6-33.) The airplane offers flexibility of loading, however, it cannot be flown with the maximum number of passengers, full fuel tanks and maximum baggage.

Before the airplane is licensed, a basic empty weight and C.G. location is computed (basic empty weight consists of the standard empty weight of the airplane plus the optional equipment). Using the basic empty weight and C.G. location, the pilot can determine the weight and C.G. position for the loaded airplane. It is the responsibility of the pilot in command to ensure that the airplane is loaded within approved weight vs. C.G. envelope limits prior to each flight.

## 6.1 GENERAL (Continued)

The basic empty weight and C.G. location is recorded in the Weight and Balance Data Form (Figure 6-5) and the Weight and Balance Record (Figure 6-7). If modification work is performed or new equipment is added to the airplane, a revised basic empty weight and C.G. must be computed and recorded in the Weight and Balance Data Form and the Weight and Balance Record. The current values for weight and C.G. should be used to calculate the quantity of fuel, baggage, and passengers that can be boarded so as to remain within the approved weight and C.G. limitations.

The following pages contain procedures and forms used when weighing an airplane and computing basic empty weight, C.G. position, and useful load. Note that the useful load includes usable fuel, baggage, cargo and passengers.

## 6.3 AIRPLANE WEIGHING PROCEDURE

At the time of licensing, Piper provides each airplane with the basic empty weight and center of gravity location. This data is supplied in the Weight and Balance Data Form (Figure 6-5).

The removal or addition of equipment or airplane modifications can affect the basic empty weight and center of gravity. The following is a weighing procedure to determine this basic empty weight and center of gravity location:

### (a) Preparation

- (1) Verify that all items checked in the airplane equipment list are installed in the proper location in the airplane.
- (2) Remove excessive dirt, grease, moisture, and foreign items such as rags and tools, from the airplane before weighing.
- (3) Defuel airplane. Then open all fuel drains until all remaining fuel is drained. Then add the unusable fuel, 20 pounds (3 gallons total, 1.5 gallons each wing).
- (4) Fill oil to full capacity.

### 6.3 AIRPLANE WEIGHING PROCEDURE (Continued)

#### (a) Preparation (continued)

- (5) Place pilot and copilot seats in fifth (5th) notch, aft of forward position. Put flaps in the fully retracted position and all control surfaces in the neutral position. Tow bar should be in the proper location and all entrance and baggage doors closed.
- (6) Weigh the airplane inside a closed building to prevent errors in scale readings due to wind.

#### (b) Leveling

- (1) With the airplane on scales, insert a 3.4 inch spacer on each of the main gear struts and a 3.0 inch spacer on the nose gear strut.
- (2) Level airplane (refer to Figure 6-3) deflating (or inflating as required) nose wheel tire, to center bubble on level.

#### (c) Weighing - Airplane Basic Empty Weight

- (1) With the airplane level and brakes released, record the weight shown on each scale. Deduct the tare, if any, from each reading. (Refer to Figure 6-1.)

**6.3 AIRPLANE WEIGHING PROCEDURE (Continued)**

Scale Position and Symbol	Scale Reading	Tare	Net Weight
Nose Wheel (N)			
Right Main Wheel (R)			
Left Main Wheel (L)			
Basic Empty Weight, as Weighed (T)			

**WEIGHING FORM**

Figure 6-1

**(d) Basic Empty Weight Center of Gravity**

- (1) The following geometry applies to the airplane when it is level. Refer to Leveling paragraph 6.3 (b).

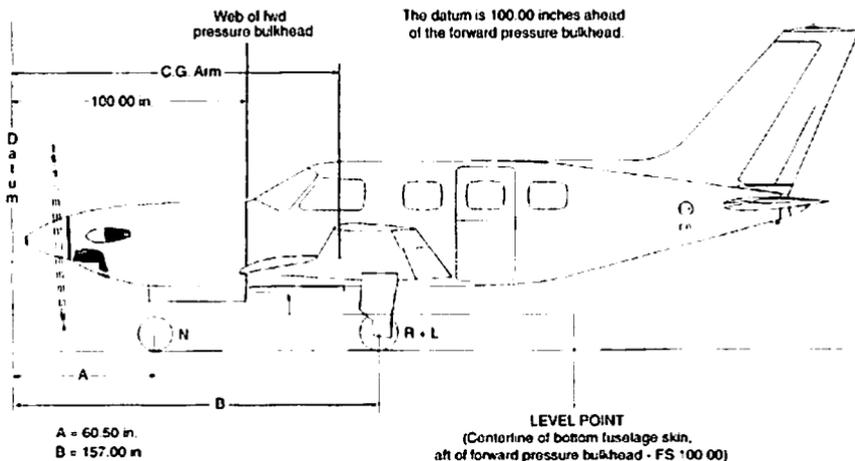
**LEVELING DIAGRAM**

Figure 6-3

### 6.3 AIRPLANE WEIGHING PROCEDURE (Continued)

- (2) The basic empty weight center of gravity (as weighed including optional equipment, full oil and unusable fuel) can be determined by the following formula:

$$\text{C.G. Arm} = \frac{(N)(A) + (R + L)(B)}{T} \text{ inches}$$

Where:  $T = N + R + L$ .

### 6.5 WEIGHT AND BALANCE DATA AND RECORD

The Basic Empty Weight, Center of Gravity Location and Useful Load listed in Figure 6-5 are for the airplane as licensed at the factory. These figures apply only to the specific airplane serial number and registration number shown.

The basic empty weight of the airplane as licensed at the factory has been entered in the Weight and Balance Record (Figure 6-7). This form is provided to present the current status of the airplane basic empty weight and a complete history of previous modifications. Any change to the permanently installed equipment or modification which affects weight or moment must be entered in the Weight and Balance Record.

**6.5 WEIGHT AND BALANCE DATA AND RECORD (Continued)**

## MODEL PA-46-500TP MERIDIAN

Airplane Serial Number \_\_\_\_\_

Registration Number \_\_\_\_\_

Date \_\_\_\_\_

## AIRPLANE BASIC EMPTY WEIGHT

Item	Weight (Lbs)	C.G. Arm	
		x (Inches Aft of Datum)	= Moment (In-Lbs)
Standard Empty Weight* Actual Computed			
Optional Equipment			
Basic Empty Weight			

\*The standard empty weight includes full oil capacity and 3.0 gallons of unusable fuel.

## AIRPLANE USEFUL LOAD - NORMAL CATEGORY OPERATION

(Ramp Weight) - (Basic Empty Weight) = Useful Load

(4892 lbs) - (            lbs) =            lbs.

THIS BASIC EMPTY WEIGHT, C.G. AND USEFUL LOAD ARE FOR THE AIRPLANE AS LICENSED AT THE FACTORY. REFER TO APPROPRIATE AIRCRAFT RECORD WHEN ALTERATIONS HAVE BEEN MADE.

## WEIGHT AND BALANCE DATA FORM

Figure 6-5



PA-46-500TP	Serial Number	Registration Number			Page Number	
		Description of Article or Modification	Weight Change			Running Basic Empty Weight
			Added (+) Removed (-)	Wt. (Lb.)		
Date	Item No.					
		As licensed				

**WEIGHT AND BALANCE RECORD**

Figure 6-7

PA-46-500TP	Serial Number		Registration Number			Page Number	
	Item No.	Description of Article or Modification	Added (+) Removed (-)	Wt. (Lb.)	Arm (In.)	Moment /100	Running Basic Empty Weight
Date				Wt. (Lb.)	Arm (In.)	Moment /100	Wt. (Lb.)

WEIGHT AND BALANCE RECORD (continued)  
Figure 6-7 (continued)

## 6.7 GENERAL LOADING RECOMMENDATIONS

For all airplane configurations, it is the responsibility of the pilot in command to make sure that the airplane always remains within the allowable weight vs. center of gravity limits while in flight.

The following general loading recommendation is intended only as a guide. The charts, graphs, tables and instructions should be checked to assure that the airplane is within the allowable weight vs. center of gravity envelope.

- (a) Pilot Only  
Load rear baggage compartment first. Investigation is required to determine the amount of fuel. Fuel load may be limited by forward envelope.
- (b) 2 Occupants - Pilot and Passenger in Front  
Load rear baggage compartment first. Investigation is required to determine the amount of fuel. Fuel load may be limited by forward envelope.
- (c) 3 Occupants - 2 in front, 1 in rear  
Investigation is required to determine the amount of fuel. Fuel load may be limited by forward envelope.
- (d) 4 Occupants - 2 in front, 2 in rear  
With 4 occupants, aft passengers' weight, fuel and baggage may be limited by envelope. Investigation is required to determine optimum fuel and baggage load.
- (e) 5 Occupants - 2 in front, 1 in middle, 2 in rear  
With 5 occupants, aft passengers' weight, fuel and baggage may be limited by envelope. Investigation is required to determine optimum fuel and baggage load.
- (f) 6 Occupants - 2 in front, 2 in middle, 2 in rear  
With 6 occupants, aft passengers weight, fuel and baggage may be limited by envelope. Investigation is required to determine optimum fuel and baggage load.

### WARNING

Do not attempt to fly this airplane under any conditions when it is loaded outside the limits of the approved weight and center of gravity envelope.

## 6.7 GENERAL LOADING RECOMMENDATIONS (continued)

### NOTE

With configuration loadings falling near the envelope limits, it is important to check anticipated landing loadings since fuel burn could result in a final loading outside of the approved weight vs. C.G. envelope.

### NOTE

For all airplane configurations, it is the responsibility of the pilot in command to make sure that the airplane always remains within the allowable weight vs. center of gravity envelope while in flight.

### NOTE

 
Always load the fuel equally between the right and left tanks.

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT

- (a) Record the airplane basic empty weight and moment from the Weight and Balance Data form or from the latest superseding form (Weight and Balance Record) onto the Weight and Balance computation form (figure 6-13).
- (b) Record the weight and corresponding moment of each item using the loading tables (figures 6-19 through 6-29).
- (c) Add the weight and moment of all items to the basic empty weight and moment to determine the zero fuel weight and moment.
- (d) Divide the zero fuel weight moment by the zero fuel weight to determine the zero fuel weight arm (C.G.).
- (e) Check the zero fuel weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-33). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.

**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**

- (f) Use the loading table for fuel (figure 6-27) to determine the moment for the fuel being loaded. Record the weight and moment of the fuel in the Weight and Balance Computation Form.
- (g) Total the zero fuel weight and moment with the fuel loading weight and moment to obtain ramp weight.
- (h) Divide the ramp weight moment by the ramp weight to determine the ramp weight arm (C.G.). Check the ramp weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-33). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.
- (i) Subtract the weight and moment of the fuel allowance for engine start, taxi, and runup to determine takeoff weight and moment. A standard 42.61 pound fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. Enter the fuel allowance weight and moment in the Weight and Balance Computation form.
- (j) Divide the takeoff weight moment by the takeoff weight to determine the takeoff weight arm (C.G.). Check the takeoff weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-33). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.
- (k) Determine the estimated weight of the fuel to be used during the flight to the appropriate destination. The weight and moment for this fuel is determined by the difference of the total fuel remaining after the fuel allowance is removed and the fuel remaining after reaching destination. Use the loading table for fuel (figure 6-27) to determine the moments. Enter the weight and moment of the fuel used during the flight in the Weight and Balance Computation form.
- (l) Subtract the weight and moment of the fuel used during the flight to determine landing weight and moment. Divide the landing weight moment by the landing weight to determine the landing weight arm (C.G.). Check the landing weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-33). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.



**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**

**THIS PAGE INTENTIONALLY LEFT BLANK**

**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**

	Weight (pounds)	Arm Aft of Datum (inches)	Moment (inch-pounds)
Basic Empty Weight	3380.0	136.01	459713.8
Pilot (Seat 1)	170.0	135.50	23035.0
Copilot (Seat 2)	170.0	135.50	23035.0
Center Passenger L/H (Seat 3)	180.0	177.00	31860.0
Center Passenger R/H (Seat 4)		177.00	
Rear Passenger L/H (Seat 5)		218.75	
Rear Passenger R/H (Seat 6)		218.75	
Radar pod stowage compartment-Standard (maximum 5 pounds-soft items only)		152.85	
Radar pod stowage compartment- EFIS equipped (maximum 5 pounds-soft items only)		157.475	
Aft Golf Baggage net (105 lbs. maximum -3 bags)-optional		222.31	
Aft Baggage (100 lbs. max.) (50 lbs. maximum with golf bag net option)	80.0	248.23	19858.4
Aft oil stowage compartment (maximum - 5 pounds)		286.50	
Zero Fuel Weight	3980.0	140.08	557502.2
Fuel (170 gals. maximum) @ 6.70 pounds per gallon	904.5	148.36	134188.7
Maximum Ramp Weight (4892.61 pounds)	4884.5	141.61	691690.9
Fuel allowance for Engine Start, Taxi and Run up*	-42.61	149.89	-6386.63
Maximum Takeoff Weight (4850 pounds)	4841.89	141.54	685304.23

Locate the arm (Center of Gravity, C.G.) of the takeoff weight on the Center of Gravity Limits graph (figure 6-33). If this point falls within the Weight/C.G. envelope, the loading is acceptable for takeoff.

**Example of Weight and Balance Computation Form  
Standard Configuration (Sample Loading)**

Figure 6-9

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT(cont)

<b>Weight Calculation</b>		<b>Weight (pounds)</b>
<b>Total Fuel</b>		904.50
<b>Fuel allowance for Engine Start, Taxi and Run up</b>		-42.61
<b>Fuel Remaining on board</b>		861.89
<b>Moment Calculation</b>		<b>Moment (inlb-pounds)</b>
<b>Total Fuel</b>		134188.66
<b>Fuel Remaining on board</b>		-127802.03
<b>Fuel allowance for Engine Start, Taxi and Run up</b>		6386.63

**Notes:**

1. Use the fuel loading table (figure 6-27) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
2. A standard 42.61 pound fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. See example, figure 6-11.

**Example of Moment Calculation for Fuel Allowance  
Standard Configuration (Sample Loading)**

Figure 6-11

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

The moment for the fuel burned during the mission is determined by the difference in moments of the takeoff fuel loaded and the fuel remaining on board after landing. See example below.

Weight Calculation	Weight (pounds)
Takeoff Fuel	861.89
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	-633.3
Post Mission Fuel (Fuel remaining at Landing)	228.64
Moment Calculation	Moment (inch-pounds)
Takeoff Fuel	127802.03
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	-33122.14
Post Mission Fuel (Fuel remaining at Landing)	94679.89

Item	Weight (pounds)	Arm Aft of Datum (inches)	Moment (inch-pounds)
Maximum Takeoff Weight (4850 pounds)	4841.89	141.54	685304.23
Minus Estimated Fuel Burn-off (Climb & Cruise) @ 6.70 pounds per gallon	-633.3	149.51	-94679.89
Maximum Landing Weight (4850 pounds)	4208.59	140.34	590624.34

Locate the arm (Center of Gravity, C.G.) of the landing weight on the Center of Gravity Limits graph (figure 6-33). If this point falls within the Weight/C.G. envelope, the loading is acceptable for landing.

**IT IS THE SOLE RESPONSIBILITY OF THE PILOT IN COMMAND TO ENSURE THAT THE AIRPLANE IS LOADED PROPERLY AT ALL TIMES.**

### Example of Moment Calculation for Fuel Burned During the Mission

Figure 6-12

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

	Weight (pounds)	Arm Aft of Datum (inches)	Moment (inch-pounds)
Basic Empty Weight			
Pilot (Seat 1)		135.50	
Copilot (Seat 2)		135.50	
Center Passenger L/H (Seat 3)		177.00	
Center Passenger R/H (Seat 4)		218.75	
Rear Passenger L/H (Seat 5)		218.75	
Rear Passenger R/H (Seat 6)			
Radar pod storage compartment-Standard (maximum 5 pounds-soft items only)		152.85	
Radar pod storage compartment- EFTS equipped (maximum 5 pounds-soft items only)		157.475	
AR Golf Baggage net (105 lbs. maximum -3 bags)-optional		222.31	
AR Baggage (100 lbs. max. (50 lbs. maximum with golf bag net option))		248.23	
AR oil storage compartment (maximum - 5 pounds)		286.50	
Zero Fuel Weight			
Fuel (170 gals. maximum) @ 6.70 pounds per gallon			
Maximum Ramp Weight (4892.61 pounds)			
Fuel allowance for Engine Start, Taxi and Run up*	-42.61		
Maximum Takeoff Weight (4850 pounds)			

**Notes:**

1. Use the fuel loading table (figure 6-27) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
2. A standard 42.61 pound fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup.  
Locate the arm (Center of Gravity, C.G.) of the takeoff weight on the Center of Gravity Limits graph (figure 6-33). If this point falls within the Weight/C.G. envelope, the loading is acceptable for takeoff.

**Weight and Balance Computation Form  
Standard Configuration (Normal Category)**

Figure 6-13A

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

	Weight (pounds)	Arm Aft of Datum (inches)	Moment (inch-pounds)
Basic Empty Weight			
Pilot (Seat 1)		135.50	
Copilot (Seat 2)		135.50	
Stowage Area #1 (Maximum 5 pounds) (see Figure 6-31)		158.45	
Stowage Area #2 (Maximum 5 pounds) (see Figure 6-31)		158.45	
Stowage Area #3 (Maximum 5 pounds) (see Figure 6-31)		158.45	
Stowage Area #4 (Maximum 5 pounds) (see Figure 6-31)		171.25	
Ice Chest/drawer (Maximum 20 pounds) (see Figure 6-31)		183.85	
Center Passenger R/H (Seat 4)		177.00	
Rear Passenger L/H (Seat 5)		218.75	
Rear Passenger R/H (Seat 6)		218.75	
Radar pod stowage compartment-Standard (maximum 5 pounds-soft items only)		152.85	
Radar pod stowage compartment- EFIS equipped (maximum 5 pounds-soft items only)		157.475	
Aft Golf Baggage net (10.5 lbs. maximum-3 bags-optional)		222.31	
Aft Baggage (100 lbs. max. (50 lbs. maximum with golf bag net option))		248.23	
Aft oil stowage compartment (maximum - 5 pounds)			
Zero Fuel Weight		286.50	
Fuel (170 gals. maximum) at 6.70 pounds per gallon			
Maximum Ramp Weight (4892.61 lbs.)			
Fuel allowance for Engine Start, Taxi and Run up	-42.61		
Maximum Takeoff Weight (4850 lbs.)			

## Notes:

- Use the fuel loading table (figure 6-27) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
- A standard 42.61 pound fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. Locate the arm (Center of Gravity, C.G.) of the takeoff weight on the Center of Gravity Limits graph (figure 6-33). If this point falls within the Weight/C.G. envelope, the loading is acceptable for takeoff.

**Weight and Balance Computation Form**  
**Executive/Entertainment Configuration (Normal Category)**

Figure 6-13B



6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

Weight Calculation	Weight (pounds)
Total Fuel	
Fuel allowance for Engine Start, Taxi and Run up*	
Fuel Remaining on board	
Moment Calculation	Moment (inch-pounds)
Total Fuel	
Fuel Remaining on board	
Fuel allowance for Engine Start, Taxi and Run up	

Notes:

1. Use the fuel loading table (figure 6-27) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
2. A standard 42.61 pound fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. See example, figure 6-11.

Moment Calculation for Fuel Allowance

Figure 6-14

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

The moment for the fuel burned during the mission is determined by the difference in moments of the takeoff fuel loaded and the fuel remaining on board after landing. See example below.

Weight Calculation	Weight (pounds)
Takeoff Fuel	
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	
Post Mission Fuel (Fuel remaining at Landing)	
Moment Calculation	Moment (inch-pounds)
Takeoff Fuel	
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	
Post Mission Fuel (Fuel remaining at Landing)	

Item	Weight (pounds)	Arm Aft of Datum (inches)	Moment (inch-pounds)
Maximum Takeoff Weight (4850 pounds)			
Minus Estimated Fuel Burn-off (Climb & Cruise) @ 6.70 pounds per gallon			
Maximum Landing Weight (4850 pounds)			

Locate the arm (Center of Gravity, C.G.) of the landing weight on the Center of Gravity Limits graph (figure 6-33). If this point falls within the Weight/C.G. envelope, the loading is acceptable for landing.

**IT IS THE SOLE RESPONSIBILITY OF THE PILOT IN COMMAND TO ENSURE THAT THE AIRPLANE IS LOADED PROPERLY AT ALL TIMES.**

Moment Calculation for Fuel Burned During the Mission


Figure 6-15

**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**


**THIS PAGE INTENTIONALLY LEFT BLANK**

6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

Standard Configuration

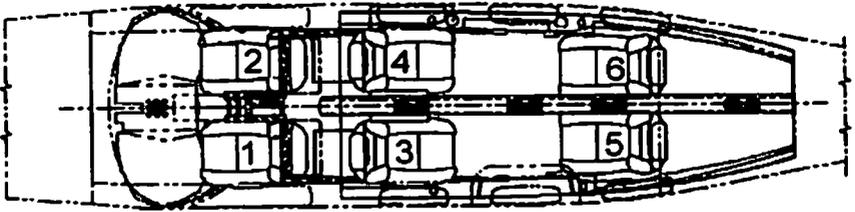

Executive/Entertainment Configuration

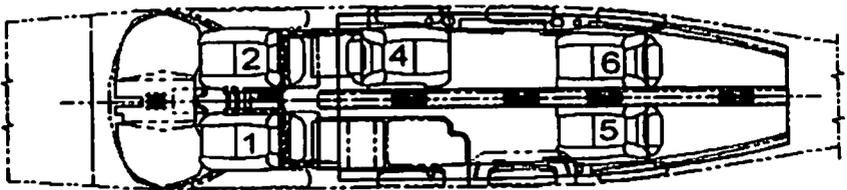

Seating Configurations

Figure 6-17

6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

**THIS PAGE INTENTIONALLY LEFT BLANK**

6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

Weight (pounds)	Pilot	Copilot (Seat 2)	Seat 3			Seat 4			Seat 5			Seat 6		
	Arm FS 135.5	Arm FS 135.5	Arm FS 177.0	Arm FS 218.75										
Moment (inch - Pounds)														
20	2710.0	2710.0	3540.0	3540.0	3540.0	3540.0	3540.0	3540.0	4375.0	4375.0	4375.0	4375.0	4375.0	4375.0
30	4065.0	4065.0	5310.0	5310.0	5310.0	5310.0	5310.0	5310.0	6562.5	6562.5	6562.5	6562.5	6562.5	6562.5
40	5420.0	5420.0	7080.0	7080.0	7080.0	7080.0	7080.0	7080.0	8750.0	8750.0	8750.0	8750.0	8750.0	8750.0
50	6775.0	6775.0	8850.0	8850.0	8850.0	8850.0	8850.0	8850.0	10937.5	10937.5	10937.5	10937.5	10937.5	10937.5
60	8130.0	8130.0	10620.0	10620.0	10620.0	10620.0	10620.0	10620.0	13125.0	13125.0	13125.0	13125.0	13125.0	13125.0
70	9485.0	9485.0	12390.0	12390.0	12390.0	12390.0	12390.0	12390.0	15312.5	15312.5	15312.5	15312.5	15312.5	15312.5
80	10840.0	10840.0	14160.0	14160.0	14160.0	14160.0	14160.0	14160.0	17500.0	17500.0	17500.0	17500.0	17500.0	17500.0
90	12195.0	12195.0	15930.0	15930.0	15930.0	15930.0	15930.0	15930.0	19687.5	19687.5	19687.5	19687.5	19687.5	19687.5
100	13550.0	13550.0	17700.0	17700.0	17700.0	17700.0	17700.0	17700.0	21875.0	21875.0	21875.0	21875.0	21875.0	21875.0
110	14905.0	14905.0	19470.0	19470.0	19470.0	19470.0	19470.0	19470.0	24062.5	24062.5	24062.5	24062.5	24062.5	24062.5
120	16260.0	16260.0	21240.0	21240.0	21240.0	21240.0	21240.0	21240.0	26250.0	26250.0	26250.0	26250.0	26250.0	26250.0
130	17615.0	17615.0	23010.0	23010.0	23010.0	23010.0	23010.0	23010.0	28437.5	28437.5	28437.5	28437.5	28437.5	28437.5
140	18970.0	18970.0	24780.0	24780.0	24780.0	24780.0	24780.0	24780.0	30625.0	30625.0	30625.0	30625.0	30625.0	30625.0
150	20325.0	20325.0	26550.0	26550.0	26550.0	26550.0	26550.0	26550.0	32812.5	32812.5	32812.5	32812.5	32812.5	32812.5
160	21680.0	21680.0	28320.0	28320.0	28320.0	28320.0	28320.0	28320.0	35000.0	35000.0	35000.0	35000.0	35000.0	35000.0
170	23035.0	23035.0	30090.0	30090.0	30090.0	30090.0	30090.0	30090.0	37187.5	37187.5	37187.5	37187.5	37187.5	37187.5

Loading Table  
Occupants (Standard Configuration)

Figure 6-19

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

Weight (pounds)	Pilot	Copilot (Seat 2)	Seat 4		Seat 5		Seat 6	
	Arm FS 135.5	Arm FS 135.5	Arm FS 177.0	Arm FS 177.0	Arm FS 218.75	Arm FS 218.75	Arm FS 218.75	Arm FS 218.75
Moment (inch - pounds)								
20	2710.0	2710.0	3540.0	3540.0	4375.0	4375.0	4375.0	4375.0
30	4065.0	4065.0	5310.0	5310.0	6562.5	6562.5	6562.5	6562.5
40	5420.0	5420.0	7080.0	7080.0	8750.0	8750.0	8750.0	8750.0
50	6775.0	6775.0	8850.0	8850.0	10937.5	10937.5	10937.5	10937.5
60	8130.0	8130.0	10620.0	10620.0	13125.0	13125.0	13125.0	13125.0
70	9485.0	9485.0	12390.0	12390.0	15312.5	15312.5	15312.5	15312.5
80	10840.0	10840.0	14160.0	14160.0	17500.0	17500.0	17500.0	17500.0
90	12195.0	12195.0	15930.0	15930.0	19687.5	19687.5	19687.5	19687.5
100	13550.0	13550.0	17700.0	17700.0	21875.0	21875.0	21875.0	21875.0
110	14905.0	14905.0	19470.0	19470.0	24062.5	24062.5	24062.5	24062.5
120	16260.0	16260.0	21240.0	21240.0	26250.0	26250.0	26250.0	26250.0
130	17615.0	17615.0	23010.0	23010.0	28437.5	28437.5	28437.5	28437.5
140	18970.0	18970.0	24780.0	24780.0	30625.0	30625.0	30625.0	30625.0
150	20325.0	20325.0	26550.0	26550.0	32812.5	32812.5	32812.5	32812.5
160	21680.0	21680.0	28320.0	28320.0	35000.0	35000.0	35000.0	35000.0
170	23035.0	23035.0	30090.0	30090.0	37187.5	37187.5	37187.5	37187.5

Loading Table

Occupants (Executive/Entertainment Configuration)

Figure 6-21

**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**


<b>Standard Baggage net configuration</b>	
<b>Weight (pounds)</b>	<b>Standard baggage Arm FS 248.23 Moment (inch -pounds)</b>
10	2482.3
20	4964.6
30	7446.9
40	9929.2
50	12411.5
60	14893.8
70	17376.1
80	19858.4
90	22340.7
100	24823.0

**Loading Table  
Standard Baggage  
Figure 6-23**

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

Golf baggage net configuration		
Weight (pounds)	Golf baggage location	Aft location
	Arm FS 222.31	Arm FS 248.23
	Moment (inch -pounds)	Moment (inch -pounds)
10.0	2223.1	2482.3
20.0	4446.2	4964.6
30.0	6669.3	7446.9
40.0	8892.4	9929.2
50.0	11115.5	12411.5
60.0	13338.6	
70.0	15561.7	
80.0	17784.8	
90.0	20007.9	
100.0	22231.0	
105.0	23342.6	

Loading Table  
Golf Baggage - Optional  
Figure 6-25

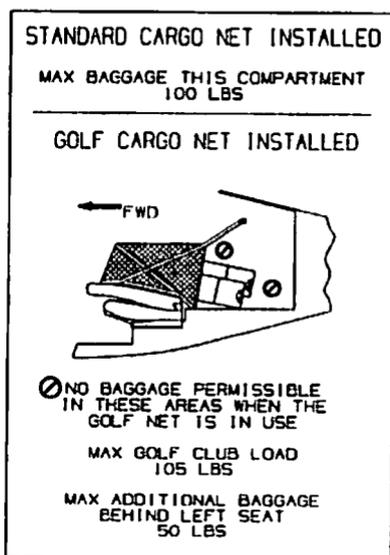

Golf Baggage Loading Configuration  
Figure 6-26

**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**

<b>Gallons</b> <b>(unusable fuel not included)</b>	<b>Fuel</b> <b>Weight</b> <b>(pounds)</b>	<b>Fuel Moment</b> <b>Arm Varies</b> <b>(inch pounds)</b>
20	134.00	19144.68
25	167.50	24079.93
30	201.00	29030.69
35	234.50	33990.65
40	268.00	38957.46
45	301.50	43930.87
50	335.00	48911.41
55	368.50	53899.63
60	402.00	58895.65
65	435.50	63899.05
70	469.00	68908.87
75	502.50	73923.83
80	536.00	78942.46
85	569.50	83963.42
90	603.00	88985.58
95	636.50	94008.15
100	670.00	99030.76
105	703.50	104053.34
110	737.00	109076.01
115	770.50	114098.96
120	804.00	119122.17
125	837.50	124145.36
130	871.00	129167.84
135	904.50	134188.66
140	938.00	139206.95
145	971.50	144222.62
150	1005.00	149237.50
155	1038.50	154257.05
160	1072.00	159292.80
165	1105.50	164365.64
170	1139.00	169510.07

Three (3) gallons of unusable fuel (20.10 pounds, 2901.84 inch pounds) included in basic empty weight. The above weights are based on a fuel specific gravity of 0.02899 pounds per cubic inch at 59 degrees F for Jet A and Jet A-1, which yields a fuel density of 6.7 pounds per gallon.

**Loading Table**  
**Fuel**

Figure 6-27

## 6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)


Weight (pounds)	Stowage area 1-3		Stowage area 4		Ice chest	
	Arm FS 158.45	Moment (inch - pounds)	Arm FS 171.25	Moment (inch - pounds)	Arm FS 183.85	Moment (inch - pounds)
1	158.5		171.3		183.9	
2	316.9		342.5		367.7	
3	475.4		513.8		551.6	
4	633.8		685.0		735.4	
5	792.3		856.3		919.3	
6					1103.1	
7					1287.0	
8					1470.8	
9					1654.7	
10					1838.5	
11					2022.4	
12					2206.2	
13					2390.1	
14					2573.9	
15					2757.8	
16					2941.6	
17					3125.5	
18					3309.3	
19					3493.2	
20					3677.0	

## Loading Table

## Executive/Entertainment Stowage Compartment


Figure 6-29

**6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)**

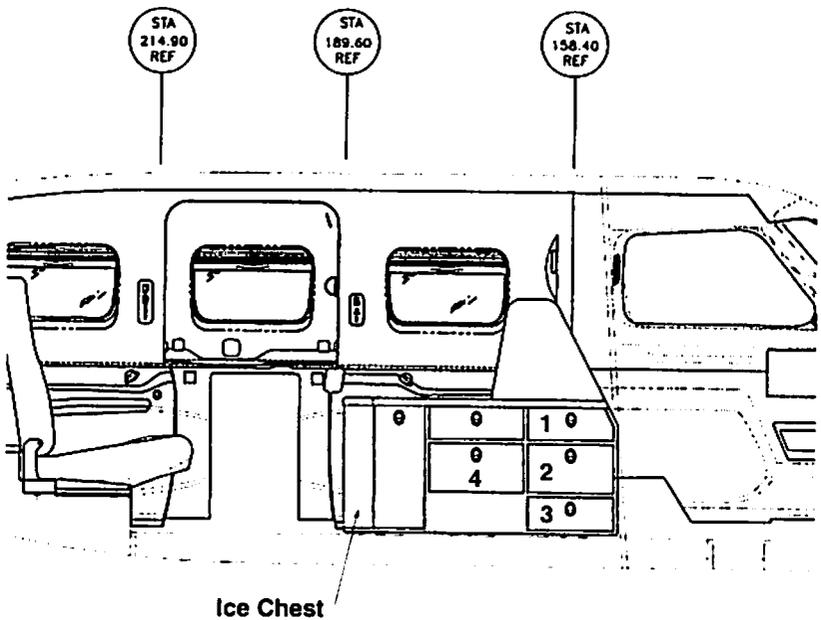

**Stowage Configuration**  
Figure 6-31

6.9 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT (cont)

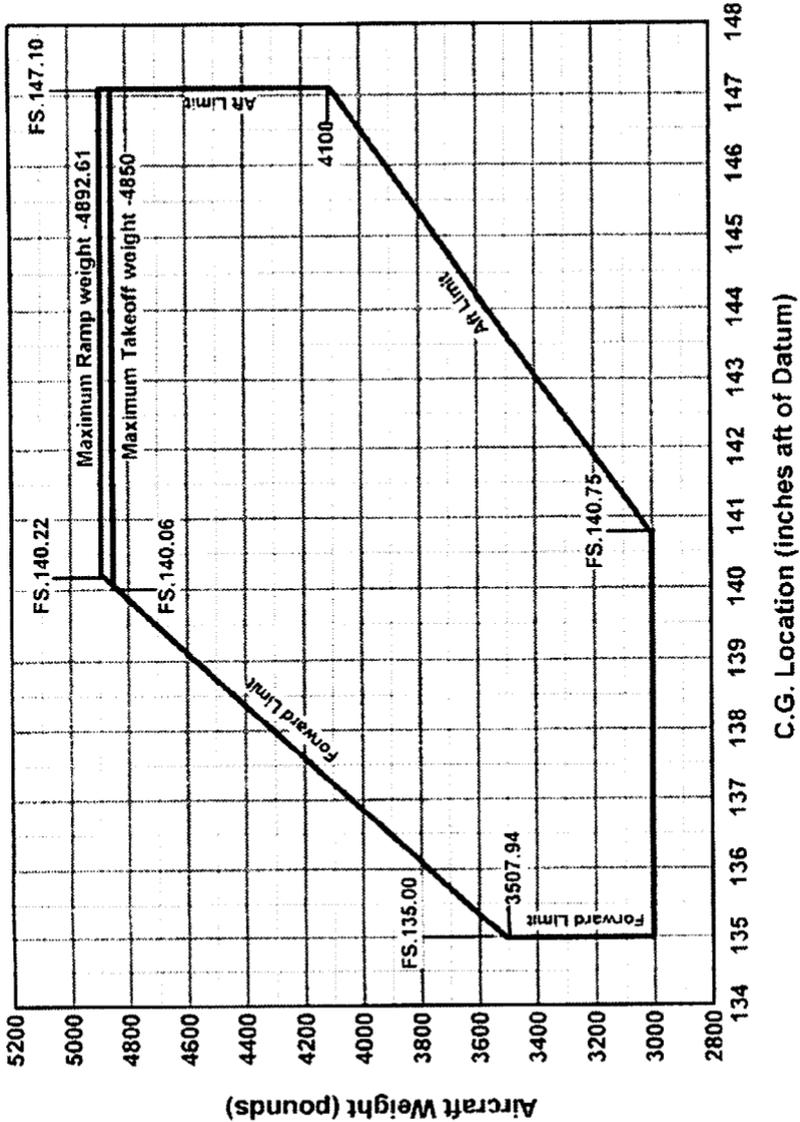

Center of Gravity Limits Graph  
Figure 6-33



## SECTION 6 - METRIC

### WEIGHT AND BALANCE

#### 6.1 General - Metric

In order to achieve design performance and flying characteristics, the airplane must be operated and flown within the approved weight vs. center of gravity (C.G.) envelope. (Refer to Figure 6-69.) The airplane offers flexibility of loading, however, it cannot be flown with the maximum number of passengers, full fuel tanks and maximum baggage.

Before the airplane is licensed, a basic empty weight and C.G. location is computed (basic empty weight consists of the standard empty weight of the airplane plus the optional equipment). Using the basic empty weight and C.G. location, the pilot can determine the weight and C.G. position for the loaded airplane. It is the responsibility of the pilot in command to ensure that the airplane is loaded within approved weight vs. C.G. envelope limits prior to each flight.

The basic empty weight and C.G. location is recorded in the Weight and Balance Data Form (Figure 6-39) and the Weight and Balance Record (Figure 6-41). If modification work is performed or new equipment is added to the airplane, a revised basic empty weight and C.G. must be computed and recorded in the Weight and Balance Data Form and the Weight and Balance Record. The current values for weight and C.G. should be used to calculate the quantity of fuel, baggage, and passengers that can be boarded so as to remain within the approved weight and C.G. limitations.

The following pages contain procedures and forms used when weighing an airplane and computing basic empty weight, C.G. position, and useful load. Note that the useful load includes usable fuel, baggage, cargo and passengers.

### 6.3 Airplane Weighing Procedure - Metric

At the time of licensing, Piper provides each airplane with the basic empty weight and center of gravity location. This data is supplied in the Weight and Balance Data Form (Figure 6-39).

The removal or addition of equipment or airplane modifications can affect the basic empty weight and center of gravity. The following is a weighing procedure to determine this basic empty weight and center of gravity location:

#### (a) Preparation

- (1) Verify that all items checked in the airplane equipment list are installed in the proper location in the airplane.
- (2) Remove excessive dirt, grease, moisture, and foreign items such as rags and tools, from the airplane before weighing.
- (3) Defuel airplane. Then open all fuel drains until all remaining fuel is drained. Then add the unusable fuel, 5.6 liters in each wing.
- (4) Fill oil to full capacity.
- (5) Place pilot and copilot seats in fifth (5th) notch, aft of forward position. Put flaps in the fully retracted position and all control surfaces in the neutral position. Tow bar should be in the proper location and all entrance and baggage doors closed.
- (6) Weigh the airplane inside a closed building to prevent errors in scale readings due to wind.



**6.3 Airplane Weighing Procedure - Metric (continued)**

(b) Leveling

- (1) With the airplane on scales, insert an 8.6 centimeter spacer on each of the main gear struts and a 7.6 centimeter spacer on the nose gear strut.
- (2) Level airplane (refer to Figure 6-37) deflating (or inflating as required) nose wheel tire, to center bubble on level.

(c) Weighing - Airplane Basic Empty Weight


With the airplane level and brakes released, record the weight shown on each scale. Deduct the tare, if any, from each reading. (Refer to Figure 6-35.)

Scale Position and Symbol	Scale Reading	Tare	Net Weight
Nose Wheel (N)			
Right Main Wheel (R)			
Left Main Wheel (L)			
Basic Empty Weight, as Weighed (T)			

**Weighing Form**  
Figure 6-35

**6.3 Airplane Weighing Procedure - Metric (continued)****(d) Basic Empty Weight Center of Gravity**

- (1) The following geometry applies to the airplane when it is level. Refer to Leveling, paragraph 6.3 (b).

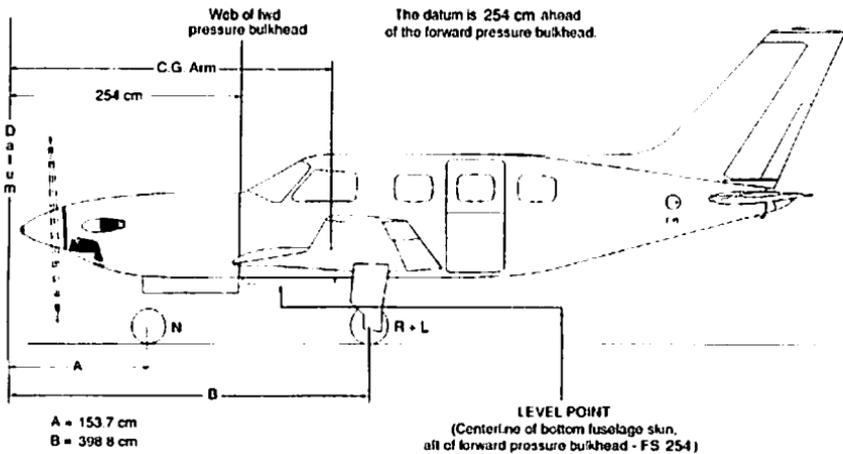**Leveling Diagram****Figure 6-37**



**MERIDIAN****6.5 Weight and Balance Data and Record - Metric (Continued)**

MODEL PA-46-500TP MERIDIAN

Airplane Serial Number \_\_\_\_\_

Registration Number \_\_\_\_\_

Date \_\_\_\_\_

**AIRPLANE BASIC EMPTY WEIGHT**

Item	Weight x (kg)	C.G. Arm (cm Aft of Datum)	= Moment (cm-kg)
Standard Empty Weight* Actual Computed			
Optional Equipment			
Basic Empty Weight			

\*The standard empty weight includes full oil capacity and 11.4 liters of unusable fuel.

**AIRPLANE USEFUL LOAD - NORMAL CATEGORY OPERATION**

(Ramp Weight) - (Basic Empty Weight) = Useful Load

(2219 kg) - (            kg) =            kg

THIS BASIC EMPTY WEIGHT, C.G. AND USEFUL LOAD ARE FOR THE AIRPLANE AS LICENSED AT THE FACTORY. REFER TO APPROPRIATE AIRCRAFT RECORD WHEN ALTERATIONS HAVE BEEN MADE.

**Weight and Balance Data Form**

Figure 6-39



**MERIDIAN** WEIGHT AND BALANCE

6.5 Weight and Balance Data and Record - Metric (Continued)

PA-46-500TP	Serial Number	Registration Number			Page Number					
		Item No.	Description of Article or Modification	Added (+) Removed (-)	Wt. (kg)	Arm (cm)	Moment /100	Running Basic Empty Weight	Wt. (kg)	Moment /100

Weight and Balance Record  
Figure 6-41 (continued)

## 6.7 General Loading Recommendations - Metric

For all airplane configurations, it is the responsibility of the pilot in command to make sure that the airplane always remains within the allowable weight vs. center of gravity limits while in flight.

The following general loading recommendation is intended only as a guide. The charts, graphs, tables and instructions should be checked to assure that the airplane is within the allowable weight vs. center of gravity envelope.

- (a) Pilot Only  
Load rear baggage compartment first. Investigation is required to determine the amount of fuel. Fuel load may be limited by forward envelope.
- (b) 2 Occupants - Pilot and Passenger in Front  
Load rear baggage compartment first. Investigation is required to determine the amount of fuel. Fuel load may be limited by forward envelope.
- (c) 3 Occupants - 2 in front, 1 in rear  
Investigation is required to determine the amount of fuel. Fuel load may be limited by forward envelope.
- (d) 4 Occupants - 2 in front, 2 in rear  
With 4 occupants, aft passengers' weight, fuel and baggage may be limited by envelope. Investigation is required to determine optimum fuel and baggage load.
- (e) 5 Occupants - 2 in front, 1 in middle, 2 in rear  
With 5 occupants, aft passengers' weight, fuel and baggage may be limited by envelope. Investigation is required to determine optimum fuel and baggage load.
- (f) 6 Occupants - 2 in front, 2 in middle, 2 in rear  
With 6 occupants, aft passengers weight, fuel and baggage may be limited by envelope. Investigation is required to determine optimum fuel and baggage load.

### WARNING

Do not attempt to fly this airplane under any conditions when it is loaded outside the limits of the approved weight and center of gravity envelope.

## 6.7 General Loading Recommendations - Metric (continued)

### NOTE

With configuration loadings falling near the envelope limits, it is important to check anticipated landing loadings since fuel burn could result in a final loading outside of the approved weight vs. C.G. envelope.

### NOTE

For all airplane configurations, it is the responsibility of the pilot in command to make sure that the airplane always remains within the allowable weight vs. center of gravity envelope while in flight.

### NOTE

Always load the fuel equally between the right and left tanks.

## 6.9 Weight and Balance Determination for Flight - Metric

- (a) Record the airplane basic empty weight and moment from the Weight and Balance Data form or from the latest superseding form (Weight and Balance Record) onto the Weight and Balance computation form (figure 6-47).
- (b) Record the weight and corresponding moment of each item using the loading tables (figures 6-53 through 6-65).
- (c) Add the weight and moment of all items to the basic empty weight and moment to determine the zero fuel weight and moment.
- (d) Divide the zero fuel weight moment by the zero fuel weight to determine the zero fuel weight arm (C.G.).
- (e) Check the zero fuel weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-69). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.

**6.9 Weight and Balance Determination for Flight - Metric (cont)**

- (f) Use the loading table for fuel (figure 6-63) to determine the moment for the fuel being loaded. Record the weight and moment of the fuel in the Weight and Balance Computation Form.
- (g) Total the zero fuel weight and moment with the fuel loading weight and moment to obtain ramp weight.
- (h) Divide the ramp weight moment by the ramp weight to determine the ramp weight arm (C.G.). Check the ramp weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-69). Approved points are located within the C.G envelope. This then meets the weight and balance requirements.
- (i) Subtract the weight and moment of the fuel allowance for engine start, taxi, and runup to determine takeoff weight and moment. A standard 19.33 kilogram fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. Enter the fuel allowance weight and moment in the Weight and Balance Computation form.
- (j) Divide the takeoff weight moment by the takeoff weight to determine the takeoff weight arm (C.G.). Check the takeoff weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-69). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.
- (k) Determine the estimated weight of the fuel to be used during the flight to the appropriate destination. The weight and moment for this fuel is determined by the difference of the total fuel remaining after the fuel allowance is removed and the fuel remaining after reaching destination. Use the loading table for fuel (figure 6-63) to determine the moments. Enter the weight and moment of the fuel used during the flight in the Weight and Balance Computation form.
- (l) Subtract the weight and moment of the fuel used during the flight to determine landing weight and moment. Divide the landing weight moment by the landing weight to determine the landing weight arm (C.G.). Check the landing weight and C.G. by locating the weight and arm on the Center of Gravity Limits graph (figure 6-69). Approved points are located within the C.G. envelope. This then meets the weight and balance requirements.



**6.9 Weight and Balance Determination for Flight - Metric (cont)**

**THIS PAGE INTENTIONALLY LEFT BLANK**

## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Item	Weight (kilograms)	Arm Aft of Datum (centimeter)	Moment (centimeter- kilograms)
Basic Empty Weight	1533.1	345.47	529644.8
Pilot (Seat 1)	77.1	344.17	26539.1
Copilot (Seat 2)	77.1	344.17	26539.1
Center Passenger L/H (Seat 3)	81.6	449.58	36706.5
Center Passenger R/H (Seat 4)		449.58	
Rear Passenger L/H (Seat 5)		555.63	
Rear Passenger R/H (Seat 6)		555.63	
Radar pod stowage compartment-Standard (maximum 2.2 kilograms-soft items only)		388.24	
Radar pod stowage compartment- EFIS equipped (maximum 2.2 kilograms-soft items only)		399.99	
Aft Golf Baggage net (47.6 kilograms max. -3 bags)-optional		564.67	
Aft Baggage (45.3 kilograms max.) (22.6 kilograms max with golf bag)	36.3	630.50	22879.2
Aft oil stowage compartment (maximum - 2.2 kilograms)		727.71	
Zero fuel Weight	1805.3	355.79	642308.65
Fuel (643.45 litres maximum) @ 0.80 kilograms per litre	410.3	376.83	154601.3
Maximum Ramp Weight (2219.24 kilograms)	2215.6	359.69	796909.9
Fuel allowance for Engine Start, Taxi and Run up	-19.33	380.71	-7358.2
Maximum Takeoff Weight (2199.91 kilograms)	2196.2	359.50	789551.75

Locate the arm (Center of Gravity, C.G.) of the takeoff weight on the Center of Gravity Limits graph (figure 6-69). If this point falls within the Weight/C.G. envelope, the loading is acceptable for takeoff.

Example of Weight and Balance Computation  
Standard Configuration (Sample Loading)

Figure 6-43

## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Weight Calculation	Weight (kilograms)
Total Fuel	410.27
Fuel allowance for Engine Start, Taxi and Run up*	-19.33
Fuel Remaining on board	390.94
Moment Calculation	Moment (centimeter-kilograms)
Total Fuel	154601.3
Fuel Remaining on board	-147243.1
Fuel allowance for Engine Start, Taxi and Run up	7358.2

**Notes:**

1. Use the fuel loading table (figure 6-63) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
2. A standard 19.33 kilograms fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. See example, figure 6-45.

**Example of Moment Calculation for Fuel Allowance  
Standard Configuration (Sample Loading)**

Figure 6-45



**6.9 Weight and Balance Determination for Flight - Metric (cont)**

The moment for the fuel burned during the mission is determined by the difference in moments of the takeoff fuel loaded and the fuel remaining on board after landing. See example below.

Weight Calculation	Weight (kilograms)
Takeoff Fuel	390.94
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	-287.2
Post Mission Fuel (Fuel remaining at Landing)	103.74
Moment Calculation	Moment (centimeter-kilograms)
Takeoff Fuel	147243.10
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	-38160.6
Post Mission Fuel (Fuel remaining at Landing)	109082.5

Maximum Takeoff Weight (2199.91 kilograms)	2196.23	359.50	789551.75
Minus Estimated Fuel Burn-off (Climb & Cruise) @ 0.80 kilograms per litre	-287.2	379.76	-109082.5
Maximum Landing Weight (2199.91 kilograms)	1909.00	356.45	680469.28

Locate the arm (Center of Gravity, C.G.) of the landing weight on the Center of Gravity Limits graph (figure 6-69). If this point falls within the Weight/C.G. envelope, the loading is acceptable for landing.

**IT IS THE SOLE RESPONSIBILITY OF THE PILOT IN COMMAND TO ENSURE THAT THE AIR-PLANE IS LOADED PROPERLY AT ALL TIMES.**

**Example of Moment Calculation for Fuel Burned During the Mission**

Figure 6-46

## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Item	Weight (kilograms)	Arm Arm of Datum (centimeter)	Moment (centimeter- kilograms)
Basic Empty Weight		345.47	
Pilot (Seat 1)		344.17	
Copilot (Seat 2)		344.17	
Center Passenger L/H (Seat 3)		449.58	
Center Passenger R/H (Seat 4)		449.58	
Rear Passenger L/H (Seat 5)		555.63	
Rear Passenger R/H (Seat 6)		555.63	
Radar pod storage compartment-Standard (maximum 2.27 kilograms-soft items only)		388.24	
Radar pod storage compartment- EFTS equipped (maximum 2.27 kilograms-soft items only)		399.99	
ARI Golf Baggage net (47.63 kilograms max. -3 bags)-optional		564.67	
ARI Baggage (45.16 kilograms max. (22.68 kilograms max with golf bag)		630.50	
ARI oil storage compartment (maximum - 2.27 kilograms)			
Zero fuel Weight			
Fuel (643.45 litres maximum) @ 0.80 kilograms per litre			
Maximum Ramp Weight (2219.24 kilograms)			
Fuel allowance for Engine Start, Taxi and Run up	-19.33		
Maximum Takeoff Weight (2199.91 kilograms)			

**Notes:**

1. Use the fuel loading table (figure 6-63) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
  2. A standard 19.33 kilograms fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup.
- Locate the arm (Center of Gravity, C.G.) of the takeoff weight on the Center of Gravity Limits graph (figure 6-69). If this point falls within the Weight/C.G. envelope, the loading is acceptable for takeoff.

**Weight and Balance Computation Form**  
**Standard Configuration (Normal Category)**

Figure 6-47A



6.9 Weight and Balance Determination for Flight - Metric (cont)

Item	Weight (kilograms)	Arm Aft of Datum (centimeter)	Moment (centimeter-kilograms)
Basic Empty Weight			
Pilot (Seat 1)		344.17	
Copilot (Seat 2)		344.17	
Stowage Area #1 (Maximum 2.27 kilograms) (See Figure 6-67)		402.46	
Stowage Area #2 (Maximum 2.27 kilograms) (See Figure 6-67)		402.46	
Stowage Area #3 (Maximum 2.27 kilograms) (See Figure 6-67)		402.46	
Stowage Area #4 (Maximum 2.27 kilograms) (See Figure 6-67)		434.98	
Ice Chest drawer (Maximum 9.07 kilograms) (See Figure 6-67)		466.98	
Center Passenger R/H (Seat 4)		449.58	
Rear Passenger L/H (Seat 5)		555.63	
Rear Passenger R/H (Seat 6)		555.63	
Radar pod stowage compartment-Standard kilograms-soft items only		388.24	
Radar pod stowage compartment- EFTS equipped kilograms-soft items only	(maximum 2.2 kilograms)		
AR Golf Baggage net (47.6 kilograms max. -3 bags)-optional golf bag		399.99	
AR Baggage (45.3 kilograms max.) (22.6 kilograms max with golf bag)		564.67	
AR oil stowage compartment (maximum - 2.2 kilograms)		630.50	
Zero fuel Weight		727.71	
Fuel (643.45 litres maximum) (at 0.80 kilograms per litre)			
Maximum Ramp Weight (2219.24 kilograms)			
Fuel allowance for Engine Start, Taxi and Run up			
Maximum Takeoff Weight (2199.91 kilograms)	-19.33		

Notes:

1. Use the fuel loading table (figure 6-63) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
2. A standard 19.33 kilograms fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup.  
Locate the arm (Center of Gravity, C.G.) of the takeoff weight on the Center of Gravity Limits graph (figure 6-69). If this point falls within the Weight/C.G. envelope, the loading is acceptable for takeoff.

Weight and Balance Computation Form  
Executive/Entertainment Configuration (Normal Category)

Figure 6-47B

**6.9 Weight and Balance Determination for Flight - Metric (cont)**

Locate the arm (Center of Gravity, C.G.) of the landing weight on the Center of Gravity Limits graph (figure 6-69). If this point falls within the Weight/C.G. envelope, the loading is acceptable for landing.

Weight Calculation	Weight (kilograms)
Total Fuel	
Fuel allowance for Engine Start, Taxi and Run up*	
Fuel Remaining on board	
Moment Calculation	Moment (centimeter-kilograms)
Total Fuel	
Fuel Remaining on board	
Fuel allowance for Engine Start, Taxi and Run up	

**Notes:**

1. Use the fuel loading table (figure 6-63) to determine the moment for the amount of fuel being loaded for the flight. If fuel is to be added to existing fuel, determine the total fuel weight and use the fuel loading table to determine the fuel moment. (Arm = Moment/Weight).
2. A standard 19.33 kilograms fuel allowance for taxi and runup is assumed. The moment for the fuel allowance is determined by the difference in moments of the total fuel loaded and the fuel remaining on board after taxi and runup. See example, figure 6-45.

**Moment Calculation for Fuel Allowance**

Figure 6-48



6.9 Weight and Balance Determination for Flight - Metric (cont)

Weight Calculation	Weight (kilograms)
Takeoff Fuel	
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	
Post Mission Fuel (Fuel remaining at Landing)	
Moment Calculation	Moment (centimeter-kilograms)
Takeoff Fuel	
Mission Fuel used (Fuel burned during Climb, Cruise and Descent)	
Post Mission Fuel (Fuel remaining at Landing)	
Maximum Takeoff Weight (2199.91 kilograms)	
Minus Estimated Fuel Burn-off (Climb & Cruise) @ 0.80 kilograms per litre	
Maximum Landing Weight (2199.91 kilograms)	

Locate the arm (Center of Gravity, C.G.) of the landing weight on the Center of Gravity Limits graph (figure 6-69). If this point falls within the Weight/C.G. envelope, the loading is acceptable for landing.


**IT IS THE SOLE RESPONSIBILITY OF THE PILOT IN COMMAND TO ENSURE THAT THE AIRPLANE IS LOADED PROPERLY AT ALL TIMES.**

Moment Calculation for Fuel Burned During the Mission


Figure 6-49

6.9 Weight and Balance Determination for Flight - Metric (cont)

Standard Configuration

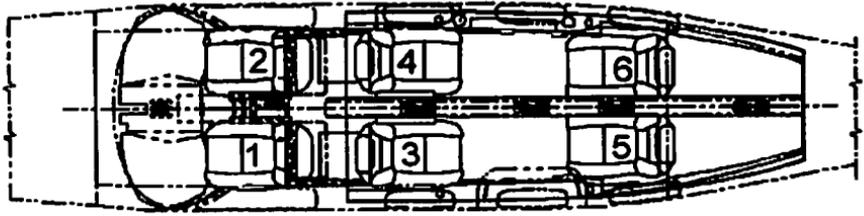

Executive/Entertainment Configuration

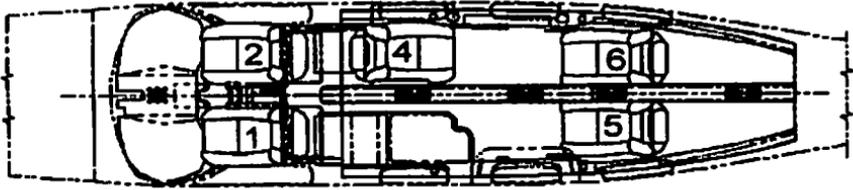

Seating Configurations  
Figure 6-51



**6.9 Weight and Balance Determination for Flight - Metric (cont)**

**THIS PAGE INTENTIONALLY LEFT BLANK**

**6.9 Weight and Balance Determination for Flight - Metric (cont)**

**THIS PAGE INTENTIONALLY LEFT BLANK**

## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Weight (kilograms)	Pilot Arm FS 344.17	Copilot (Seat 2) Arm FS 344.17	Seat 3		Seat 4		Seat 5		Seat 6	
			Arm FS 449.48	Moment (centimeters-kilograms)	Arm FS 449.48	Moment (kilograms)	Arm FS 555.63	Moment (kilograms)	Arm FS 555.63	Moment (kilograms)
9.1	3122.2	3122.2	4078.5	4078.5	4078.5	5040.5	5040.5	5040.5	5040.5	5040.5
13.6	4683.4	4683.4	6117.7	6117.7	6117.7	7560.8	7560.8	7560.8	7560.8	7560.8
18.1	6244.5	6244.5	8157.0	8157.0	8157.0	10081.0	10081.0	10081.0	10081.0	10081.0
22.7	7805.6	7805.6	10196.2	10196.2	10196.2	12601.3	12601.3	12601.3	12601.3	12601.3
27.2	9366.7	9366.7	12235.5	12235.5	12235.5	15121.6	15121.6	15121.6	15121.6	15121.6
31.8	10927.8	10927.8	14274.7	14274.7	14274.7	17641.8	17641.8	17641.8	17641.8	17641.8
36.3	12489.0	12489.0	16314.0	16314.0	16314.0	20162.1	20162.1	20162.1	20162.1	20162.1
40.8	14050.1	14050.1	18353.2	18353.2	18353.2	22682.3	22682.3	22682.3	22682.3	22682.3
45.4	15611.2	15611.2	20392.5	20392.5	20392.5	25202.6	25202.6	25202.6	25202.6	25202.6
49.9	17172.3	17172.3	22431.7	22431.7	22431.7	27722.9	27722.9	27722.9	27722.9	27722.9
54.4	18733.4	18733.4	24471.0	24471.0	24471.0	30243.1	30243.1	30243.1	30243.1	30243.1
59.0	20294.6	20294.6	26510.2	26510.2	26510.2	32763.4	32763.4	32763.4	32763.4	32763.4
63.5	21855.7	21855.7	28549.5	28549.5	28549.5	35283.6	35283.6	35283.6	35283.6	35283.6
68.0	23416.8	23416.8	30588.7	30588.7	30588.7	37803.9	37803.9	37803.9	37803.9	37803.9
72.6	24977.9	24977.9	32628.0	32628.0	32628.0	40324.2	40324.2	40324.2	40324.2	40324.2
77.1	26539.1	26539.1	34667.2	34667.2	34667.2	42844.4	42844.4	42844.4	42844.4	42844.4

**Loading Table**  
**Occupants (Standard Configuration)**

Figure 6-53

## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Weight (kilograms)	Pilot	Copilot (Seat 2)	Seat 4	Seat 5	Seat 6
	Arm FS 344.17	Arm FS 344.17 Moment (centimeters - kilograms)	Arm FS 449.48	Arm FS 555.63	Arm FS 555.63
9.1	3122.2	3122.2	4078.5	5040.5	5040.5
13.6	4683.4	4683.4	6117.7	7560.8	7560.8
18.1	6244.5	6244.5	8157.0	10081.0	10081.0
22.7	7805.6	7805.6	10196.2	12601.3	12601.3
27.2	9366.7	9366.7	12235.5	15121.6	15121.6
31.8	10927.8	10927.8	14274.7	17641.8	17641.8
36.3	12489.0	12489.0	16314.0	20162.1	20162.1
40.8	14050.1	14050.1	18353.2	22682.3	22682.3
45.4	15611.2	15611.2	20392.5	25202.6	25202.6
49.9	17172.3	17172.3	22431.7	27722.9	27722.9
54.4	18733.4	18733.4	24471.0	30243.1	30243.1
59.0	20294.6	20294.6	26510.2	32763.4	32763.4
63.5	21855.7	21855.7	28549.5	35283.6	35283.6
68.0	23416.8	23416.8	30588.7	37803.9	37803.9
72.6	24977.9	24977.9	32628.0	40324.2	40324.2
77.1	26539.1	26539.1	34667.2	42844.4	42844.4

**Loading Table**  
**Occupants (Executive/Entertainment Configuration)**

Figure 6-55






## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Weight (kilograms)	Golf baggage location	Aft location
	Arm FS 564.67	Arm FS 630.50
	Moment (centimeter-kilograms)	Moment (centimeter-kilograms)
4.5	2561.3	2859.9
9.1	5122.5	5719.8
13.6	7683.8	8579.7
18.1	10245.1	11439.6
22.7	12806.4	14299.5
27.2	15367.6	
31.8	17928.9	
36.3	20490.2	
40.8	23051.5	
45.4	25612.7	
47.6	26893.4	

Loading Table  
Golf Baggage - Optional  
Figure 6-59

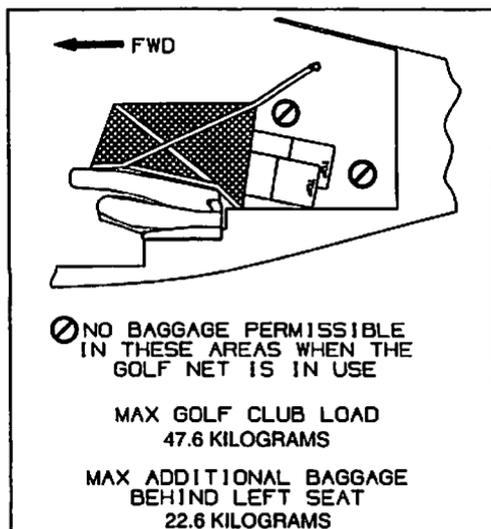

Golf Baggage Loading Configuration  
Figure 6-61

## 6.9 Weight and Balance Determination for Flight - Metric (cont)

Litres (unusable fuel not included)	Fuel Weight (kilograms)	Fuel Moment Arm Varies (centimeter - kilograms)
75.7	60.8	22056.9
94.6	76.0	27742.9
113.6	91.2	33446.8
132.5	106.4	39161.3
151.4	121.6	44883.6
170.3	136.8	50613.6
189.3	152.0	56351.7
208.2	167.1	62098.8
227.1	182.3	67854.8
246.0	197.5	73619.3
265.0	212.7	79391.2
283.9	227.9	85169.0
302.8	243.1	90951.1
321.7	258.3	96735.8
340.7	273.5	102521.9
359.6	288.7	108308.5
378.5	303.9	114095.2
397.4	319.1	119881.8
416.4	334.3	125668.5
435.3	349.5	131455.5
454.2	364.7	137242.9
473.1	379.9	143030.2
492.1	395.1	148816.7
511.0	410.3	154601.3
529.9	425.5	160382.9
548.8	440.7	166161.6
567.8	455.9	171939.3
586.7	471.1	177722.4
605.6	486.2	183524.2
624.5	501.4	189368.7
643.45	516.6	195295.7

11.3 litres of unusable fuel (9.12 kilograms, 3343.26 centimeters-kilograms) included in basic empty weight. The above weights are based on a fuel specific gravity of 802.6732 kilograms per cubic meters at 15 degrees C for Jet A and Jet A-1, which yields a fuel density of 0.8027 kilograms per litre.

## Loading Table

## Fuel

Figure 6-6.3


**MERIDIAN****WEIGHT AND BALANCE****6.9 Weight and Balance Determination for Flight - Metric (cont)**

Weight (kilograms)	Stowage area 1-3 Arm FS 402.463	Stowage area 4 Arm FS 434.975	Ice chest Arm FS 466.979
	Moment (centimeters - kilograms)		
0.5	182.6	197.3	211.8
0.9	365.1	394.6	423.6
1.4	547.7	591.9	635.5
1.8	730.2	789.2	847.3
2.3	912.8	986.5	1059.1
2.7			1270.9
3.2			1482.7
3.6			1694.5
4.1			1906.4
4.5			2118.2
5.0			2330.0
5.4			2541.8
5.9			2753.6
6.4			2965.4
6.8			3177.3
7.3			3389.1
7.7			3600.9
8.2			3812.7
8.6			4024.5
9.1			4236.3

**Loading Table****Executive/Entertainment Stowage Compartment**


Figure 6-65

**6.9 Weight and Balance Determination for Flight - Metric (cont)**

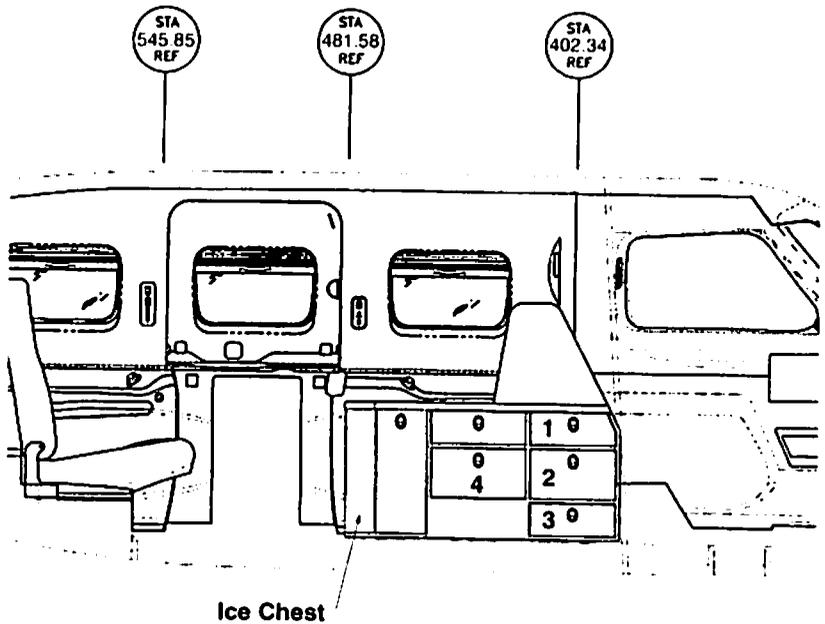

**Stowage Configuration**  
Figure 6-67

6.9 Weight and Balance Determination for Flight - Metric (cont)

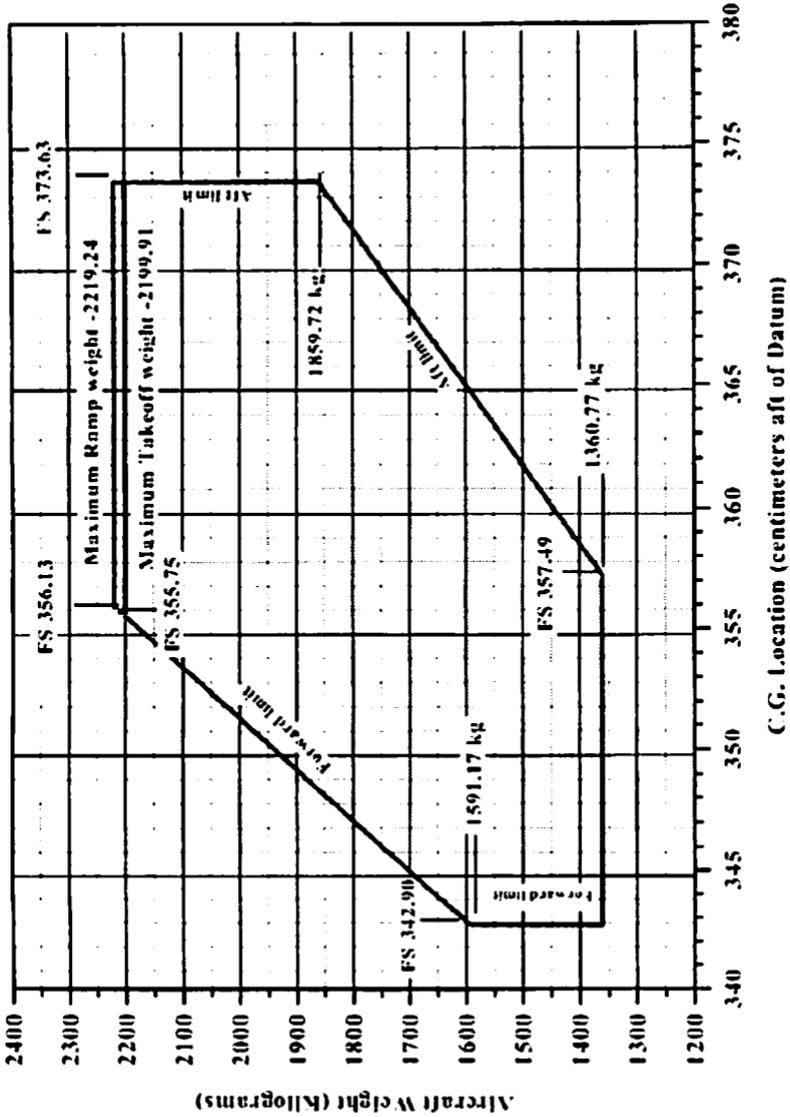

Center of Gravity Limits Graph

Figure 6-69

## TABLE OF CONTENTS

## SECTION 7

DESCRIPTION AND OPERATION  
OF THE AIRPLANE AND ITS SYSTEMS

Paragraph No.		Page No.
7.1	The Airplane .....	7-1
7.3	The Airframe .....	7-1
7.5	Engine and Propeller .....	7-3
7.7	Engine Controls .....	7-6
7.8	Meggitt Avionics Next Generation Integrated Cockpit .....	7-7
7.8a	Meggitt Powerplant and Mechanical System Instrumentation .....	7-8
7.8b	Meggitt EFIS Display .....	7-11
7.9	Standby Instruments .....	7-22
7.10	Hydraulic System .....	7-23
7.11	Landing Gear .....	7-25
7.13	Brake System .....	7-28
7.15	Flight Control System .....	7-29
7.17	Fuel System .....	7-30
7.19	Electrical System .....	7-32
7.21	Instrument Panel .....	7-40
7.23	Pitot Static System .....	7-43
7.25	Environmental System .....	7-44
7.27	Bleed Air, Conditioning And Pressurization System .....	7-46
7.28	Emergency Oxygen System .....	7-48
7.29	Vacuum System .....	7-51
7.31	Stall Warning System .....	7-51



**THIS PAGE INTENTIONALLY LEFT BLANK**

## SECTION 7

### DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS

#### 7.1 THE AIRPLANE

The PA-46-500TP Meridian is a single engine, all metal, retractable landing gear, low wing, turbo-propeller airplane. It has a pressurized cabin with seating for six occupants and a luggage compartment located behind the aft cabin seats.

#### 7.3 THE AIRFRAME

The primary airframe is of aluminum alloy construction, with a steel combination engine mount - nose gear support structure. The nose cowl is made of aluminum and fiberglass.

The fuselage is an all metal, semi-monocoque structure with flush riveted skin. The skin has internally bonded doublers and is butt jointed at all seams not in the airflow direction. There are two basic fuselage sections: the pressurized cabin section and the tail cone section. The cabin section is sealed to maintain pressurization.

The seating arrangement includes two crew seats and four passenger seats. The forward passenger seats face aft, and all passenger seats have adjustable backs with built-in headrests. An inside baggage area is provided aft of the rear passenger seats.

Cabin access is through the main cabin door, located on the left side, aft of the wing. The main door is a horizontally split door with retractable steps in the lower half. The upper half is held open by a gas spring. A plug type, inward releasing, emergency egress door is located on the right side adjacent to the aft facing seat.

Windows include a two-piece windshield, pilot and copilot windows, a storm window in the pilot's window, and three passenger windows on each side.

### **7.3 THE AIRFRAME (Continued)**

The wing is a three section structure. The center section built-up main spar extends through the lower fuselage and outboard of each main landing gear. This section has two forward spars and a rear spar which are pin jointed at the fuselage sides. The main landing gear retracts inward into recesses located aft of the main spar. The outboard section of each wing, to within approximately 18 in. (46 cm) of the tip, is a sealed integral fuel cell. Portions of the wing structure are adhesively bonded, and skins are butt jointed and flush riveted for a smooth airfoil surface.

The all-metal flaps are electrically actuated through a mechanical linkage. The flaps extend aft and down on three tracks and have four preselect positions (up, 10°, 20°, and 36°).

The all-metal ailerons are mass balanced and operated by a cable system mounted on the aft wing spar.

The empennage is of conventional fin and rudder, stabilizer and elevator design with aerodynamic and mass balanced control surfaces. Surfaces are all-metal construction. The single-piece elevator assembly incorporates a center-mounted anti-servo trim tab. The rudder trim tab is operated by an electrically driven actuator.

Various access panels on the fuselage, wings and empennage are removable for service or inspection purposes.

Electrical bonding is provided to ensure good electrical continuity between components. Lightning strike protection is provided in accordance with presently accepted practices. Anti-static wicks are provided on trailing edges of ailerons, elevator and rudder to discharge static electricity that might cause avionics interference.

## 7.5 ENGINE AND PROPELLER

### Engine

The Meridian is powered by a Pratt & Whitney PT6A-42A turbo-propeller engine, with a flat rated power of 500 shp and maximum propeller speed of 2000 RPM. This engine is a reverse flow, free turbine arrangement. Accessories include a starter/generator and a belt driven alternator and air conditioning compressor.

Engine intake air is provided through dual, symmetric air inlets located on the forward portion of the cowling at the four and eight o'clock positions. The inlets are of fixed geometry such that no moving ice vanes or doors are utilized. The inlets are designed such that the dynamics of icing conditions do not allow the inlet to ice closed. Both inlets supply air to an inertial separator, which in turn supplies a common engine inlet plenum and intake screen.

The inertial separator functions by preventing foreign objects from making an abrupt turn into the plenum and instead exit through the bypass outlet. As air enters through the intake screen, it is ducted into a three-stage axial and single-stage centrifugal compressor driven by a single-stage reaction turbine. A dual turbine, counter-rotating with the first, drives the propeller through a two-stage reduction gear box. Exhaust is provided through dual exhaust stacks located on either side of the engine just behind the propeller.

A single annular combustion chamber, containing 14 removable fuel nozzles and two igniter plugs, comprises the combustion system. Seven of the fuel nozzles are used for starting; the remaining nozzles activate as the engine accelerates. A hydropneumatic fuel control schedules fuel flow to maintain engine power.

The ignition system consists of one exciter box, two ignition leads and two spark igniters. Both igniters are engaged simultaneously. DC power is delivered to the exciter box from the essential bus through an ignition mode selector switch in the overhead switch panel and a torque pressure switch. When in the automatic ignition mode, the ignition system will activate when the torque is less than or equal to approximately 275 ft. lbs., and deactivate when the torque is greater than or equal to approximately 375 ft. lbs. Continuous ignition, at any torque setting, is provided in the manual ignition mode.

## 7.5 ENGINE AND PROPELLER (continued)

### Engine (continued)

The engine incorporates an integral oil lubrication system with an oil tank of approximately 12 quarts (11.35 liters) total capacity including propeller, integral engine oil system, and oil cooler. The oil tank is an integral part of the compressor inlet case in front of the accessory gearbox and contains a filler neck with calibrated dipstick. The filler neck incorporates a ball check valve to ensure oil does not migrate out of the filler neck in the event the dipstick is not properly secured. In addition, an oil level sight glass is provided to indicate the oil level in the gearbox without having to remove the dipstick. Adequate oil level for engine operation is indicated by an oil level within the green area of the sight glass.

Engine instruments are displayed on the two EDU's (engine display unit). The primary display, pilot side, EDU displays torque, ITT (interstage turbine temperature), propeller (Np) RPM, gas generator (Ng) RPM, and fuel flow (during engine start). The secondary display, copilot side, EDU displays vacuum level, fuel flow, oil temperature, oil pressure, outside air temperature, estimated time enroute, fuel at destination, and fuel quantity.

Fire detection is provided by a heat sensitive fire cable, which passes a current at approximately 540° F (282.2° C). This current alerts the fire detection computer, which then actuates the ENGINE FIRE warning light on the annunciator panel. When switched to test mode, an electrical current is passed to the fire detection computer, which should sense the current and illuminate the ENGINE FIRE warning light in the annunciator panel.

## 7.5 ENGINE AND PROPELLER (continued)

### Propeller

The propeller is a Hartzell model number HC-E4N-3Q/E8501K-3.5, 82.5 inch diameter, four blade, metal, constant speed unit with reversing and full feathering capabilities. Each propeller blade incorporates an electric deice boot.

The propeller governor pressurizes and regulates the flow of the propeller gearbox oil to a piston in the propeller dome. The piston is linked by a sliding rod and fork arrangement to the propeller blades. Governor oil pressure against the piston works to decrease propeller blade pitch. Centrifugal twisting moments on the propeller blades work to decrease propeller blade pitch and increase rpm. Governing of the interaction of these and other forces to maintain a constant rpm is provided by the propeller governor.

The propeller governor maintains a constant propeller speed and is not pilot controlled, but rather fixed at a maximum propeller speed of 2000 RPM. Propeller feather is selected by moving the condition lever to the cutoff position. Beta and reverse blade angles are controlled by power lever movement. Movement of the power lever into the beta and reverse range of operation is only possible on the ground via a squat switch controlled solenoid. An additional overspeed governor is also provided to protect against propeller and power turbine overspeed.

Propeller feathering is controlled electrically by switches in the throttle quadrant and a torque sensing switch. The battery switch must be ON to feather the propeller.

## 7.7 ENGINE CONTROLS

The engine is controlled by power, condition, and manual override (MOR) levers, located on the control quadrant of the lower central instrument panel. The power lever is used to actuate the engine fuel control unit as well as propeller beta and reverse settings. The power lever is connected through linkage to the fuel control unit at the rear of the engine, and controls engine power through the full range from maximum takeoff power back to idle and further aft to the beta detent and the reverse detent. When the power lever is at the idle stop, the gas generator ( $N_g$ ) is at idle and the propeller ( $N_p$ ) is at minimum pitch. A lifting action is required to raise the power lever over the idle detent to the beta and reverse detents. When the power lever is selected to the beta position, the gas generator is at idle and the propeller blade pitch is controlled by the power lever from idle thrust back through a zero or a no thrust condition. The beta position may be used after landing during ground roll and to control taxi speed. Further lifting and aft movement of the power lever to the reverse detent increases engine power and provides negative thrust (reverse).

### WARNING

To prevent damage to the control linkage, do not move the power lever aft of the idle stop when the engine is not operating.

### WARNING

Positioning the power lever aft of the flight idle stop in flight is prohibited. Such positioning may cause loss of airplane control or may result in an engine overspeed condition and consequent loss of engine power.

The landing gear warning horn is activated by an idle power setting or flap extension beyond 10 degrees combined with the landing gear not in a down and locked position. The horn will continue to sound until the gear is down and locked, the power setting is increased, or the flaps are retracted to less than 10 degrees. This is a safety feature to warn the pilot of an inadvertent gear-up landing.

The condition lever controls the run and cut-off function of the fuel control unit as well as propeller feather. The full forward position sets the run fuel flow, and full aft position cuts off fuel flow and feathers the propeller.

## 7.7 ENGINE CONTROLS (continued)

The manual override (MOR) lever is located in the center console to the left of the power lever. The MOR is used to directly control fuel flow to the engine if a pneumatic malfunction occurs in the engine fuel control unit. When the engine is operating, a failure of any pneumatic signal input to the fuel control unit will result in the fuel flow decreasing to minimum idle (approximately 48% Ng at sea level and increasing with altitude). Power may be regained by using the manual override (MOR) lever. The normal position for the MOR is the OFF position. The normal position is used for all normal engine operation when the fuel control unit is operating normally and engine power is selected by the power lever. Rapid movement of the MOR lever could cause compressor surges and excessive ITT overtemperature.

To operate the MOR, lift up on the lever and slowly move it forward toward the MAX position. Monitor gas generator speed (Ng) and ITT.

The friction adjustment lever, located in the middle of the control quadrant, may be adjusted to increase or decrease the friction holding the power lever.

## 7.8 MEGGITT AVIONICS NEXT GENERATION INTEGRATED COCKPIT (MAGIC)

This section describes the components and operation of the Meggitt Avionics Next Generation Integrated Cockpit (MAGIC).

Refer to **Section 7.8a, Meggitt Powerplant and Mechanical System Instrumentation**, for the components and operation of the powerplant and mechanical system instrumentation.

Refer to **Section 7.8b, Meggitt EFIS Display**, for the components and operation of the Electronic Attitude Director Indicator (EADI) and the Electronic Horizontal Situation Indicator (EHSI).

## 7.8a MEGGITT POWERPLANT AND MECHANICAL SYSTEM INSTRUMENTATION

The powerplant and mechanical system instrumentation provided by the Meggitt MAGIC System consists of a Data Acquisition Unit (DAU), its associated sensors, and a primary and secondary Engine Display Unit (EDU). Torque (TQ), fuel flow (FF), inter-turbine temperature (ITT), propeller speed (Np), and gas generator speed (Ng) are acquired by the DAU through dual redundant channels. In addition, vacuum pressure (VAC), oil temperature (OT), outside air temperature (OAT), and oil pressure (OP) are acquired by a single DAU channel and then cross-fed to the dual redundant channels. The left, right, and total fuel level is also determined by the DAU.

Instrumentation indication is provided by the primary and secondary EDU. The primary EDU is located to the left of the standby airspeed indicator and the secondary EDU is located to the right of the standby altimeter. The information displayed is derived from signal conditioned, digital data provided by the DAU. The only exception is the estimated time enroute (ETE) and fuel at destination (FAD) which both require Garmin GPS data and an active flight plan. The primary EDU indicates torque, ITT, Np, and Ng in both analog and digital format. During engine start, fuel flow is also digitally indicated on the primary EDU. The secondary EDU indicates vacuum pressure, fuel flow, remaining useable fuel, oil temperature, and oil pressure in both analog and digital format. Additional secondary EDU digital indications are OAT, ETE, and FAD, accompanied by the appropriate GPS 1 or 2 data source label.

The system also includes exceedance, engine condition trend monitoring (ECTM), and instrumentation fault detection features. Parameter exceedance data is recorded by the DAU for display on the EDU and subsequent download to a laptop. A parameter exceedance is alerted by an aural alarm and visual warning consisting of digital indications highlighted with a red background and analog indications with a red pointer. The aural alarm is cancelable by pressing the mute switch, located below the glare shield on the pilot side. Engine condition trend monitoring data is automatically recorded by the DAU for subsequent download to a laptop. Recording of ECTM data is signified by a CRUISE1 or CRUISE2 indication on the primary EDU. In addition, the EDU is constantly searching for instrumentation faults caused by a failure in the EDU, DAU, or its associated sensors. Should a system fault occur, a MAINT indication is displayed on the primary and secondary EDU. Upon completion of the flight, all MAINT indications should be investigated by a qualified technician and the necessary repairs made prior to further flight.

**7.8a MEGGITT POWERPLANT AND MECHANICAL SYSTEM INSTRUMENTATION (continued)**


Instrument operation is limited to a single PAGE button on the lower, center face of the primary and secondary EDU. The display pages are advanced with the PAGE button as shown in figure 7-1 below. On power-up, the EDU and DAU go through a built-in-test (BIT) and initialization. Upon completion of the initialization, the primary EDU defaults to the primary display while the secondary EDU defaults to the exceedance display. Press the PAGE button of the secondary EDU once to advance from the exceedance to the secondary display.

**NOTE**

In the event of an EDU failure, the remaining operational EDU should be paged to the reversionary display to provide standby instrumentation.



**Primary EDU**

**Secondary EDU**

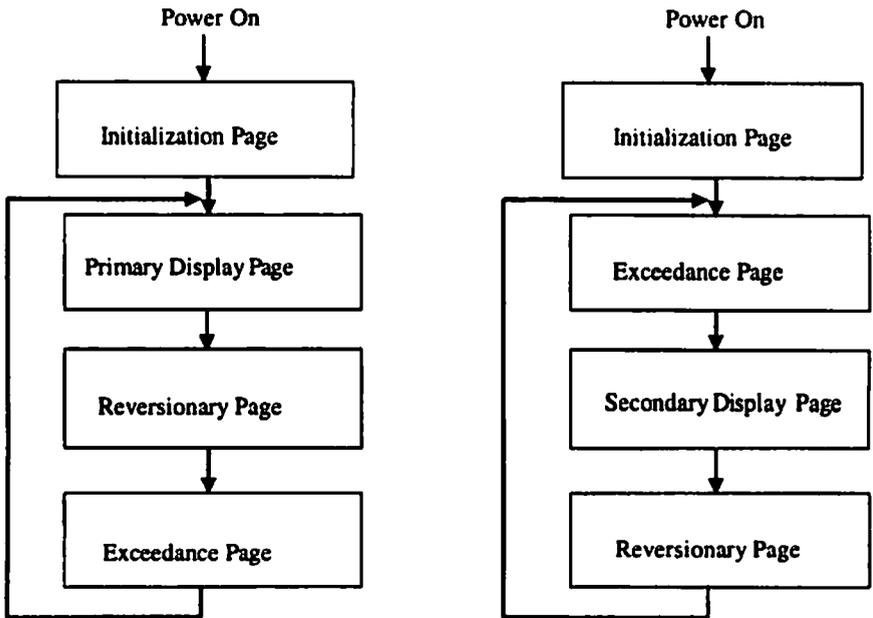


**Display Pages**  
Figure 7-1

7.8a MEGGITT POWERPLANT AND MECHANICAL SYSTEM INSTRUMENTATION (continued)

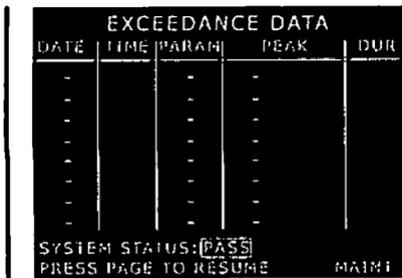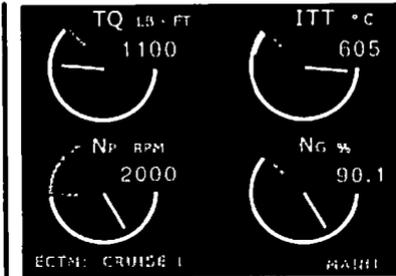

Exceedance Display  
Figure 7-4

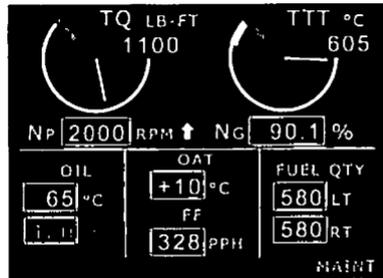


## 7.8b MEGGITT EFIS DISPLAY

### System Description

The Electronic Flight Instrument System (EFIS) provided by the Meggitt Avionics next Generation Integrated Cockpit (MAGIC) is a "dual fit" installation. Both the pilot and the co-pilot positions have an Electronic Attitude Director Indicator (EADI) and an Electronic Horizontal Situation Indicator (EHSI). These displays are each supplied with sensor data from separate, remote mounted Attitude Heading Reference Systems (AHRS).

The EFIS system interfaces with the following aircraft equipment:

 - ATC Transponder
- ADF (optional)
- Autopilot
- DME (optional)
- GPS/Nav Receiver
- Marker Beacon Receiver
- Radio Altimeter
- Overspeed Aural Warning Device



## 7.8b MEGGITT EFIS DISPLAY (continued)

### SYSTEM DESCRIPTION

The MAGIC EFIS system provides the pilot with an integrated display of aircraft speed, attitude (pitch and bank), heading, course orientation, flight path commands and mode and source annunciation. This is accomplished through the EADI and EHSI displays.

The EADI has one bezel mounted control - the BARO rotary/push control knob. Turning the knob adjusts the Baro altitude correction. Pushing the knob sets the Baro correction to standard (29.92 in Hg).

The EHSI has two bezel mounted rotary control/push knobs and four pushbuttons. The rotary knobs control the heading bug and the course selector. Depressing the heading knob slews the heading bug to current heading. Depressing the menu (MNU) pushbutton activates the navigation menu selection. The up (^) and down (v) arrow buttons are used to scroll through the menu selections. The select (SEL) button is used to make a menu selection.

Essential flight display information is kept in the pilot's primary viewing area with a reversionary capability. Should the EADI fail, the primary flight information can be displayed on the (lower) EHSI. This is achieved by depressing the panel mounted switch labeled "EADI DOWN".

In the unlikely event of an AHRS failure on the pilot's side, actuation of the panel mounted "AHRS SELECT" switch, will allow the display of the copilot's AHRS source information on the pilot's EADI and EHSI. This level of redundancy protects the most important information upon which the pilot relies to fly the aircraft.

### ELECTRONIC ATTITUDE DIRECTOR INDICATOR (EADI)

The EADI is a microprocessor-based color, liquid crystal (LCD) display system. Information displayed includes Airspeed, Altitude, Attitude, Vertical Speed, Heading and Instrument Landing System data. The information is conveyed via predefined display formats. In addition, the EADI includes built-in test, performance and health monitoring functions, and a display brightness control. The EADI provides Gillam Code Altitude Output for the transponder (Mode C altitude).

**7.8b MEGGITT EFIS DISPLAY (continued)****EADI Screen Format**

The EADI Screen Format combines the familiar true sphere-type attitude display with lateral and vertical computed steering signals required to intercept and maintain a desired flight path.

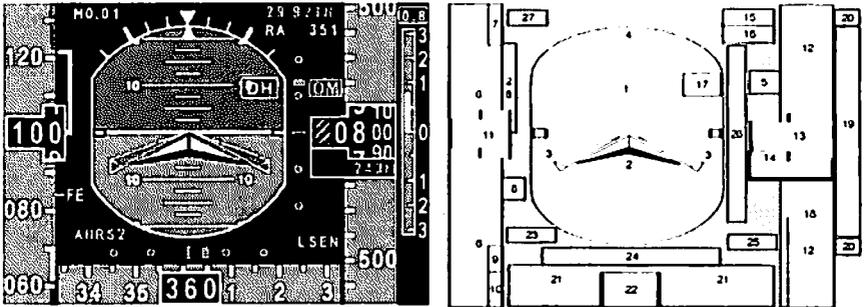
**EADI Screen Format**

Figure 7-6

The information presented in the EADI Screen Format includes:

- |   |   |
|---|---|
| 1. Artificial Horizon Indicator                                 | 15. Barometric Correction                             |
| 2. Aircraft Symbol (Single Cue)                                 | 16. Radar Altimeter Indication                        |
| 3. Flight Director Command Bars                                 | 17. Decision Height Indicator                         |
| 4. Roll Angle Indication  | 18. Ground Reference Indicator                        |
| 5. Marker Beacon Indication                                     | 19. Vertical Speed Scale                              |
| 6. Airspeed Scale Tape  | 20. Vertical Speed Digital Readout                    |
| 7. Maximum Airspeed Indicator<br>(or Safety Speed Indicator)    | 21. Heading Scale Tape                                |
| 8. Flaps/Slats Max Extend Speed<br>Indicator                    | 22. Heading Digital Readout                           |
| 9. Stall Warning Indication                                     | 23. AHRS Source Warning                               |
| 10. Stall Indication  | 24. Localizer Deviation Indication                    |
| 11. Airspeed Digital Readout                                    | 25. Back Course/Localizer Sensing<br>Indication       |
| 12. Barometric Height Scale Tape                                | 26. Glideslope Deviation Indication                   |
| 13. Barometric Height Digital Readout                           | 27. Mach Number Readout<br>(Configuration Selectable) |
| 14. Metric Height Digital Readout<br>(Configuration Selectable) | 28. Airspeed Trend Vector                             |


**7.8b MEGGITT EFIS DISPLAY (continued)**

**ELECTRONIC HORIZONTAL SITUATION INDICATOR (EHSI)**

The EHSI is also a microprocessor-based color, liquid crystal (LCD) display system. Information displayed includes Navigation Data, Autopilot Data, Radio Tuning, Airspeed, Altitude, Attitude, Vertical Speed, Heading and Instrument Landing System data. The information is displayed via a series of predefined display formats (HSI, ARC, MAP). In addition, the unit includes built-in test, performance and health monitoring functions and display brightness control.

**EHSI Screen Format**

The EHSI Screen Format provides a pictorial plan view of the aircraft's position in the horizontal plane in the form of its heading, track, navigation source deviation and direction. In Addition EHSI Screen Format also provides Radio Magnetic indicator (RMI) information, which consists of magnetic bearings to GPS waypoints and ground-based transmitting stations of radio navigation systems (VOR/ADF).

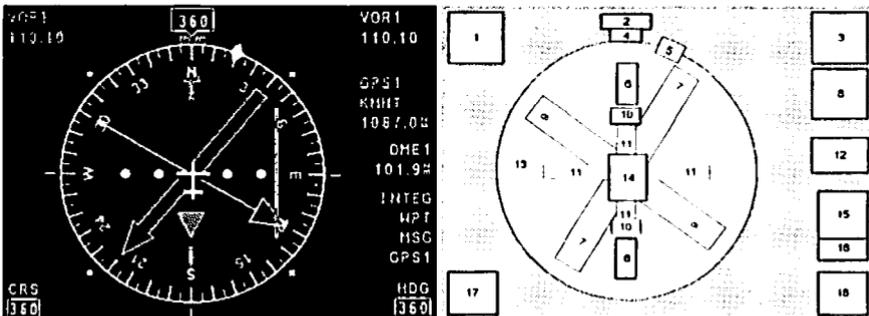

**EHSI Screen Format**

**Figure 7-7**

The information presented in the EHSI Screen Format includes:

- |   |   |
|---|---|
| 1. CDI Bearing Pointer Source Annunciation    | 9. RMI #1 Bearing Pointer                         |
| 2. Present Heading                            | 10. TO/FROM Display                               |
| 3. RMI #1 Bearing Pointer Source Annunciation | 11. CDI   |
| 4. Selected Heading Bug                       | 12. Distance Readout                              |
| 5. Actual Track Bug                           | 13. Compass Card                                  |
| 6. Selected Course/Desired Track              | 14. Aircraft Symbol                               |
| 7. RMI #2 Bearing Pointer                     | 15. GPS Alert Annunciation                        |
| 8. RMI #2 Bearing Pointer Source Annunciation | 16. GPS Source Annunciation                       |
|   | 17. Selected Course/Desired Track Digital Readout |
|   | 18. Selected Heading Digital Readout              |

**7.8b MEGGITT EFIS DISPLAY (continued)****ELECTRONIC HORIZONTAL SITUATION INDICATOR (EHSI) (continued)****EHSI Display - Arc Screen Format**

The Arc Screen Format provides a pictorial plan view of the aircraft's position in the horizontal plane (relative to aircraft heading) in the form of its relation between current heading and Waypoint/Route/Navaid/Airport information (supplied by the selected GPS source). Arc screen format has a display of  $\pm 45^\circ$  at twice the selected Map Range increasing to  $\pm 90^\circ$  at the selected Map Range.

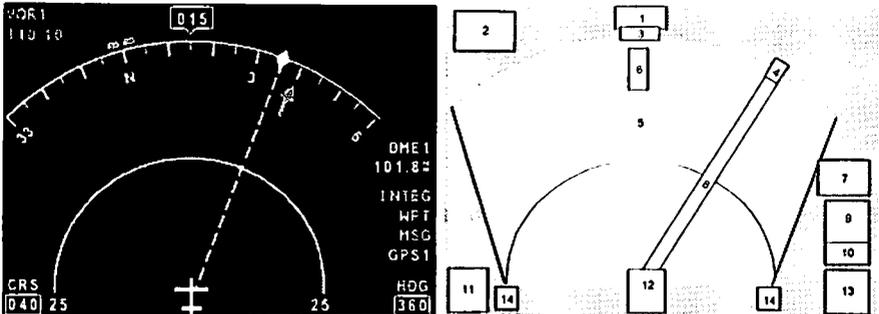
**Arc Screen Format**

Figure 7-8

The information presented in the Arc Screen Format includes:


1. Present Heading
2. CDI Bearing Pointer Source Annunciation
3. Selected Heading Bug
4. Actual Track Bug
5. ARC Range Display including Navigation Route Data
6. Selected Course/Desired Track Bug
7. Distance Readout
8. Actual Track Line
9. GPS Alert Annunciation
10. GPS Source Annunciation
11. Selected Course/Desired Track Digital Readout
12. Aircraft Symbol
13. Selected Heading Digital Readout
14. Range Readout

**7.8b MEGGITT EFIS DISPLAY (continued)**

**ELECTRONIC HORIZONTAL SITUATION INDICATOR (EHSI) (continued)**

**EHSI Display - Map Screen Format**

Map Screen Format provides a pictorial plan view of the aircraft's position in the horizontal plane in the form of its relation between current heading and Waypoint/Route/Navaid/Airport (information supplied by the selected GPS source) and actual track. Map Screen Format has a display of 360° at twice the selected Map Range.

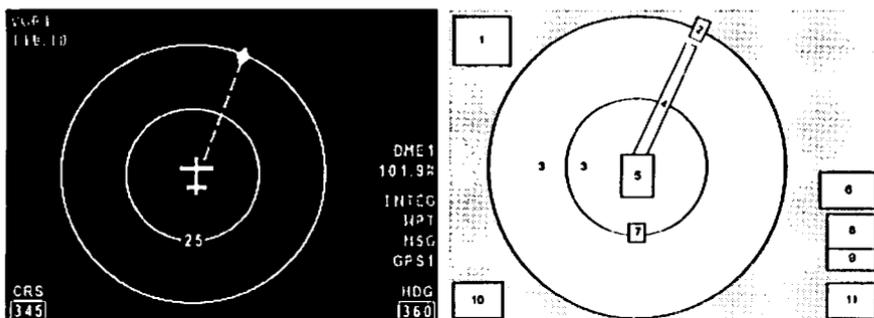

**Map Screen Format**

Figure 7-9

The information presented in the Map Screen Format includes:

1. CDI Bearing Pointer Source Annunciation
2. Actual Track Bug
3. Map Range Display including Navigation Route Data
4. Actual Track Line
5. Aircraft Symbol
6. Distance Readout
7. Range Display
8. GPS Alert Annunciation
9. GPS Source Annunciation
10. Selected Course/Desired Track Digital Readout
11. Selected Heading Digital Readout


**7.8b MEGGITT EFIS DISPLAY (continued)**

**OPERATION - EADI**

The EADI has two operating modes: Normal Mode (or Mission Operational Mode) and Test Mode. The Normal mode is the default operating mode of the EADI.


**Initialization Page.** The initialization page is displayed after the application of power and is automatically removed after 5 seconds. The initialization page is only displayed if the airspeed is less than 40 knots. The initialization page is not displayed anytime during flight (40 knots and above).

In the normal mode, the Baro Rotary Control is used to set the barometric altitude correction. The knob has no end stop and is provided with detents for a positive feel. Each detent is equivalent to 0.01 in. Hg. Upon initial application of power to the AHRS, the EADI screen format includes an AHRS initialization screen. The initialization screen, with count-down timer, replaces the attitude sphere until the AHRS has completed its initialization.

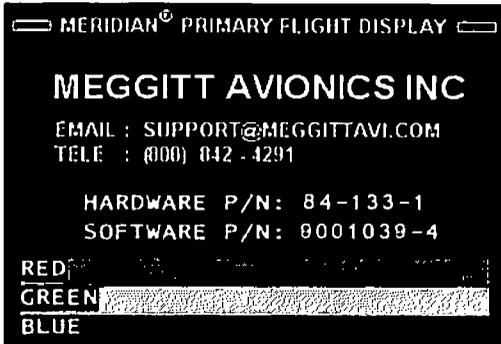

**Initialization Page**

Figure 7-10

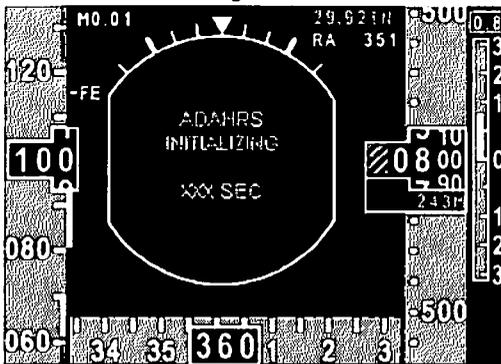

**Initialization Screen**

Figure 7-11



**7.8b MEGGITT EFIS DISPLAY (continued)**


OPERATION - EADI (continued)

If any inputs to the EADI become invalid or fail, then the appropriate display of information will be replaced by a warning caption. The heading digital readout annunciates yellow when a heading difference of greater than 6 degrees exists between the two AHRS. Heading will slave itself at the rate of 6 degrees per minute. Items displayed include: Heading, Barometric Altitude, Indicated Airspeed, Attitude, Vertical Speed Indication (VSI), Glideslope, and Localizer.

## 7.8b MEGGITT EFIS DISPLAY (continued)

## OPERATION - EADI (continued)

The Test Mode is entered by depressing and holding the BARO control knob for a period of 15 seconds during power-up. To enter Test Mode, the AHRS must have an airspeed output of less than 40 knots. In Test Mode, rotating the Baro Rotary Control will select the Test Mode screens in sequence.

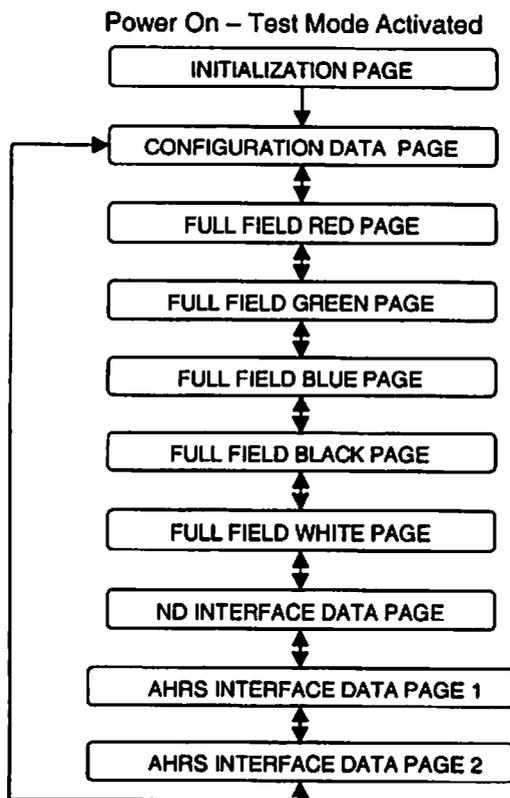

Baro Rotary Control Test Mode Operation

Figure 7-13

## 7.8b MEGGITT EFIS DISPLAY (continued)

### OPERATION - EHSI

The EHSI has three operating modes - Normal Mode (or Mission Operational Mode), Reversionary, and Test Mode.

The normal mode is the default operating mode of the EHSI which displays navigation to the pilot. In the normal mode, there are three display screen formats - HSI, ARC, and MAP. The EHSI has the following bezel mounted controls:

CRS (course) rotary/push knob - used to set selected course indicator. Momentarily depressing the knob slews the course to center the CDI indicator to the selected NAV facility.

HDG (heading) rotary/push knob - used to set selected heading bug. Momentarily depressing the knob slews the heading bug to current heading.

MNU (menu) button - used to select/deselect the EHSI's pop-up menu.

" ^ " (up arrow) button - used to scroll up through the displayed menu options. Moves "highlight" up through displayed menu selection.

" v " (down arrow) button - used to scroll down through the displayed menu options. Moves "highlight" down through displayed menu selection.

SEL (select) button - used to select the present highlighted menu selection.

The Reversionary Mode is accessed by depressing the panel mounted switch labeled 'EADI DOWN'. This mode is selected if a failure of the EADI is experienced.

#### NOTE

Failure of the EADI may cause loss of Gillam code output (altitude encoding) to the transponder and Altitude Alerter/Preselector. Depressing the 'EADI DOWN' button removes power from the EADI and initiates the EHSI reversionary mode. The reversionary mode provides a composite display incorporating features of both the EADI and EHSI. Selecting the reversionary mode will remove Gillam code to the transponder and Altitude Alerter/Preselector and automatically initiates an autopilot disconnect after a 3 second delay.

**7.8b MEGGITT EFIS DISPLAY (continued)****Reversionary Mode Screen Format**

The Reversionary Screen Format provides a pictorial plan view of the aircraft's situation in the horizontal plane in the form of its pitch, roll, vertical speed, heading, height, and airspeed.

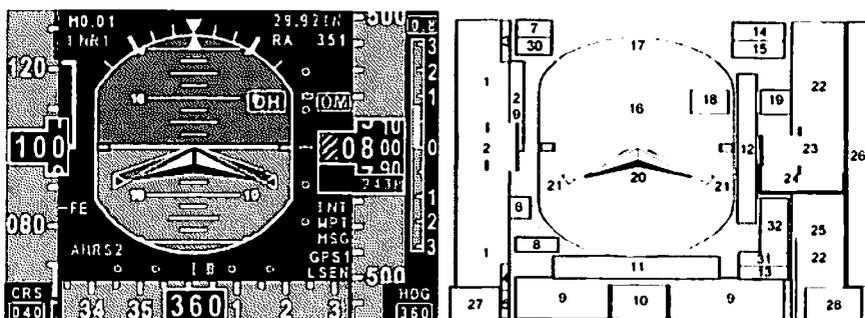
**Reversionary Mode Screen Format**

Figure 7-14

The information presented in the Reversionary Screen Format includes:

- |   |  |
|---|--|
| 1. Airspeed Scale Tape                            | 17. Roll Angle Indication                                      |
| 2. Airspeed Digital Readout                       | 18. Decision Height Indicator                                  |
| 3. Maximum Airspeed Indicator                     | 19. Marker Beacon Indication                                   |
| 4. Stall Warning Indication                       | 20. Aircraft Symbol (Single Cue)                               |
| 5. Stall Indication                               | 21. Flight Director Command Bars                               |
| 6. Flaps/Slats Max Extend Speed Indicator         | 22. Barometric Altitude Scale Tape                             |
| 7. Mach Number Readout (Configuration Selectable) | 23. Barometric Altitude Digital Readout                        |
| 8. AHRS Source Warning                            | 24. Metric Altitude Digital Readout (Configuration Selectable) |
| 9. Heading Scale Tape                             | 25. Ground Reference Indicator                                 |
| 10. Heading Digital Readout                       | 26. Vertical Speed Indication                                  |
| 11. Localizer Deviation Indication                | 27. Selected Course/Desired Track Digital Readout              |
| 12. Glideslope Deviation Indication               | 28. Selected Heading Digital Readout                           |
| 13. Back Course/Localizer Sensing Indication      | 29. Airspeed Trend Vector                                      |
| 14. Barometric Correction                         | 30. CDI Nav Source Annunciation                                |
| 15. Radar Altimeter Indication                    | 31. GPS Source Annunciation                                    |
| 16. Pitch Indication                              | 32. GPS Alert Annunciation                                     |



### 7.8b MEGGITT EFIS DISPLAY (continued)

The Test Mode is designed to be used during test and fault diagnostics of the EHSI and is entered by depressing and holding the MNU pushbutton until the initialization page is displayed during the power-up sequence (airspeed must be less than 40 knots). The EHSI will remain in test mode until power is removed from the unit. Test Mode is intended for ground maintenance use only.

## 7.9 STANDBY INSTRUMENTS

The standby instrument group includes an airspeed indicator, an electric attitude indicator, and a barometric altimeter mounted in the center instrument panel above the audio select panel. The standby airspeed and altimeter are plumbed to the left side pitot static system. The airspeed and altimeter instruments are of traditional mechanical design. The standby electric attitude gyro is powered by an emergency battery mounted in the underwing radar pod, and is controlled by a three position toggle switch placarded STBY GYRO, ON, OFF, AND TEST. The standby gyro switch is located in the center instrument panel above the standby attitude gyro. If a fault occurs which causes one of the AHRS to output misleading information to the EADI or EHSI, the standby instruments act as a useful comparison to indicate which out of the three displays are incorrect.

### STANDBY ALTIMETER

The altimeter displays baro corrected altitude in a pointer/counter drum display. The dial graduations are marked in 20 foot increments. Above sea level, the counter displays every 100 feet. The indicator has barometric correction, from 28.08 to 31.19 inches of mercury (951 to 1071 hectopascals).

## 7.9 STANDBY INSTRUMENTS (continued)

### STANDBY AIRSPEED

The standby airspeed indicator provides indicated airspeed by means of a single pointer indicating against a 40 to 210 knot dial. Maximum allowable airspeed (Vmo) is indicated at 188 KIAS by a red radial mark on the airspeed dial. A white arc from 69 to 118 KIAS indicates the maximum operating speed with full flaps extended. A green arc from 79 to 188 KIAS indicates normal operating speed.

### STANDBY ATTITUDE GYRO

During normal operations, the standby attitude gyro is powered by the aircraft electrical system, however, in the event of a complete aircraft electrical failure, the standby gyro emergency power supply will automatically provide dc power to the standby attitude indicator for approximately 45 minutes duration. The standby attitude gyro switch must be selected ON for the standby gyro system to operate.

## 7.10 HYDRAULIC SYSTEM

The hydraulic system provides the power to retract and extend the landing gear. (See Figure 7-15.)


The electric motor driven hydraulic pump assembly is located aft of the rear baggage compartment and is accessible through the baggage compartment aft close-out panel. The pump assembly has an integral reservoir with filler plug, sight gauge and vent. The pump assembly incorporates pressure switches, bypass relief valves, and thermal relief valves in both the UP and DOWN sides. A shuttle valve is also incorporated to allow for unequal volumes of hydraulic fluid displaced during UP and DOWN gear actuation. Normal system operating pressure is controlled by the pressure switches. Maximum system operating pressure is limited by the bypass relief valves, and maximum system holding or trapped pressure is limited by the thermal relief valves.

The motor which drives the hydraulic pump is reversible and runs in one direction to supply gear UP pressure and in the opposite direction to supply gear DOWN pressure. The direction in which the pump runs is controlled electrically by the position of the gear selector switch on the instrument panel.

Other major components of the hydraulic system are the three gear actuators and the emergency gear extension valve. Operation of these components is covered in the landing gear section.

7.10 HYDRAULIC SYSTEM (continued)

102550 B

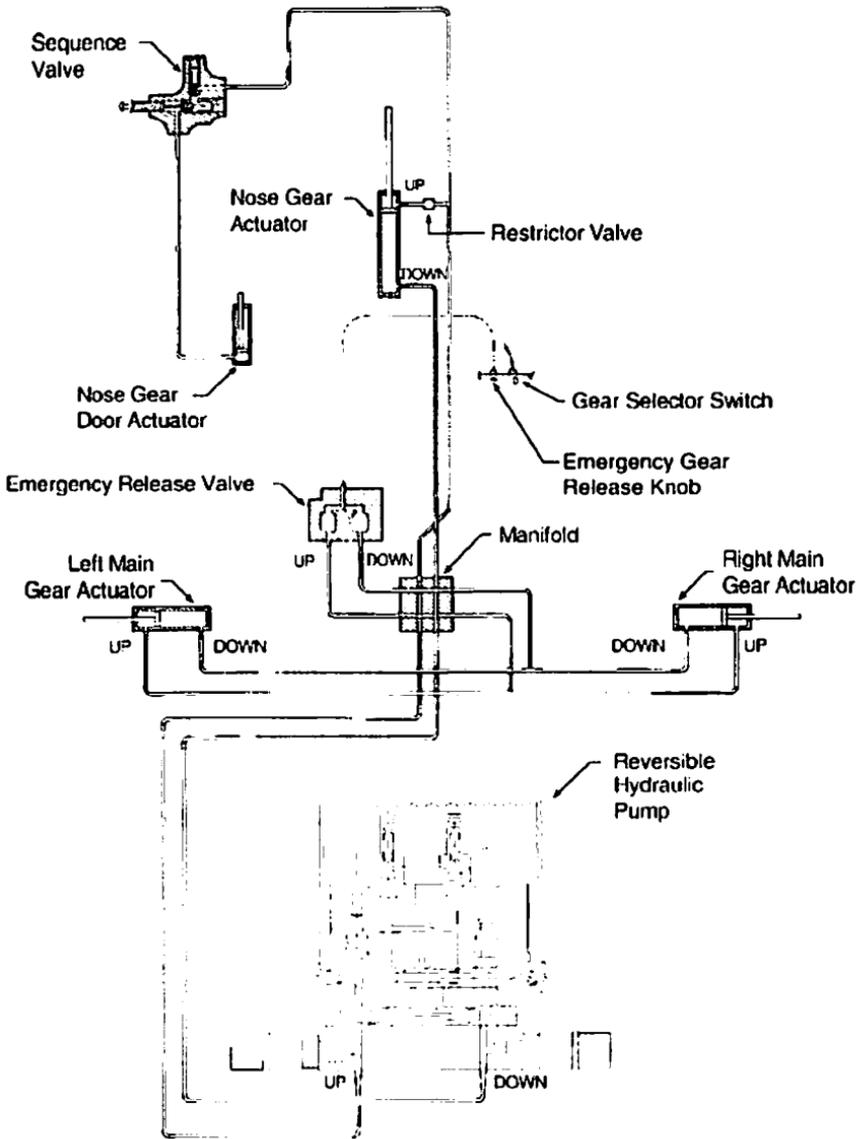

Hydraulic System  
Figure 7-15

## 7.11 LANDING GEAR

The aircraft is equipped with hydraulically operated, fully retractable, tricycle landing gear.

Locking-type actuators are used for main and nose gears. The actuator assembly provides mechanical gear-down locking at the fully extended position and is hydraulically unlocked. The actuator also acts as the gear brace in the extended position.

The main gear retracts inboard into the wing root area. A mechanically linked door covers the strut assembly.

Hydraulic pressure for gear operation is furnished by an electrically driven hydraulic pump. Landing gear operation is controlled by a two position landing gear selector switch with a wheel shaped knob located to the left of the engine power control quadrant. Three green lights, which are individually activated as each gear mechanically locks into the DOWN position, are located above the landing gear selector.

### NOTE

Day/night dimmer switch must be in the DAY position to obtain full intensity of the landing gear position indicator lights. When the aircraft is operated at night, the switch should be in the NIGHT position to dim the gear lights.

The landing gear selector switch must be pulled outward to release it from a detent in the DOWN position prior to moving it to the UP position. In addition, there is a squat switch on the left main gear which prevents operation of the gear UP electrical circuit when the aircraft weight is on the gear. If the landing gear selector is placed in the UP position with the aircraft weight on the gear, the gear warning horn will sound, and the red GEAR WARN annunciator will illuminate.

The landing gear is held in the UP position by hydraulic pressure which is trapped in the system UP lines by a check valve in the pump assembly. When normal pump operation is stopped by the pressure switch, a check valve in the pump assembly closes to trap fluid pressure in the UP side of the system. Emergency gear extension is accomplished by a manually actuated valve which relieves the pressure in the UP side and bypasses fluid to the DOWN side of the system. The additional fluid required for DOWN operation comes directly from the reservoir.

## 7.11 LANDING GEAR (continued)

The landing gear is held in the DOWN position by spring loaded mechanical locking mechanisms built into each of the three actuating cylinders. The individual gear safe light switches are also mechanically operated when each mechanism is in the LOCKED position. With the hydraulic pump and system operating normally, hydraulic pressure is also trapped in the DOWN side of the system. This DOWN pressure is not required to mechanically lock the cylinders and is not available if the hydraulic pump is inoperative.

The EMERGENCY GEAR extension system allows the landing gear to free fall, with spring assist on the nose gear, into the extended position where the mechanical locks engage. If a gear system malfunction has been indicated and the EMERGENCY GEAR extension system used, it is recommended that the EMERGENCY GEAR extension control and the HYD PUMP circuit breaker be left in the pulled position until the aircraft is safely on jacks. See the Maintenance Manual for proper landing gear system check-out procedures. If the aircraft is being used for training purposes or a pilot check-out flight the EMERGENCY GEAR extension control and HYD PUMP circuit breaker must be reset in order for hydraulic pressure to be generated in the UP side of the system and the gear retracted.

### CAUTION

When flying in extreme cold where the aircraft has been cold soaked for an extended period of time, the gear may not indicate down and locked for 10 to 15 seconds after normal gear extension.

### CAUTION

When flying in extreme cold where the aircraft has been cold soaked, it may take several minutes for all three gear to indicate down and locked following an EMERGENCY EXTENSION "FREEFALL".

### 7.11 LANDING GEAR (continued)

The annunciator panel contains two lights pertaining to landing gear operation. A red GEAR WARN annunciator is activated whenever all three gears are not fully down and locked, or not fully up with the gear doors closed. This annunciator will illuminate during normal gear operation to indicate that the gear is in transit. If it does not go out within approximately 10 seconds during normal gear operation or illuminates steadily during flight with the landing gear selector in the UP position, a system malfunction is indicated. There is also an amber HYDRAULIC PUMP annunciator which indicates that the hydraulic pump motor is being supplied with electrical power. The annunciator is illuminated during normal landing gear operation for approximately the same duration as the GEAR WARN annunciator. If the light remains on or begins cycling intermittently after gear operation, a system malfunction is indicated.

The red GEAR WARN annunciator and gear warning horn will operate simultaneously under the following conditions:

(a) In flight when the throttle is reduced to low power settings and the landing gear is not in the DOWN position.

(b) In flight when the flaps are extended beyond 10° and the landing gear is not in the DOWN position.

(c) On the ground when the landing gear selector is in the UP position. The landing gear squat switch activates to prevent operation of the retract side of the hydraulic pump on the ground.

A landing gear warning horn mute switch, if installed, is located directly below the standby airspeed indicator. Activating the landing gear warning horn mute switch temporarily silences the landing gear warning horn only if the horn is triggered. When activated, the landing gear warning horn mute switch will illuminate. The horn can be cancelled by extending the landing gear or advancing the power lever.

### **7.13 BRAKE SYSTEM**

The brake system is designed to meet all normal braking needs. Two single-disc, double puck brake assemblies, one on each main gear, are actuated by toe brake pedals mounted on both the pilot's and copilot's rudder pedals. A brake system reservoir, independent of the hydraulic system reservoir, is located on the firewall. Brake fluid should be maintained at the level marked on the reservoir. For further information see BRAKE SERVICE in Section 8 of this handbook.

The parking brake knob is located below the pilot's control column. To set the parking brake, first depress and hold the toe brake pedals and then pull the parking brake knob. To release the parking brake, first depress and hold the toe brake pedals and then push in on the parking brake knob.

**THIS SPACE INTENTIONALLY LEFT BLANK**

## 7.15 FLIGHT CONTROL SYSTEM

The primary flight controls are conventional and are operated by dual control wheels and rudder pedals. The control wheel operates the ailerons and elevator. The rudder pedals actuate the rudder and nose wheel steering. The toe brakes, which are an integral part of the pedals, operate the wheel brakes. The ailerons and rudder are interconnected through a rudder/aileron spring system, which is activated only when controls are out of harmony. In normal coordinated flight, the system is inactive. All flight control systems are operated by closed circuit cable systems.

Elevator and rudder trim controls are located on the pedestal. Aileron trim is provided by a fixed, ground-adjustable tab on the right aileron. The elevator trim control wheel is located on the right side of the pedestal. The trim wheel is rotated forward for nose-down trim and aft for nose-up trim. Rudder trim is achieved by a trim tab driven by an electro-mechanical linear actuator. The rudder trim is activated by depressing a rocker switch, located on the aft face of the pedestal below the throttle lever. The switch is marked with L and R, corresponding to nose left or nose right. Trim indications, in degrees, are located on an LED panel (volt/amp/rudder trim) just above the pedestal.


The wing flaps are electrically controlled by a flap selector lever mounted on the instrument panel immediately to the right of the control pedestal. The flap position indicator is located to the right of the selector lever. The flaps may be set to one of four positions: up (0°), 10°, 20°, and full down (36°). Each position is detented on the flap selector panel. The flaps will automatically move to the selected position, which can be confirmed by referring to the position indicator. The flaps may be extended to 10° at airspeeds below 168 KIAS, 20° below 135 KIAS, and 36° flap extension is limited to airspeeds below 118 KIAS. When extending the flaps with the landing gear retracted, prior to the flaps reaching the 20° position, the landing gear warning horn will sound, and the red GEAR WARN annunciator will illuminate. A red FLAP FAIL annunciator light is provided as part of the annunciator panel located in the upper center section of the instrument panel. If the annunciator light illuminates, it is indicative of a system malfunction in which case the flap protection circuit automatically removes power from the electric flap motor. Resetting the FLAP WARN circuit breaker will restore normal operating power to the flap motor. If, after resetting, and operation of the flaps, the annunciator illuminates again then a system malfunction is indicated and the flap motor circuit breaker should be pulled.

## 7.17 FUEL

The fuel system consists of two main, inboard, and header wing tanks, two header tank boost pumps, supply and vapor return fuel lines, and three sump drains. Fuel is drawn from both wings simultaneously, with float valves and switches employed to prevent air ingestion. The two header tank sump drains are located on the lower aft left and right sides of the cowling. The filter sump drain is located adjacent to the left header sump drain. Upon engine shutdown, the fuel remaining in the fuel manifold drains into an EPA tank. This tank should be drained prior to each flight. If the tank is not drained, it will overflow and the fuel will drain from the drain mast. The EPA collector tank drain is located on the lower right side of the cowling. The fuel shut-off valve is located on the center pedestal and is pulled for the closed position.

An inline electric boost pump is located in each wing root just forward of the header tanks. Control of these pumps is through a three-position switch located on the left overhead panel with selections: MAN, OFF, and AUTO. The pumps operate in unison to provide emergency back up for the engine driven pump, boost pressure for starting, and vapor suppression at high altitudes. In the AUTO position, a pressure switch activates both pumps automatically when the fuel pressure from the engine driven pump drops below 9 psig, and remains activated until the pressure increases to 12 psig. During this period, the red FUEL PRESSURE, green FUEL FLOW, and green FUEL TEMP annunciators will illuminate. As pressure increases to 12 psig the pumps are turned off and all three annunciators extinguish. This boost pump cycling prompts the pilot to select the MAN mode to provide continuous fuel pressure. In the AUTO mode the pumps are also controlled automatically, but separately, by the Meggitt Engine Display Unit (EDU). The Meggitt system provides a secondary means to control fuel balance. To provide proper fuel balance, a discrete signal from the EDU activates the boost pump on the "heavy" side once a 25-pound imbalance is reached, illuminates the amber FUEL IMBALANCE annunciator, and remains on until fuel is in balance. If the imbalance worsens (to 40 pounds), a second discrete output from the EDU causes the amber FUEL IMBALANCE light to flash indicating fuel system malfunction which may require pilot action.

7.17 FUEL (continued)

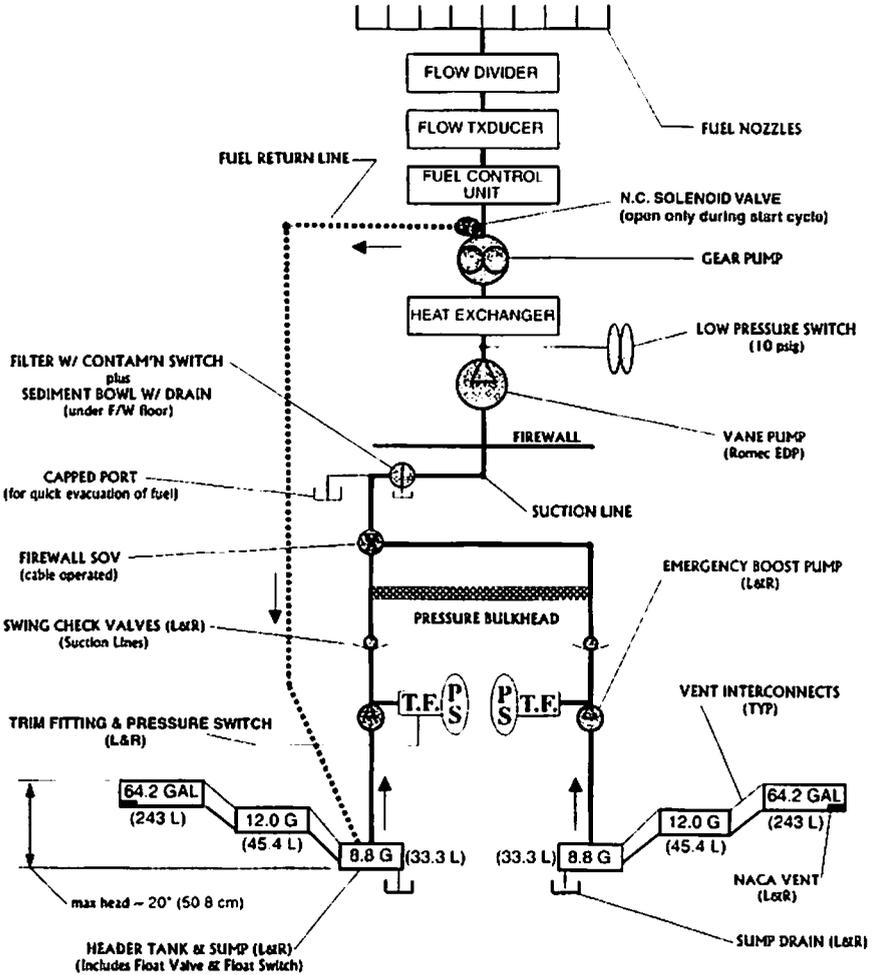

Fuel System Schematic  
Figure 7-16

## 7.19 ELECTRICAL

Power for the 28 Vdc negative ground dual fed split bus electrical system is supplied by a direct driven 200 ampere generator and a belt driven 135 ampere alternator. The generator and the alternator are located on the aft end of the engine. Although the units do not operate in true parallel fashion, both units are kept running at the same time. The generator is considered the primary current source and the alternator is the back-up. The units that control the generator and the alternator are adjusted such that the generator furnishes all of the load and the alternator is the backup. In the event that the generator should fail or be turned off for any reason, the alternator picks up the entire load. Two 24 Vdc lead acid batteries, with a combined 29 ampere hour capacity, or a single 24 Vdc lead acid battery of 38 ampere hour capacity, are located in the battery compartment in the right side of the nose of the aircraft just forward of the wing leading edge. The batteries provide power for engine starting and also act as an emergency source of electrical power in the event the generator and the alternator should both fail.

Electrical switches are located as follows.

- An overhead switch panel (Figure 7-19) located above the upper edge of the wind shield.
- Avionics and systems switches located on the instrument panel. (Figure 7-22)
- Environmental control panel installed in the instrument panel. (Figure 7-22)

A battery bus, located in the engine compartment, provides a source of power for the courtesy lights, digital clock and memory function of the entertainment console. Because the battery bus is connected directly to the battery, power is available for these functions even when the Battery switch is OFF. The battery bus contains fuses to protect these circuits.

The EMERGENCY/GROUND CLEARANCE BUS can be activated by depressing the EMER/GND CLEAR switch on the overhead switch panel.

### NOTE

The battery switch must be off prior to activating the EMER/GND CLEAR switch.

The bus is tied directly to the battery via a relay. The EMER/GND CLEAR bus provides power to #1 Comm/Nav/GPS, Audio Panel, Landing Gear Down Lights, Internal Lighting for the Standby Instruments, and Illumination in the Magnetic Compass. It is intended to be used for filing flight plans prior to turning the battery on or providing emergency power to systems required to land the aircraft in the event of a total electrical failure.

### 7.19 ELECTRICAL (continued)

When the Battery switch, located on the overhead switch panel, is turned ON, the battery contactor closes, enabling current to flow from the battery to both the start contactor and the tie bus located on the lower right section of the Co-Pilots instrument panel (Figures 7-17 and 7-22). Should the airplane's battery be depleted, a receptacle (located behind a small access door on the left side of the aft fuselage) permits using an external 24 Vdc power source for engine start. With the Battery switch OFF, connecting an appropriate external source completes a circuit that closes the external power contactor, permitting current to flow to the starter generator and the tie bus. Whether using the airplanes battery, or external power, tie bus overcurrent protection is provided by the 150 ampere Battery circuit breaker.

A combined Volt/Amp/Rudder Trim Position indicator is located in the center of the lower portion of the instrument panel (Figure 7-22). The voltmeter portion of the indicator is connected to the tie bus to indicate system voltage on the bus. The indicator also provides separate readouts to indicate Generator and Alternator load current. A low voltage monitor in the indicator will illuminate a "LOW BUS VOLTS" indication on the annunciator panel when the voltage on the tie bus is 25 Vdc or less.

#### NOTE

When using only the airplane's battery or a 24 volt external power source, the "LOW BUS VOLTS" annunciator will be illuminated. Check the voltmeter for correct voltage.

### 7.19 ELECTRICAL (continued)

The generator and the alternator each have their own independent ON-OFF switch located on the overhead switch panel. Each system also has its own solid state voltage regulator which regulates field voltage to their respective device. When selected ON, the output of the generator and the alternator is fed through individual shunts to the tie bus. The shunts provide a signal to the Volt/Amp/Rudder Trim Position indicator to indicate the amount of current each device is providing. The alternator is tied to the bus by a 150 ampere circuit breaker. The generator is tied to the bus by a line contactor which is controlled by the generator control unit (GCU). Should an overvoltage or field ground fault condition occur in the alternator system, its voltage regulator will turn off the output to the alternator field. Once the fault has been cleared the alternator system may be turned back on by turning the alternator switch on the overhead switch panel OFF and then back ON. Should an overvoltage or ground fault condition occur in the generator system the GCU will open the line contactor and place itself in the tripped mode. Once the fault has been cleared the generator can be put back on line by resetting the Generator control circuit breaker (on the lower right hand instrument panel, Figures 7-17 and 7-22) and turning the generator switch on the overhead switch panel OFF and then back ON. Any time the alternator or the generator is turned OFF an "ALT. INOP" or "GEN INOP" light will be illuminated on the annunciator panel.


The engine start system has an Auto and a Manual mode. Auto mode is considered the normal mode. In Auto mode, momentarily depressing the PUSH START switch will engage the starter. The starter will automatically disengage at 56% Ng. To disengage the starter or to abort a start in AUTO mode, place the MAN/STOP switch (green indicator light in switch illuminated) to the manual position. When in manual mode, the starter will engage only while the PUSH START switch is depressed.

A main electrical bus with associated circuit breakers is located on the pilots forward and aft side panels (Figure 7-20). The non-essential bus, AVIONICS NO.1 and AVIONICS NO.2 busses are located on the co-pilot's instrument panel (Figures 7-17 and 7-22). The two avionics busses are interconnected via a 25 ampere bus tie circuit breaker.

**7.19 ELECTRICAL (continued)**

Current is fed to the main bus by three conductors. Three in line diodes provide isolation in the event of a ground fault in one of the feeder lines. The three feeders are protected by two 80 amp and one 100 amp circuit breakers. (Figure 7-17) The non-essential bus is also fed by the 100 amp circuit breaker.




The two avionics busses are fed through independent contactors. (Figure 7-17) The feeders to the contactors are protected by 35 ampere circuit breakers. When the AVIONICS switch on the overhead switch panel is depressed, both avionics contactors close allowing current to flow to both avionics busses. Should the need arise, either avionics bus can be isolated by pulling the avionics bus BUS TIE circuit breaker and the appropriate tie bus avionics circuit breaker.

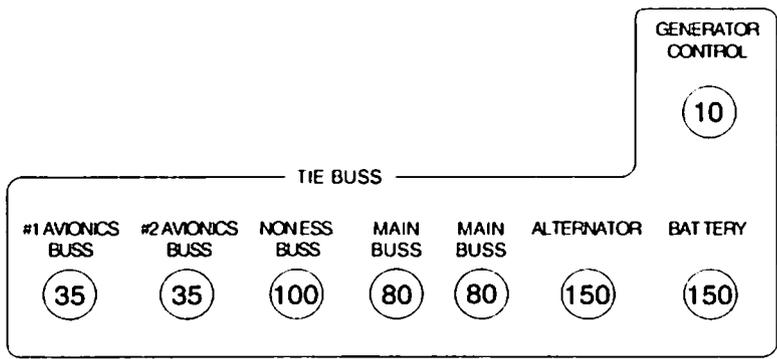

**Tie Buss Circuit Breakers**  
Figure 7-17




7.19 ELECTRICAL (continued)

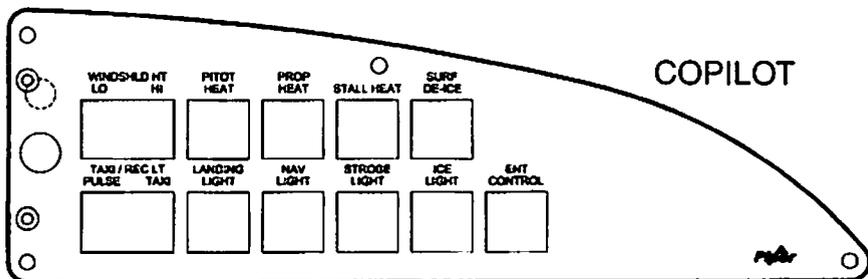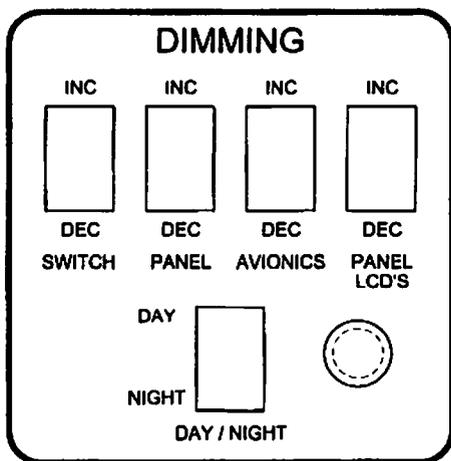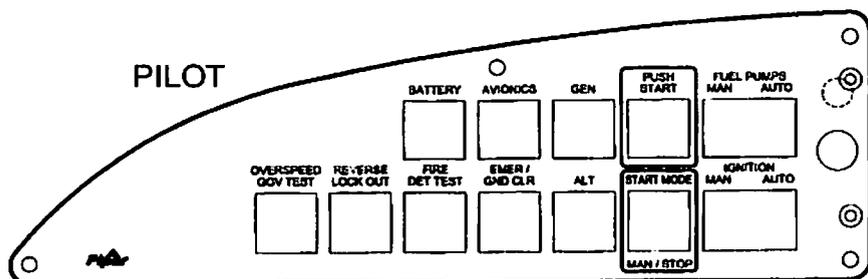

Overhead Switch Panel



Figure 7-19

7.19 ELECTRICAL (continued)

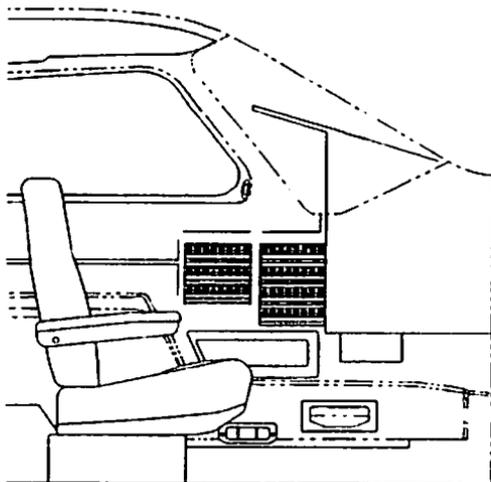


PILOT'S AFT PANEL

PILOT'S FORWARD PANEL

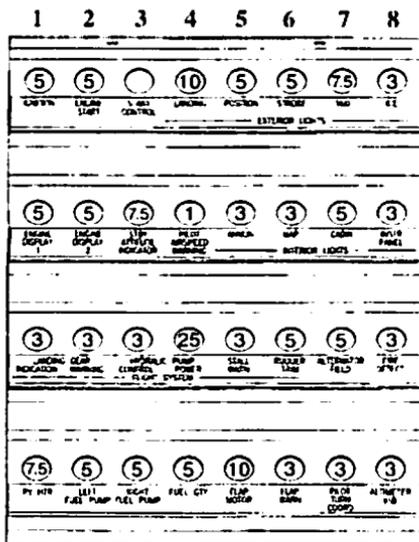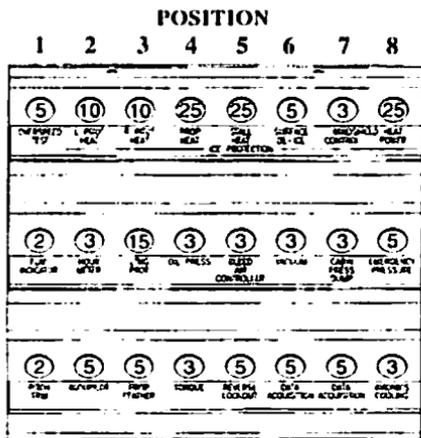


Circuit Breaker Panel - Pilot's Side, Typical  
Figure 7-20

7.19 ELECTRICAL (continued)

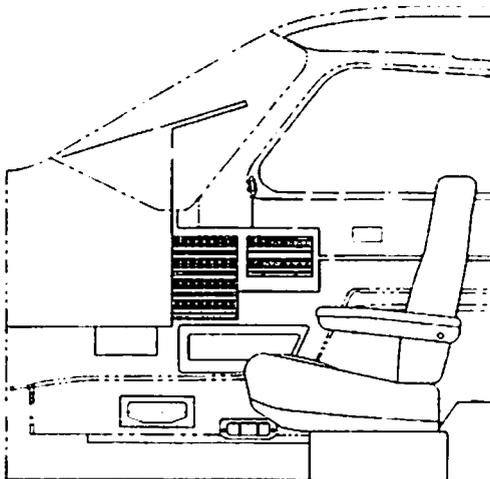


**COPLOT'S FORWARD PANEL**

POSITION

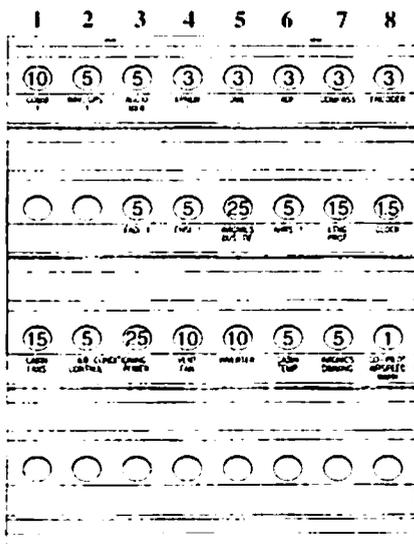

**COPLOT'S AFT PANEL**

POSITION

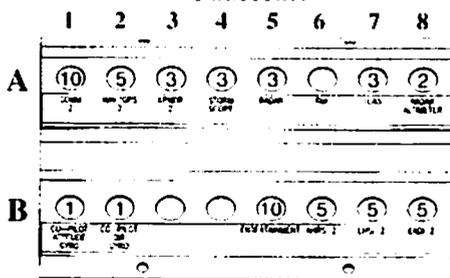

**Circuit Breaker Panel - Copilot's Side, Typical**


Figure 7-21

## **7.21 INSTRUMENT PANEL**

The instrument panel is designed to accommodate the flight instruments and the required power plant instruments.

All the high current tie bus input and feeder circuit breakers are located on the lower right section of the instrument panel.

**THIS SPACE INTENTIONALLY LEFT BLANK**

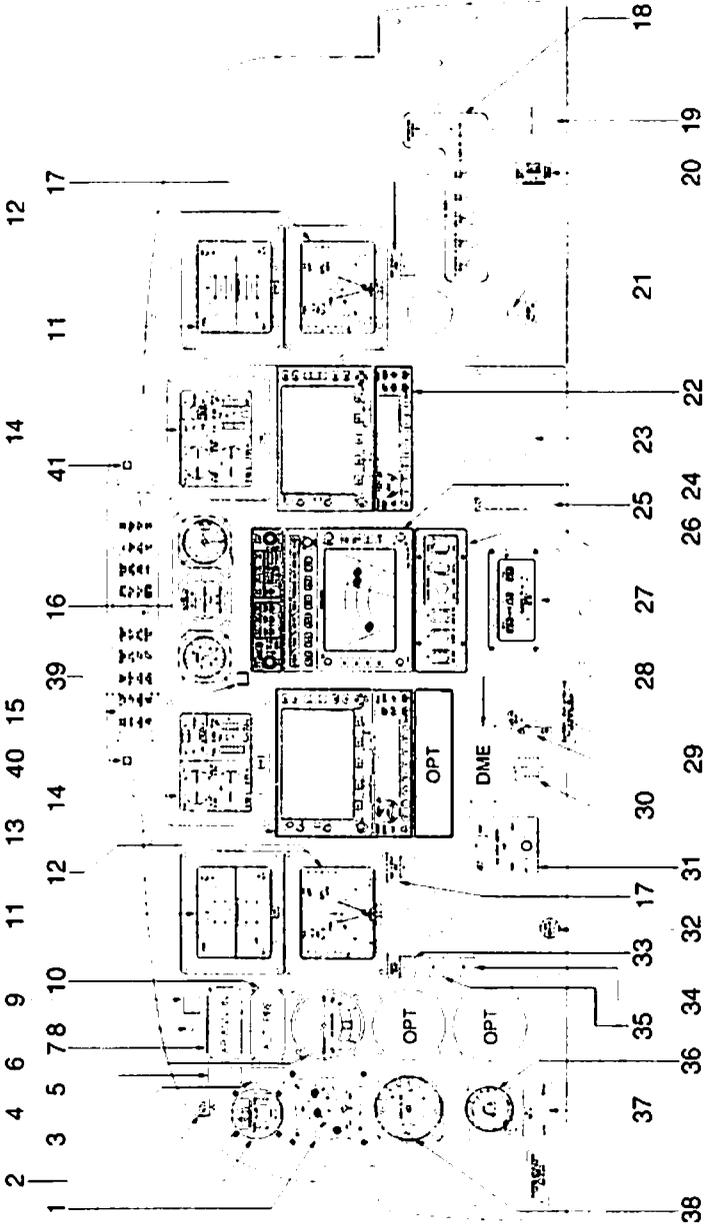

Instrument Panel, Typical  
Figure 7-22

**7.21 INSTRUMENT PANEL (continued)**

1. Stormscope
2. Digital Clock
3. Stall Test Switch
4. Yaw Master Switch
5. AP/FD Master Switch
6. Turn and Bank Indicator
7. A/P Annunciator
8. Yaw Trim
9. Trim On-Off/Fail Annunciator
10. Altitude Preselect
11. Electronic Attitude Director Indicator (EADI)
12. Electronic Horizontal Situation Indicator (EHSI)
13. Avionics
14. Engine Display Units
15. Annunciator Panel
16. Standby Instruments (Airspeed Indicator, Attitude Gyro, Altimeter)
17. EADI Display Down Selector
18. Tie Buss Circuit Breakers
19. Hour meter
20. ELT switch
21. Defrost Control
22. Avionics
23. Flap Position Indicator
24. Weather Radar
25. Flap Position Selector
26. Climate Control Switch Panel
27. Voltmeter, Ammeter, Rudder Trim Position
28. DME
29. Landing Gear Selector
30. Landing Gear Indicator Lights
31. ECS Control Panel/Cabin Pressure Dump
32. Parking Brake Knob
33. AHRS Select Switch
34. Transponder Select Switch
35. Radar Altimeter On/Off
36. Cabin Pressure Controller
37. Mic Select
38. Cabin Altitude, Rate of Change, Differential Pressure
39. Landing Gear Warning Horn Mute Switch (if installed)
40. Exceedance Mute Switch
41. Cabin Altitude Mute Switch

**Typical Instrument Panel**

Figure 7-22 (continued)

### 7.23 PITOT STATIC SYSTEM

Pitot pressure for the airspeed indicators is sensed by heated pitot heads installed on the bottom of the left and right wings and is carried through lines within the wing and fuselage to the two AHRS units behind the aft baggage close out panel and the standby gauge on the instrument panel. Static pressure for the two AHRS units and standby altimeter and airspeed indicators is sensed by static source ports on the underside of the fuselage. Static pressure for the pressurization system outflow valve is sensed by a separate static port located on the aft bottom of the aircraft in close proximity to the static ports.

An alternate static source control valve is located below the instrument panel to the left of the pilot. For normal operation, the lever remains down. To select alternate static source, place the lever in the up position. When the alternate static source is selected the airspeed and altimeter and vertical speed indicator are vented to alternate static ports on the aft sides of the fuselage. During alternate static source operation, these instruments may give slightly different readings. The pilot can determine the effects of the alternate static source on instrument readings by switching from standard to alternate sources at different airspeeds. Corrections for each operating mode are shown in Section 5, Performance.

If one or more of the pitot static instruments malfunction, the system should be checked for dirt, leaks or moisture.

The holes in the sensors for pitot and static pressure must be fully open and free from blockage. Blocked sensor holes will give erratic or zero readings on the instruments.

Both the pitot and static can be drained through separate drain valves located on both the right and left lower side panel next to the crew seats. Two drains exist on the pilot side. The forward valve is the pilot static drain and the aft valve is the pilot pitot drain. Four drains exist on the copilot side. The forward valve is the pilot pitot drain, next is the pilot static drain, the third is the pilot alt-static drain and the furthest aft valve is the copilot pitot drain.

The heated pitot heads, which alleviate problems with icing and heavy rain, are standard equipment. The switch for pitot heat is located on the right overhead switch panel. Static source ports have been demonstrated to be non-icing; however, in the event that icing does occur, selecting the alternate static source will alleviate the problem.

## 7.25 ENVIRONMENTAL SYSTEM

The environmental system consists of:

- (a) An engine bleed air and conditioning system.
- (b) The ventilating air system.
- (c) An air conditioning system.
- (d) The cabin air distribution system.
- (e) The pressurization and control system.

Compressor bleed air from the P3 engine port supplies air for heating the cabin during flight and ground operations and for pressurization. The bleed air is first routed through a mass flow controller that mixes ambient and bleed air, then the air flow is split between a heat exchanger and muffler. The amount of air flowing through each component is dependent on the cabin air temperature setting. The air then flows into the cabin through the lower left and right cabin side panel ducts, and through the windshield defroster, when selected by pulling the defoster knob located below the right control column. Conditioned bleed air entering the cabin will always be warmer than the outside air and typically warmer than the cabin air.

Cabin ventilating air during ground or unpressurized flight operation is provided by a blower through the lower left and right cabin side panel ducts. The blower is activated by the VENT/FAN switch.

Cabin air conditioning is provided by a vapor cycle system. The freon compressor is belt driven by the engine dual drive.

The condenser and its cooling air fan are located in the tailcone immediately aft of the rear pressure bulkhead. Cooling air from outside the tailcone is drawn into the cooling air duct through a flush opening in the skin, routed across the condenser coil, and discharged overboard through the tailcone exit opening.

Two recirculation blowers and evaporator assemblies are located aft of each rear seat below the rear baggage compartment floor. The recirculation blowers draw air into each evaporator coil through grills in the floor structure behind the rear seats and discharges it into the upper left and right cabin side panel ducts. Adjustable eyeball outlets are located at each seat location in the airplane.

## 7.25 ENVIRONMENTAL SYSTEM (continued)

The AIR COND and BLOWER LO & HI switches, located as part of the environmental switch panel in the center of the instrument panel, are used to control the air conditioning system.

When the AIR COND switch is selected ON, the compressor belt drive is electrically clutched, the condenser blower motor relay is closed, and both recirculation blowers are activated. The recirculation blowers can be operated independently of the air conditioner by selecting the BLOWER HI or LO on. In either situation, the BLOWER switches are used only to select a HI or LO recirculation blower motor speed. Overcurrent protection is provided by the 15 amp CABIN BLOWERS, 5 amp AIR CONDITIONER CONTROL, and 25 amp AIR CONDITIONER POWER circuit breakers in the nonessential bus section of the pilot's forward circuit breaker panel.

The HFC-134A portion of the system incorporates a receiver dryer, a sight gauge, suction and discharge service valves, and 265 psi high pressure and 40 psi low pressure switches. Should the compressor discharge pressure increases above 265 psi, or decrease below 40 psi, the applicable pressure switch will open, disengaging the freon compressor clutch.

Refer to paragraph 7.27, BLEED AIR, CONDITIONING AND PRESSURIZATION SYSTEM, for a more complete description of the pressurization system and use of related controls and switches.

## 7.27 BLEED AIR, CONDITIONING AND PRESSURIZATION SYSTEM

Air for cabin pressure is obtained from the P3 engine bleed port. Bleed air is routed through the mass flow and temperature controllers. The mass flow controller meters the amount of mass flow to the cabin through an actuator controlled, ambient and bleed air, mixing ejector. The amount of mass flow is controlled by a four position switch located below and to the right of the left control column. The available settings are off, normal, high, and emergency.

The temperature controller sets what percentage of bleed air will flow through the cooling heat exchanger and what percentage will flow through the acoustic muffler. The amount of air through each device determines the mixed cabin supply air temperature. The temperature controls are located in the middle of the instrument panel and have two modes of operation, automatic and manual. Cabin temperature is controlled by a relative temperature knob when in automatic mode and an increase/decrease rocker switch when in manual mode. The automatic temperature mode relies on the cabin temperature sensor, located behind the pilot in a side close out panel, for temperature regulation. The manual temperature mode directly controls the amount of air flowing through the cooling heat exchanger and acoustic muffler.

The cabin pressurization control system consists of an isobaric outflow valve, a safety outflow valve, absolute pressure regulator, cabin altitude and rate selector, electrically operated vacuum solenoid valve, and surge tank.

Cabin altitude, differential pressure, and rate of change are displayed on a single three inch diameter indicator. Cabin pressure is automatically regulated to a maximum of 5.5 psi pressure differential. Should the cabin outflow valve malfunction, the cabin safety valve will maintain a maximum of 5.6 cabin differential pressure. The landing gear squat switch and vacuum pressure prevents the cabin from being pressurized while the airplane is on the ground.

**7.27 BLEED AIR, CONDITIONING AND PRESSURIZATION SYSTEM (continued)**

Should cabin pressure altitude exceed 10,000 feet, an amber CABIN ALTITUDE annunciator combined with audible alarm will warn the pilot. The audible alarm can be muted by depressing the cabin altitude mute switch located to the right of the annunciator panel. If the cabin altitude exceeds 12,000 feet, the emergency bleed air solenoid is opened and a red CABIN ALTITUDE annunciator combined with audible alarm will warn the pilot. If the cabin altitude exceeds 13,500 feet, the absolute pressure regulator will close the isobaric outflow valve. The cabin pressurization system isobaric outflow valve provides the means by which smoke and impurities are vented from the cabin.

For pressurized flight, set the cabin pressure controller at 500 feet above the airport pressure altitude. CABIN PRESS control set to normal and the DUMP/NORM switch to NORM. The rate of cabin ascent and descent change is controlled with the rate knob (left lower corner of the cabin pressure controller), and may be adjusted between approximately 200 and 2000 feet per minute, as desired. Setting the rate knob arrow to the 9 o'clock position provides a cabin rate of change of approximately 500 feet per minute. This position gives a comfortable rate for normal operations.

For complete instructions on the operation of the cabin pressurization system, refer to Section 4, Normal Procedures.


The CABIN PRESS DUMP/NORM switch, when set to DUMP, electrically opens a solenoid valve allowing vacuum suction pressure to open the safety valve and rapidly dump cabin pressure to ambient pressure.

For unpressurized flight the CABIN PRESS control should be set to OFF and the pressurization bleed air shut off valve pulled closed. Setting the CABIN PRESS/DUMP/NORM switch to DUMP will provide maximum airflow through the cabin.

For complete instructions on pressurization malfunctions, refer to Section 3 - Emergency Procedures.

## 7.28 EMERGENCY OXYGEN SYSTEM

The pilot diluter demand emergency oxygen system consists of a quick donning mask, stowage box, pressure gauge, and oxygen bottle with pressure regulator and shutoff valve assembly. The complete system is contained within a cabinet located behind the copilot seat. Figure 7-23 shows the pilot emergency oxygen system as installed within the cabin.

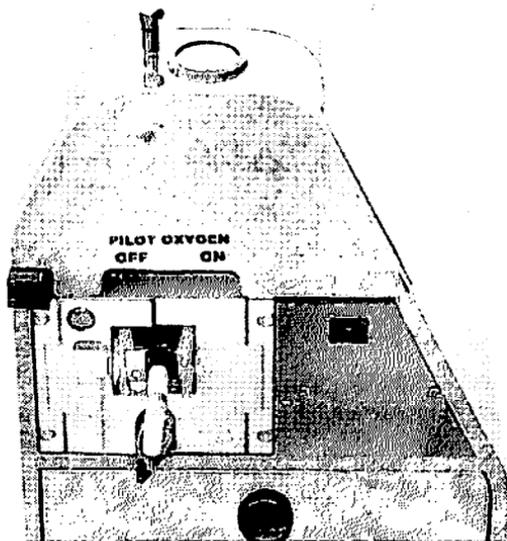

**Emergency Oxygen System Installation**  
Figure 7-23

The oxygen system is activated by a lever located above the stowage box and slightly recessed within the cabinet. A placard on the cabinet clearly marks the ON and OFF positions. The system pressure gauge is located on top of the cabinet and is illuminated by a post light. The pressure gauge incorporates a yellow arc from 0 to 800 psi. The minimum safe charge for pressurized operation above 25,000 feet is 800 psi or above. The quick donning mask stowage box incorporates a test indicator and is located in the upper left corner of the stowage box face. A press-to-test button is also located in the lower left corner of the stowage box face. The controls on the mask itself consist of a switch to select between diluted/normal (N) flow and non-diluted flow (100%), as well as an additional emergency pressure breather switch. Integral to the mask supply line and adjacent to the mask is a secondary flow indicator.

## 7.28 EMERGENCY OXYGEN SYSTEM (Continued)

To remove the mask from the stowage box, pull on the inflation control valve (red handles) protruding from the face of the stowage box. Once removed, depressing the inflation control valve inflates the harness and allows it to be placed over the head. After the harness is completely over the head, releasing the inflation control valve will firmly hold the mask in place. To achieve optimum fit, simply reinflate the harness by depressing the inflation control valve and adjusting the mask as needed. The MIC SELECT switch located on the lower left (pilot's) instrument panel when in the mask position activates the mask microphone. Continued oxygen system operation can be verified by the pressure gauge, located on top of the cabinet, and two flow indicators, one located on the face of the stowage box and the other integral to the oxygen mask supply line.

With the system charged to 800 psi or higher and the mask set to normal (N), the pilot oxygen system will provide adequate oxygen for an emergency descent from 30,000 feet to 10,000 feet. The 15 minute descent profile used to define the minimum safe oxygen charge includes a one-minute dwell time at 30,000 feet, a 5,000 fpm descent to 10,000 feet, followed by a 10 minute hold at 10,000 feet. With the system fully charged to 1800 psi and the mask set to normal (N), the oxygen system will provide oxygen to the pilot for approximately 25 minutes at 30,000 feet.

### NOTE

Pilot oxygen system pressure must be above the yellow arc, or greater than 800 psi, during pressurized flight above 25,000 feet.

The passenger emergency oxygen system consists of three "two man" oxygen generators and six masks. The system consists of two major assemblies, the copilot and passenger assemblies. The oxygen generators provide sufficient oxygen flow for six people for a 15 minute period. Once an oxygen generator is activated, it will continue to produce oxygen until depleted, as no shutoff provisions are provided. Each generator has two oxygen masks connected, either of which is capable of activating the generator.

## 7.28 EMERGENCY OXYGEN SYSTEM (Continued)

The copilot assembly is located under the copilot seat and contains two masks and one, two man oxygen generator mounted on a sliding tray. The tray slides out into the aisle, between the pilot and copilot seat, exposing the two masks. Each mask is connected to the oxygen generator via a clear plastic oxygen delivery tube and lanyard. Pulling either of the masks, and thus the lanyard, activates the oxygen generator and delivers oxygen to both masks simultaneously. The additional mask can be used by the pilot in the event of a failed pilot demand oxygen system. The generator has two over-pressure relief valves to prevent excessive pressure should a malfunction in the system occur.

The passenger assembly is located in a drawer beneath the right rear facing passenger seat. Four masks and two, two-man oxygen generators are accessed by sliding the drawer out in the aft direction. The two inboard masks are connected to the first oxygen generator, while the two outboard masks are connected to the second generator. Any of the four masks will reach any of the four passengers. Activation and operation of the passenger oxygen generators is identical to the copilot assembly.

Placards are provided on the side panels outboard of the copilot's seat and the right aft facing seat, which state the location and operation of the copilot and passenger emergency oxygen system, and that smoking is prohibited.

An amber OXYGEN annunciator, on the pilot's annunciator panel, is provided to inform the crew whenever either of the three oxygen generators has been activated. The annunciator light is activated by a microswitch on each generator. The light will continue to illuminate until the used generator is replaced with a full one.

## 7.29 VACUUM SYSTEM

Vacuum for the system is provided by an ejector, driven by pressure regulated precooled engine bleed air. Also, included is a vacuum regulator and a low vacuum switch.

Vacuum is used for pneumatic deice boot hold down and as a source of control pressure for the cabin pressure control system. Vacuum level indication on the copilot's (secondary) EDU is for general vacuum system health monitoring, and is for reference only. Transient decreases in vacuum during pneumatic boot operation can be expected. Any sustained decrease in system vacuum may indicate a sticking or maladjusted vacuum regulator, a leak in the system, or a failure of the ejector. The **VACUUM LOW** annunciator indicates excessively low vacuum level.

## 7.31 STALL WARNING SYSTEM

The stall warning system consists of a lift transducer located in the leading edge of the left wing and a lift computer to power regulators, a signal processor, control circuitry and a push-to-test switch. The lift transducer protrudes into the air stream and during flight is positioned by local airflow velocity and direction. A continuous stall warning tone will sound prior to the actual stall.

Activation of the stall warning push-to-test switch during ground operation will produce an aural stall warning tone, verifying proper stall warning operation.

**THIS PAGE INTENTIONALLY LEFT BLANK**

 


TABLE OF CONTENTS

SECTION 8

AIRPLANE HANDLING, SERVICING, AND MAINTENANCE

Paragraph No.		Page No.
8.1	General .....	8-1
8.3	Airplane Inspection Periods .....	8-2
8.5	Preventive Maintenance .....	8-3
8.7	Airplane Alterations .....	8-3
8.8	Airplane File.....	8-4
8.9	Ground Handling.....	8-4
8.13	Brake Service .....	8-7
8.15	Hydraulic System Service .....	8-9
8.17	Landing Gear Service.....	8-9
8.19	Propeller Service .....	8-10
8.21	Oil Requirements.....	8-11
8.23	Fuel System .....	8-14
8.25	Tire Inflation.....	8-20
8.27	Battery Service .....	8-20
8.29	Emergency Oxygen System .....	8-20
8.31	Pressurization System .....	8-20
8.33	Lubrication .....	8-22
8.35	Cleaning .....	8-22
8.36	Cleaning and Maintenance of Relief Tube System .....	8-27



**THIS PAGE INTENTIONALLY LEFT BLANK**

## SECTION 8

## AIRPLANE HANDLING, SERVICING, AND MAINTENANCE

## 8.1 GENERAL

This section provides guidelines relating to the handling, servicing, and maintenance of the Meridian. For complete maintenance instructions, refer to the PA-46-500TP Maintenance Manual.

## WARNING

Inspection, maintenance and parts requirements for all non-PIPER approved STC installations are not included in this handbook. When a non-PIPER approved STC installation is incorporated on the airplane, those portions of the airplane affected by the installation must be inspected in accordance with the inspection program published by the owner of the STC. Since non PIPER approved STC installations may change systems interface, operating characteristics and component loads or stresses on adjacent structures, PIPER provided inspection criteria may not be valid for airplanes with non-PIPER approved STC installations.

## WARNING

Modifications must be approved in writing by PIPER prior to installation. Any and all other installations, whatsoever, of any kind will void this warranty in it's entirety.

## 8.1 GENERAL (Continued)

### WARNING

Use only genuine PIPER parts or PIPER approved parts obtained from PIPER approved sources, in connection with the maintenance and repair of PIPER airplanes.

Genuine PIPER parts are produced and inspected under rigorous procedures to insure airworthiness and suitability for use in PIPER airplane applications. Parts purchased from sources other than PIPER, even though identical in appearance, may not have had the required tests and inspections performed, may be different in fabrication techniques and materials, and may be dangerous when installed in an airplane.

Additionally, reworked or salvaged parts or those parts obtained from non-PIPER approved sources, may have service histories which are unknown or cannot be authenticated, may have been subjected to unacceptable stresses or temperatures or may have other hidden damage not discernible through routine visual or nondestructive testing. This may render the part, component or structural assembly, even though originally manufactured by PIPER, unsuitable and unsafe for airplane use.

PIPER expressly disclaims any responsibility for malfunctions, failures, damage or injury caused by use of non-PIPER approved parts.

## 8.1 GENERAL (Continued)

Every owner should stay in close contact with an authorized Piper Service Center or Piper's Customer Services Department to obtain the latest information pertaining to their airplane, and to avail themselves of Piper's support systems.

Piper takes a continuing interest in having owners get the most efficient use from their airplane and keeping it in the best mechanical condition. Consequently, Piper, from time to time, issues service releases including Service Bulletins, Service Letters, Service Spares Letters, and others relating to the airplane.

Piper Service Bulletins are of special importance and Piper considers compliance mandatory. These are sent directly to the latest FAA-registered owners in the United States (U.S.) and Piper Service Centers worldwide. Depending on the nature of the release, material and labor allowances may apply. This information is provided to all authorized Piper Service Centers.

Service Letters deal with product improvements and servicing techniques pertaining to the airplane. They are sent to Piper Service Centers and, if necessary, to the latest FAA-registered owners in the U.S. Owners should give careful attention to Service Letter information.

Service Spares Letters offer improved parts, kits, and optional equipment which were not available originally, and which may be of interest to the owner.

Piper offers a subscription service for Service Bulletins, Service Letters, and Service Spares Letters. This service is available to interested persons such as owners, pilots, and mechanics at a nominal fee, and may be obtained through an authorized Piper Service Center or Piper's Customer Services Department.

Maintenance manuals, parts catalogs, and revisions to both, are available from Piper Service Centers or Piper's Customer Services Department.

Any correspondence regarding the airplane should include the airplane model and serial number to ensure proper response.

### 8.3 AIRPLANE INSPECTION PERIODS

#### WARNING

All inspection intervals, replacement time limits, overhaul time limits, the method of inspection, life limits, cycle limits, etc., recommended by PIPER are solely based on the use of new, remanufactured or overhauled PIPER approved parts. If parts are designed, manufactured, remanufactured, overhauled and/or approved by entities other than PIPER, then the data in PIPER'S maintenance/service manuals and parts catalogs are no longer applicable and the purchaser is warned not to rely on such data for non-PIPER parts. All inspection intervals, replacement time limits, overhaul time limits, the method of inspection, life limits, cycle limits, etc., for such non-PIPER parts must be obtained from the manufacturer and/or seller of such non-PIPER parts.

Piper has developed inspection items and required inspection intervals for the PA-46-500TP. The PA-46-500TP Progressive Inspection Manual contains appropriate forms, and all inspection procedures should be complied with by a properly trained, knowledgeable, and qualified mechanic at an authorized Piper Service Center or a reputable repair shop. Piper cannot accept responsibility for the continued airworthiness of any aircraft not maintained to these standards, and/or not brought into compliance with applicable Service Bulletins issued by Piper, instructions issued by the engine, propeller, or accessory manufacturers, or Airworthiness Directives issued by the FAA.

In addition, but in conjunction with the above, the FAA requires periodic inspections on all aircraft to keep the Airworthiness Certificate in effect. The owner is responsible for assuring compliance with these inspection requirements and for maintaining proper documentation in logbooks and/or maintenance records.

## 8.5 PREVENTIVE MAINTENANCE

The holder of a pilot certificate issued under Federal Aviation Regulations (FAR) Part 61 may perform certain preventive maintenance as defined in the FARs. This maintenance may be performed only on an aircraft which the pilot owns and operates, and which is not used in air carrier or air taxi/commercial operations service.

All other aircraft maintenance must be accomplished by a person or facility appropriately certificated by the Federal Aviation Administration (FAA) to perform that work.

Anytime maintenance is accomplished, an entry must be made in the appropriate aircraft maintenance records. The entry shall include:

- (a) The date the work was accomplished.
- (b) Description of the work.
- (c) Number of hours on the aircraft.
- (d) The certificate number of pilot performing the work.
- (e) Signature of the individual doing the work.

## 8.7 AIRPLANE ALTERATIONS

If the owner desires to have his aircraft modified, he must obtain FAA approval for the alteration. Major alterations accomplished in accordance with Advisory Circular 43.13-2, when performed by an A & P mechanic, may be approved by the local FAA office. Major alterations to the basic airframe or systems not covered by AC 43.13-2 may require a Supplemental Type Certificate.

## 8.8 AIRPLANE FILE

The owner or pilot is required to ascertain that the following aircraft papers are in order and in the aircraft.

- (a) To be displayed in the aircraft at all times:
  - (1) Aircraft Airworthiness Certificate Form FAA-8100-2.
  - (2) Aircraft Registration Certificate Form FAA-8050-3.
  - (3) Aircraft Radio Station License if transmitters are installed.
- (b) To be carried in the aircraft at all times:
  - (1) Pilot's Operating Handbook and FAA approved Airplane Flight Manual.
  - (2) Weight and Balance data plus a copy of the latest Repair and Alteration FAA Form -337, if applicable.
  - (3) Aircraft equipment list.

Although the aircraft and engine logbooks are not required to be in the aircraft, they should be made available upon request. Logbooks should be complete and up to date. Good records will reduce maintenance cost by giving the mechanic information about what has or has not been accomplished.

## 8.9 GROUND HANDLING

### (a) Towing

The airplane may be moved on the ground by power equipment that will not damage or excessively strain the nose gear steering assembly.

#### CAUTION

When towing with power equipment, do not turn the nose gear beyond its steering limit in either direction, as this will result in damage to the nose gear and steering mechanism.

#### CAUTION

Do not tow the airplane when the controls are locked.

 
In the event towing lines are necessary, ropes should be attached to both main gear struts as high up on the tubes as possible. Lines should be long enough to clear the nose and/or tail by not less than fifteen feet, and a qualified person should ride in the pilot's seat to maintain control by use of the brakes.

**8.9 GROUND HANDLING (Continued)****(b) Taxiing****CAUTION**

Do not taxi into engine exhaust area. Do not taxi with propeller doors open.

Before attempting to taxi the airplane, ground personnel should be instructed and approved by a qualified person authorized by the owner. Engine starting and shut-down procedures as well as taxi techniques should be covered. When it is ascertained that the propeller blast and taxi areas are clear, power should be applied to start the taxi roll, and the following checks should be performed:

- (1) Taxi a few feet forward and apply the brakes to determine their effectiveness.
- (2) Propeller thrust may be modulated from full forward to full reverse by selection of the reversing range. A lock-out feature allows reverse pitch to function only during ground operations.
- (3) While taxiing, make slight turns to ascertain the effectiveness of the steering.
- (4) Observe wing clearance when taxiing near buildings or other stationary objects. If possible, station an observer outside the airplane.
- (5) When taxiing over uneven ground, avoid holes and ruts.
- (6) Do not operate the engine at high rpm when running up or taxiing over ground containing loose stones, gravel, or any loose material that may cause damage to the propeller blades.
- (7) When the airplane is stopped on the taxiway or runway and brake freeze-up occurs, actuate the brakes several times using maximum pressure. To reduce the possibility of brake freeze-up during taxi operation in severe weather conditions, one or two taxi slow downs (from 25 to 5 knots) may be made using light brake pressure, which will assist moisture evaporation within the brake.
- (8) Minimize ground operation in Beta/Reverse and monitor engine oil temperature.



## 8.9 GROUND HANDLING (Continued)

### (c) Parking

When parking the airplane, be sure that it is sufficiently protected from adverse weather conditions and that it presents no danger to other aircraft. When parking the airplane for any length of time or overnight, it is suggested that it be moored securely.

- (1) To park the airplane, head it into the wind if possible.
- (2) The parking brake knob is located just below the left control column. To set the parking brake, first depress and hold the toe brakes and then pull out on the parking brake knob. To release the parking brake, first depress the brake pedals and then push in on the parking brake knob.

#### CAUTION

Caution should be taken when setting brakes that are over-treated or during cold weather when accumulated moisture may freeze a brake.

- (3) Aileron and elevator controls should be secured with the front seat belt and chocks should be used to properly block the wheels.

### (d) Mooring

The airplane should be moored for immovability, security and protection. The following procedures should be used for the proper mooring of the airplane:

- (1) Head the airplane into the wind if possible.
- (2) Retract the flaps.
- (3) Immobilize the ailerons and elevator by looping the seat belt through the control wheel and pulling it snug.
- (4) Place chocks both fore and aft of the main wheels.

## 8.9 GROUND HANDLING (Continued)

### (d) Mooring (continued)

- (5) Secure tiedown ropes to main landing gear and tail tiedown at approximately 45 degree angles to the ground. When using rope of non-synthetic material, leave sufficient slack to avoid damage to the airplane should the ropes contract.

#### CAUTION

Do not use tiedown ropes to tie down the airplane to the ground. Use only approved tiedown devices.

#### NOTE

Additional preparations for high winds include using tiedown ropes from the nose landing gear and securing the rudder.

- (6) Install pitot head covers if available. Be sure to remove the pitot head covers before flight.
- (7) The cabin door should be locked when the airplane is unattended.
- (8) For overnight or in blowing snow or dust, install engine inlet covers and dust covers on the air inlet cooling duct on top of the cowling and on the exhaust stacks. Attach propeller restrainers to prevent windmilling.


## 8.13 BRAKE SERVICE

The brake system is filled with MIL-H-5606 (petroleum base) hydraulic fluid. The fluid level should be checked periodically (at least every 90 days) or at every 100 hour inspection, and replenished when necessary. The brake fluid reservoir is located on the left side of the firewall. If the entire system must be refilled, fill with fluid under pressure from the brake end of the system. This will eliminate air from the system.

No adjustment of the brake clearances is necessary. If, after extended service, brake blocks become excessively worn they should be replaced with new segments.



1. DISC BRAKE ASSEMBLY
2. BRAKE FLUID RESERVOIR
3. PARKING BRAKE CONTROL
4. PARKING BRAKE VALVE
5. BRAKE LINES
6. BRAKE CYLINDER

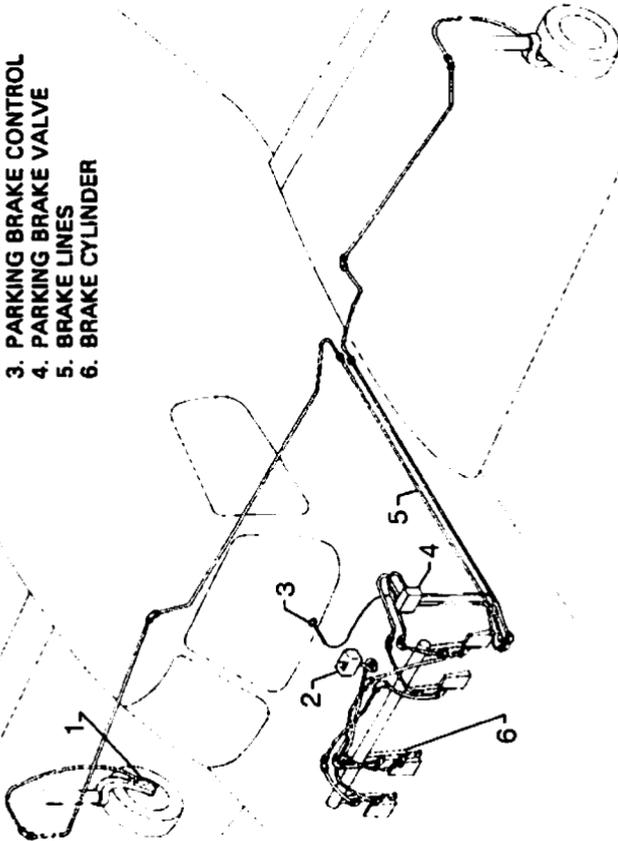

**BRAKE SYSTEM**

Figure 8-1

## 8.15 HYDRAULIC SYSTEM SERVICE

The hydraulic system reservoir is an integral part of the electric hydraulic pump assembly. It is located aft of the aft cabin baggage compartment and is accessible through the baggage compartment aft closeout panel. Fill the reservoir with MIL-H-5606 hydraulic fluid. The fluid level should be checked periodically (at least every 90 days) or at every 100 hour inspection, and replenished when necessary. With the landing gear down and the system up to pressure, fill to the FULL line on the sight gauge.

## 8.17 LANDING GEAR SERVICE

The main landing gear uses 6.00 x 6 wheels with 6.00 x 6, eight-ply rating tires and tubes.

On aircraft with serial numbers 4697001 through 4697125 that have not complied with Piper Service Bulletin 1106, the nose wheel uses a 5.00 x 5 wheel with a 5.00 x 5 six-ply rating, type III tire and tube. On aircraft with serial numbers 4697001 through 4697125 that have complied with Piper Service Bulletin 1106, and aircraft with serial numbers 4697126 and up, the nose wheel uses a 5.00 x 5 wheel with a 5.00 x 5 eight-ply rating, type III tire and tube. (Refer to paragraph 8.25.)

Wheels are removed by taking off the hub cap, cotter pin, axle nut, and the two bolts holding the brake segment in place. Mark tire and wheel for reinstallation; then dismount by deflating the tire, removing the three through-bolts from the wheel and separating the wheel halves.

Landing gear oleos should be serviced according to the instructions on the units. The main oleos should be extended under normal static load until 3.14 +/- 0.25 inches of oleo piston tube is exposed, and the nose gear should show 2.7 +/- 0.25 inches. To add air to the oleo struts, attach a strut pump to the valve assembly near the top of the oleo strut housing and pump the oleo to the desired position. To add oil, jack the aircraft, release the air pressure in the strut, remove the valve core and add oil through this opening with the strut extended. After the strut is full, compress it slowly and fully to allow excess air and oil to escape. With the strut still compressed reinsert the valve core and pump up the strut as above.

### 8.17 LANDING GEAR SERVICE (Continued)

In jacking the aircraft for landing gear or other service, two hydraulic jacks and a tail stand should be used. At least 400 pounds of ballast should be placed on the base of the tail stand before the airplane is jacked up. The hydraulic jacks should be placed under the jack points on the bottom of the wing and the airplane jacked up until the tail skid is at the right height to attach the tail stand. After the tail stand is attached and the ballast added, jacking may be continued until the airplane is at the height desired.

The steering rods from the rudder pedals to the transverse bellcrank in the nose wheel tunnel are factory adjusted and should be readjusted only in accordance with the applicable rigging specification. Nose wheel alignment is accomplished by adjusting the rod end(s) on the steering bungee assembly in such a way that the nose wheel is in line with the fore and aft axis of the plane when the rudder pedals are centered. Alignment of the nose wheel can be checked by pushing the airplane back and forth with the rudder two degrees to the right to determine that the plane follows a straight line. The turning arc of the nose wheel is  $30^{\circ} \pm 1^{\circ}$  in either direction and is limited by stops at the trunnion forging or the forward steering contact arm mounted on the engine mount.

#### NOTE

The rudder is set to neutral with the rudder pedals neutralized and the nose wheel centered.

### 8.19 PROPELLER SERVICE

The spinner and backing plate should be cleaned and inspected for cracks frequently. Before each flight the propeller should be inspected for nicks, scratches, and corrosion. Significant damage must be repaired by a qualified mechanic prior to flight. Nicks or scratches cause an area of increased stress which can lead to serious cracks or the loss of a propeller tip. The back face of the blades should be painted when necessary with flat black paint to retard glare. To prevent corrosion, the surface should be cleaned and waxed periodically.

## 8.21 OIL REQUIREMENTS

Oil conforming to Pratt & Whitney Canada Service Bulletin 3001 and all revisions or supplements thereto, must be used. The oils listed below comply with the engine manufacturers specification PWA521 and have a viscosity Type II rating. These oils are fully approved for use in Pratt & Whitney Canada, Inc. commercially operated engines. When adding oil, service the engine with the type and brand which is currently being used in the engine. Refer to the airplane and engine maintenance records for this information. Should oils of different viscosities or brands be inadvertently mixed, the oil system servicing instructions in the Pratt & Whitney Maintenance Manual, p/n 3013242, shall be carried out.

Exxon Turbo Oil 2380  
 Aero Shell Turbine Oil 500  
 Aero Shell Turbine Oil 560 (Third generation lubricant)  
 Royco Turbine Oil 500  
 Royco Turbine Oil 560 (Third generation lubricant)  
 Mobil Jet Oil II  
 Mobil Jet Oil 254 (Third generation lubricant)  
 Castrol 5000  
 Turbonycoil 525-2A

### CAUTION

Do not use fuel tank expansion oils.

When performing maintenance, always handle oils and lubricants in the "Proper manner" but avoid formulation use. For advice on the correct maintenance procedures, recommendations, a suitable storage method, or a change when an oil has become heavily oxidized, for additional information on the use of these oils, contact the OEM or the appropriate manufacturer's personnel and service guidelines.

## 8.21 OIL REQUIREMENTS (Continued)

### TOTAL OIL CAPACITY

12 U.S. quarts (including oil in filter, cooler and hoses)

### DRAIN AND REFILL QUANTITY

Approximately 9.2 U.S. quarts

### OIL QUANTITY OPERATING RANGE

#### NOTE

Oil quantity operating range may be verified either by the dipstick method or by the visual sight glass method. Either method is acceptable for oil quantity preflight operations.

#### Dipstick Method

Fill to within 1½ quarts of MAX HOT or MAX COLD (as appropriate) on dipstick. Quart markings indicate U.S. quarts low if oil is hot. For example, a dipstick reading of 3 indicates the system is within 2 quarts of MAX, if the oil is cold, and within 3 quarts of MAX if the oil hot. It is recommended the oil level be checked either within 10 minutes after engine shutdown while the oil is hot (MAX HOT marking) or prior to the first flight of the day while the oil is cold (MAX COLD marking). If more than 10 minutes has elapsed since engine shutdown, and engine oil is still warm, perform an engine dry motoring run (Section 4.15) before checking oil level.

#### WARNING

Ensure oil dipstick cap is securely latched down. Operating the engine with less than the recommended oil level and with the dipstick cap unlatched will result in excessive oil loss and eventual engine stoppage.

**8.21 OIL REQUIREMENTS (Continued)****OIL QUANTITY OPERATING RANGE (continued)****Sight Glass Method**

Engine oil quantity may be determined by using the visual sight glass located on the aft, left corner of the engine. Oil quantity (whether hot or cold) indicated in the green area of the sight glass is adequate for flight operations.

**OIL DRAIN PERIOD**

Pratt & Whitney Canada experience, over an extended period of time, has indicated that regular oil changes are no longer necessary for the PT6A-42 engine. However, operators should be aware of the danger of oil contamination from extraneous matter such as hydraulic fluid, sand, etc. which would require the oil system to be drained, flushed and replenished with new oil of an approved brand.

## 8.23 FUEL SYSTEM

### (a) Servicing Fuel System

At every 100 hour inspection or after an extended downtime, the fuel filter strainer must be cleaned. The fuel filter strainer is located under the aft nose section on the left side.

### (b) Fuel Requirements (Jet A, Jet A-1)

#### NOTE

For approved additives, refer to Pratt & Whitney Service Bulletin 3044.

The operation of the aircraft is approved only with an anti-icing additive in the fuel. If pre-blended fuel is not used, then an anti-icing additive must be added to the fuel when refueling. The anti-icing additive must meet the specification MIL-I-27686, must be uniformly blended with the fuel while refueling, and must not exceed 0.15% by volume. *One and one half liquid ounces per ten gallons of fuel would fall within this range.* A blender supplied by the additive manufacturer should be used. Except for the information contained in this section, the manufacturer's mixing or blending instructions should be carefully followed.

#### CAUTION

Assure that the additive is directed into the flowing fuel stream. The additive flow should start after and stop before the fuel flow. Do not permit the concentrated additive to come in contact with the aircraft painted surfaces or the interior surfaces of the fuel tanks.

Some fuels have anti-icing additives pre-blended in the fuel at the refinery, so no further blending should be performed.

Fuel additive can not be used as a substitute for preflight draining of the fuel system drains.

**8.23 FUEL SYSTEM (Continued)****(c) Filling Fuel Tanks****WARNING**

Do not operate any avionics or aircraft electrical equipment during refueling. Do not allow open flame or smoking in the vicinity of the airplane while refueling.

During all refueling operations, fire fighting equipment must be available. Two ground wires from different points on the airplane to separate approved grounding stakes shall be used.

Observe all safety precautions required when handling fuel. Fill the fuel tanks through the filler located on the forward slope of the wing. Each wing holds 570 pounds (85 U.S gallons) of usable fuel. When using less than the standard 570 pounds capacity, fuel should be distributed equally between each side.

**CAUTION**

Fuel imbalance must not exceed 17 pounds per tank.

**NOTE**

Aircraft should be refueled in a wing level condition. At times this will require alternate filling of left and right tanks until the full condition is reached.

### 8.23 FUEL SYSTEM (Continued)


#### (d) Draining Fuel Strainer, Sumps and Lines

The fuel tank sumps and filter should be drained before the first flight of the day and after refueling. The fuel sump is in the lowest portion of each (left and right) header tank, located at the root of each wing, at the lowest point in the system. Each tank drain is flush mounted at the lower left and right portion of the engine cowling. The fuel filter drain is located on the lower left side of the cowling a few inches forward of the left sump drain. Sumps and filter should be drained until sufficient fuel has flowed to ensure the removal of any contaminants. (The first fuel sample cup full will only drain fuel from the lines; more than one cup sampling must be taken to assure fuel sample is from the fuel tanks). When draining filter and sumps, use the end of the rod to push in the valve, catching fuel in the cup. (Refer to Figure 8-3) Always inspect fuel for contaminants, water and fuel grade (color). Assure that valves have sealed after draining.

Also incorporated in the fuel system is an EPA can. This can, located in the engine compartment, collects residual fuel from the manifolds during engine shutdown and needs to be emptied after or before each flight. The drain for the EPA can is located approximately 17 inches forward of the right fuel sump drain.

#### NOTE

Sump drains will lock open if valve is pushed in and turned. Continue turning to release lock.

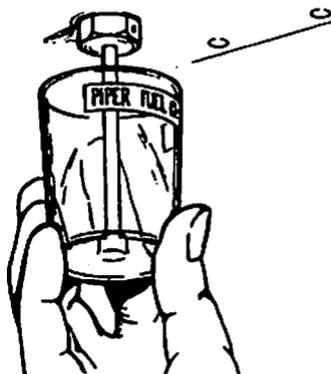

FUEL TANK DRAIN

Figure 8-3

**8.23 FUEL SYSTEM (Continued)****(c) Emptying Fuel System (See Figure 8-4.)****CAUTION**

When draining any amount of fuel, care should be taken to prevent fuel from falling into the fuel starting the engine.

**CAUTION**

When the fuel system is completely drained and fuel is replenished, it will be necessary to purge the fuel system and the fuel control on the Pratt & Whitney Turbine Main Engines. Manual or boost pump operation is in the fuel supply lines.

For draining a large volume of fuel, a quick evacuation outlet is incorporated into the fuel system and is located adjacent to the fuel filter. Fuel can be drained from this outlet by gravity or by using the airplane's boost pumps. Using the airplane's boost pumps provides a means of draining the left and right sides separately.

Draining fuel using gravity is accomplished as follows:

- (1) Remove the filter access door.
- (2) Close the firewall shutoff valve.
- (3) Remove the cap and connect a 1/2 inch hose to the quick evacuation outlet.
- (4) Place the other end of the hose in a suitable container. (Be sure the container is large enough to hold the amount of fuel to be drained.)
- (5) Open the firewall shutoff valve and allow the fuel to flow into the container.
- (6) To stop the fuel flow, close the firewall shutoff valve.
- (7) Install the cap on the quick evacuation outlet, and safety wire.

### 8.23 FUEL SYSTEM (Continued)


#### (e) Emptying Fuel System (continued)

Draining fuel using the airplane's boost pumps is accomplished as follows:

- (1) Remove the filter access door.
- (2) Close the firewall shutoff valve.
- (3) Remove the cap and connect a 1/2 inch hose to the quick evacuation outlet.
- (4) Place the other end of the hose in a suitable container. (Be sure the container is large enough to hold the amount of fuel to be drained.)
- (5) Open the firewall shutoff valve.
- (6) Turn the boost pump switch to MAN. (To stop fuel flow, move the switch to OFF and close the firewall shutoff valve.)
- (7) If fuel is to be drained from only one side, follow the procedure above except pull the circuit breaker for the pump that is not required.
- (8) Install the cap on the quick evacuation outlet, and safety wire.

#### NOTE

The boost pumps are disabled at approximately 2.5 gallons per side. Most of the remaining fuel can be drained by gravity from the quick evacuation outlet, but the final small amount must be drained from the sump drains.

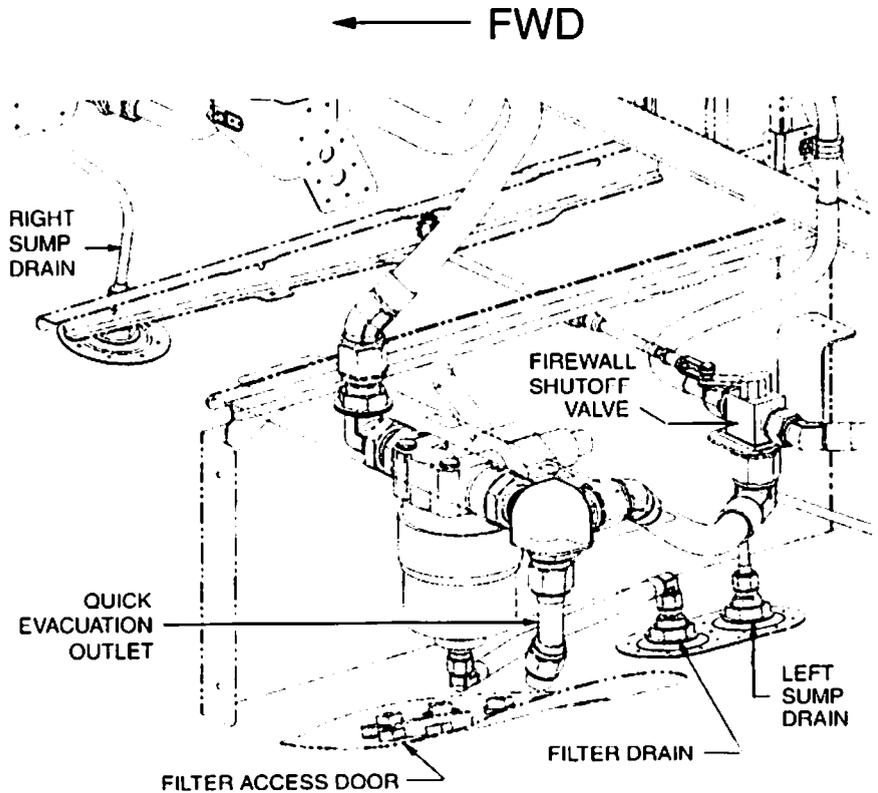

**FUEL QUICK EVACUATION SYSTEM**

Figure 8-4

## 8.25 TIRE INFLATION

For maximum service, keep tires inflated to the proper pressure: nose tire should be 70 psi or 50 psi, depending on type of tire installed (see placard on nose wheel strut to verify correct psi) and main tires should be 55 psi. All wheels and tires are balanced before original installation, and the relationship of tire, tube, and wheel should be maintained upon reinstallation. Unbalanced wheels can cause extreme vibration in the landing gear; therefore, in the installation of new components, it may be necessary to rebalance the wheels with the tires mounted. When checking tire pressure, examine the tires for wear, cuts, bruises, and slippage.

## 8.27 BATTERY SERVICE

Access to the 24-volt battery is through the battery access panel located on the aft right side of the engine compartment. Remove the access panel by removing the screws securing the panel to the fuselage. Release the retainers (one on each side near the bottom of the battery) by loosening the top screw on each retainer enough to pivot the retainer out of the way and allow the battery to be pulled out.

The battery is maintenance free and requires no maintenance of the liquid level and recombines the gases formed on charge within the battery to reform water. The battery may be used in any attitude without danger of leakage or spilling of electrolyte.

Inspect the battery for general condition (at least every 30 days). If evidence of leakage is present, the battery must be replaced.

## 8.29 EMERGENCY OXYGEN SYSTEM

The emergency oxygen system must be serviced if used. The canister generators must be replaced with new units to restore the emergency system to a useable condition. The pilot's quick-donning oxygen mask system also must be serviced if used or if it shows indications of low pressure. Refer to the PA-46-500TP Maintenance Manual for oxygen system maintenance and inspection requirements.

## 8.31 PRESSURIZATION SYSTEM

The system should be given an operational check before each flight. Should the operational check show any malfunction of the pressurization system, refer to the PA-46-500TP Maintenance Manual.

**THIS PAGE INTENTIONALLY LEFT BLANK**

### 8.33 LUBRICATION

For lubricating instructions, a chart showing lubrication points and types of lubricants to be used, and lubrication methods, refer to the PA-46-500TP Maintenance Manual.

### 8.35 CLEANING

#### (a) Cleaning Engine Compartment

- (1) Place a large pan under the engine to catch waste.
- (2) See engine maintenance manual for engine external cleaning requirements.
- (3) Lubricate the controls, bearing surfaces, etc., in accordance with the Lubrication Chart in the PA-46-500TP Maintenance Manual.
- (4) Assure that all engine exhaust deposits and stains are removed frequently from bottom of aircraft around exhaust outlets. *Accumulation of exhaust deposits left even over short periods of time will cause corrosion.*

**8.35 CLEANING (Continued)****(b) Cleaning Landing Gear**

Before cleaning the landing gear, place a plastic cover or similar material over the wheel and brake assembly.

**CAUTION**

Do not use flammable solvents.

- (1) Place a pan under the gear to catch waste.
- (2) Spray or brush the gear area with solvent or a mixture of solvent and degreaser, as desired. Where heavy grease and dirt deposits have collected, it may be necessary to brush areas that were sprayed, in order to clean them.
- (3) Allow the solvent to remain on the gear from five to ten minutes. Then rinse the gear with additional solvent and allow to dry.
- (4) Remove the cover from the wheel and remove the catch pan.
- (5) Lubricate the gear in accordance with the Lubrication Chart.

**(c) Cleaning Exterior Surfaces**

The airplane should be washed with a mild soap and water. Harsh abrasives or alkaline soaps or detergents could make scratches on painted or plastic surfaces or could cause corrosion of metal. Cover areas where cleaning solutions could cause damage. To wash the airplane, use the following procedure:

**CAUTION**

Do not direct any stream of water or cleaning solvents or detergents at the pitot static probe or the airspeed probe or any other probe using a hand gun.

- (1) Flush away loose dirt with water.
- (2) Apply cleaning solution with a soft cloth, a sponge or a soft bristle brush.
- (3) To remove exhaust stains, allow the solution to remain on the surface longer.
- (4) To remove stubborn oil and grease, use a cloth dampened with naphtha.
- (5) Rinse all surfaces thoroughly.
- (6) Any good automotive wax may be used to preserve painted surfaces. Soft cleaning cloths or a chamois should be used to prevent scratches when cleaning or polishing. A heavier coating of wax on the leading surfaces will reduce the abrasion problems in these areas.

### 8.35 CLEANING (Continued)

#### (d) Cleaning Windshield and Windows

##### CAUTION

Use only mild soap and water when cleaning the heated windshield. Use of ANY other cleaning agent or material may cause discoloration or damage to windshield coatings.

- (1) Remove dirt, mud and other loose particles from exterior surfaces with clean water.
- (2) Wash with mild soap and warm water or with aircraft plastic cleaner. Use a soft cloth or sponge in a straight back and forth motion. Do not rub harshly.
- (3) Remove oil and grease with a cloth moistened with kerosene.

##### CAUTION

Do not use gasoline, alcohol, benzene, carbon tetrachloride, thinner, turpentine, or window cleaning sprays.

- (4) After cleaning plastic surfaces, apply a thin coat of hard polishing wax. Rub lightly with a soft cloth. Do not use a circular motion.
- (5) A minor scratch or mar in plastic can be removed by rubbing out the scratch with jeweler's rouge. Smooth both sides and apply wax. Deep scratches may lead to failure when pressurized.
- (6) If a deep scratch or crack is found in any of the windshields or windows, do not pressurize cabin until serviced at authorized repair station.

#### (e) Cleaning Headliner, Side Panels and Seats

- (1) For normal soiling and smudges, simply use the dry cleaning pad provided. This pad contains an exclusive grit-free powder with unusual power to absorb dirt.

Squeeze and twist the pad so the powder sifts through the meshes and adheres to the cloth. Then rub the soiled part in any direction, as hard as necessary to clean.

Even though the pad eventually becomes soiled, this soil will not transfer back to the headliner.

**8.35 CLEANING (Continued)**

- (2) For simple stains (e.g. coffee, cola) clean headliner with a sponge and a common household suds detergent (e.g. Tide). Dirty grease stains should be first spot cleaned with a lighter fluid containing Naphtha to remove the solvent soluble matter. Any stain residue should then be shampooed with a household upholstery cleaner (e.g. Carbona upholstery and rug shampoo).

With proper care, your Meridian headliner will provide years of excellent appearance and durability.

**LEATHER**

Leather should be cleaned with saddle soap or mild hand soap and water.

- (3) Leather should be cleaned with saddle soap or a mild hand soap and water.

**(f) Cleaning Carpets**

To clean carpets, first remove loose dirt with a whisk broom or vacuum. For soiled spots and stubborn stains use a nonflammable dry cleaning fluid. Floor carpets may be cleaned like any household carpet.

**(g) Cleaning Oxygen Equipment**

- (1) Clean the mask assemblies with a suitable oil-free disinfectant.
- (2) Wipe dirt and foreign particles from the unit with a clean, dry, lint-free cloth.

**(h) Cleaning Surface Deicing Equipment**

The deicers should be cleaned when the aircraft is washed using a mild soap and water solution.

In cold weather, wash the boots with the airplane inside a warm hangar if possible. If the cleaning is to be done outdoors, heat the soap and water solution before taking it out to the

### 8.35 CLEANING (Continued)

airplane. If difficulty is encountered with the water freezing on boots, direct a blast of warm air along the region being cleaned using a portable ground heater.

Petroleum products are injurious to rubber and their use as cleaning agents should be avoided. Limited use of Mineral Spirits or non-leaded (NOT LOW LEAD) gasoline is not harmful in cleaning the deicers, if the cloth is dampened (not dripping) with solvent, and a dry cloth is used to wipe the deicer before the solvent has time to soak into the rubber.

With the deicer boots properly cleaned, a coating of Agemaster No. 1 should be applied to the boots, as described in the PA-46-500TP Maintenance Manual. This treatment helps protect the neoprene deice boots from ozone attack, aging and weathering.

Icex may be applied to all of the boots if icing conditions are anticipated. Any boots treated with Agemaster should be allowed to dry before application of Icex. For specific instructions refer to the PA-46-500TP Maintenance Manual.

**8.36 CLEANING AND MAINTENANCE OF RELIEF TUBE SYSTEM**

When the aircraft is equipped with a relief tube system, the corrosive effects of urine or other liquids poured through the system are extreme and require much attention to the cleanliness of this system both inside and outside of the aircraft. From the interior standpoint, the funnel tube assembly, rubber hose and surrounding sheet metal should be cleaned at termination of flight when the system has been used. Likewise, attention to the exterior of the aircraft is equally as important and must be cleaned as described below.

**NOTE**

The corrosive affects of urine on painted and unpainted surfaces cannot be understated. Corrosion may appear in surrounding areas if allowed to go uncleaned for one day.

**(a) Interior**

After each use of the relief tube, the area surrounding the relief tube should be examined for spillage and cleaned according to the cleaning procedures listed in paragraphs 8.35(e) and (f) above. Clean area inside the box and access door, funnel and tube using mild soap and water. After cleaning, assure that no soapy residue remains by flushing with clean water. Dry system thoroughly.

**CAUTION**

Do not use a solution of baking soda and water to clean the relief tube assembly. The solution will cause the rubber hose to become brittle and will cause the funnel to become discolored. Use only mild soap and water to clean the relief tube assembly.

Prepare to flush the relief tube assembly by placing a container underneath the relief tube outlet. Flush tube by pouring a solution of baking soda (10%) and water through the tube, flushing out the entire system. Flush again with at least 1/2 gallon of clear water. (Shop air, at low pressure, may be blown through the relief tube system to dry the system.)

**8.36 CLEANING AND MAINTENANCE OF RELIEF TUBE SYSTEM**  
**(Continued)**

**(b) Exterior**

Exterior bottom painted surfaces of the aircraft must be cleaned from the firewall to the tip of the tail including the bottom of the tail surfaces, at termination of each flight when the relief tube system has been used. Cleaning should occur in accordance with paragraph 8.35(c) with the following exception: After completion of washing, a solution of baking soda (10%) and water should be applied to the entire area and allowed to remain for a few minutes. The area then must be thoroughly rinsed with clean water. The area should be thoroughly dried and observed for paint chips and corrosion, with touch up as necessary.

 


TABLE OF CONTENTS

SECTION 9

SUPPLEMENTS

Paragraph/Supplement No.		Page No.
9.1	General .....	9-1
1	DVR 300i Digital Voice Recorder Clock .....(6 pages)	9-3
2	Garmin GNS 530 VHF Communication Transceiver/VOR/ILS Receiver/GPS Receiver .....(8 pages)	9-9
3	Garmin GTX 327 Transponder .....(10 pages)	9-17
4	S-TEC ADF-650 System.....(6 pages)	9-27
5	S-TEC DME-450 .....(4 pages)	9-33
6	Bendix/King RDR 2000 Vertical Profile Weather Radar System .....(10 pages)	9-37
7	Garmin GMA 340 Audio Panel .....(6 pages)	9-47
8	S-TEC System 550 Autopilot .....	9-53
9	B.F. Goodrich Skywatch Traffic Advisory System Model SKY497 .....(6 pages)	9-55
10	B.F. Goodrich Aerospace WX-500 Stormscope Series II Weather Mapping Sensor .....(4 pages)	9-61
11	Avidyne 5R-R-MFC Series FlightMax Flight Situation Display .....(8 pages)	9-65
12	Meridian Aircraft Flight Into Known Icing (FIKI) ..(28 pages)	9-73
13	S-TEC ADF-650D System .....(10 pages)	9-101
14	Bendix/King KMH 880 Multi-Hazard Awareness System .....	9-111
15	S-TEC MAGIC 1500 Autopilot .....	9-113



**THIS PAGE INTENTIONALLY LEFT BLANK**

**SECTION 9  
SUPPLEMENTS****9.1 GENERAL**

This section provides information in the form of supplements which are necessary for efficient operation of the airplane when it is equipped with one or more of the various optional systems and equipment not approved with the standard airplane.

 
All of the supplements provided in this section are FAA Approved and consecutively numbered as a permanent part of this handbook. The information contained in each supplement applies only when the related equipment is installed in the airplane.

**THIS PAGE INTENTIONALLY LEFT BLANK**

PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL  
SUPPLEMENT NO. 1  
FOR  
DVR 300i  
DIGITAL VOICE RECORDER CLOCK

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the DVR 300i Digital Voice Recorder Clock is installed per the Equipment List. The information contained herein supplements or supersedes the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH

D.O.A. NO. SO.-1

THE NEW PIPER AIRCRAFT, INC.

VERO BEACH, FLORIDA

DATE OF APPROVAL SEPTEMBER 27, 2000

### **SECTION 1 - GENERAL**

The Flightcom DVR300i digital voice recorder clock (see figure 1) is a time keeping/recorder device that incorporates the following features that can be utilized by the pilot.

- Local or Zulu Time Display
- Elapsed Time Display
- Pseudo Hobbs Meter Display
- Approach Timer
- Up to 5 Minutes of Digital Voice Storage
- Up to 32 Voice Checklist Items
- Non Volatile Speech Memory
- Periodic Vocal Reminders

The DVR Model 300i has indicator lights located on the Checklists and Functions buttons. Whenever these lights flash rapidly, it is a prompt that you may press the button to invoke a function. When the lights flash slowly, it means some function is being carried out.


### **SECTION 2 - LIMITATIONS**

No change.

### **SECTION 3 - EMERGENCY PROCEDURES**

No change.

**SECTION 4 - NORMAL PROCEDURES (see Figure 1)**

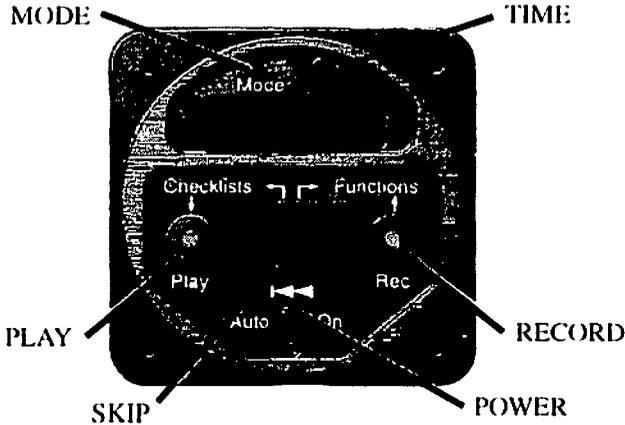

**DVR CLOCK FRONT PANEL**

Figure 1

**SETTING THE TIME**

To set local hours and minutes, make sure the Mode switch is in the far right position, displaying the time of day. Press and hold the Skip button, and while Skip is down, press the Time button. You will see local hours begin to flash.

Now press the Play or Record button to decrease or increase the local hours. When the correct hours is displayed, press Skip to go to the minutes setting. The Record and Play buttons can now be selected to change the minutes. When minutes are correct, press Skip to advance to Zulu hours setting.

**NOTE**

If Zulu hours is changed, the local time will have to be reset.

Selecting Skip one last time will return the clock to the normal time of day display and lock in the new time.

The clock can now be toggled between Local and Zulu time by selecting the Time button. Local time is always displayed in 12 hour format, while Zulu time is 24 hour format.

## **ELAPSED TIMER AND PSEUDO - HOBBS METER**

The DVR clock begins timing the flight as soon as the unit is turned on. To display elapsed time, switch the Mode switch to the center position. All elapsed times are displayed in "hours/tenths" format.

Selecting the Time button while the Mode switch is centered will toggle between elapsed flight time and cumulative Hobbs time. The DVR "Hobbs" meter is a timer which logs all time that the DVR has been on.

### **NOTE**

The elapsed timer is cleared every time the clock is turned off. To clear the Hobbs meter, you must reset the clock. This means all previous programming will be erased, and you'll need to reset the time etc. To reset the Hobbs meter, first turn the unit off, then press and hold down the Time, Play, Record and Skip buttons at the same time. Then turn the unit back on and reset the clock.

## **"CRON" COUNTUP TIMER**

Moving the Mode switch to the far left puts the DVR into chronological countup timer mode. This is the only mode which displays running seconds, necessary for FAR 91.205. This mode can be used for timing turns, approaches, etc. Pushing the Time button in "Chron" mode zeros the timer. The timer will roll over to :00 after one hour.

## **AUTOMATIC RECORDING AND PLAYBACK**

The DVR clock recorder uses a continuous loop which automatically captures all audio going into your headset. When incoming audio stops, so does the recorder. This way, communications are compressed for easy retrieval, and the oldest radio traffic is overwritten.

To replay radio traffic, simply press the Skip button. Each selection of the Skip button will "rewind" about 5 seconds and begin playback. If a live transmission comes in while you are listening to the DVR, playback audio is automatically mixed with live audio.

**AUTOMATIC RECORDING AND PLAYBACK (continued)**

The playback feature may be stopped at any time by pressing any button except Skip. Automatic recording resumes as soon as playback stops.

The DVR clock has an audio monitor feature. When audio is detected, the red LED on the Record button flickers. This indicates that audio is being properly detected and recorded.

**MANUAL RECORDING AND PLAYBACK**

Sometime during the flight you may want to record material which you don't want overwritten by cockpit conversation or other radio traffic (i.e. in-flight weather briefings, IFR clearances, or ground control taxi instructions).

The Record and Play buttons give an up to the minute of "digital notepad" recording and playback which is independent of the automatic recording area.

To record a message manually, press the Record button. To stop recording, press any button. The DVR will stop by itself if it runs out of speech memory.

To play back your message, simply press the Play button. The Skip button will skip back 5 - 10 seconds if you want to repeat part of this manual message. To stop playback, press any button except Skip.

**PERIODIC ALARM SYSTEM**

The DVR Model 300i has a built in alarm system which can play a reminder every few minutes. You can record a 5 second message which can be replayed in 5 to 90 minute intervals.

To set the periodic alarm interval, get into the DVR Functions mode by holding down Skip and pressing Record. Now press the Play or Record buttons to set the interval, in up or down 5 minute increments.

When you are finished, press Skip to get into periodic alarm message mode. The display will say "PA:rP", prompting you to record or play your periodic alarm message. Press Record to record your message, and begin speaking after you hear the beep.

**PERIODIC ALARM SYSTEM (continued)**

Press Play to hear the message you just recorded. You may record and replay the message as many times as you'd like until you are satisfied with it. Pressing Skip now will get back into normal time mode.

From now on, the message will sound twice at the interval which has been set. It can be turned off by getting back into functions mode and setting the interval time to zero.

**AUDIO CHECKLISTS**

You can record up to 32 checklist items with the DVR 300i. These have been partitioned into 4 groups of 8 items, which makes it easier to skip between checklists.

To get into checklist mode, hold down Skip and press the Play button. "CL1.1" is displayed meaning Checklist 1, item 1. An item can now be recorded by pressing the Record button, and play it back immediately by pressing Play.

Once a checklist item has been recorded it cannot be recorded over until it is deliberately erased. An item can be erased by holding down Record and then pressing Play. Once an item has been recorded you may advance to the next item by pressing Skip.

You may also skip to the next checklist by holding down Skip and pressing Play. It is also possible to "back up" to the first item of the current checklist by holding down Skip and pressing Record.

Exit checklist mode by pressing the Time button.

**SECTION 5 - PERFORMANCE**

No change.

**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the Pilot's Operating Handbook and Airplane Flight Manual.

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL  
SUPPLEMENT NO. 2  
FOR  
GARMIN GNS 530 VHF COMMUNICATION  
TRANSCEIVER/VOR/ILS RECEIVER/GPS RECEIVER**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Garmin GNS 530 VHF Communication Transceiver/VOR/ILS Receiver/Global Positioning System is installed per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH  
D.O.A. NO. SO- 1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: SEPTEMBER 27, 2000

## SECTION 1 - GENERAL

The GNS 530 System is a fully integrated, panel mounted instrument, which contains a VHF Communications Transceiver, a VOR/ILS Receiver, and a Global Positioning System (GPS) Navigation computer. The system consists of a GPS Antenna, GPS Receiver, VHF VOR/LOC/GS Antenna, VOR/ILS Receiver, VHF COMM Antenna and a VHF Communications Transceiver. The primary function of the VHF Communication portion of the equipment is to facilitate communication with Air Traffic Control. The primary function of the VOR/ILS Receiver portion of the equipment is to receive and demodulate VOR, Localizer, and Glide Slope signals. The primary function of the GPS portion of the system is to acquire signals from the GPS system satellites, recover orbital data, make range and Doppler measurements, and process this information in real-time to obtain the user's position, velocity, and time.

Provided the GARMIN GNS 530's GPS receiver is receiving adequate usable signals, it has been demonstrated capable of and has been shown to meet the accuracy specifications for:

- VFR/IFR enroute, terminal, and non-precision instrument approach (GPS, Loran-C, VOR, VOR-DME, TACAN, NDB, NDB-DME, RNAV) operation within the U.S. National Airspace System in accordance with AC 20-138.
- One of the approved sensors, for a single or dual GNS 530 installation, for North Atlantic Minimum Navigation Performance Specification (MNPS) Airspace in accordance with AC 91-49 and AC 120-33.
- The system meets RNP5 airspace (BRNAV) requirements of AC 90-96 and in accordance with AC 20-138, and JAA AMJ 20X2 Leaflet 2 Revision 1, provided it is receiving usable navigation information from the GPS receiver.

Navigation is accomplished using the WGS-84 (NAD-83) coordinate reference datum. Navigation data is based upon use of only the Global Positioning System (GPS) operated by the United States of America.

**SECTION 2 - LIMITATIONS**

- A. The GARMIN GNS 530 Pilot's Guide, p/n 190-00181-00, Rev. A, dated November 1999, or later appropriate revision, must be immediately available to the flight crew whenever navigation is predicated on the use of the system.
- B. The Garmin 500 Series Pilot's Guide Addendum, Display Interface for Traffic and Weather Data, must be immediately available to the flight crew if the B.F. Goodrich WX-500 Stormscope or the B.F. Goodrich SKYWATCH Traffic Advisory System (TAS) is installed.
- C. The GNS 530 must utilize the following or later FAA approved software versions:

Sub-System	Software Version
Main	2.00
GPS	2.00
Comm	1.22
VOR/LOC	1.25
G/S	2.00

The main software version is displayed on the GNS 530 self test page immediately after turn-on for 5 seconds. The remaining system software versions can be verified on the AUX group sub-page 2, "SOFTWARE/DATABASE VER".

- D. IFR enroute and terminal navigation predicated upon the GNS 530's GPS Receiver is prohibited unless the pilot verifies the currency of the data base or verifies each selected waypoint for accuracy by reference to current approved data.
- E. Instrument approach navigation predicated upon the GNS 530's GPS Receiver must be accomplished in accordance with approved instrument approach procedures that are retrieved from the GPS equipment data base. The GPS equipment data base must incorporate the current update cycle.
- F. Instrument approaches utilizing the GPS receiver must be conducted in the approach mode and Receiver Autonomous Integrity Monitoring (RAIM) must be available at the Final Approach Fix.

**SECTION 2 - LIMITATIONS (continued)**

2. Accomplishment of ILS, LOC, LOC-BC, LDA, SDF, MLS or any other type of approach not approved for GPS overlay with the GNS 530's GPS receiver is not authorized.
  3. Use of the GNS 530 VOR/ILS receiver to fly approaches not approved for GPS require VOR/ILS navigation data to be present on the external indicator.
  4. When an alternate airport is required by the applicable operating rules, it must be served by an approach based on other than GPS or Loran-C navigation, the aircraft must have the operational equipment capable of using that navigation aid, and the required navigation aid must be operational.
  5. VNAV information may be utilized for advisory information only. Use of VNAV information for Instrument Approach Procedures does not guarantee Step-Down Fix altitude protection, or arrival at approach minimums in normal position to land.
- F. If not previously defined, the following default settings must be made in the "SETUP 1" menu of the GNS 530 prior to operation (refer to Pilot's Guide for procedure if necessary):
1. dis. spd             $\frac{n}{m} \frac{k}{t}$  (sets navigation units to "nautical miles" and "knots")
  2. alt. vs .            ft fpm (sets altitude units to "feet" and "feet per minute")
  3. map datum.. WGS 84 (sets map datum to WGS-84, see not below)
  4. posn ...            deg-min (sets navigation grid units to decimal minutes)

**NOTE**

In some areas outside the United States, datums other than WGS-84 or NAD-83 may be used. If the GNS 530 is authorized for use by the appropriate Airworthiness authority, the required geodetic datum must be set in the GNS 530 prior to its use for navigation.

**SECTION 3 - EMERGENCY PROCEDURES****ABNORMAL PROCEDURES**

- A. If GARMIN GNS 530 navigation information is not available or invalid, utilize remaining operational navigation equipment as required.
- B. If "RAIM POSITION WARNING" message is displayed the system will flag and no longer provide GPS based navigational guidance. The crew should revert to the GNS 530 VOR/ILS receiver or an alternate means of navigation other than the GNS 530's GPS receiver.
- C. If "RAIM IS NOT AVAILABLE" message is displayed in the enroute, terminal, or initial approach phase of flight, continue to navigate using the GPS equipment or revert to an alternate means of navigation other than the GNS 530's GPS receiver appropriate to the route and phase of flight. When continuing to use GPS navigation, position must be verified every 15 minutes using the GNS 530's VOR/ILS receiver or another IFR-approved navigation system.
- D. If "RAIM IS NOT AVAILABLE" message is displayed while on the final approach segment, GPS based navigation will continue for up to 5 minutes with approach CDI sensitivity (0.3 nautical mile). After 5 minutes the system will flag and no longer provide course guidance with approach sensitivity. Missed approach course guidance may still be available with 1 nautical mile CDI sensitivity by executing the missed approach.
- E. In an in-flight emergency, depressing and holding the Comm transfer button for 2 seconds will select the emergency frequency of 121.500 Mhz into the "Active" frequency window.

## SECTION 4 - NORMAL PROCEDURES

### WARNING

Familiarity with the enroute operation of the GNS 530 does not constitute proficiency in approach operations. Do not attempt approach operations in IMC prior to attaining proficiency in the use of the GNS 530 approach features.

#### A. DETAILED OPERATING PROCEDURES

Normal operating procedures are described in the GARMIN GNS 530 Pilot's Guide, p/n 190-00181-00, Rev. A, dated November 1999, or later appropriate revision.

#### B. PILOT'S DISPLAY

The GNS 530 System data will appear on the Pilot's HSI. The source of data is either GPS or VLOC as annunciated on the display above the CDI key.

#### C. AUTOPILOT/FLIGHT DIRECTOR OPERATION

Coupling of the GNS 530 System steering information to the autopilot/flight director can be accomplished by engaging the autopilot/flight director in the NAV or APR mode.

When the autopilot/flight director system is using course information supplied by the GNS 530 System and the course pointer is not automatically driven to the desired track, the course pointer on the HSI must be manually set to the desired track (DTK) indicated by the GNS 530. For detailed autopilot/flight director operational instructions, refer to the FAA Approved Flight Manual Supplement for the autopilot/flight director.

#### D. CROSSFILL OPERATIONS

Crossfill capabilities exist between GNS 530 systems. Refer to the Garmin GNS 530 Pilot's Guide for detailed crossfill operating instructions.

**SECTION 4 - NORMAL PROCEDURES (continued)****E. AUTOMATIC LOCALIZER COURSE CAPTURE**

By default, the GNS 530 automatic localizer course capture feature is enabled. This feature provides a method for system navigation data present on the external indicators to be switched automatically from GPS guidance to localizer/glide slope guidance at the point of course intercept on a localizer at which GPS derived course deviation equals localizer derived course deviation. If an offset from the final approach course is being flown, it is possible that the automatic switch from GPS course guidance to localizer/glide slope course guidance will not occur. It is the pilot's responsibility to ensure correct system navigation data is present on the external indicator before continuing a localizer based approach beyond the final approach fix.

**SECTION 5 - PERFORMANCE**

No change.

**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the basic Pilot's Operating Handbook.

**SECTION 7 - DESCRIPTION AND OPERATION**

See GNS 530 Pilot's Guide for a complete description of the GNS 530 system.

**THIS PAGE INTENTIONALLY LEFT BLANK**

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 3  
FOR  
GARMIN GTX 327 TRANSPONDER**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Garmin GTX 327 Transponder is installed per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH  
D.O.A. NO. SO- 1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: SEPTEMBER 27, 2000

**SECTION 1 - GENERAL**

This supplement supplies information necessary for the operation of the airplane when the Garmin GTX 327 Transponder is installed in accordance with FAA approved Piper data.

**SECTION 2 - LIMITATIONS**

No change.

**SECTION 3 - EMERGENCY PROCEDURES**

To transmit an emergency signal:

- Mode Selection Key - ALT
- Code Selection - SELECT 7700

To transmit a signal representing loss of all communications:

- Mode Selection Key - ALT
- Code Selection - SELECT 7600

**SECTION 4 - NORMAL PROCEDURES****BEFORE TAKEOFF:**

- To transmit Mode C (Altitude Reporting) code in flight:
- Mode Selection Key - ALT
- Code Selector Keys - SELECT assigned code.

To transmit Mode A (Aircraft Identification) code in flight:

- Mode Selector Key - ON
- Code Selector Keys - SELECT assigned code.

**NOTE**

During normal operation with the ON mode selected, the reply indicator "R" flashes, indicating transponder replies to interrogations.

**NOTE**

Mode A reply codes are transmitted in ALT also; however, Mode C codes only are suppressed when the Function Selector ON key is selected.

**SECTION 5 - PERFORMANCE**

No change.

**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in section 6 of the Airplane Flight Manual.

## SECTION 7 - DESCRIPTION AND OPERATION



The GTX 327 transponder is powered on by pressing the **STBY**, **ALT** or **ON** keys, or by a remote avionics master switch (if applicable). After power on, a start-up page will be displayed while the unit performs a self test.

### Mode Selection Keys

**OFF** - Powers off the GTX 327.

**STBY** - Powers on the transponder in standby mode.

At power on the last active identification code will be selected. When in standby mode, the transponder will not reply to any interrogations.

**ON** - Powers on the transponder in Mode A. At power on the last active identification code will be selected. In this mode, the transponder replies to interrogations, as indicated by the Reply Symbol . Replies do not include altitude information.

**ALT** - Powers on the transponder in Mode A and Mode C. At power on the last active identification code will be selected. In ALT mode, the transponder replies to identification and altitude interrogations, as indicated by the Reply Symbol . Replies to altitude interrogations include the standard pressure altitude received from an external altitude source, which is not adjusted for barometric pressure. The ALT mode may be used in aircraft not equipped with the optional altitude encoder; however, the reply signal will not include altitude information.



### GTX 327 Configuration Mode

The GTX 327's configuration, which is normally done at time of installation, influences many of the unit's functions described in this manual. If you wish to view or change any of the GTX 327 configuration parameters, you may access the GTX 327 Configuration Mode. Use caution when changing configuration. When in doubt, contact your authorized GARMIN Aviation Service Center. The Configuration Mode should not be used while the aircraft is airborne.

**SECTION 7 - DESCRIPTION AND OPERATION (continued)**

**GTX 327 Configuration Mode (continued)**

To use the GTX 327 Configuration Mode:

1. Press and hold the FUNC key while powering on the unit using the STBY, ON, or ALT key (or using an avionics master switch).
2. Press the FUNC key to sequence through the configuration pages.
3. Use the CRSR key to highlight selectable fields on each page.
4. When a field is highlighted, enter numeric data using the 0 - 9 keys, and select items from a list using the 8 or 9 keys.
5. Press the CRSR key to confirm list selections.

**Code Selection**



Code selection is done with eight keys (0 - 7) that provide 4,096 active identification codes. Pushing one of these keys begins the code selection sequence. The new code will not be activated until the fourth digit is entered. Pressing the CLR key will move the cursor back to the previous digit. Pressing the CLR key when the cursor is on the first digit of the code, or pressing the CRSR key during code entry, will remove the cursor and cancel data entry, restoring the previous code. The numbers 8 and 9 are not used for code entry, only for entering a Count Down time, and in the Configuration Mode.



## SECTION 7 - DESCRIPTION AND OPERATION (continued)

### Code Selection (continued)

#### Important Codes:

- 1200** - The VFR code for any altitude in the US (Refer to ICAO standards elsewhere)
- 7000** - The VFR code commonly used in Europe (Refer to ICAO standards)
- 7500** - Hijack code (Aircraft is subject to unlawful interference)
- 7600** - Loss of communications
- 7700** - Emergency
- 7777** - Military interceptor operations (Never squawk this code)
- 0000** - Military use (Not enterable)

Care should be taken not to select the code 7500 and all codes in the 7600 - 7777 range, which trigger special indicators in automated facilities. Only the code 7500 will be decoded as the hijack code. An aircraft's transponder code (when available) is utilized to enhance the tracking capabilities of the ATC facility, therefore care should be taken when making routine code changes.

### Keys for Other GTX 327 Functions



**IDENT** - Pressing the IDENT key activates the Special Position Identification (SPI) Pulse for 18 seconds, identifying your transponder return from others on the air traffic controller's screen. The word "IDENT" will appear in the upper left corner of the display while the IDENT mode is active.



**VFR** - Sets the transponder code to the pre-programmed VFR code selected in Configuration Mode (this is set to 1200 at the factory). Pressing the VFR key again will restore the previous identification code.



**FUNC** - Changes the page shown on the right side of the display. Displayed data includes Pressure Altitude, Flight Time, Count Up timer, Count Down timer, and may include Contrast and Display Brightness, depending on configuration (as shown in the screens below):

**SECTION 7 - DESCRIPTION AND OPERATION (continued)****Keys for Other GTX 327 Functions (continued)**

**PRESSURE ALT** **PRESSURE ALT:** Displays the altitude data supplied to the GTX 327 in feet, hundreds of feet (i.e., flight level), or meters, depending on configuration.

**FL 123**

**FLIGHT TIME** **FLIGHT TIME:** Displays the Flight Time, which is controlled by the **START/STOP** key or by a squat switch as configured during installation. With squat switch control, the timer begins when lift off is sensed and pauses when landing is sensed.

**00:00:13**

**COUNT UP** **COUNT UP TIMER:** Controlled by **START/STOP** and **CLR** keys.

**00:01:05**

**COUNT DOWN** **COUNT DOWN TIMER:** Controlled by **START/STOP**, **CLR**, and **CRSR** keys. The initial Count Down time is entered with the 0 - 9 keys.

**00:03:25**

**CONTRAST** **CONTRAST:** This page is only displayed if manual contrast mode is selected in Configuration Mode. Contrast is controlled by the 8 and 9 keys.

**DISPLAY** **DISPLAY:** This page is only displayed if manual backlighting mode is selected in Configuration Mode. Backlighting is controlled by the 8 and 9 keys.

 **START/STOP** - Starts and stops the Count Up and Count Down timers.

 **CRSR** - Initiates entry of the starting time for the Count Down timer and cancels transponder code entry.

 **CLR** - Resets the Count Up and Count Down timers and cancels the previous keypress during code selection.

 **8** - Reduces Contrast and Display Brightness when the respective pages are displayed. Also enters the number 8 into the Count Down timer.

 **9** - Increases Contrast and Display Brightness when the respective pages are displayed. Also enters the number 9 into the Count Down timer.

## SECTION 7 - DESCRIPTION AND OPERATION (continued)

### Altitude Trend Indicator

When the "PRESSURE ALT" page is displayed, an arrow may be displayed to the right of the altitude, indicating that the altitude is increasing or decreasing. One of two sizes of arrows may be displayed depending on the rate of climb/descent. The sensitivity of these arrows is set using the GTX Configuration Mode.

### Timer Operation

#### To operate the Flight Timer:

 
1. Press the FUNC key until "FLIGHT TIME" is displayed.
2. If the GTX 327 is configured as having a squat switch installed, the timer will begin counting automatically when the squat switch senses that the aircraft has become airborne.
3. If desired, you may press **START/STOP** to pause or restart the timer.
4. Press **CLR** to reset the timer to zero.
5. If the GTX 327 is configured as having a squat switch installed, the timer will pause automatically when the squat switch senses that the aircraft has touched down.

#### To operate the Count Up timer:

1. Press the FUNC key until "COUNT UP" is displayed.
2. If necessary, press **CLR** to reset the Count Up timer to zero.
3. Press **START/STOP** to count up.
4. Press **START/STOP** again to pause the timer.
5. Press **CLR** to reset the timer to zero.

#### To operate the Count Down timer:

1. Press the FUNC key until "COUNT DOWN" is displayed.
2. Press **CRSR** and use the 0 - 9 keys to set the initial time. All digits must be entered (use the 0 key to enter leading zeros).
3. Press **START/STOP** to count down.
4. Press **START/STOP** again to pause the timer.
5. When the Count Down timer expires, the words "COUNT DOWN" are replaced with "EXPIRED", and the time begins counting up and flashing.
6. Press **CLR** to reset the timer to the initial time value.



**SECTION 7 - DESCRIPTION AND OPERATION (continued)**

**Automatic ALT/STBY Mode Switching**

If the GTX 327 is configured for automatic standby switching, the mode will automatically change to ALT when a squat switch senses that the aircraft has become airborne. Also, the mode will change to STBY automatically when a squat switch senses that the aircraft has touched down. Additionally, a delay time can be set in the Configuration Mode, causing the GTX 327 to wait a specified length of time after landing before automatically changing to STBY mode.

 
**THIS PAGE INTENTIONALLY LEFT BLANK**

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 4  
FOR  
S-TEC ADF-650 SYSTEM**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the S-TEC ADF-650 System is installed per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH  
D.O.A. NO. SO- 1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: SEPTEMBER 27, 2000

**SECTION 1 - GENERAL**

This supplement supplies information necessary for the operation of the airplane when the S-TEC ADF-650 System is installed in accordance with FAA approved Piper data.

**SECTION 2 - LIMITATIONS**

No change.

**SECTION 3 - EMERGENCY PROCEDURES**

No change.

**SECTION 4 - NORMAL PROCEDURES****To operate as an Automatic Direction Finder:**

- OFF/VOL Control - ON
- Frequency Selector Knobs - SELECT desired frequency.
- ADF SPEAKER/PHONE Selector Switch (on audio control panel) - SELECT as desired.
- OFF/VOL Control - SET to desired volume level.
- ADF Mode Control - Select ADF mode and note relative bearing on display.

**ADF Test (Pre-flight or In-flight):**

- ADF Mode Control - Select ADF mode and note relative bearing on display.
- Press the TEST button and note the pointer moves to 90° from its prior position. Excessive pointer sluggishness, wavering or reversals indicate a signal that is too weak or a system malfunction.

**To Operate BFO:**

- OFF/VOL Control - ON
- Frequency Selector Knobs - SELECT desired frequency.
- ADF SPEAKER/PHONE Selector Switch (on audio control panel) - SELECT as desired.
- ADF Mode Control - Select BFO mode.
- OFF/VOL Control - Set to desired volume level.

**SECTION 5 - PERFORMANCE**

No change.


**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the Pilot's Operating Handbook and Airplane Flight Manual.

## SECTION 7 - DESCRIPTION AND OPERATION

The S-TEC ADF-650 System operates over a frequency range of 200 through 1799 kHz in 1-kHz increments. Three operating modes are included as part of the ADF-650 System.

- BFO
- ANT
- ADF

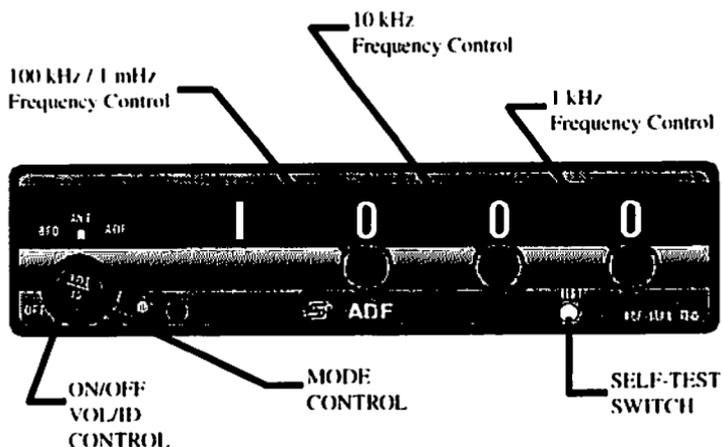

**ADF-650 Receiver, Controls, and Indicators**  
Figure 1

### BFO Mode

The BFO (beat frequency oscillator) and ADF (automatic direction finding) modes are navigation modes that result in pointing operation when in-range station is selected. The ADF mode is used with conventional nondirectional beacons and AM broadcast stations. The BFO mode is used to aurally identify stations that employ keyed cw rather than amplitude modulation techniques.

### NOTE

CW signals (Morse Code) are unmodulated and no audio will be heard without use of BFO. This type of signal is not used in the United States air navigation. It is used in some foreign countries and marine beacons.

**SECTION 7 - DESCRIPTION AND OPERATION (continued)****ANT (Antenna) Mode**

The ANT (antenna) mode cannot be used for navigation; this mode enhances audio reception clarity and is normally used for station identification.

**ADF Mode**

Automatic Direction Finder (ADF) mode is used for navigation. This mode activates the bearing pointer. The bearing pointer will point in the direction of the station relative to the aircraft heading.

**Frequency Selector Controls**

Three controls are used to select the system operating frequency. The right hand control selects 1 - kHz increments, the center control 10 - kHz increments, and the left hand control 100 - kHz increments.

**Self Test Switch**

Pressing and holding the spring loaded self test switch while in the ADF mode will cause the bearing pointer to rotate 90 degrees from its prior position if the ADF-650 system is operating properly. When the test switch is released, the bearing pointer should promptly return to its starting point. At this time, normal operation is restored.

**ON/OFF/VOL/ID Control**

This control performs three independent functions. In full ccw position, no power is applied to the system; rotating the control cw applies power and continued rotation increases volume. Pulling the knob out enhances the Morse code station identifier when background noise is present; push the knob to hear voice transmissions. A good operating practice is to pull the knob out for station identification purposes and then push it back in after positive identification has been made.

**THIS PAGE INTENTIONALLY LEFT BLANK**

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 5  
FOR  
S-TEC DME-450**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the S-TEC DME-450 is installed per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH  
D.O.A. NO. SO- 1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: SEPTEMBER 27, 2000

## **SECTION 1 - GENERAL**

The S-TEC DME-450 system is a full feature, solid state, remote mounted system with full 200 channel capability. For long distance operation, it provides a full 100 watts maximum pulse power transmitter output.

The IND-450 indicator (see figure 1) provides selectable read-out of distance to/from the station, ground speed, and time to/from the station. Features also include automatic display dimming and waypoint annunciation.

## **SECTION 2 - LIMITATIONS**

No change.

## **SECTION 3 - EMERGENCY PROCEDURES**

No change.

## **SECTION 4 - NORMAL PROCEDURES**

### **DME OPERATION**

- DME Mode Selector Switch - Set to DME 1 or DME 2
- NAV 1 and NAV 2 VHF Navigation Receivers - ON; SET FREQUENCY to VOR/DME station frequencies, as required.

#### **NOTE**

When the VOR frequency is selected, the appropriate DME Frequency is automatically channeled.


- DME audio selector button (on audio selector panel) - SET to desired mode.

## **SECTION 5 - PERFORMANCE**

No change.

**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the Pilot's Operating Handbook and Airplane Flight Manual.

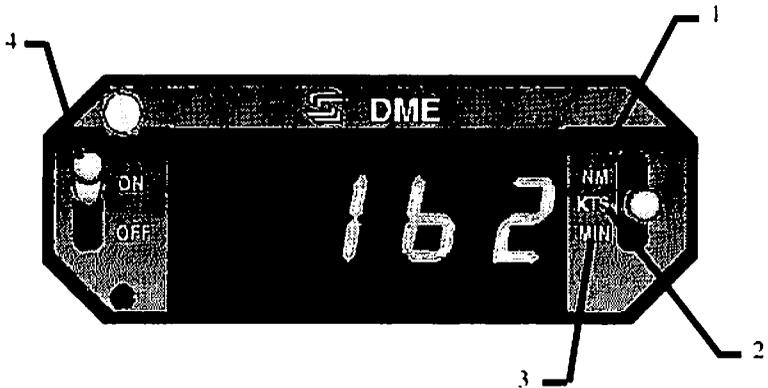
**SECTION 7 - DESCRIPTION AND OPERATION**

**IND-450**  
**Figure 1**

1. **DISTANCE DISPLAY (NM)** - DME distance to VORTAC/WAYPOINT displayed in .1 nautical mile increments up to 99.9 NM, then in increments of one nautical mile.
2. **GROUND SPEED DISPLAY (KTS)** - Displays ground speed in knots to or from VORTAC/WAYPOINT up to 999 knots (aircraft must be flying directly to or from the VORTAC/WAYPOINT for true ground speed indication).
3. **TIME TO STATION DISPLAY (MIN)** - Displays time to station (VORTAC/WAYPOINT) in minutes up to 99 minutes (aircraft must be flying directly to or from the VORTAC/WAYPOINT for true time to the station indication).

**7 - DESCRIPTION AND OPERATION (continued)**

4. DME ON/OFF SWITCH - Turns DME power on or off.

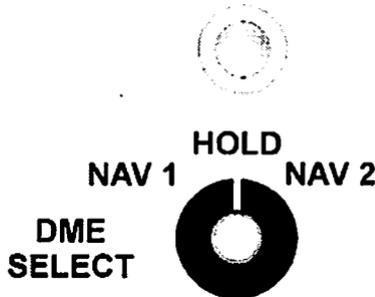

**Mode Selector Switch**  
Figure 2

5. DME MODE SELECTOR SWITCH (NAV 1, HOLD, NAV 2) - Selects DME operating mode as follows:

NAV 1 - Selects DME operation with NO. 1 VHF navigation set; enables channel selection by NAV 1 frequency selector controls.

HOLD - Selects DME memory circuit; DME remains channeled to station to which it was last channeled when HOLD was selected and will continue to display information relative to this channel. Allows both the NAV 1 and NAV 2 navigation receivers to be set to new operational frequencies without affecting the previously selected DME operation.

**NOTE**

In the HOLD mode there is no annunciation of the VOR/DME station frequency. However, an annunciator light located above the HOLD position of the selector illuminates to inform the pilot that the DME is in the HOLD mode.


NAV 2 - Selects DME operation with NO. 2 VHF navigation set; enables channel selection by NAV 2 frequency selector controls.

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 6  
FOR  
BENDIX/KING RDR 2000 VERTICAL PROFILE  
WEATHER RADAR SYSTEM**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the optional Bendix/King RDR 2000 Vertical Profile Weather Radar System is installed per the Equipment List. The information contained herein supplements or supersedes the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures, and performance information not contained in this supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

 FAA APPROVED:



CHRISTINA L. MARSH

D.O.A. NO. SO-1

THE NEW PIPER AIRCRAFT, INC.

VERO BEACH, FLORIDA

DATE OF APPROVAL SEPTEMBER 27, 2000

## **SECTION 1 - GENERAL**

This supplement supplies information necessary for the operation of the airplane when the optional Bendix/King RDR 2000 Vertical Profile Weather Radar System is installed in accordance with FAA Approved Piper data.

## **SECTION 2 - LIMITATIONS**

Do not operate the radar during refueling operations or within 15 feet of trucks or containers accommodating flammables or explosives. Do not allow personnel within 15 feet of area being scanned by antenna when system is transmitting.

## **SECTION 3 - EMERGENCY PROCEDURES**

No changes to the basic Emergency Procedures provided by Section 3 of this Pilot's Operating Handbook are necessary for this supplement.

## **SECTION 4 - NORMAL PROCEDURES**

### **WARNING**

Do not operate the radar during refueling operations or within 15 feet of trucks or containers accommodating flammables or explosives. Do not allow personnel within 15 feet of area being scanned by antenna when system is transmitting.

Preflight and normal operating procedures are outlined in the Bendix/King RDR 2000 Vertical Profile Weather Radar System Pilot's Guide, P/N 006-08755-0000, latest revision.

When the range is set to 10 miles a small sector of return may be observed along the left side of the display. This is the reflection of the cowling and propeller and will diminish with increasing range. This anomaly is not significant at longer ranges and does not effect the operation or display of weather radar.

**SECTION 5 - PERFORMANCE**

No change.

**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the basic Pilot's Operating Handbook.


**SECTION 7 - DESCRIPTION AND OPERATION**

The RDR 2000 Vertical Profile Weather Radar system consists of the:

- a. RS 181A sensor which combines the system components of antenna, receiver, and transmitter.
- b. The IN 182A indicator which incorporates all the operational controls.

The system's antenna is installed inside a teardrop shaped pod mounted beneath the right wing just outboard of the wing jack point.

Operation and Controls

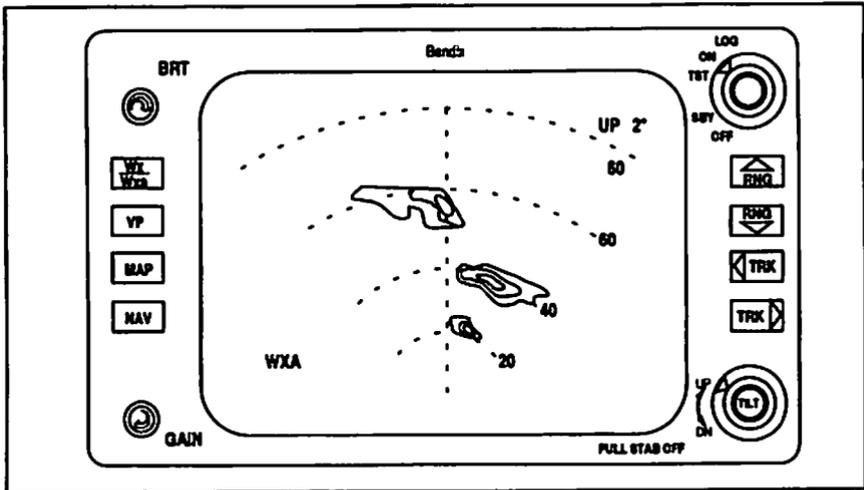

RDR 2000 Controls and Indicator  
Figure 1

## Operation and Controls (cont.)

CONTROL/ DISPLAY	FUNCTION
<b>BRT Control</b>	Adjusts brightness of the display for varying cockpit light conditions.
<b>Wx/Wxa Button</b>	When pressed, alternately selects between the Wx (weather) and Wxa (weather alert) modes of operation. Wx or Wxa will appear in the lower left of the display. Areas of high rainfall appear in magenta color. When the Wxa mode is selected, magenta areas of storms flash between magenta and black.
<b>VP Button</b>	When pressed, selects and deselects the vertical profile mode of operation. Selecting the VP mode of operation (see Figure 3) will not change the selected mode of operation: TST, Wx, Wxa, or MAP. Once in VP, these modes may be changed as desired. VP will engage from the MAP mode but NAV will be disabled during VP operation.
<b>MAP Button</b>	When pressed places indicator in ground-mapping mode. Selecting ground-mapping (MAP) will disable the weather-alert feature and will activate the gain control. The magenta color is not activated while in the ground-mapping (MAP) mode.
<b>NAV Button</b>	When pressed, places indicator in navigation mode so that preprogrammed waypoints may be displayed. If other modes are also selected, the NAV display will be superimposed on them. This button is effective only if an optional radar graphics unit and flight management system is installed. If actuated without these units, NO NAV will appear at lower left screen. The radar is still capable of displaying weather.

Operation and Controls (cont.)

CONTROL/ DISPLAY	FUNCTION
GAIN Control Knob	Manual gain control becomes active <i>only</i> when ground-mapping (MAP) is selected. Gain is internally set in <i>all other</i> modes.
Radar Function Selector Switch	<ol style="list-style-type: none"> <li data-bbox="443 435 945 735">1. <b>LOG</b> position is used only when the Bendix/King IU 2023 series radar graphics unit is installed along with a compatible long range navigation system, a listing of the latitudes and longitudes of selected waypoints will be displayed. If a compatible RNAV is used, selected VOR frequencies, along with bearings and distances to waypoints, will be presented. No radar transmission occurs in this mode.</li> <li data-bbox="443 778 945 919">2. <b>ON</b> position selects the condition of normal operation, allowing for weather detection or other modes of operation. Radar transmission exists in the ON position.</li> <li data-bbox="443 938 945 1050">3. <b>TST</b> position will display the test pattern on the indicator (see Figure 5); no transmission occurs. The antenna will scan while in the test (TST) mode.</li> <li data-bbox="443 1069 945 1305">4. <b>SBY</b> position places system in the standby condition during warm-up and when the system is not in use. After 30 seconds in this mode during warm-up, the system is in a state of readiness. No radar transmissions occurs; the antenna is parked in the down position. STBY is displayed in the lower left of the display.</li> </ol>

## Operation and Controls (cont.)


CONTROL/ DISPLAY	FUNCTION
Radar Function Selector Switch (cont.)	5. <b>OFF</b> position removes primary power from the radar indicator and the sensor. The antenna is parked in the down position.
<b>RNG</b> Selector Button	When pressed clears the display and advances the indicator to the next higher range. Selected range is displayed in upper right corner of the last range mark (Figure 1) and distance to other range rings is displayed along the right edge.
<b>RNG</b> Selector Button	When pressed clears the display and decreases the indicator to the next lower range. Selected range is displayed in upper right corner of the last range mark (Figure 1) and distance to other range rings is displayed along the right edge.
TRK and TRK Buttons	When pressed provides a yellow azimuth line and a digital display of the azimuth line placement left or right from the nose of the aircraft. For vertical profile (VP) operations, the track button performs two functions:



Operation and Controls (cont.)

CONTROL/ DISPLAY	FUNCTION
	<ol style="list-style-type: none"><li>1. Prior to engaging VP, the appropriate button (left or right) is used to place the track line at the desired azimuth angle to be vertically scanned (sliced). When VP is engaged, the slice will be taken at the last position of the track line, whether it is visible or not. If the track line has not been selected after power has been applied to system and VP is engaged, the slice will be taken at 0 degrees (directly in front of the aircraft).</li><li>2. Continuously holding the TRK button will result in the system slicing in two-degree increments.</li></ol>
Antenna <b>TILT</b> Adjustment Knob	Permits manual adjustment of antenna tilt to a maximum of 15° up or down in order to obtain the best indicator presentation. The tilt angle is displayed in the upper right corner of the display. Depending upon the MOD status of the indicator, tilt read out may display in tenth degree.

## Operation and Controls (continued)

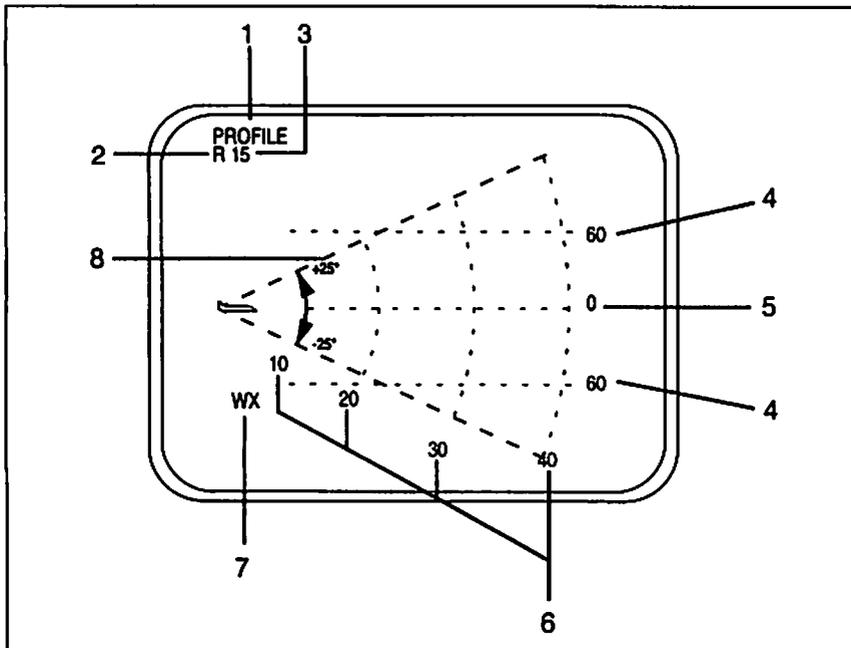


Vertical Profile Mode (RDR 2000)

Figure 3

1. Vertical PROFILE mode annunciation.
2. Left or right track annunciation.
3. Degrees of track left or right of aircraft nose.
4. Displays plus and minus thousands of feet from relative altitude. Will vary with selected range.
5. Relative altitude reference line.
6. Range rings.
7. Selected weather mode (Wx or Wxa).
8. Vertical profile scan angle of 50°.

Operation and Controls (continued)

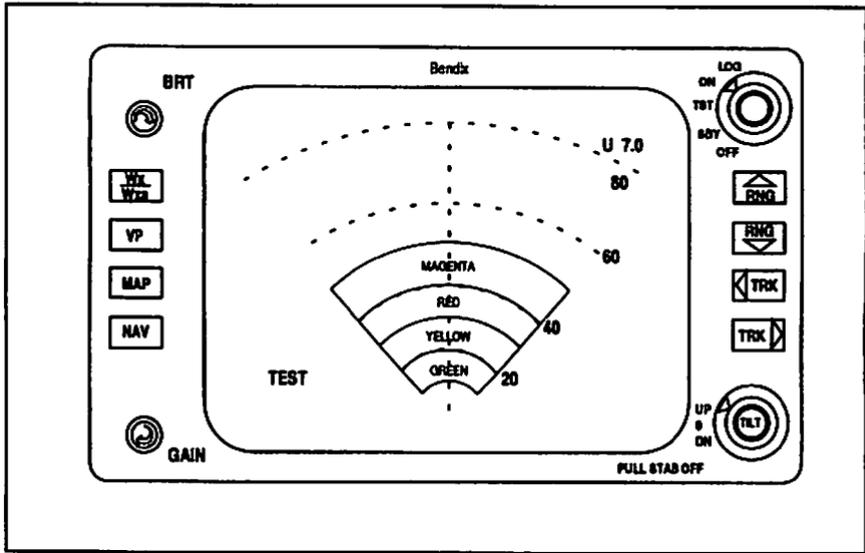

Test Pattern  
Figure 5

 
Detail description on the function and use of the various controls and displays are outlined in the Bendix/King RDR 2000 Vertical Profile Weather Radar System Pilot's Guide, P/N 006-08755-0000, latest revision.

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 7  
FOR  
GARMIN GMA 340 AUDIO PANEL**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Garmin GMA 340 is installed per the Equipment List. The information contained herein supplements or supersedes the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures, and performance information not contained in this supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH

D.O.A. NO. SO-1

THE NEW PIPER AIRCRAFT, INC.

VERO BEACH, FLORIDA

DATE OF APPROVAL SEPTEMBER 27, 2000

## **SECTION 1 - GENERAL**

This supplement supplies information necessary for the operation of the airplane when the Garmin GMA 340 audio panel is installed in accordance with FAA approved Piper data.

## **SECTION 2 - LIMITATIONS**

No change.

## **SECTION 3 - EMERGENCY PROCEDURES**

No change.

## **SECTION 4 - NORMAL PROCEDURES**

### **AUDIO CONTROL SYSTEM OPERATION:**

- Select the desired transmitter audio selector button (COM1, COM2, OR COM3) and verify that the buttons LED is illuminated.
- INTERCOM VOL Control (ICS) - Adjust to desired listening level.
- INTERCOM VOX (voice) Sensitivity Control - ROTATE CONTROL knob clockwise to the middle range and then adjust as required for desired voice activation or hot mic intercom.
- If desired, select the speaker function button. Selecting this button allows radio transmissions to be received over the cabin speaker.

### **NOTE**

Audio level is controlled by the selected NAV radio volume control.

### **MARKER BEACON RECEIVER OPERATION:**


- TEST Button - PRESS to verify all marker lights are operational.
- SENS Button - SELECT HI for airway flying for L.O for ILS/LOC approaches.

**SECTION 5 - PERFORMANCE**

No change.

**SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in section 6 of the Airplane Flight Manual.

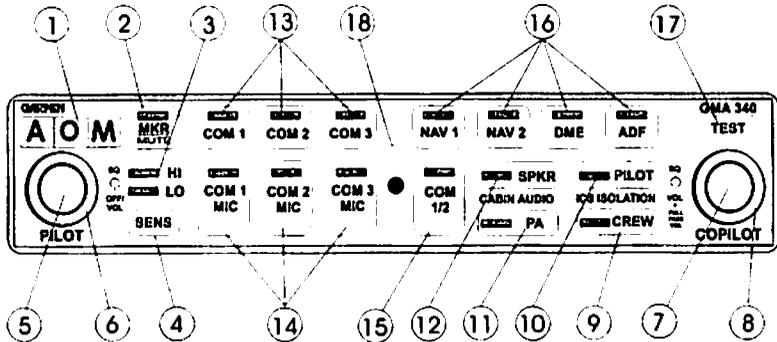**SECTION 7 - DESCRIPTION AND OPERATION**

1. Marker Beacon Lamps
2. Marker Beacon Receiver Audio Select/Mute Button
3. Marker Beacon Receiver Sensitivity Selection Indicator LED
4. Marker Beacon Receiver Sensitivity Selection Button
5. Unit On/Off, Pilot Intercom System (ICS) Volume
6. Pilot ICS Voice Activated (VOX) Intercom Squelch Level
7. Copilot and Passenger ICS Volume Control (Pull out for Passenger Volume)
8. Copilot/Passenger VOX Intercom Squelch Level
9. Crew Isolation Intercom Mode Button
10. Pilot Isolation Intercom Mode Button
11. Passenger Address (PA) Function Button
12. Speaker Function Button
13. Transceiver Audio Selector Buttons (COM1, COM2, COM3)
14. Transmitter (Audio/Mic) Selection Buttons
15. Split COM Button
16. Aircraft Radio Audio Selection Buttons (NAV1, NAV2, DME, ADF)
17. Annunciator Test Button
18. Photocell - Automatic Annunciator Dimming

**SECTION 7 - DESCRIPTION AND OPERATION (continued)**

**ON/OFF, Pilot Intercom System (ICS) Volume Control**

The GMA 340 is powered OFF when the left small knob (5) is rotated fully CCW into the detent. To turn the unit ON, rotate the knob clockwise past the click. The knob then functions as the pilot ICS volume control. A fail safe circuit connects the pilot's headset and microphone directly to COM1 in case power is interrupted or the unit is turned OFF.

**Transceivers**

Selection of either COM1, COM2, or COM3 for both MIC and audio source is accomplished by pressing either COM1, MIC, COM2 MIC, COM3 MIC (14). The activeCOM audio is always heard on the headphones.

Additionally, each audio source can be selected independently by pressing COM1, COM2, or COM3 (13). When selected this way, they remain active as audio sources regardless of which transceiver has been selected for microphone use.

When a microphone is keyed, the active transceiver's MIC button LED blinks approximately one per second to indicate that the radio is transmitting.

**NOTE**

Audio level is controlled by the selected COM radio volume controls.

**SECTION 7 - DESCRIPTION AND OPERATION (continued)****Split COM**

Pressing the COM 1/2 button (15) activates the split COM function. When this mode is active, COM1 is dedicated solely to the pilot for MIC/Audio while COM2 is dedicated to the copilot for MIC/Audio. The pilot and copilot can simultaneously transmit in this mode over separate radios. Both pilots can still listen to COM3, NAV1, NAV2, DME, ADF, and MRK as selected. The split COM mode is cancelled by pressing the COM 1/2 button a second time.

When in the split COM mode the copilot may make PA announcements while the pilot continues using COM1 independently. When the PA button is pressed after the split com mode is activated the copilot's mic is output over the cabin speaker when keyed. A second press of the PA button returns the copilot to normal split COM operation.

**NOTE**

It is possible that radio interference may occur in the split COM mode when the frequencies of the two communications radios are close together (normally less than one MHz). The extent of the interference is a function of the specific frequencies selected, transmitted power, antenna spacing, etc. No guarantee is made to the performance of the split COM feature on small aircraft.

**Aircraft Radios and Navigation**

Pressing NAV1, NAV2, DME, ADF (16) or MRK (2) selects each audio source. A second button press deselects the audio.

**Speaker Output**

Pressing the SPKR button (12) selects the aircraft radios over the cabin speaker. The speaker output is muted when a COM microphone is keyed.

**PA Function**

The PA mode is activated by pressing the PA button (11). Then, when either the pilot's or copilot's microphone is keyed, the corresponding mic audio is heard over the cabin speaker. If the SKR button is also active, then any selected speaker audio is muted while the microphone is keyed. The SPKR button does not have to be previously active in order to use the PA function.

## SECTION 7 - DESCRIPTION AND OPERATION (continued)

### Intercom System (ICS)

Intercom volume and squelch (VOX) are adjusted using the following front panel knobs:

- **Left Small Knob** - Unit ON/OFF power control and pilot's ICS volume. Full CCW detent position is OFF.
- **Left Large Knob** - Pilot ICS mic VOX squelch level. CW rotation increases the amount of mic audio (VOX level) required to break squelch. Full CCW is the "HOT MIC" position (no squelch).
- **Right Small Knob** - IN position: Copilot ICS volume. OUT position: Passenger ICS volume.
- **Right Large Knob** - Copilot and passenger mic VOX squelch level. CW rotation increases the amount of mic audio (VOX level) required to break squelch. Full CCW is the "HOT MIC" position.
- **PILOT Mode** - This mode isolates the pilot from everyone else and dedicates the aircraft radios to the pilot exclusively. The copilot and passengers share communications between themselves but cannot communicate with the pilot or hear the aircraft radios.
- **CREW Mode** - This mode places the pilot and copilot on a common ICS communication channel with the aircraft radios. The passengers are on their own intercom channel and can communicate with each other, but cannot communicate with the crew or hear the aircraft radios.

### Marker Beacon Receiver

The GMA 340's marker beacon receiver controls are located on the left side of the front panel (1 - 4). The SENS button selects either high or low sensitivity as indicated by the HI or LO LED being lit. Low sensitivity is used on ILS approaches while high sensitivity allows operation over airway markers or to get an earlier indication of nearing the outer marker during an approach.

The marker audio is initially selected by pressing the MKR/Mute button (2). If no beacon signal is received, then a second button press will deselect the marker audio. This operation is similar to selecting any other audio source on the GMA 340. However, if the second button press occurs while a marker beacon signal is received, then the marker audio is muted but not deselected. The buttons LED will remain lit to indicate that the source is still selected. When the current marker signal is no longer received, the audio is automatically un-muted. While in the muted state, pressing the MKR/Mute button deselects the marker audio. The button's LED will extinguish to indicate that the marker audio is no longer selected.

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 8  
FOR  
S-TEC SYSTEM 550 THREE AXIS  
AUTOMATIC FLIGHT GUIDANCE SYSTEM  
(28 Volt System)**

The FAA approved operational supplement for the S-TEC System 550 Autopilot, installed in accordance with STC SA09430AC-D, is required for operation of this system. S-TEC will be responsible to supply and revise the operational supplement. It is permitted to include the S-TEC supplement in this location of the Pilot's Operating Handbook unless otherwise stated by S-TEC. The information contained in the S-TEC supplement may supersede or supplement the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual with respect to the operation of the S-TEC System 550 Autopilot. For limitations, procedures and performance information not contained in the S-TEC supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

**THIS PAGE INTENTIONALLY LEFT BLANK**



**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 9  
FOR  
B.F. GOODRICH  
SKYWATCH TRAFFIC ADVISORY SYSTEM  
MODEL SKY497**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the optional BF Goodrich Skywatch Traffic Advisory System, Model SKY497 is installed per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED: Christina L. Marsh

CHRISTINA L. MARSH  
D.O.A. NO. SO-1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: February 26, 2001

**SECTION 1 - GENERAL**

The SKYWATCH system is an on-board traffic advisory system which monitors a radius of nominally 6 nautical miles about the aircraft by interrogating any "intruding" aircraft transponder, and determines if a potential conflict exists with other aircraft. This is done by computing the range, altitude, bearing, and closure rate of other transponder equipped aircraft, with respect to the SKYWATCH equipped aircraft.

SKYWATCH requires the following additional equipment to be functional and operating:

Encoding Altimeter

Aircraft Compass (Directional Gyro)

Aircraft Suppression Bus

Squat Switch (both fixed and retractable gear aircraft)

The SKYWATCH system provides a single level of threat advisory known as a Traffic Advisory (TA). The TA display indicates the relative position of an intruder when it is approximately 30 seconds from Closest Point of Approach (CPA). In addition, all aircraft detected less than 0.55 nm and +/- 800 feet from own aircraft will cause a TA to be generated. In airport approach/departure areas, these criteria are reduced to approximately 15 to 20 seconds from CPA.

The TA calls attention to a possible collision threat using the voice message "TRAFFIC, TRAFFIC". The TA is intended to assist the pilot in achieving visual acquisition of the threat aircraft.

SKYWATCH is considered a backup system to the "SEE AND AVOID" concept and the ATC radar environment.

Skywatch data may be projected on the Garmin 530, the Garmin 430 and the Avidyne FlightMax 740. See the POH supplements for operating instructions for those items of equipment. The Avidyne FlightMax 740 controls operation of the unit in Standby or Operate on the ground.

**SECTION 2 - LIMITATIONS**

Information shown on the display is provided to the pilot as an aid to visually acquiring traffic. Pilot's should maneuver their aircraft based only on ATC guidance or positive visual acquisition of the conflicting traffic. Maneuver should be consistent with ATC instructions. No maneuvers should be made based only on a Traffic Advisory. ATC should be contacted for resolution of the Traffic conflict.

If the pilot is advised by ATC to disable transponder altitude reporting, SKYWATCH must be turned OFF.

Operation of the SKYWATCH system requires that the SKYWATCH Pilot's Guide (p/n 009-10801-001, latest revision) be kept on the aircraft and available to the pilot at all times.

SKYWATCH can only detect aircraft which are transponder equipped.

**SECTION 3 - EMERGENCY PROCEDURES**

No change.

**SECTION 4 - NORMAL PROCEDURES****SELF TEST**

The SKYWATCH system should be tested prior to flight.

After completion of self test, the "TRAFFIC ADVISORY SYSTEM TEST PASSED" audio annunciation will be heard and the display will revert to the standby screen.

**SECTION 4 - NORMAL PROCEDURES (continued)****SELF TEST (continued)**

If "TRAFFIC ADVISORY SYSTEM TEST FAILED" is heard or the SKY497 FAILED screen appears, the SKYWATCH system should be turned OFF.

**NOTE**

The SELF TEST is inhibited when the aircraft is airborne.

**STANDBY CHARACTERISTICS**

The SKYWATCH system will display SKY497 STANDBY when the aircraft is on the ground and not tracking or processing traffic information. Standby gives the system the ability to track targets while on the ground. Pressing the OPR button activates the system and changes the display from the Standby screen to the Above (ABV) mode and 6 nm range. The ranges available are 6 nm and 2 nm and are selected by pressing the Display Range Button.

To go back into Standby, press the STB button. The system will go to the SKY497 STANDBY screen and will not track targets again until the system is either manually switched out of Standby, while on the ground or automatically switched out of Standby 8 seconds after the aircraft has become airborne.

The SELF TEST works by pressing the test button while in the SKY 497 SKYWATCH screen.

The SKYWATCH system, while in flight or operating on the ground, will display 3 altitude display modes. These are: Above (ABV), Normal (NRM), and Below (BLW). These modes are activated by pressing the Altitude display mode button.



## SECTION 4 - NORMAL PROCEDURES (continued)

### ABNORMAL PROCEDURES

If "TRAFFIC ADVISORY SYSTEM TEST FAILED" is heard or the SKY497 FAILED screen appears, the SKYWATCH system should be turned OFF.

If the barometric altimeter fails in flight and is the altitude source for the transponder, turn SKYWATCH OFF.

### RESPOND TO TRAFFIC ADVISORIES

When the SKY497 issues a TA, scan outside for the intruder aircraft. Call ATC for guidance and if you visually acquire the traffic, use normal right of way procedures to maintain separation.

Do not attempt maneuvers based solely on traffic information shown on the SKY497 display. Information on the display is provided to the flight crew as an aid in visually acquiring traffic; it is not a replacement for ATC and SEE and AVOID techniques.

## SECTION 5 - PERFORMANCE

No change.

## SECTION 6 - WEIGHT AND BALANCE

Factory installed optional equipment is included in the licensed weight and balance data in the Equipment List attached to the Pilot's Operating Handbook.

## SECTION 7 - DESCRIPTION AND OPERATION

See the BF Goodrich SKYWATCH Traffic Advisory System Model SKY 497 Pilot's Guide for a complete description of this system.



**THIS PAGE INTENTIONALLY LEFT BLANK**



**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 10  
FOR  
BF GOODRICH AEROSPACE  
WX-500 STORMSCOPE - SERIES II WEATHER MAPPING SENSOR**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the BF Goodrich Aerospace WX-500 Stormscope is installed. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:

CHRISTINA L. MARSH  
D.O.A. NO. SO-1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: February 26, 2001

**ISSUED: SEPTEMBER 27, 2000  
REVISED: FEBRUARY 26, 2001**

**REPORT: VB-1689**  
**1 of 4, 9-61**

## SECTION 1 - GENERAL

This supplement provides information necessary for the operation of the aircraft with the BF Goodrich WX-500 Stormscope.

### WARNING

Never use your Stormscope system to attempt to penetrate a thunderstorm. The FAA Advisory Circular, Subject: Thunderstorms, and the Airman's Information Manual (AIM) recommend that a pilot "avoid by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."

### CAUTION

 
There are several atmospheric phenomena other than nearby thunderstorms that can cause isolated discharge points in the strike display mode. Clusters of two or more discharge points in the strike display mode, however, do indicate a local storm activity when displayed upon clearing the screen. Avoid the clouds and you'll avoid the thunderstorm. In the golf display mode, even a single discharge point may represent thunderstorm activity and should be avoided.

## SECTION 2 - LIMITATIONS

The BF Goodrich Aerospace WX-500 Stormscope Users Guide, p/n 009-11501-001, Rev. A, dated September 10, 1997, or later appropriate revision, must be immediately available to the flight crew whenever weather avoidance is predicated on the use of this system.

## SECTION 3 - EMERGENCY PROCEDURES

No change.



## SECTION 4 - NORMAL PROCEDURES

Normal operating procedures are described in the BF Goodrich Aerospace WX-500 Stormscope Users Guide, p/n 009-11501-001, Rev. A, dated September 10, 1997, or later appropriate revision.

## SECTION 5 - PERFORMANCE

No change.

## SECTION 6 - WEIGHT AND BALANCE

Factory installed optional equipment is included in the licensed empty weight and balance data in Section 6 of the Pilot's Operating Handbook.

 
## SECTION 7 - DESCRIPTION AND OPERATION

### A. OPERATING PROCEDURES

See the BF Goodrich Aerospace WX-500 Stormscope Users Guide for a complete description of the WX-500 system.

### B. PILOT'S DISPLAY (Airplane Dependent)

The BF Goodrich Aerospace WX-500 Stormscope's data will appear on either the Avidyne FlightMax 740, the Garmin GNS 530, or the Garmin GNS 430.



**THIS PAGE INTENTIONALLY LEFT BLANK**

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 11  
FOR  
AVIDYNE 5RR-MFC-SERIES  
FLIGHTMAX FLIGHT SITUATION DISPLAY**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the Avidyne FlightMax 700/750, 5RR-MFC-XXX-( ), is installed in accordance with Avidyne Installation Manual 600-0067 Rev. 0 or later per the Equipment List. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures and performance information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:



CHRISTINA L. MARSH  
D.O.A. NO. SO- 1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: February 26, 2001

**SECTION 1 - GENERAL****NOTE**

FlightMax 700 FSD is a radar indicator only and does not have functionality for Navigator, Lightning, Charts, or Traffic. The FlightMax 700 FSD is a radar indicator only for the RDR-2000 Vertical Profile Weather Radar System.

This supplement provides information necessary for the operation of the aircraft with the Avidyne FlightMax 700/750 FSD installed (5RR-MFC Series FlightMax Flight Situation Display installed in accordance with FAA approved Piper data).

**SECTION 2 - LIMITATIONS**

1. Use of Avidyne charts during IFR flight requires an IFR approved GPS receiver and installation, operated in accordance with its applicable limitations. (FlightMax 750 FSD only)
2. Use of Avidyne Navigator during IFR flight requires an IFR approved GPS receiver and installation, operated in accordance with its applicable limitations. (FlightMax 750 FSD only)
3. Navigation during IFR flight is not to be predicated on the use of Avidyne Navigator while in internal navigation mode. (FlightMax 750 FSD only)
4. Navigation during IFR flight is not to be predicated on the use of Avidyne Navigator unless: (FlightMax 750 FSD only)
  - a. The navigational data base is current; or
  - b. The pilot manually verifies the location of each waypoint used for navigational guidance
5. Navigation is not to be predicated on the use of Avidyne charts. (FlightMax 750 FSD only)
6. Approach information displayed on the Avidyne 750 FSD navigator should not be used due to an incompatibility in communication links between the Garmin GPS radio and the Avidyne 750 FSD. Flight plan and approach information on the Avidyne 750 FSD may not be available when an approach is loaded or activated on the Garmin GPS radio.
7. Loading or updating charts and navigation data with the CD-ROM is not to be accomplished while in flight. (FlightMax 750 FSD only)
8. The user's manual for the 5RR-MFC Series Avidyne FlightMax 700/750 must be available to the pilot during all flight operations.



### **SECTION 3 - EMERGENCY PROCEDURES**

There is no change to the aircraft emergency procedures with this equipment installed.

### **SECTION 4 - NORMAL PROCEDURES**

Normal operating procedures for all FSD functions are shown in the FlightMax 700/750 Series User's Manual, 600-0032.

The system is protected by a circuit breaker labeled RADAR.

The Avidyne unit controls the operating mode (Standby or Operate) for the SKYWATCH TAS. Normally the unit is in Standby on the ground and Operate when airborne. If the Avidyne unit is inoperative, the SKYWATCH TAS cannot be selected to operate on the ground. (FlightMax 750 FSD only)

### **SECTION 5 - PERFORMANCE**

There is no change to aircraft performance with this equipment installed.

### **SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the Pilot's Operating Handbook.

### **SECTION 7 - DESCRIPTION AND OPERATION**

**AVIDYNE NAVIGATOR (FlightMax 750 FSD only)**

Avidyne Navigator is a vector graphic, moving map navigation management and display program. Navigator uses a database of airports, nav aids, airways and airspace fixes which allows the pilot to view a detailed map of the navigational environment and follow the progress of a flight plan. Flight plans can be constructed and saved using items in the database.

**SECTION 7 - DESCRIPTION AND OPERATION (CONTINUED)****AVIDYNE NAVIGATOR (FlightMax 750 FSD only) (continued)**

Navigator displays real-time navigation data such as distance and bearing to waypoints and nearby airports, cross-track error against a planned route of flight, and estimated time of arrival at a destination. This information is displayed in data blocks overlaid onto the moving map. Avidyne has provided several default nav pages that contain commonly used data blocks. Custom display pages can be designed by selecting and arranging data blocks in a manner appropriate to each phase of flight.

Avidyne Navigator obtains position data such as latitude/longitude, ground track and speed from a separately installed and approved Global Positioning System (GPS) receiver. The characteristics and approved uses of the GPS receiver from which it gets its data determine, in part, the ways that Navigator may be used in flight. In addition to basic position data, most GPS receivers also send flight plan information, navigation data, and supplemental data such as satellite status.

**NOTE**

No Avidyne heading information is available when Skywatch is in Standby mode during ground operation.

Navigator may be used as either a navigation management system or simply as a navigation display. The operating mode of the GPS receiver constrains how Navigator may be used. If a direct-to-waypoint or a flight plan is selected in the GPS receiver, Navigator disables its waypoint and flight plan selection features and uses the waypoints sent by the GPS receiver. In this mode, Navigator functions as a navigation display, showing only the navigation data sent by the GPS receiver. This mode is referred to as "external navigation."

If no flight plan or other navigational mode is engaged on the GPS receiver, it will provide continuous position data to Avidyne Navigator. In this case, Navigator enables its navigational features. Navigation to waypoints and via flight plans may be selected. Navigation data such as range, bearing and cross-track error will be calculated internally by Navigator and displayed as before. In this mode, Avidyne Navigator works as a complete navigation management system. This mode is referred to as "internal navigation."

**SECTION 7 - DESCRIPTION AND OPERATION (CONTINUED)****AVIDYNE LIGHTNING (FlightMax 750 FSD only)**

Avidyne Lightning displays weather avoidance data gathered by an airborne thunderstorm sensor, the BF Goodrich Avionics Systems Stormscope®WX-500 Weather Mapping System. Proper use of Avidyne Lightning and the WX-500 can improve the pilot's ability to maintain a safe distance from thunderstorms. Before operating Avidyne Lightning, the Stormscope WX-500 Users Guide should be read and understood. It contains information essential to the proper use and interpretation of the displays presented by Avidyne Lightning.

Airborne thunderstorm sensors detect the electrical discharge associated with lightning. By means of their specialized antennas and electronics and sophisticated processing software, they are able to determine the approximate range and relative bearing of each lightning strike. This information is then sent to the FSD for display.

 
**NOTE**

Stormscope WX-500 strike/cell bearings may not be accurately depicted during and after turns in large crosswind correction conditions. This inaccuracy in the strike/cell bearings is due to GPS ground track being used as the stormscope heading reference instead of actual aircraft heading.

Strike rates may be different between Avidyne and other Stormscope information displays due to differences in software calculation methods.

Avidyne Lightning gives access to all of the functions of the thunderstorm sensor. It provides display functions that will show the reported locations of thunderstorms with respect to the aircraft. If a GPS navigator is reporting aircraft position to the FSD or a remote compass is reporting aircraft heading to the thunderstorm sensor, Lightning will adjust the displayed position of recorded lightning strikes.

Since lightning and thunderstorms are always associated with hazardous weather conditions, including extreme turbulence, heavy precipitation and damaging hail, avoidance of areas where lightning is present will increase the likelihood of avoiding these hazards.

**SECTION 7 - DESCRIPTION AND OPERATION (CONTINUED)****AVIDYNE CHARTS (FlightMax 750 FSD only)**

Avidyne Charts is a moving map display. Interfacing with an onboard, external GPS, Avidyne Charts shows aircraft position on the 3 by 4 inch display. Avidyne Charts gives access to digitized versions of VFR and IFR ENROUTE charts. Depending on what digital charts the user has loaded, the digitized VFR charts consist of the Sectional, WAC, and TAC charts. The three layers of charts smoothly transition from one scale to another as the display is zoomed in and out. The IFR charts are digitized versions of NOAA IFR LOW AND HIGH ALTITUDE ENROUTE charts.

Avidyne Charts does not have the functionality of a navigation system. It supplements the selected mode of navigation to improve situational awareness. The position displayed on Avidyne Charts should be correlated with the navigation information from conventional radio navigation instruments, GPS or pilotage.

**AVIDYNE RADAR (FlightMax 700/750 FSD)**

Avidyne Radar is an interface, control and display system for airborne weather radar systems. It duplicates the weather display functions of the original equipment indicator supplied with the Bendix/King RDR 2000 Vertical Profile Weather Radar System.

Consult the User's Manual for more information on Avidyne Radar.

**AVIDYNE TRAFFIC (FlightMax 750 FSD only)**

Avidyne Traffic displays traffic awareness data gathered by an airborne traffic sensor. Before operating Avidyne Traffic, consult the User's Guide of the specific traffic or TCAS sensor which is used. It contains information essential to the proper use and interpretation of the displays presented by Avidyne Traffic.

**SECTION 7 - DESCRIPTION AND OPERATION (CONTINUED)****DATABASE UPDATES**

Avidyne Navigator is intended for use as an enhanced human interface to a variety of certified GPS receivers. As with certified receivers, the database of Avidyne Navigator is a critical component and must be kept current.

It is the pilot's responsibility to insure that current navigation and chart data is loaded in the system. Avidyne Navigator and Avidyne Charts will continuously display an **Expired** warning whenever operations are conducted with an expired navigation database or digital chart. The Expired warning will also be displayed upon Navigator startup. The warning can only be removed by updating the data. Subscription and data loading instructions are given in the User's Manual.

**SYSTEM CONFIGURATION**

The Avidyne Flight Situation Display (FSD) system consists of the following items:

- A. A Flight Situation Display (FSD) (FlightMax 700/750 FSD)
- B. Optional CD / Data Loader Unit (FlightMax 750 FSD only)
- C. 5RR-MFC Series User's Manual (FlightMax 700/750 FSD)



**THIS PAGE INTENTIONALLY LEFT BLANK**



**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 12  
FOR  
MERIDIAN AIRCRAFT  
FLIGHT INTO KNOWN ICING (FIKI)**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when operating the Piper PA-46-500TP Meridian airplane into known icing conditions. The information contained in this document supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures, performance and loading information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:

A handwritten signature in black ink, appearing to read "Peter E. Peck".

PETER E. PECK  
D.O.A. NO. SO-1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: AUGUST 24, 2001

## SECTION 1 - GENERAL

This supplement provides information necessary for the operation of the Piper Meridian aircraft for flight into known icing conditions.

Icing conditions can exist when:

- The outside air temperature (OAT) is 10°C or colder, and visible moisture in any form such as clouds, fog or mist, rain, snow, sleet and ice crystals are present.
- During ground operations when operating on contaminated ramps, taxiways or runways where surface snow, ice, standing water or slush are present.
- There are visible signs of ice accretion on the aircraft.

The Meridian ice protection system was designed and tested for operation in light to moderate meteorological conditions defined in FAR 25, Appendix C, for continuous maximum and intermittent maximum icing conditions. The ice protection system was not designed or tested for flight in freezing rain, freezing drizzle or supercooled liquid water and ice crystals, or conditions defined as severe. Flight in these conditions is prohibited and must be avoided.

The ice protection system was not designed to remove ice, snow or frost accumulations from a parked airplane. Ice, snow or frost must be completely removed during preflight to ensure a safe takeoff and subsequent flight. Procedures for ice, snow or frost removal, such as a heated hangar and/or approved deicing fluids, must be used to ensure that **ALL** ice, snow, or frost is **COMPLETELY** removed from the wings, tail, control surfaces, windshield, propeller, engine intakes, fuel vents and pitot-static ports, prior to flight.

Some icing conditions not defined in FAR Part 25, Appendix C have the potential of producing hazardous ice accumulations, which may exceed the capabilities of the airplane's ice protection equipment.

Flight into icing conditions which are outside the FAR defined conditions is prohibited, and pilots are advised to be prepared to divert the flight promptly, by changing course or altitude, if hazardous ice accumulations occur.

**SECTION 1 - GENERAL (continued)****ICING DEFINITIONS**

Residual Ice - Ice that remains attached to the de-ice boot at the conclusion of that boot inflation cycle.

Interecycle Ice - The quantity of ice that accumulates on the wing horizontal stabilizer and vertical tail de-ice boots between de-ice boot cycles.

Failure Ice - The quantity of ice accumulated on the wing horizontal stabilizer and vertical tail de-ice boots if the pneumatic surface de-ice system fails.

**SECTION 2 - LIMITATIONS****REQUIRED EQUIPMENT**

The Piper Meridian airplane is approved for flight into light to moderate icing conditions as defined by FAR Part 25, Appendix C, only if the following required ice protection systems and equipment are installed and functioning properly.

1. Surface De-ice System
2. Propeller Anti-ice System
3. Windshield Heat Anti-ice System
4. Pitot Heat Anti-ice System
5. Stall Heat Anti-ice System
6. Wing Inspection Light

**NOTE:**

The Generator and Alternator must be installed and functioning properly for flight into known icing conditions.

**ENVIRONMENTAL CONDITIONS**

Inadvertent operation in freezing rain, freezing drizzle, or conditions defined as severe may be detected by heavy ice accumulation on the airframe and windshield, ice accumulation in areas not normally observed to collect ice, or when ice forms on the upper surface of the wing, aft of the surface de-ice boot. If these conditions are encountered, the pilot should take immediate action to exit these conditions by changing altitude or course.

## SECTION 2 - LIMITATIONS (continued)

### MINIMUM SPEED IN ICING CONDITIONS

Minimum speed during flight in icing conditions with the flaps up is 130 KIAS.

### FLAP SETTINGS FOR OPERATION IN ICING CONDITIONS

Flaps must be up when holding in icing conditions. Maximum flap extension with ANY ice accumulation on the airframe is limited to 20°.

### MINIMUM TORQUE REQUIRED FOR PROPER SURFACE DE-ICE SYSTEM OPERATION

During flight, engine torque must be maintained at the following settings to assure proper surface de-ice system operation.

- Above 25,000 feet - engine torque must be 350 ft. lb. or greater
- At or below 25,000 feet - engine torque must be 250 ft. lb. or greater

### WINDSHIELD HEAT

Ground operation with windshield heat selected to **ANTI ICE** or **DEFOG** is limited to 20 seconds duration.

### MAGNETIC COMPASS

Accuracy of the magnetic compass is unreliable with windshield heat, air conditioner and blower fan on.



## SECTION 2 - LIMITATIONS (continued)

### SURFACE DE-ICE SYSTEM

Operation of the surface de-ice system is prohibited in temperatures below -40°C. Such operation may result in damage to the surface de-ice boots.

### PLACARDS

On the pilot's left side panel:

THIS AIRCRAFT MUST BE OPERATED AS A NORMAL CATEGORY AIRPLANE IN COMPLIANCE WITH THE OPERATING LIMITATIONS STATED IN THE FORM OF PLACARDS, MARKINGS AND MANUALS. NO ACROBATIC MANEUVERS (INCLUDING SPINS) APPROVED. THIS AIRCRAFT APPROVED FOR V.F.R., I.F.R., DAY AND NIGHT ICING FLIGHT WHEN EQUIPPED IN ACCORDANCE WITH THE AIRPLANE FLIGHT MANUAL.

#### WARNING

TURN OFF STROBE LIGHTS WHEN IN CLOSE PROXIMITY TO GROUND OR DURING FLIGHT THROUGH CLOUD, FOG OR HAZE.

PRESSURIZED LANDING NOT APPROVED.

**SECTION 3 - EMERGENCY PROCEDURES****ICE PROTECTION SYSTEM ANNUNCIATORS**

Green - **DEICE** - Illuminates when the de-ice boots inflate. (When the SURF DEICE switch is selected ON, the de-ice boot pressure reaches 10 psig and the pneumatic de-ice system cycles in sequence: tail, lower wing, upper wing.)

Green - **PROP DEICE** - Cycling illumination indicates normal operation of the propeller de-ice system.

Red - **PROP HEAT FAIL** - Illuminates if a fault develops in the prop heat system or current is under 18.0 amps.

Red - **WINDSHIELD OVER TEMP** - Illuminates when the windshield temperature exceeds 170°F (77°C) or the windshield temperature sensor has failed.

**NOTE**

During high ambient temperature conditions when switching windshield heat from ANTI ICE to DEFOG, the red WINDSHIELD OVER TEMP annunciator may illuminate and remain illuminated until the windshield surface temperature cools to the DEFOG heat temperature range.

Red - **SURFACE DE-ICE FAIL** - Illuminates when the surface de-ice system has failed.

Amber - **STALL WARN FAIL** - Illuminates if the lift computer fails and/or the STALL WARN circuit breaker trips.

Red - **GENERATOR INOP** - Illuminates when the generator fails or is selected OFF.

Amber - **PILOT HEAT OFF** - Indicates the pitot heat has not been selected ON.

Red - **L PITOT HEAT** - Indicates the left pitot heat has failed.

Red - **R PITOT HEAT** - Indicates the right pitot heat has failed.

Red - **ALTERNATOR INOP** - Illuminates when the alternator fails or is selected OFF.

**SECTION 3 - EMERGENCY PROCEDURES (continued)**  
**ICE PROTECTION SYSTEM ANNUNCIATORS (continued)**

**Left Pitot Heat Failure**

**Indication: Red “L PITOT HEAT” annunciator illuminated.**

Pitot Heat Switch.....CHECK ON  
L Pitot Heat Circuit Breaker.....CHECK IN  
(Located on the pilot’s aft circuit breaker panel, row A, position 2.)

**Failure of the L Pitot Heat could cause erroneous indications of pilot’s  
airspeed and standby airspeed.**

**Right Pitot Heat Failure**

**Indication: Red “R PITOT HEAT” annunciator illuminated.**

Pitot Heat Switch.....CHECK ON  
R Pitot Heat Circuit Breaker.....CHECK IN  
(Located on the pilot’s aft circuit breaker panel, row A, position 3.)

**Failure of the R Pitot Heat could cause erroneous indications of  
copilot’s airspeed.**

**Pitot Heat Off**

**Indication: Amber “PITOT HEAT OFF” annunciator illuminated.**

Pitot Heat Switch .....SELECT ON

**Prop Heat Failure**

**Indication: Red “PROP HEAT FAIL” annunciator illuminated.**

Prop Heat Circuit Breaker.....CHECK IN  
(Located on the pilot’s aft circuit breaker panel, row A, position 4.)

If Prop Heat Circuit Breaker was closed (not out):

Prop Heat Switch .....SELECT OFF THEN ON

**If Annunciator remains illuminated, Exit and Avoid icing conditions.**

If uneven anti-icing of the propeller blades is indicated by excessive vibration:

1. Power Lever - Momentarily retard, then return to MCP
2. Prop Heat Circuit Breaker - CHECK IN

**If excessive vibration persists - exit icing conditions as soon as possible  
and avoid further icing conditions.**



**SECTION 3 - EMERGENCY PROCEDURES (continued)**

**ICE PROTECTION SYSTEM ANNUNCIATORS (continued)**

**Surface De-ice Failure**

**Indication: Red "SURFACE DE-ICE FAIL" annunciator illuminated.**  
Surface De-ice Circuit Breaker.....CHECK IN  
(Located on the pilot's aft circuit breaker panel, row A, position 6.)

**If red "SURFACE DE-ICE FAIL" annunciator remains illuminated:**

1. Exit and avoid icing conditions.
2. Approach speed with failed surface de-ice boots is 110 KIAS with landing gear down and flaps set to 20° maximum.

**CAUTION**

Do not attempt to land in icing conditions with failed surface de-ice boots. If you must land, use a runway with the least icing and use caution.

3. During approach in icing conditions with failed surface de-ice system, consider a delayed landing gear and flap extension as a final landing check.

**Stall Warning Fail**

**Indication: Amber "STALL WARN FAIL" annunciator illuminated.**  
Stall Heat Circuit Breaker.....CHECK IN  
(Located on the pilot's aft circuit breaker panel, row A, position 5.)

**Avoid low airspeeds and monitor approach speeds closely.**

**CAUTION**

Do not attempt to land in stall warning failure conditions. If you must land, use a runway with the least icing and use caution. Warn the cabin crew to brace and land with gear down and locked and flaps set to 20°.

**Landing Without Flaps**

Proceed as for normal approach. Landing distance may be calculated by increasing the flap 20° landing distance by 16%. Landing ground roll may be calculated by increasing the flap 20° landing ground roll by 13%.

Landing Gear.....DOWN, 3 GREEN  
 Final Approach Speed .....110 KIAS  
 Landing .....NORMAL  
 Braking .....AS REQUIRED  
 Reverse .....AS REQUIRED



SECTION 4 - NORMAL PROCEDURES

ENGINE RUNUP

1. WINDSHLD HT Switch.....Select ANTI ICE position.  
Verify increased amps/  
Select DEFOG position.  
Verify increased amps
2. WINDSHLD HT Switch.....OFF

CAUTION

To avoid possible windshield distortion or  
cracking during ground operations or during  
testing, DO NOT position the WINDSHLD HT  
switch to ANTI ICE or DEFOG for more than  
30 seconds.

3. PITOT HEAT .....Select ON -  
Verify increased amps and  
amber PITOT HEAT OFF  
annunciator extinguished
4. PITOT HEAT .....OFF
5. PROP HEAT .....Verify green PROP HEAT ON  
annunciator illuminates steady  
for 30 seconds, then flashing for  
30 seconds, accompanied with  
increased amps. After 1 minute,  
PROP HEAT ON annunciator  
extinguished and prop heat is  
de-energized.
6. PROP HEAT .....OFF
7. STALL HEAT .....Activate switch and verify  
increased amps.
8. STALL HEAT .....OFF

**SECTION 4 - NORMAL PROCEDURES (continued)**

ENGINE RUNUP (continued)

- 9. SURFACE DE-ICE .....CHECK
  - a) POWER LEVER - Increase to 250 ft. lb. torque
  - b) SURF DE-ICE Switch - Select ON (Verify green annunciator illuminated during each de-ice boot inflation cycle. Visually verify wings and horizontal stabilizer de-ice boot inflation and deflation.)
  - c) POWER LEVER - IDLE
  - d) SURF DE-ICE Switch - OFF

**BEFORE LANDING**

**APPROACH CHECK**

- Altimeter and Standby Altimeter .....SET
- Pressurization .....SET
- Fuel Pump.....MANUAL
- Ignition .....MANUAL
- Fuel Quantity .....CHECK
- Seats.....ADJUSTED & LOCKED IN POSITION
- Armrests.....STOWED
- Belts/Harness .....FASTENED & ADJUSTED
- Landing Gear .....DOWN (below 168 KIAS)
- Flaps .....SET (10° @ 168 KIAS max.)
- Aircraft Heading .....CROSS CHECK WITH  
CORRECTION CARD  
(If installed)

**NOTE**

During landing gear operation it is normal for the HYDRAULIC PUMP annunciator light to illuminate until full system pressure is restored.



**SECTION 4 - NORMAL PROCEDURES (continued)**

**BEFORE LANDING (continued)**

**LANDING CHECK**

Landing Gear .....3 GREEN LIGHTS  
Brakes .....CHECK  
Flaps .....SET (20° @ 135 KIAS max.)  
Airspeed .....100 KIAS

**NOTE**

Landing distance performance was established by maintaining a power on (370 ft. lb. torque), stabilized 3° approach at 100 KIAS, and reducing power to idle during the flare.

Autopilot.....DISENGAGE  
Yaw Damper (prior to landing) .....DISENGAGE

**BALKED LANDING (Go-Around)**

Power Lever.....SET TAKEOFF TORQUE  
Climb Airspeed .....100 KIAS

After climb established:

Climb Airspeed .....ACCELERATE TO 110 KIAS  
Flaps .....RETRACT TO 0°  
Landing Gear .....RETRACT  
Aircraft Heading .....CROSS CHECK WITH  
CORRECTION CARD  
(If Installed)

Airspeed .....ACCELERATE TO 125 KIAS (Vy)

**SECTION 4 - NORMAL PROCEDURES (continued)****FLIGHT INTO KNOWN ICING CONDITIONS**

The Piper Meridian is approved for flight into known icing conditions as defined in **SECTION 1, GENERAL**.

**NOTE**

Flight in known icing conditions is approved only if the required ice protection systems and equipment are installed and functioning properly. They are:

SURFACE DE-ICE SYSTEM  
PROPELLER HEAT ANTI-ICE SYSTEM  
WINDSHIELD HEAT ANTI-ICE SYSTEM  
PIFOT HEAT ANTI-ICE SYSTEM  
STALL HEAT ANTI-ICE SYSTEM  
WING INSPECTION LIGHT

**WARNING**

Flight in icing conditions is prohibited if there is known failure of any of the ice protection systems or if the generator or alternator are failed or are inoperative.

**WARNING**

Maximum flap extension with **ANY** ice accumulation on the airframe is limited to 20°.

**SECTION 4 - NORMAL PROCEDURES (continued)**

**FLIGHT INTO KNOWN ICING CONDITIONS (continued)**

**PRIOR** to entering icing conditions, the following ice protection systems **MUST** be activated.

1. Surface De-ice .....SELECT ON
2. Stall Heat .....SELECT ON
3. Pitot Heat .....VERIFY ON
4. Prop Heat .....SELECT ON
5. Windshield Heat .....SELECT ANTI ICE
6. Wing Inspection Light .....AS REQUIRED
7. Ignition .....MANUAL
8. Windshield Defog.....PULL ON
9. Environmental Control System (ECS) .....HIGH

**During Icing Conditions:**

10. Wing Leading Edge .....MONITOR for continual shedding of ice
11. Annunciator Panel .....MONITOR for correct function of ice protection systems.

**WARNING**

If any of the aircraft ice protection systems fail during flight in icing conditions, exit and avoid icing conditions.



**SECTION 4 - NORMAL PROCEDURES (continued)**

**FLIGHT INTO KNOWN ICING CONDITIONS (continued)**

After departure from icing conditions with remaining residual and intercycle  
airframe ice:

- 1. Surface De-ice .....MAINTAIN ON
- 2. Stall Heat .....MAINTAIN ON
- 3. Prop Heat .....MAINTAIN ON
- 4. Pitot Heat .....MAINTAIN ON
- 5. Windshield Heat .....DE-FOG or ANTI ICE as required
- 6. Ignition .....AUTO
- 7. Flaps .....DO NOT EXTEND BEYOND 20°


After removal of residual and intercycle airframe ice:

- 1. Surface De-ice .....OFF
- 2. Stall Heat .....OFF
- 3. Prop Heat .....OFF
- 4. Pitot Heat .....MAINTAIN ON
- 5. Windshield Heat .....DE-FOG or ANTI ICE as required

**SECTION 5 - PERFORMANCE**

The performance charts in this supplement are based on an airplane with ice on the unprotected surfaces that would have accumulated during a 45 minute hold in icing conditions, in addition to, intercycle ice on the de-ice boots while they are operating in the 60 second cycle mode. It is assumed that the flaps and landing gear are retracted while executing the 45 minute hold. Intercycle ice is the ice on the de-ice boots just prior to de-ice boot inflation.

 
Be sure to review flap extension and airspeed limitations in **SECTION 2, LIMITATIONS** and de-ice equipment operation in **SECTION 4, NORMAL PROCEDURES** of this supplement when ice is on the airframe.



SECTION 5 - PERFORMANCE (continued)


EXAMPLE	
OAT:	-5°C
Press. Altitude:	3,500 FT.
Weight:	4,500 LB.
Rate of Climb:	1,204 FPM

ASSOCIATED CONDITIONS	
Power:	MAXIMUM CONTINUOUS
ECS:	NORMAL
Airframe ice:	45 MIN HOLD
Gear:	EXTENDED
Flaps:	20°
Climb speed:	100 KIAS

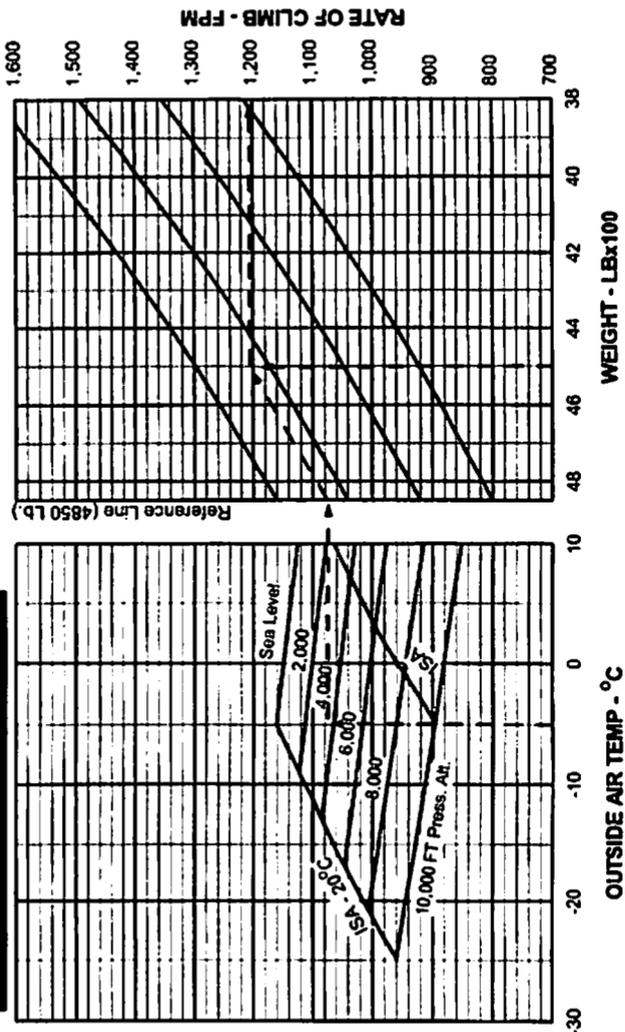

Balked Landing Climb Performance  
Figure 1

SECTION 5 - PERFORMANCE (continued)

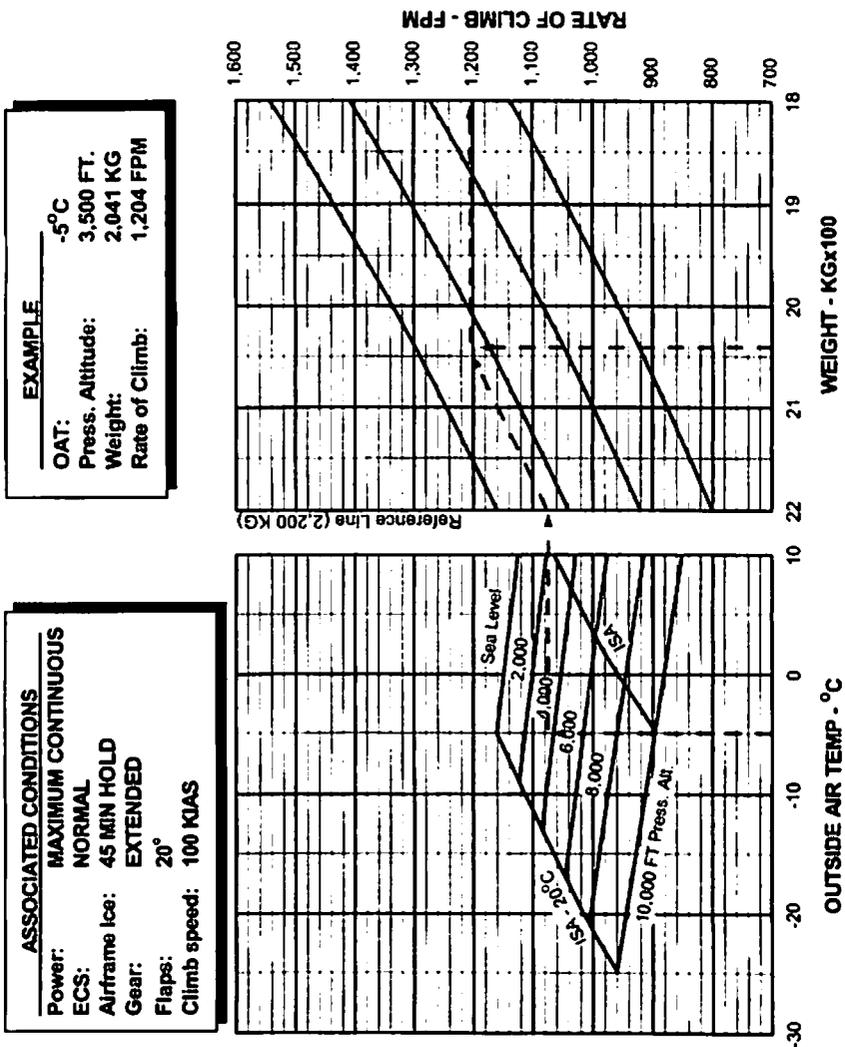

Balked Landing Climb Performance (Metric)

Figure 2


SECTION 5 - PERFORMANCE (continued)

**EXAMPLE**

OAT: -5°C  
 Pressure Altitude: 3,500 FT.  
 Rwy Gradient: 1% UP  
 Headwind Component: 5 KT.  
 Ground Roll Distance: 1,358 FT.


**ASSOCIATED CONDITIONS**

Runway: PAVED, LEVEL, DRY SURFACE  
 Weight: 4,850 LB.  
 Airframe Ice: 45 MIN HOLD  
 Flaps: 20°  
 Touch Down Speed: 92 KIAS  
 Braking: MODERATE WITH BETA

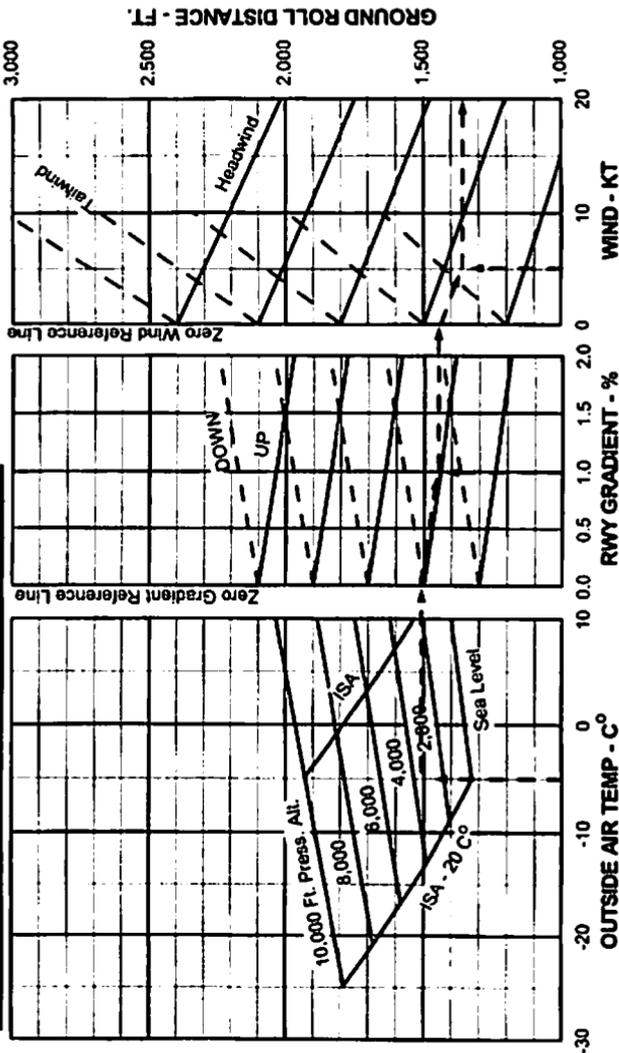

Landing Ground Roll, Flaps 20°, without Reverse  
Figure 3

SECTION 5 - PERFORMANCE (continued)

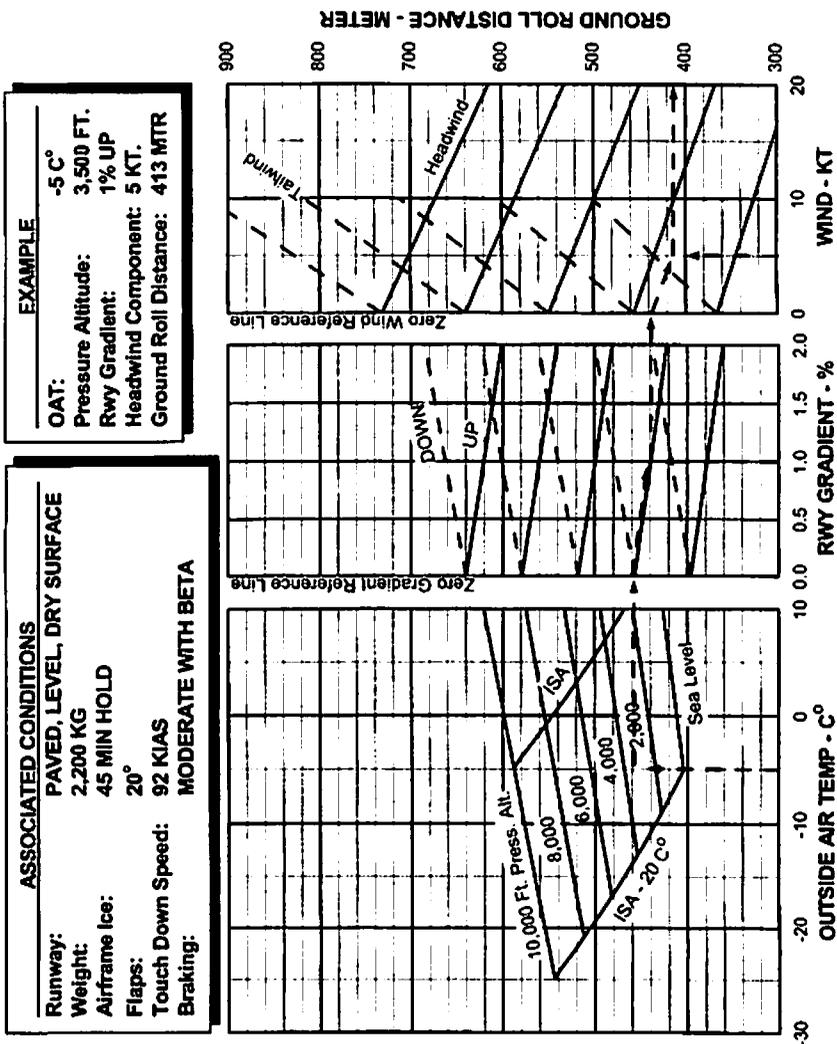

Landing Ground Roll, Flaps 20°, without Reverse (Metric)  
Figure 4




SECTION 5 - PERFORMANCE (continued)

**EXAMPLE**

OAT: -5°C  
 Runway Gradient: 1% UP  
 Pressure Altitude: 3,500 FT.  
 Headwind Component: 5 KT.  
 Landing Distance: 2,964 FT.

**ASSOCIATED CONDITIONS**

Runway: PAVED, LEVEL, DRY SURFACE  
 Weight: 4,850 LB.  
 Airframe Ice: 45 MIN HOLD  
 Approach: 3 DEGREES  
 Flaps: 20°  
 Approach Speed: 100 KIAS  
 Touch Down Speed: 92 KIAS  
 Braking: MODERATE WITH BETA

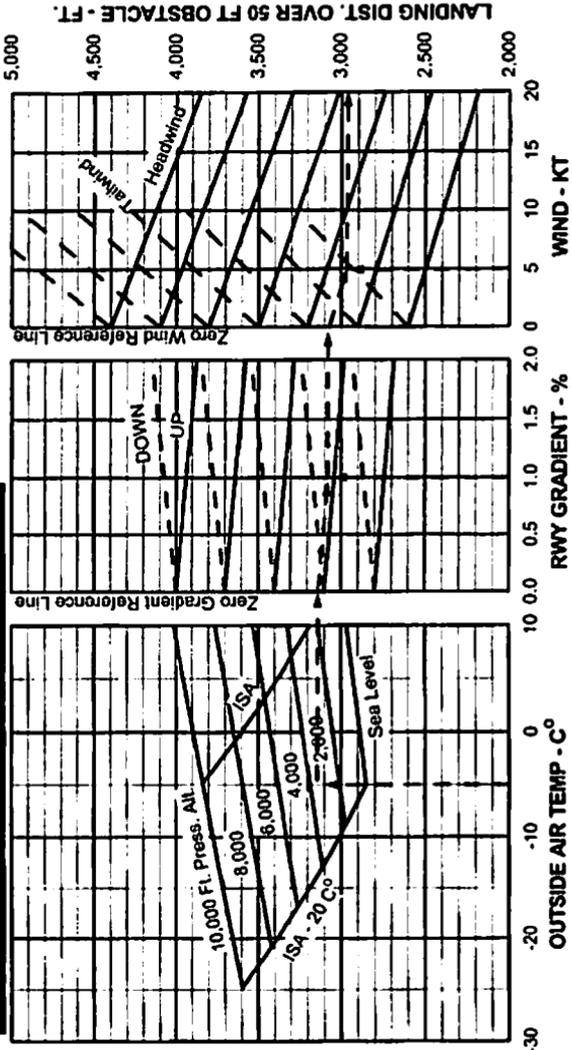

Landing Distance, Flaps 20°, without Reverse  
Figure 5


SECTION 5 - PERFORMANCE (continued)

**EXAMPLE**

OAT: -5 °C  
 Runway Gradient: 1% UP  
 Pressure Altitude: 3,500 FT.  
 Headwind Component: 5 KT.  
 Landing Distance: 903 MTR

**ASSOCIATED CONDITIONS**

Runway: PAVED, LEVEL, DRY SURFACE  
 Weight: 2,200 KG.  
 Airframe Ice: 45 MIN HOLD  
 Approach: 3 DEGREES  
 Flaps: 20°  
 Approach Speed: 100 KIAS  
 Touch Down Speed: 92 KIAS  
 Braking: MODERATE WITH BETA

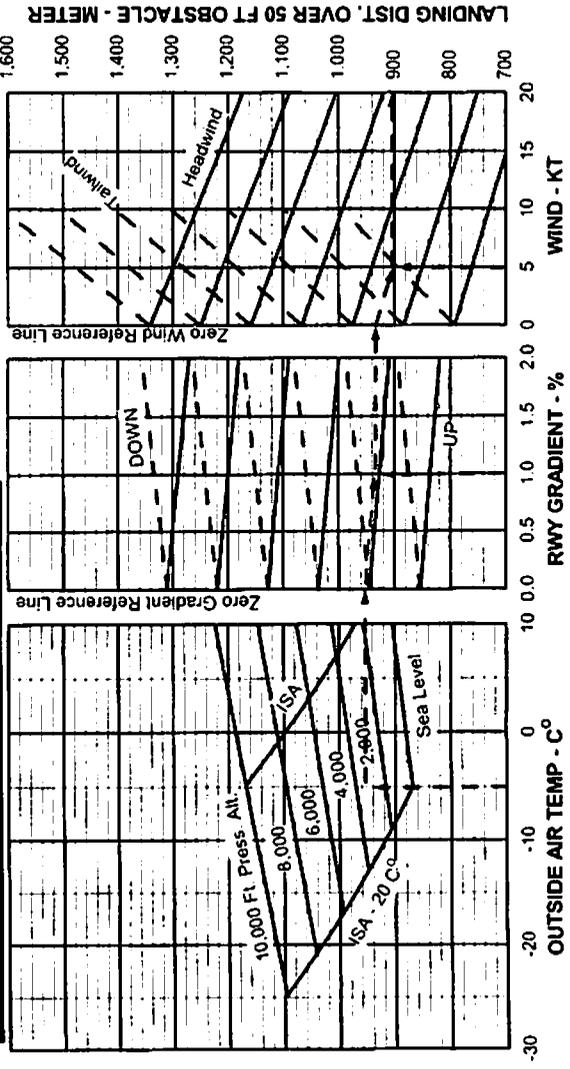

Landing Distance, Flaps 20°, without Reverse (Metric)

Figure 6



**SECTION 6 - WEIGHT AND BALANCE**

No change.

**THIS SPACE INTENTIONALLY LEFT BLANK**



## SECTION 7 - DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS

### PNEUMATIC DE-ICE SYSTEM

The Piper Meridian utilizes BF Goodrich pneumatic de-ice boots to displace ice from the leading edges of the wing, vertical and horizontal stabilizer. The de-ice boots are fabricated from neoprene containing built in span wise inflation tubes. The system consists of the wing, vertical and horizontal stabilizer de-ice boots, pressure regulator, ejector, pressure switches, de-icer flow valves, vacuum regulator, timer, check valve and a water separator. The timer allows continuous operation of the pneumatic de-ice system without additional input from the pilot once the system is selected on. The de-ice boots are inflated by engine bleed air and held down during flight by vacuum supplied by a single fixed orifice ejector.

Operation of the pneumatic de-ice system is controlled by a locking, single throw switch on the overhead switch panel. When the switch is engaged, power is supplied to the de-ice timer which then shuttles the empennage de-icer flow valve to supply precooled bleed air pressure to the empennage boots for 6 seconds. As pressure in the boots is increased above 10 psig, the tail pressure switch is engaged and the green SURFACE DE-ICE FAIL annunciator is illuminated. At the end of six seconds the empennage de-icer flow valve returns to the vacuum (normal) position and the bottom wing de-icer flow valve is shuttled to the pressure side. After a second 6 seconds the bottom wing deicer flow valve is shuttled back to the vacuum side and the process is repeated for the upper wing boots. This complete cycle is repeated every 60 seconds or until the surface deice switch is disengaged. The timer monitors system voltage, increasing and decreasing boot pressure, and cycle advance. Should any failure in operation be detected, the red SURFACE DE-ICE FAIL annunciator will illuminate.

Circuit protection for the surface de-ice system is provided by a SURFACE DE-ICE circuit breaker (located on the pilot's aft circuit breaker panel, Row A, Position 6).

## SECTION 7 - DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS (continued)

### HEATED PROPELLER

The propeller de-ice system consists of dual element heater boots bonded to the inner 1/3 portion of each propeller blade, slip ring assemblies connected to the propeller hub to distribute power to the propeller blade heating elements, a modular brush assembly which transfers electrical power to the rotating slip rings, and an electronic control module (timer) to cycle power to the heaters. In flight, when the **PROP HEAT** switch is selected **ON**, the electronic control module directs power through the modular brush assembly and slip ring to the outer 4 propeller blade heating elements for approximately 90 seconds. The electronic control module then switches power to the inner 4 propeller blade heating elements for approximately 90 seconds. This cycle will continue as long as the **PROP HEAT** switch is in the **ON** position and the airplane is airborne.

During **Ground** operations with the **PROP HEAT** switch engaged, power is sent to the outer 4 propeller blade heating elements for 30 seconds and the green **PROP HEAT ON** annunciator will illuminate.

During the next 30 seconds, power is directed to the inner 4 propeller blade heating elements and the green **PROP HEAT ON** annunciator will flash. After one minute, the electronic control module will remove power to the boots and the green **PROP HEAT ON** annunciator will extinguish. As long as the airplane remains on the ground, the system will remain **OFF** unless the operator manually selects the **PROP HEAT** switch **ON**, again, or until the airplane leaves the ground.

A red **PROP HEAT FAIL** annunciator will illuminate if:

1. An over current (greater than 30 amps).
2. An under current (less than 18.0 amps).
3. A loss of power when the **PROP HEAT** is selected on.
4. 28 Vdc applied when the **PROP HEAT** switch is not engaged.

In the over current scenario, the timer will de-energize the propeller heat, extinguish the green **PROP HEAT ON** annunciation, and illuminate the red **PROP HEAT FAIL** annunciation. In the under current scenario, the timer will maintain the propeller heat on, continue to illuminate the green **PROP HEAT ON** annunciation, and illuminate the red **PROP HEAT FAIL** annunciation.

## SECTION 7 - DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS (continued)

### HEATED WINDSHIELD

The left pilot's windshield is heated by current from the aircraft electrical system. Windshield heat is controlled by a 3 position rocker switch located in the overhead switch panel and placarded **WINDSHLD HT DEFOG - OFF - ANTI ICE**. Circuit protection for the heated windshield is provided by the **WINDSHIELD HEAT CONTROL** and **POWER** circuit breakers in the pilot's aft circuit breaker panel (Row A, Position 7 and 8).

#### NOTE

The right copilot's windshield is not heated, therefore during icing conditions visibility through the right windshield may be impaired or completely eliminated.

#### CAUTION

Do not use the windshield heater during ground operations or during engine start-up. Do not use the **WINDSHIELD HEAT** switch in the **ANTI ICE** position unless directed to do so.

**WINDSHLD HT** should be selected to the **ANTI ICE** position prior to entering suspected icing conditions. Sudden penetration into icing conditions, with the windshield heat **OFF**, will greatly reduce its effectiveness to prevent or eliminate windshield ice.

An over-temperature sensor is included as an integral part of the heated windshield. A system failure causing an over-temperature condition (above 170°F / 77°C) will illuminate the red **WINDSHIELD OVER TEMP** light located in the annunciator panel.

#### NOTE

During high ambient temperature conditions when switching windshield heat from **ANTI ICE** to **DEFOG** the red **WINDSHIELD OVER TEMP** annunciator may illuminate and remain illuminated until the windshield surface temperature cools to the **DEFOG** heat temperature range.

## SECTION 7 - DESCRIPTION AND OPERATION OF THE AIRPLANE AND ITS SYSTEMS (continued)

### HEATED PITOT

A pitot heat anti-ice system is installed to assure proper airspeed indications in the event icing conditions are encountered. The system is designed to prevent ice formation rather than remove it, once formed. During normal operations pitot heat should be selected **ON** and the amber **PITOT HEAT OFF** annunciator extinguished before take-off.

 
One heated pitot head is installed on the underside of each wing. Pitot heat is controlled by a single **PITOT HEAT** switch located in the overhead switch panel and protected by **L PITOT HEAT** and **R PITOT HEAT** circuit breakers located in the pilot's aft circuit breaker panel (Row A Position 2 and 3).

#### CAUTION

Caution should be taken when any maintenance is performed on the heated pitot head as it is energized from the ground. The main electrical system is not

### HEATED STALL WARNING

A heated stall warning vane is installed in the leading edge of the left wing. It is controlled by a **STALL HEAT** switch located in the overhead switch panel and is protected by a **STALL HEAT** circuit breaker located in the pilot's aft circuit breaker panel (Row A Position 5). To prevent damage during ground operation, the stall warning has an in-line resistor activated by the main gear squat switch which limits the ground electrical load to approximately 33 percent of the in-flight load.

**SECTION 7 - DESCRIPTION AND OPERATION OF THE AIRPLANE  
AND ITS SYSTEMS (continued)****WING INSPECTION LIGHT**

An ice detection light is installed on the left side of the forward fuselage, and when selected **ON**, will illuminate the left wing leading edge. The ice detection light is controlled by the **ICE LIGHT** switch located in the overhead switch panel. Circuit protection is provided by an **ICE** circuit breaker located in the **EXTERIOR LIGHTS** section of the pilot's forward circuit breaker panel (Row A Position 8).

**ALTERNATE STATIC SOURCE**

An alternate static source control valve is located on the sidewall below the lower left corner of the instrument panel. For normal operation, the control valve lever should be in the down position. To select the alternate static source, the control valve lever should be placed in the up position. When alternate static source is selected, the pilot's airspeed, altimeter and vertical speed indicators, and the standby airspeed and altimeter, are vented to the alternate static buttons located on the right and left side of the AFT fuselage. During operation with the alternate static source selected, the airspeed, altimeter, and vertical speed indicator will give slightly different readings than normal. Charts depicting airspeed and altitude position error calibrations using alternate static source are provided in the Pilots Operating Handbook and FAA Approved Airplane Flight Manual, Section 5, Performance.

**THIS PAGE INTENTIONALLY LEFT BLANK**



**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 13  
FOR  
S-TEC ADF-650D SYSTEM**

This supplement must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the S-TEC ADF-650D System is installed per the equipment list. The information contained herein supplements or supersedes the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only in those areas listed herein. For limitations, procedures, performance and loading information not contained in this supplement, consult the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

FAA APPROVED:

PETER E. PECK  
D.O.A. NO. SO- 1  
THE NEW PIPER AIRCRAFT, INC.  
VERO BEACH, FLORIDA

DATE OF APPROVAL: December 18, 2001

**SECTION 1 - GENERAL**

This supplement supplies information necessary for the operation of the airplane when the S-TEC ADF-650D System is installed in accordance with FAA approved Piper data.

**SECTION 2 - LIMITATIONS**

No change.

**SECTION 3 - EMERGENCY PROCEDURES**

No change.

**SECTION 4 - NORMAL PROCEDURES****To turn on the ADF-650D System:**

- Depress the PWR button momentarily and release.

**NOTE**

If the PWR button is pressed for longer than 3 seconds, the receiver will immediately shut off.

- After successful self test, input desired station frequency and select ANT mode.
- Positively identify selected station or beacon.
- Adjust volume control as required.
- If ADF-650D System is used for navigation, select ADF or BFO mode immediately after the station has been positively identified.

**To turn off the ADF-650D System:**

- Depress the PWR button for at least 3 seconds.

**NOTE**

If the PWR button is released within 3 seconds, normal operations will resume.

## **SECTION 4 - NORMAL PROCEDURES (continued)**

### **To perform the preflight checklist and self test:**

- After successful self test, press the mode control until ANT is displayed and input a predetermined frequency to select a station in the immediate area. Adjust the volume control as necessary to provide a comfortable listening level.
- Press the ID button and observe that the station identification code becomes louder (if the station is voice-identified, it is not necessary to press the ID button).
- Press the ID button again to cancel the IDENT function and press the mode control until ADF is displayed.
- Observe the IND-650A Indicator and note that the bearing pointer indicates the relative bearing to the station.
- Push the TEST button while observing the indicator bearing pointer. The bearing pointer will rotate 90° and stop.
- Push the TEST button again (to turn off test function). The bearing pointer returns to the original relative bearing position.
- Switch to BFO mode, if appropriate, and verify a tone is present. Select the appropriate operating mode when all checks have been completed.

## **SECTION 5 - PERFORMANCE**

No change.


## **SECTION 6 - WEIGHT AND BALANCE**

Factory installed optional equipment is included in the licensed weight and balance data in Section 6 of the Pilot's Operating Handbook and Airplane Flight Manual.

**SECTION 7 - DESCRIPTION AND OPERATION**

The S-TEC ADF-650D System operates over a frequency range of 200 through 1799 kHz in 1-kHz increments. Three operating modes are included as part of the ADF-650D System.

- BFO
- ADF
- ANT

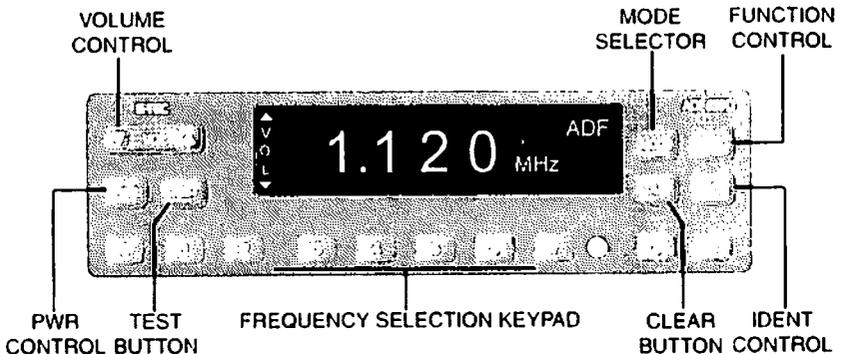

**RCR-650D Receiver Controls**

**Beat Frequency Oscillator (BFO) Mode**

The BFO (beat frequency oscillator) mode is used to aurally identify stations that employ keyed CW (Carrier Wave) rather than amplitude modulation techniques. This mode activates the bearing pointer. The bearing pointer will point in the direction of the station relative to the aircraft heading.

**NOTE**

CW signals (Morse Code) are unmodulated and no audio will be heard without use of BFO. This type of signal is not used in the United States air navigation. It is used in some foreign countries and marine beacons.



## SECTION 7 - DESCRIPTION AND OPERATION (continued)

### Automatic Direction Finder (ADF) Mode

The Automatic Direction Finder (ADF) mode uses conventional nondirectional beacons and AM broadcast stations for navigation. This mode activates the bearing pointer. The bearing pointer will point in the direction of the station relative to the aircraft heading.

### Antenna (ANT) Mode

The ANT (antenna) mode cannot be used for navigation; this mode enhances audio reception clarity and is normally used for station identification.

### Frequency Selection Keypad

The Frequency Selection Keypad is used to select the system operating frequency. The keypad consists of a row of numbered buttons from 0 to 9, located along the bottom of the RCR-650D Receiver. Frequencies in the megahertz and kilohertz range may be selected.

### Power (PWR) Control

The power control is used to turn the receiver on and off. Momentarily depressing the PWR button will turn the receiver on and also initiate a self test.

#### NOTE

If the PWR button is pressed for longer than 3 seconds the receiver will immediately shut off.

**SECTION 7 - DESCRIPTION AND OPERATION (continued)****Clear (CLR)**

The clear function offers several options for the operator.

- If the entire frequency is entered and the CLR button is pushed, all the numbers will become dashes. An additional push on the CLR button will restore and display the prior frequency entry.
- If an entry is in progress and a number is entered in error, pressing the CLR button will erase the last number entry.
- Pressing the CLR button while in the contrast function reverses the display image and also places the receiver in manual mode.

**NOTE**

It is not necessary to push CLR to enter a new frequency number. Simply complete the entry and then enter the new numbers and they will replace the old frequency.

**Volume (VOL) Control**

The audio volume control is used to adjust the settings and levels for all function selector and setup modes and is controlled by pressing the **▲** and **▼** buttons on the VOL control.



**SECTION 7 - DESCRIPTION AND OPERATION (continued)**

**Function (FUNC) Selector**

The function selector enables the user to select between contrast and volume display functions (on power-up, the RCR-650D will be in the volume display function). The first time the function selector is pressed, the receiver enters the contrast function. Subsequent presses of the function selector button toggles the unit between contrast and volume. Additionally, pressing the clear button while in the contrast function places the receiver in manual mode. In manual mode, subsequent pushes of the function selector will cycle the receiver through four functions: volume, contrast, display and keypad.

- **Volume**



The volume control function is available on power-up and is accessed immediately by pressing the **▲** and **▼** buttons on the VOL control. Upon activation, the kHz and mode annunciations are temporarily replaced by the text "VOLUME" with a horizontal fill bar. The filled portion of the bar indicates the current volume setting.

- **Contrast**



The contrast function is activated by pressing the FUNC selector. Upon activation, the kHz and mode annunciation are temporarily replaced by the text "CONTRAST" with a horizontal fill bar on the right side of the annunciator panel. The filled portion of the bar indicates the current contrast setting. The contrast is adjusted by pressing the appropriate **▲** and **▼** indicators on the volume control.

- **Display**



When the display is setup in the manual mode, press the FUNC selector until the display function is selected. The display function is then activated and the kHz and mode annunciations are temporarily replaced by the text "DISPLAY" with a horizontal fill bar on the right side of the annunciator panel. The filled portion of the bar indicates the current display setting. The display is adjusted by pressing the appropriate **▲** and **▼** indicators on the volume control.

## SECTION 7 - DESCRIPTION AND OPERATION (continued)

## Function (FUNC) Selector - continued

- Keypad Light Brightness



The keypad light brightness setting is used to adjust the brightness of all legends on the display face. When the display is setup in the manual mode, press the FUNC selector until the keypad function is selected. The keypad function is then displayed with the text "KEYPAD" and a horizontal fill bar on the right side of the annunciator panel. The filled portion of the bar indicates the current keypad brightness setting. The brightness is adjusted by pressing the appropriate  $\wedge$  and  $\vee$  indicators on the volume control.

## Mode Selector



The mode selector is used to select one of the three operating states: BFO, ADF, or ANT. Pressing the MODE selector button will step the receiver through the three modes. The current mode will be displayed in the upper right corner of the display. On system power-up, the mode selector will be in the ADF mode.

## Ident (ID)



The receiver utilizes an Ident Filter for audio output which aids in receiving weak signals. Pressing the ID button toggles the Ident Filter on and off. When the Ident Filter is active, the text "IDENT" is displayed in the bottom right corner of the display.



## SECTION 7 - DESCRIPTION AND OPERATION (continued)

## Test Mode



 
Press the TEST button to start the test mode. The text "TEST" will be displayed in the bottom right corner of the display for approximately 15 seconds. During this time, the IND-650A Indicator pointer will incrementally rotate 90°. Press the TEST button again to cancel the test while in this mode. The pointer will immediately return to its starting point.

**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 14  
FOR  
BENDIX/KING KMH 880  
MULTI-HAZARD AWARENESS SYSTEM**

The FAA approved operational supplement for the Bendix/King KMH 880 Multi-Hazard Awareness System, installed in accordance with STC SA01006WI-D, is required for operation of this system. Bendix/King will be responsible to supply and revise the operational supplement. It is permitted to include the Bendix/King supplement in this location of the Pilot's Operating Handbook unless otherwise stated by Bendix/King. The information contained in the Bendix/King supplement may supersede or supplement the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual with respect to the operation of the Bendix/King KMH 880 Multi-Hazard Awareness System. For limitations, procedures and performance information not contained in the Bendix/King supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

**THIS PAGE INTENTIONALLY LEFT BLANK**



**PILOT'S OPERATING HANDBOOK  
AND  
FAA APPROVED AIRPLANE FLIGHT MANUAL**

**SUPPLEMENT NO. 15  
FOR  
S-TEC MAGIC 1500 THREE AXIS  
AUTOMATIC FLIGHT GUIDANCE SYSTEM**

The FAA approved operational supplement for the S-TEC MAGIC 1500 Autopilot, installed in accordance with STC SA09521AC-D, is required for operation of this system. S-TEC will be responsible to supply and revise the operational supplement. It is permitted to include the S-TEC supplement in this location of the Pilot's Operating Handbook unless otherwise stated by S-TEC. The information contained in the S-TEC supplement may supersede or supplement the information in the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual with respect to the operation of the S-TEC MAGIC 1500 Autopilot. For limitations, procedures and performance information not contained in the S-TEC supplement, consult the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

**THIS PAGE INTENTIONALLY LEFT BLANK**

**TABLE OF CONTENTS  
SECTION 10  
OPERATING TIPS**

Paragraph No.		Page No.
10.1	General .....	10-1
10.3	Operating Tips .....	10-1



**THIS PAGE INTENTIONALLY LEFT BLANK**

**SECTION 10**  
**OPERATING TIPS****10.1 GENERAL**

This section provides operating tips of particular value in the operation of the Meridian.

**10.3 OPERATING TIPS**

- (a) Learn to trim for takeoff so that only a very light back pressure on the control wheel is required to lift the airplane off the ground
- (b) On takeoff, do not retract the gear prematurely. The airplane may settle and make contact with the ground because of lack of flying speed, atmospheric conditions, or rolling terrain.
- (c) To slow the airplane while taxiing and to save the brakes, it is permissible to move the prop into beta and reverse.
- (d) To reduce flap operating loads, it is desirable to have the airplane at a speed slower than the maximum allowable before extending the flaps.
- (e) Before attempting to reset any circuit breaker, allow a two to five minute cooling off period.
- (f) Before starting the engine, check that all radio switches, light switches and the pitot heat switch are in the off position so as not to create an overloaded condition when the starter is engaged.
- (g) Anti-collision lights should not be operating when flying through cloud, fog or haze, since reflected light can produce spatial disorientation. Strobe lights should not be used in close proximity to the ground, such as during taxiing, takeoff or landing.

### **10.3 OPERATING TIPS (continued)**

- (h) In extreme turbulence, reduce power setting to obtain design operating speed. (See Section 2 Limitations for correct speeds).
- (i) In an effort to avoid accidents, pilots should obtain and study the safety related information made available in FAA publications, such as regulations, advisory circulars, Aviation News, AIM and safety aids.
- (j) Prolonged slips or skids which result in excess of 2000 feet of altitude loss or other radical or extreme maneuvers which could cause uncovering of the fuel outlet must be avoided as fuel flow interruption may occur when the tank being used is not full.
- (k) In order to prevent propeller strikes while taxiing on rough terrain or crossing over rises, the airplane should be taxied slowly with minimum power and rises should be crossed at an acute angle. Tires and struts should be properly inflated.
- (l) Pilots who fly above 10,000 feet should be aware of the need for special physiological training. Appropriate training is available for a small fee at approximately twenty-three Air Force Bases throughout the United States. The training is free at the NASA Center in Houston and at the FAA Aeronautical Center in Oklahoma.

Forms to be completed (Physiological Training Application and Agreement) for application for the training course may be obtained by writing to the following address:

Chief of Physiological Training, AAC-143  
FAA Aeronautical Center  
P.O. Box 25082  
Oklahoma City, Oklahoma 73125

It is recommended that all pilots who plan to fly above 10,000 feet receive physiological training and then take refresher training every two or three years.